



# T46S Skype for Business® Edition User Guide



Version 9.25  
Oct.2017

# Copyright

## **Copyright © 2017 YEALINK (XIAMEN) NETWORK TECHNOLOGY**

Copyright © 2017 Yealink (Xiamen) Network Technology CO., LTD. All rights reserved. No parts of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, photocopying, recording, or otherwise, for any purpose, without the express written permission of Yealink (Xiamen) Network Technology CO., LTD. Under the law, reproducing includes translating into another language or format.

When this publication is made available on media, Yealink (Xiamen) Network Technology CO., LTD. gives its consent to downloading and printing copies of the content provided in this file only for private use but not for redistribution. No parts of this publication may be subject to alteration, modification or commercial use. Yealink (Xiamen) Network Technology CO., LTD. will not be liable for any damages arising from use of an illegally modified or altered publication.

# Trademarks

Yealink®, the logo and the name and marks is trademark of Yealink (Xiamen) Network Technology CO., LTD, which are registered legally in China, the United States, EU (European Union) and other countries.

All other trademarks belong to their respective owners. Without Yealink's express written permission, recipient shall not reproduce or transmit any portion hereof in any form or by any means, with any purpose other than personal use.

# Warranty

## **(1) Warranty**

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS GUIDE ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS GUIDE ARE BELIEVED TO BE ACCURATE AND PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF PRODUCTS.

## **(2) Disclaimer**

YEALINK (XIAMEN) NETWORK TECHNOLOGY CO., LTD. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS GUIDE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Yealink (Xiamen) Network Technology CO., LTD. shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance, or use of this guide.

## **(3) Limitation of Liability**

Yealink and/or its respective suppliers are not responsible for the suitability of the information contained in this document for any reason. The information is provided "as is", and Yealink does not provide any warranty and is subject to change without notice. All risks other than risks caused by use of the information are borne by the recipient. In no event, even if Yealink has been suggested the occurrence of damages that are direct, consequential, incidental, special, punitive or whatsoever (Including but not limited to loss of business profit, business interruption or loss of business information), shall not be liable for these damages.

## End User License Agreement

This End User License Agreement ("EULA") is a legal agreement between you and Yealink. By installing, copying or otherwise using the Products, you: (1) agree to be bounded by the terms of this EULA, (2) you are the owner or an authorized user of the device, and (3) you represent and warrant that you have the right, authority and capacity to enter into this agreement and to abide by all its terms and conditions, just as if you had signed it. The EULA for this product is available on the Yealink Support page for the product.

## Patent Information

China, the United States, EU (European Union) and other countries are protecting one or more patents of accompanying products and/or patents being applied by Yealink.

## Customer Feedback

We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to [DocsFeedback@yealink.com](mailto:DocsFeedback@yealink.com).

## Technical Support

Visit Yealink WIKI (<http://support.yealink.com>) for the latest firmware, guides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



## GNU GPL INFORMATION

Yealink T46S Skype for Business phone firmware contains third-party software under the GNU General Public License (GPL). Yealink uses software under the specific terms of the GPL. Please refer to the GPL for the exact terms and conditions of the license.

The original GPL license, source code of components licensed under GPL and used in Yealink products can be downloaded online:

<http://www.yealink.com/GPLOpenSource.aspx?BaseInfoCateId=293&NewsCateId=293&CateId=293>.



## About This Guide

Yealink T46S phone with Skype for Business firmware enables a new era in unified communications. It is designed to work with the Skype for Business server. Connecting a Yealink T46S Skype for Business phone to Skype for Business server allows you to place regular and Voice over Internet Protocol (VoIP) calls, answer calls, forward calls, conduct a Skype for Business conference call, and dial from your Skype for Business contacts list through integration with Microsoft's Active Directory.

This guide provides everything you need to quickly use your new phone. First, verify with your system administrator that the IP network is ready for phone configuration. Also be sure to read the Quick Start Guide in your phone package before you set up and use the phone. As you read this guide, keep in mind that some features are configurable by your system administrator.

See the [Yealink Products Regulatory Notices guide](#) for all regulatory and safety guidance.

## In This Guide

Topics provided in this guide include:

- Chapter 1 [Overview](#)
- Chapter 2 [Getting Started](#)
- Chapter 3 [Customizing Your Phone](#)
- Chapter 4 [Basic Call Features](#)
- Chapter 5 [Advanced Phone Features](#)
- Chapter 6 [Using Optional Accessories with Your Phone](#)
- Chapter 7 [Troubleshooting](#)





# Table of Contents

## About This Guide ..... v

In This Guide ..... v

## Table of Contents..... vii

## Overview ..... 1

Hardware Component Instructions .....	1
Icon Instructions .....	3
LED Instructions.....	4
Power Indicator LED .....	4
Line Key LED.....	5
User Interfaces .....	6
Phone User Interface.....	6
Web User Interface.....	8
Features Configurable via Phone/Web User Interface.....	8
Documentations .....	11

## Getting Started..... 13

Phone Initialization.....	13
Signing into Skype for Business.....	14
PIN Authentication .....	15
User Sign-in.....	16
Web Sign-In .....	17
Signing in via PC .....	20
Signing Out of Skype for Business.....	20
Presence Status.....	21
Changing Presence Status.....	23
Resetting Presence Status .....	24
Idle Screen .....	24
Status Screen .....	25
History Screen .....	26
Directory Screen.....	26
Menu Screen.....	27
Entering Data and Editing Fields.....	27
Phone Status.....	29
Viewing the Phone Status .....	29

Basic Network Settings.....	31
Configuring the DHCP.....	31
Configuring the Static IPv4 Address.....	32
Configuring the Static IPv6 Address.....	33
<b>Customizing Your Phone.....</b>	<b>35</b>
General Settings.....	35
Remember Password.....	35
Account Lock.....	37
Always Online.....	38
Screen Saver.....	39
Power Saving.....	41
Backlight.....	44
Contrast.....	44
Showing Full Name.....	45
Language.....	46
Time & Date.....	47
Administrator Password.....	50
Key as Send.....	50
Phone Lock.....	51
Audio Settings.....	55
Volume.....	55
Phone's Ringtone.....	55
Key Tone.....	57
Contact Management.....	58
Skype for Business Directory.....	58
Local Directory.....	64
Placing Calls to Contacts.....	75
Call History Management.....	76
Viewing History Records.....	76
Placing a Call from History Records.....	77
Adding Contacts from History Records.....	77
Deleting History Records.....	78
Configuring Contact Avatar.....	78
Disabling History Record.....	79
Dial Plan.....	79
Dial-now.....	80
Delay Time for Dial-Now Rule.....	81
<b>Basic Call Features.....</b>	<b>83</b>
Switching among the Handset, Speakerphone and Headset Modes.....	84
Placing Calls.....	84
Placing a Call.....	84

Placing Multiple Calls .....	85
Placing a Call from the Search Results List .....	85
Dialing the Hotline Number .....	86
Redialing Numbers .....	86
Answering Calls.....	87
Answering When Not in Another Call .....	87
Answering When in Another Call .....	87
Answering Calls Automatically .....	88
Configuring the Call Waiting.....	88
Ending Calls.....	90
Call Mute .....	90
Call Hold/Resume .....	90
Music on Hold.....	91
Call Forward .....	92
Static Forwarding .....	92
Dynamic Forwarding .....	98
Team-Call Group .....	99
Team-Call Ringtone .....	100
Response Groups.....	100
Response Group Ringtone.....	101
Call Queue .....	101
Inbound Private Line.....	102
Private Line Tones.....	103
Call Transfer.....	103
Blind Transfer.....	104
Consultative Transfer.....	104
Skype for Business Conference .....	105
Initiating a Skype for Business Conference Call.....	105
Viewing the Conference Information.....	108
Viewing the Conference Participants.....	108
Managing the Conference Participants .....	109
Calendar.....	115
Setting up an Appointment in Outlook.....	115
Setting up a Meeting in Outlook.....	116
Setting up an Event in Outlook.....	117
Setting up a Skype Conference in Outlook .....	118
Using the Calendar.....	119
Parking and Retrieving Calls on the Skype for Business Server .....	127
Parking Skype for Business Calls .....	127
Retrieving Parked Skype for Business Calls .....	127
Group Call Pickup .....	128
Shared Line Appearance(SLA).....	129
Viewing Shared Line Appearances.....	130
Answering SLA Calls.....	131

Placing a SLA Call on Hold.....	131
Resuming Held SLA Calls.....	131
Missed and Received Calls on Shared Lines .....	132
Boss-Admin .....	132
Assigning/Removing Delegates.....	133
Viewing the Delegates Group.....	135
Viewing the Boss Group.....	135
Boss-Line Ringtone .....	136
Delegates-Call Ringtone .....	136
Using the Boss-Admin Feature.....	137
Voicemail.....	144
Leaving the Voicemail.....	145
Managing the Voicemail.....	146
<b>Advanced Phone Features.....</b>	<b>151</b>
E911.....	151
E911 Location Tip .....	151
Adding the Location Information.....	153
Selecting the Default Location .....	154
Viewing the Location Information .....	154
Emergency Call .....	154
USB Recording .....	155
Recording a Call .....	157
Stop Recording a Call.....	158
Playing Back Recorded Calls.....	159
Deleting the Recorded File .....	161
Viewing the Storage Space.....	161
Intercom .....	161
Configuring the Intercom.....	162
Configuring the Target Extension Number .....	163
Placing an Intercom Call .....	164
Multicast Paging.....	165
Sending RTP Stream .....	165
Receiving RTP Stream .....	167
Using Multicast Paging.....	168
Privacy Mode.....	169
Modifying the Privacy Mode from the Phone.....	170
Modifying the Privacy Mode from the Skype for Business Client .....	170
Hot Desking .....	172
Configuring the Hot Desking.....	172
Signing in with the Hot Desking User .....	172
Signing out from the Hot Desking User .....	173
Common Area Phone.....	174
Configuring a Common Area Phone.....	174

Signing into a Common Area Phone Account .....	175
Signing Out of a CAP Account .....	178
Branch Office Resiliency .....	178
Better Together over Ethernet .....	179
Getting Started with Better Together over Ethernet .....	179
Installing the Yealink Better Together over Ethernet Connector .....	180
Enabling Better Together over Ethernet .....	184
Using Better Together over Ethernet .....	189
Disabling BToE on Your Phone .....	191
Exiting BToE on Your Computer .....	192
Uninstalling the Yealink BToE Connector .....	192
<b>Using Optional Accessories with Your Phone .....</b>	<b>193</b>
Using a Headset .....	193
Using an Analog Headset .....	194
Using the Wireless Headset Adapter EHS36 .....	196
Using Bluetooth Feature .....	196
Connecting the Bluetooth USB Dongle BT40 .....	197
Activating the Bluetooth Mode .....	197
Pairing and Connecting the Bluetooth Headset .....	198
Viewing the Bluetooth headset information .....	199
Editing the Bluetooth Device Information .....	200
Deleting the Bluetooth Headset .....	200
Disconnecting the Bluetooth Headset .....	201
Deactivating the Bluetooth Mode .....	201
Using an EXP40 Expansion Module .....	202
<b>Troubleshooting.....</b>	<b>203</b>
Troubleshooting Solutions .....	203
<b>Regulatory Notices .....</b>	<b>215</b>
Service Agreements .....	215
Limitations of Liability .....	215
Safety Instructions .....	215
<b>Appendix A - Time Zones.....</b>	<b>217</b>



## Overview

This chapter provides the overview of the T46S Skype for Business phone. Topics include:


- [Hardware Component Instructions](#)
- [Icon Instructions](#)
- [LED Instructions](#)
- [User Interfaces](#)
- [Documentations](#)

If you require additional information or assistance with your new phone, contact your system administrator.

## Hardware Component Instructions





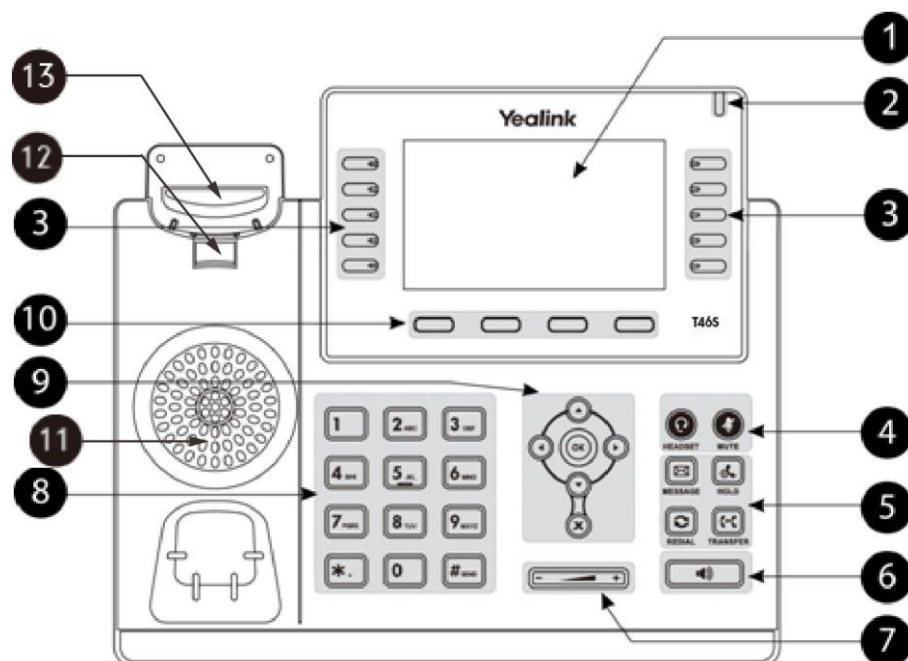




The main hardware components of the T46S Skype for Business phone are the LCD screen and the keypad.

The following figure displays the hardware features on the T46S Skype for Business phone:






Hardware component instructions of the T46S Skype for Business phone are:

	Item	Description
①	LCD Screen	Shows information about calls, messages, soft keys, time, date and other relevant data:










	Item	Description
		<ul style="list-style-type: none"> <li>• Call information—caller ID, call duration</li> <li>• Icons (for example, )</li> <li>• Missed call text or second incoming caller information</li> <li>• Prompt text (for example, "Saving config file!")</li> <li>• Time and date</li> </ul>
②	Power Indicator LED	<p>Indicates phone power and some feature statuses.</p> <ul style="list-style-type: none"> <li>• Receives an incoming call—Fast flashing</li> <li>• Receives a voicemail—Slow flashing</li> </ul>
③	Line Keys	<ul style="list-style-type: none"> <li>• Press the first line key to enter pre-dialing screen or answer an incoming call.</li> <li>• Call a favorite contact quickly</li> <li>• Use phone lock feature</li> <li>• Use multicast paging feature</li> <li>• Use Intercom feature</li> <li>• Use Boss-Admin feature</li> <li>• Use Shared Lined Appearance (SLA) feature</li> </ul>
④	 HEADSET Key	Toggles and indicates the headset mode. The key LED illuminates solid green when headset mode is activated.
	 MUTE Key	Toggles and indicates mute feature. The key LED illuminates solid red when the microphone is muted.
⑤	 MESSAGE Key	Accesses voice messages.
	 HOLD Key	Places a call on hold or resumes a held call.
	 REDIAL Key	Redials a previously dialed number.
	 TRANSFER Key	Transfers a call to another party.
⑥	 Speakerphone Key	Toggles and indicates the hands-free (speakerphone) mode. The key LED illuminates solid green when the speakerphone mode is activated.
⑦	 Volume Key	Adjusts the volume of the handset, headset, speaker, and ringer.




















	Item	Description
⑧	Dialpad	Provides the digits, letters and special characters in context-sensitive applications.
⑨		<ul style="list-style-type: none"> <li>• Position the cursor within text you're updating.</li> <li>• Enable or disable fields.</li> </ul>
		Confirms actions or answers incoming calls.
		Cancels actions or rejects incoming calls.
⑩	Soft Keys	Label automatically to identify their context-sensitive features.
⑪	Speaker	Provides hands-free (speakerphone) audio output.
⑫	Reversible Tab	Secures the handset in the handset cradle when the phone is mounted vertically. For more information on how to adjust the reversible tab, refer to <a href="#">Yealink Wall Mount Quick Installation Guide for Yealink IP Phones</a> .
⑬	Hookswitch	<ul style="list-style-type: none"> <li>• Picking up the handset from the handset cradle, the hookswitch bounces and the phone connects to the line.</li> <li>• Laying the handset down on the handset cradle, the phone disconnects from the line.</li> </ul>

## Icon Instructions

Icons appearing on the LCD screen are described in the following table:

T46S	Description
	Local Favorites
	Call Mute
	Call Hold
	Received Calls
	Placed Calls
	Missed Calls
	Forwarded Calls
	Bluetooth mode is on
	Bluetooth headset is both paired and connected

T46S	Description
	Hands-free speakerphone mode
	Location is not set
	Auto Answer
	Voicemail
	Unread voicemail
	Read voicemail
	Conference organizer
	Conference presenter
	Conference attendee
	Ringer volume is 0
	Phone Lock
	Paging key
	Intercom key
	Shared Line Appearance
	USB flash drive is connected
	Recording in progress
	Recording paused

## LED Instructions

### Power Indicator LED

#### Power Indicator LED

LED Status	Description
Solid red	The phone is initializing.

LED Status	Description
Fast-flashing red (300ms)	The phone is ringing.
Slow-flashing red (1s)	The phone receives a voicemail.
Solid red for 500ms and off for 3s alternately	The phone enters power-saving mode.
Off	The phone is powered off. The phone is idle. The phone is busy. The call is placed on hold by yourself. The call is placed is held by the other party. The call is muted.

**Note**

The above introduces the default power indicator LED status. The status of the power indicator LED is configurable via web user interface. For more information, refer to [Yealink\\_Skype\\_for\\_Business\\_HD\\_IP\\_Phones\\_Administrator\\_Guide](#).

## Line Key LED

### The first line key LED (phone line)

LED Status	Description
Solid green	The line is seized. The line is in conversation.
Fast-flashing green	The line receives an incoming call.
Slow-flashing green	The call is placed on hold.
Off	The line is inactive.

### The fifth line key LED (configured as a B/A key and the boss enables the Simultaneously Ring to Delegates feature)

LED Status	Description
Solid red	As a delegate, your boss is answering a call. As a boss, your delegate is answering a call on behalf of you.
Flashing red	As a delegate, your boss places a call on hold. As a boss, your delegate places the delegation call on hold.
Off	The line is inactive.

**Line key LED (configured as shared line appearances)**

LED Status	Description
Solid red	The shared line is active and answered by other member.
Solid green	The shared line is active and answered by you.
Slow -flashing red	The shared line is placed on hold by other member.
Slow -flashing green	The shared line is placed on hold by you.
Fast -flashing green	The shared line receives an incoming call.
Off	The line is inactive.

## User Interfaces

There are two ways to configure your phone:

- Via phone user interface
- Via web user interface


The phone user interface, being made up of keypad and LCD screen, allows users to perform all call operations and change basic configuration settings directly on the phone. But if you want to access all configuration settings, you should use web user interface instead. In most cases, it is possible to configure your phone via both phone user interface and web user interface. While in some particular cases, only via phone user interface or via web user interface is available for you to operate or configure your phone. This guide mainly takes phone user interface as an example.

## Phone User Interface

You can customize your phone by pressing the **Menu** soft key to access the phone user interface. The **Settings->Advanced Settings** option is only accessible to the administrator, and the default administrator password is "admin" (case-sensitive). For more information on customizing your phone with the available options from the phone user interface, refer to [Customizing Your Phone](#) on page 35.

Menus are used to access information and configure the phone.

The figure below shows the phone's menus and submenus.

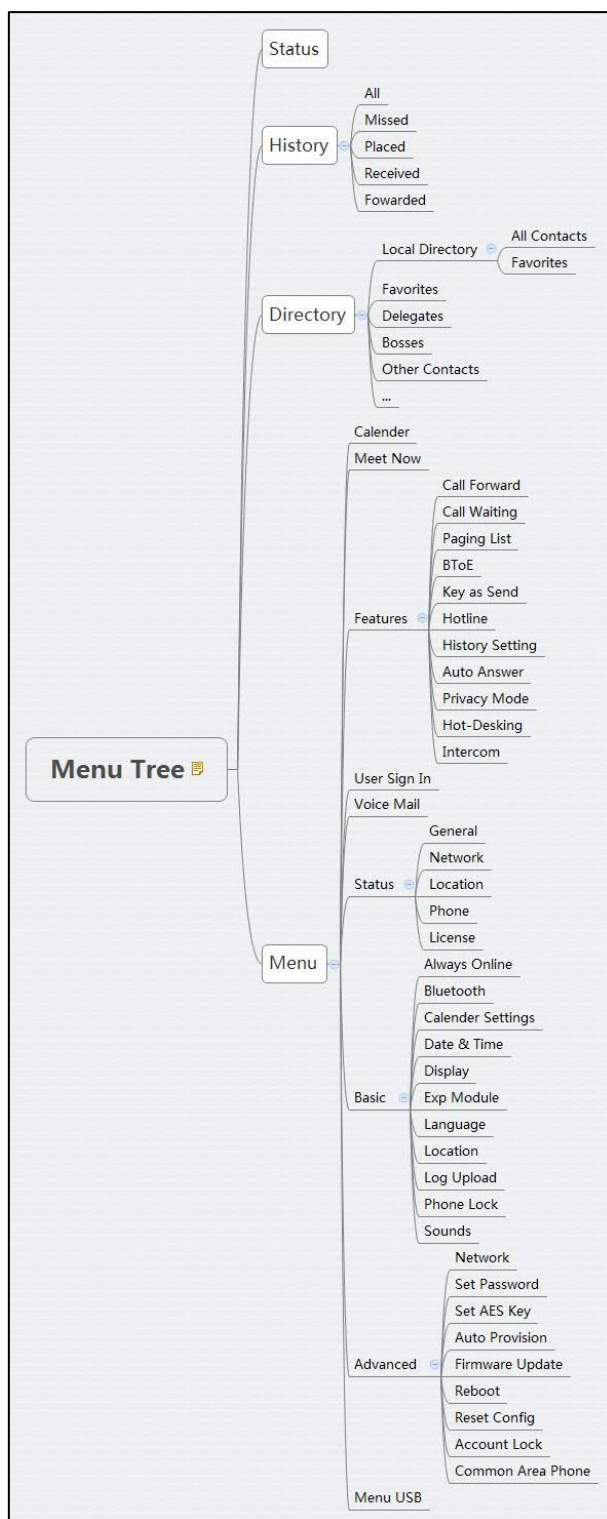


## Web User Interface

In addition to the phone user interface, you can also customize your phone via web user interface. In order to access the web user interface, you need to know the IP address of your new phone. To obtain the IP address, press the OK key on the phone when the phone is idle. Enter the IP address (for example, <http://192.168.0.10> or [192.168.0.10](http://192.168.0.10) for IPv4; [http://\[2005:1:1:1:215:65ff:fe64:6e0a\]](http://[2005:1:1:1:215:65ff:fe64:6e0a]) or [\[2005:1:1:1:215:65ff:fe64:6e0a\]](http://[2005:1:1:1:215:65ff:fe64:6e0a]) for IPv6) in the address bar of a web browser on your PC. The default administrator user name and password are both "admin" (case-sensitive).

## Navigating the Web User Interface

When you log into the web user interface successfully, the phone status is displayed on the first page of the web user interface. You can click each menu to customize or click **Log out** to log out of the web user interface.

The following figure is an example that navigates to **Settings->Preference**:

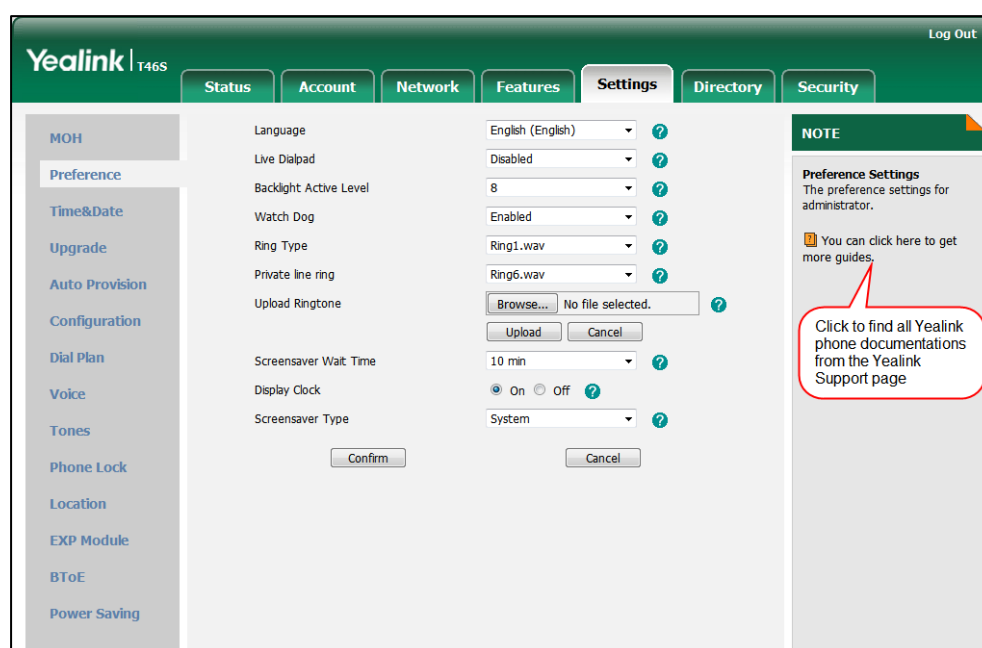

## Features Configurable via Phone/Web User Interface

The main features you can customize for the phone via phone user interface and/or via web user interface are listed in the following table:

Features	Phone User Interface	We User Interface
<b>Network Settings</b>		
--Basic Network Settings		
--DHCP	✓	✓

Features	Phone User Interface	We User Interface
--IPv4	√	√
--IPv6	√	√
<b>Registration</b>		
--PIN Authentication	√	√
--User Sign-in	√	√
--Web Sign-in	√	√
--Sign in via PC	√	X
--CAP Provisioning	√	X
<b>Basic Phone Settings</b>		
--Remember Password	X	√
--Account Lock	√	√
--Always Online	√	√
--Screen Saver	√	√
--Power Saving	X	√
--Backlight	√	√
--Contrast	√	√
--Language		
--Phone Language	√	X
--Web Language	X	√
--Time & Date		
--SNTP Settings	√	√
--Manually Settings	√	√
--Time & Date Format	√	√
--Administrator Password	√	√
--Key As Send	√	√
--Phone Lock	√	√
--Audio Settings		
--Phone Ring Tone	√	√
--Key Tone	√	√
--Contact Management		

Features	Phone User Interface	We User Interface
--Local Directory	√	√
--Skype for Business Directory	√	X
--Call History Management		
--History Management	√	√
--History Settings	√	√
--Dial Now	X	√
<b>Basic Call Features</b>		
--Hotline	√	√
--Auto Answer	√	√
--Call Waiting	√	√
--Call Forward	√	X
--Call Transfer	√	X
--Calendar	X	√
--Call Park/Retrieve	√	X
--Voice mail	√	X
<b>Advanced Phone Features</b>		
--E911 Location Tip	X	√
-- USB Recording	√	X
--Intercom	√	√
--Multicast Paging		
-Paging List	√	√
--Multicast Listening	X	√
--Privacy Mode	√	X
--Hot Desking	√	√
--Common Area Phone	√	√
--Better Together over Ethernet	√	√
--Headset		
--Headset Prior	X	√
--Dual Headset	X	√



Features	Phone User Interface	We User Interface
--Bluetooth	√	√
--Ext Keys	√	√

**Note**

The table above lists most of the feature options. Please refer to the relevant sections for more information.

## Documentations

The following table shows documentations available for the T46S Skype for Business phone.

Name	Contents	Where found	Language
Quick Start Guide	Basic call features and phone customizations	In the package/ On the website	English/Chinese
User Guide	Phone/Web user interface settings Basic call features and BToE (Better Together over Ethernet) feature	On the website	English/Chinese

**Note**

You can download the latest documentations online:

<http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.



# Getting Started

This chapter provides the following basic installation instructions and information for obtaining the best performance with the T46S Skype for Business phone. Topics include:

- [Phone Initialization](#)
- [Signing into Skype for Business](#)
- [Signing Out of Skype for Business](#)
- [Presence Status](#)
- [Idle Screen](#)
- [Entering Data and Editing Fields](#)
- [Phone Status](#)
- [Basic Network Settings](#)

If you require additional information or assistance with your new phone, contact your system administrator.

## Phone Initialization

After your phone is powered on, the system boots up and performs the following steps:

### **Automatic Phone Initialization**

The phone finishes the initialization by loading the saved configuration. The LCD screen displays "Welcome Initializing...Please wait" during the initialization.

### **DHCP (Dynamic Host Configuration Protocol)**

The phone attempts to contact a DHCP server in your network to obtain valid IPv4 network settings (e.g., IP address, subnet mask, default gateway address and DNS address) by default.


After the phone finishes the initialization, the sign-in screen appears on the LCD screen.

### **Note**


If your network does not use DHCP, proceed to [Basic Network Settings](#) on page 31.

## Signing into Skype for Business

After the initialization, the idle screen appears. The screen will be shown as below:

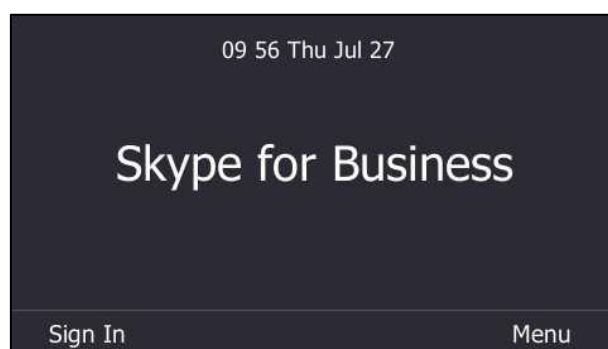

You can press **Menu** soft key to enter the menu screen before signing into the Skype for Business server. The menu screen is shown as below:

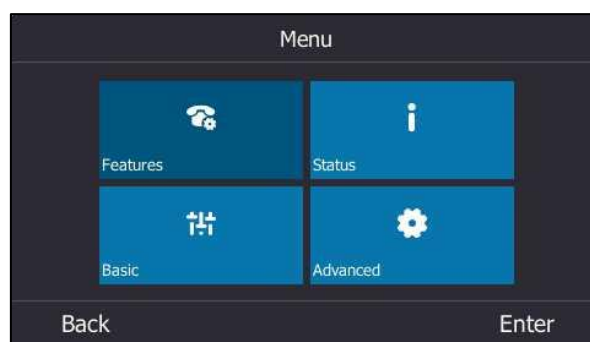

From the menu screen, you can view phone status, configure call features or phone settings. You can press the **Sign In** soft key to enter the sign-in screen. The sign-in screen is shown as below:



Skype for Business users are authenticated by Microsoft Active Directory Domain Service. The following four sign-in methods are available:

- **PIN Authentication:** This method uses the user's phone number (or extension) and personal identification number (PIN) to sign into Skype for Business server. This sign-in method is only applicable to On-Premises account.

- **User Sign-in:** This method uses the user's credentials (sign-in address, user name, and password) to sign into Skype for Business server. This sign-in method is applicable to On-Premises account and Online account.
- **Web Sign-in:** This method uses the unique website shown on the phone to sign in. This sign-in method is only applicable to Online account.
- **Sign in via PC:** when your phone is paired to your computer using Better Together over Ethernet (BToE), use the Skype for Business client to sign in. This sign-in method is applicable to On-Premises account and Online account.

If the Skype for Business server is configured to forcibly lock the phone. You need to configure a lock PIN at the initial sign-in. For more information, refer to [Phone Lock](#) on page 51.

#### Note

If the phone reboots after successful login, the login credentials from the previous Sign-In will be cached. User can sign in successfully without reentering the credentials.



## PIN Authentication


You can sign into Skype for Business on your phone with your PIN Authentication credentials. Your system administrator provides you with your PIN Authentication credentials.

#### Note

The system administrator should configure network environment in advanced for PIN Authentication method. If not, your phone may not display this sign-in method. Contact your system administrator for more information.

**To sign into Skype for Business server using PIN Authentication method via phone user interface:**

1. Press the **Sign In** soft key.
2. Press  or  , or the **Switch** soft key to select **PIN Authentication**.
3. Enter your phone number or extension (e.g., 4040) in the **Extension** field.
4. Enter your personal identification number in the **PIN** field.

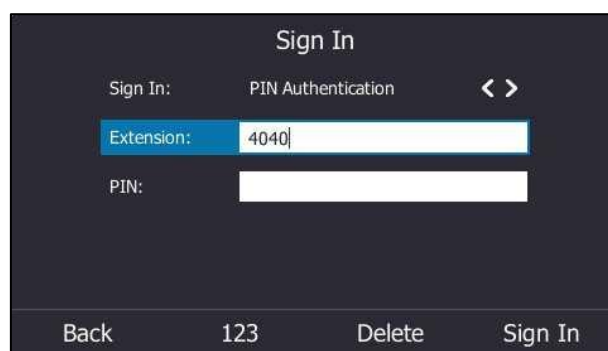

5. Press the **Sign In** soft key.

**To sign into the Skype for Business server using PIN Authentication method via web user interface:**

1. Click on **Account->Register**.
2. Select **Pin Authentication** from the pull-down list of **Mode**.
3. Enter your Skype for Business user's phone number or extension (e.g., 4040) in the **Extension** field.
4. Enter your personal identification number in the **Pin** field.

The screenshot shows the Yealink T46S web interface. The 'Account' tab is selected, and the 'Register' sub-tab is active. The 'Mode' dropdown menu is open, showing 'Pin Authentication' selected. The 'Extension' field is filled with '4040'. The 'Pin' field is empty. The 'Login address', 'Register Name', and 'Password' fields are also present. A 'NOTE' section on the right provides additional information.

5. Click **Sign In** to accept the change.

## User Sign-in

You can sign into Microsoft Skype for Business on your phone with your login credentials, which includes your address, username, and password. Your system administrator provides you with your login credentials.

**To sign into the Skype for Business server using User Sign-in method via phone user interface:**

1. Press the **Sign In** soft key.
2. Press **◀** or **▶**, or the **Switch** soft key to select **User Sign-in**.
3. Enter your Skype for Business user's sign-in address (e.g., 4040@yealinksfb.com) in the **Address** field.
4. Enter your Skype for Business user name (e.g., 4040@yealinksfb.com) in the **UserName** field.

The screenshot shows the 'Sign In' screen on a phone. The 'Sign In' title is at the top. Below it, 'Sign In: User Sign-in' is displayed. The 'Address' field contains '4040@yealinksfb.com'. The 'UserName' field contains '4040@yealinksfb.com'. The 'Password' field is empty. At the bottom, there are buttons for 'Back', 'abc', 'Delete', and 'Sign In'.

5. Enter the sign-in password in the **Password** field.
6. Press the **Sign in** soft key.

**To sign into the Skype for Business server using User Sign-in method via web user interface:**

1. Click on **Account->Register**.
2. Select **User Sign in** from the pull-down list of **Mode**.
3. Enter your Skype for Business user's sign-in address (e.g., 4040@yealinksfb.com) in the **Login address** field.
4. Enter your Skype for Business user name (e.g., 4040@yealinksfb.com) in the **Register Name** field.
5. Enter the sign-in password in the **Password** field.

The screenshot shows the Yealink T46S web interface. The top navigation bar includes 'Status', 'Account', 'Network', 'Features', 'Settings', 'Directory', and 'Security'. The 'Account' tab is selected, and the 'Register' sub-tab is active. The 'Mode' dropdown is set to 'User Sign in'. The 'Register Status' is 'Disabled'. The 'Extension' and 'Pin' fields are empty. The 'Login address' field contains '4040@yealinksfb.com'. The 'Register Name' field contains '4040@yealinksfb.com'. The 'Password' field contains asterisks. A red box highlights the 'Login address', 'Register Name', and 'Password' fields. The 'Sign In' button is visible at the bottom. A 'NOTE' section on the right provides instructions for the login address, register name, and password.

6. Click **Sign In** to accept the change.

## Web Sign-In


Use the Web Sign-In method to sign in to a phone with your Skype for Business Online account using a web browser.

Your system administrator provides you with your login credentials.

**To configure Web Sign-In method via web user interface:**

1. Click on **Features->General Information**.
2. Select the desired value from the pull-down list of **Web Sign in**.
  - If it is enabled, you can sign into the Skype for Business server using Web Sign-In method.

- If it is disabled, you cannot sign into the Skype for Business server using Web Sign-In method.

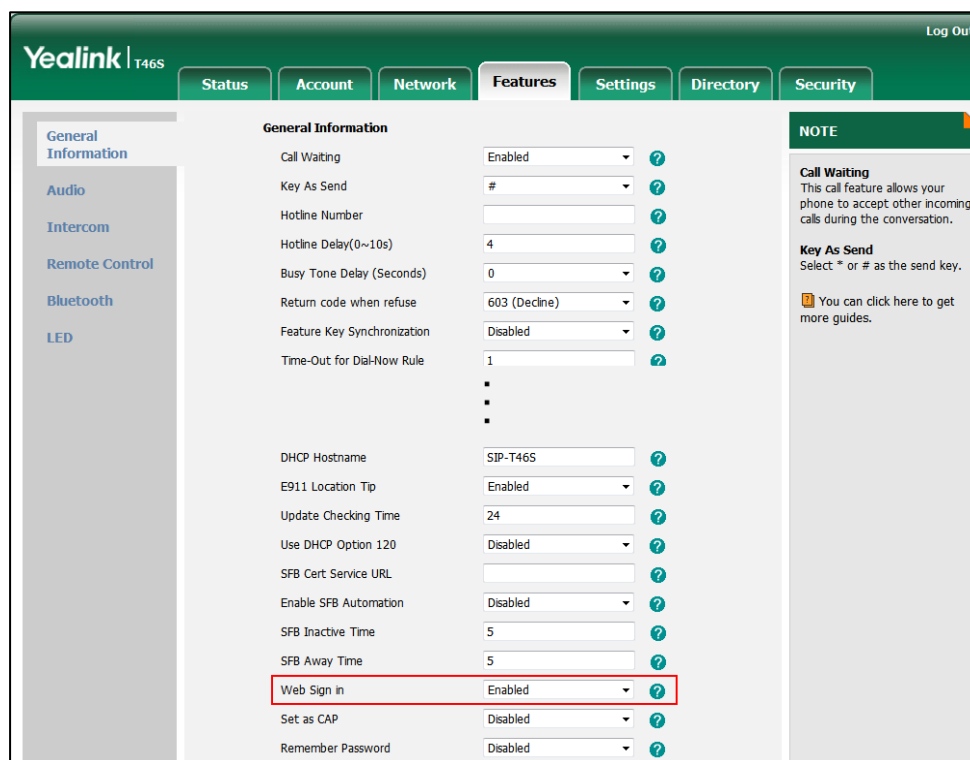

3. Click **Confirm** to accept the change.

**To sign into Skype for Business server using Web Sign-In method via phone user interface:**


1. Press the **Sign In** soft key.
2. Press , or the **Switch** soft key to select **Web Sign-in**.




3. Press the **Sign In** soft key.




The screen will show the pairing code and URL.

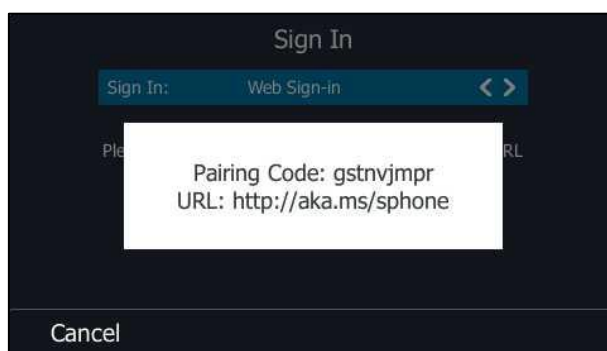

4. On your computer, enter the URL into your web browser.
5. On the Skype for Business Authentication website, enter your email address (e.g., zhaops04@example.onmicrosoft.com) in the **Email address** field.

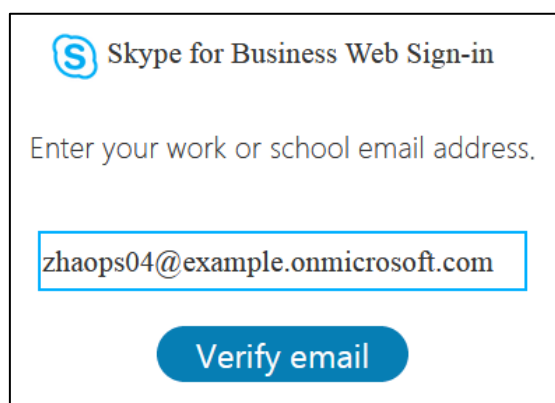


6. Click **Verify email** to check the validity of the email address.  
The sign-in screen will appear if the email address is valid.
7. Enter your Online account and password.

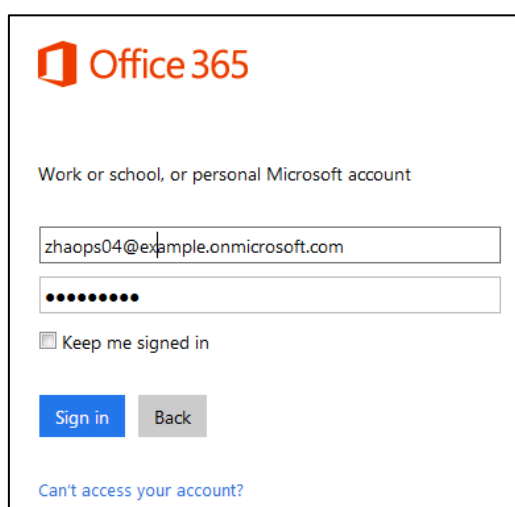

8. (Optional) Check the **Keep me signed in** checkbox, so that you don't need to enter a password next time.

9. Click **Sign in**.
10. Enter the pairing code generated on the phone (e.g., gstnvjmpr) into the web browser.

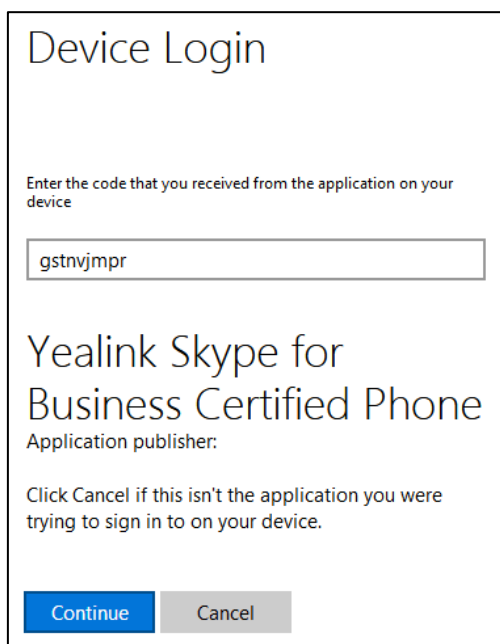

The image shows a 'Device Login' window. At the top, it says 'Device Login'. Below that, it asks to 'Enter the code that you received from the application on your device'. A text input field contains the code 'gstnvjmpr'. Below the input field, it says 'Yealink Skype for Business Certified Phone' and 'Application publisher:'. A note below that says 'Click Cancel if this isn't the application you were trying to sign in to on your device.' At the bottom, there are two buttons: 'Continue' (blue) and 'Cancel' (grey).



11. Click **Continue**.
12. Click the account to sign in.  
A confirmation message is displayed when your phone successfully signs into Skype for Business.

## Signing in via PC


When your phone and your computer are paired using Better Together over Ethernet (BToE), you can sign into your phone using the Skype for Business client on your computer. For more information, refer to [Better Together over Ethernet](#) on page 179.

## Signing Out of Skype for Business

**To sign out of Skype for Business server:**

1. Press **Status** soft key to enter the account status screen.
2. Press  or  to select **Sign Out**.

The phone signs out of Skype for Business server.

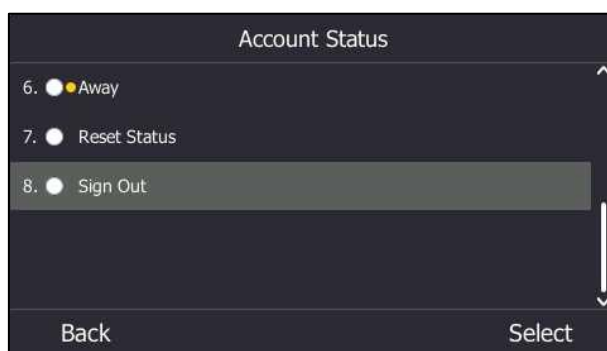

After you sign out of Skype for Business, the account-related features (call or view your Skype for Business contacts, etc.) are not available. However, you can still use other available features.





Signing out via web user interface at the path: **Account->Register->Sign Out**.










## Presence Status

After signing in successfully, the first line key displays your account and presence status by default.

Your presence information is a quick way for other people to see your availability status. Presence is automatically set based on your Outlook calendar, but you can change it manually if you want to. For example, when you are busy with urgencies, you can change your status to DND to avoid being disturbed.

The following table describes each presence status that other people may see for you, what each status means, and which ones you can set yourself.



If your presence is	It means	How this status gets set
 Available	You are online and available to contact.	Set automatically for you based on your phone activity or Outlook calendar. You can also set this status when you want others to know you're in your office.
 Be Right Back	You are stepping away from the phone for a few moments.	You can set your presence to this anytime you want.
 Inactive	Your phone has been idle for a specified period of time (set by you).	Set automatically for you when your phone has been idle for a specified time (5 minutes by default).
 Away	Your phone has been idle for a specified period of time (set by	Set automatically for you when your phone has been inactive for a specified time (5 minutes by default).


If your presence is	It means	How this status gets set
	you).	You can also set your presence to this anytime you want.
 Off Work	You are not working and not available to be contacted.	You can set your presence to this anytime you want.
 Busy	You are busy and don't want to be interrupted.	Set automatically for you based on your Outlook calendar. You can also set your presence to this anytime you want.
 Urgent interruptions only	You are allowed to call a contact even though his status is Do not Disturb	You can see this status for a contact whose status is Do not Disturb, and the contact has configured your privacy relationship to be Workgroup.
 In a call	In a Skype for Business call (a two-way audio call) and don't want to be disturbed.	Set automatically for you based on your phone activity.
 In a meeting	In a meeting and don't want to be disturbed.	Set automatically for you based on your Outlook calendar.
 In a conf call	In a Skype for Business conference call (a Skype for Business meeting with audio) and don't want to be disturbed.	Set automatically for you when you have joined a conference call or a meet now session.
 Do Not Disturb	You don't want to be disturbed and will see conversation notifications only if sent by someone in your workgroup.	You can set your presence to this anytime you want. If you manually set it to Do Not Disturb, the incoming call will be forwarded to your voicemail directly. But you can still receive calls from the work group.
 Blocked	Prevent a contact from reaching you via Skype for Business	You can see this status for a contact who has assigned by you to be a blocked contact using the Skype for Business client.
 Presenting	Giving a presentation and can't be	Set automatically for you when you are presenting using your Skype for

If your presence is	It means	How this status gets set
	disturbed.	Business client.
● Out of Office	You have set the automatic reply feature in Outlook.	Set automatically for you when you <a href="#">set automatic replies in Outlook</a> .
● Offline	Not signed in or you'll appear as Offline to people whom you've blocked from seeing your presence.	Set automatically for you when you log off your phone. Or you'll appear as Offline to people whom you've blocked from seeing your presence.
● Unknown	Your presence can't be detected.	This status might appear to contacts who are not using Skype for Business as their instant messaging program.

## Changing Presence Status

To change your presence status:

1. Press the **Status** soft key.
2. Press  or  to highlight the desired presence status.

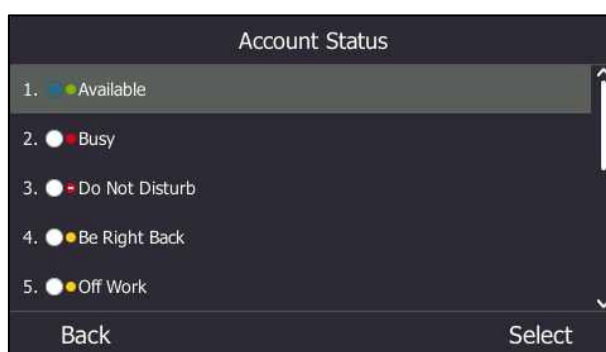




3. Press the **Select** soft key to accept the change.

The presence status will be changed on the phone and be synchronized to the Skype for Business server.

## Resetting Presence Status

To reset your presence status to the default:


1. Press the **Status** soft key.
2. Press  or  to highlight **Reset Status**.

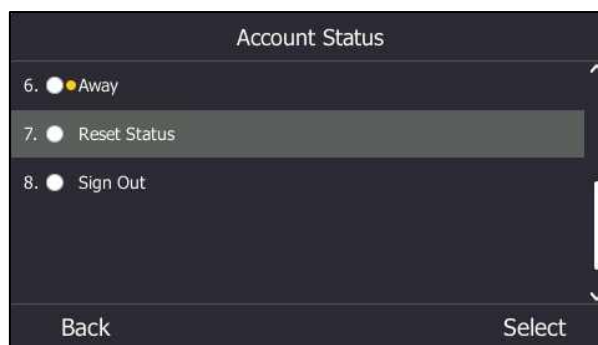

3. Press the **Select** soft key to accept.  
Your status will be reset to "Available".

## Idle Screen

If the phone has successfully started up, and a Skype for Business user signs into Skype for Business server on the phone, the screen will be shown as below:

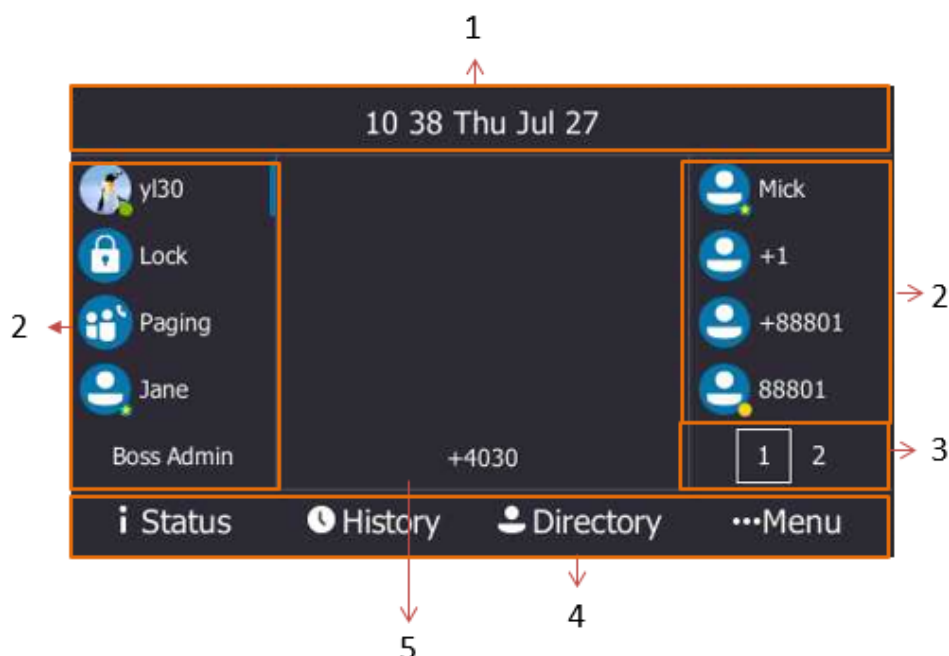

No.	Name	Description
1	Status Bar	Shows time and date and the feature icons. For more information, refer to <a href="#">Icon Instructions</a> on page 3.

No.	Name	Description
2	Line Key Labels	<ul style="list-style-type: none"> <li>• Show the account name.</li> <li>• Show the <b>Lock</b> key. For more information, refer to <a href="#">Phone Lock</a> on page 51.</li> <li>• Show the <b>Paging</b> key. For more information, refer to <a href="#">Multicast Paging</a> on page 165.</li> <li>• Show shared line appearances. For more information, refer to <a href="#">Shared Line Appearance(SLA)</a> on page 129.</li> <li>• Show local favorites and Skype for Business favorites. For more information, refer to <a href="#">Contact Management</a> on page 58.</li> <li>• Show the <b>Boss Admin</b> key. For more information, refer to <a href="#">Boss-Admin</a> on page 132.</li> <li>• Show the <b>Intercom</b> key. For more information, refer to <a href="#">Intercom</a> on page 161.</li> </ul>
3	Page Icons	You can press the tenth line key to turn the page.
4	Shortcut Keys	<p>Press the <b>Status</b> soft key to enter the <b>Status</b> screen and change your presence information.</p> <p>Press the <b>History</b> soft key to enter the <b>History</b> screen and view call history.</p> <p>Press the <b>Directory</b> soft key to enter the <b>Directory</b> screen and view contacts.</p> <p>Press the <b>Menu</b> soft key to enter the <b>Menu</b> screen.</p>
5	Main Window	Shows the phone account and the static forward methods.


When the phone misses calls, a number icon (indicating the number of missed calls) will appear on the **History** soft key. If you press the **History** soft key, the number icon will disappear.

When the phone receives voicemails, a number icon (indicating the number of the voicemails you haven't retrieved) will appear on the **Menu** soft key.

## Status Screen

Press the **Status** soft key to enter the Status screen. You can change your account status manually.


For more information, refer to [Presence Status](#) on page 21.

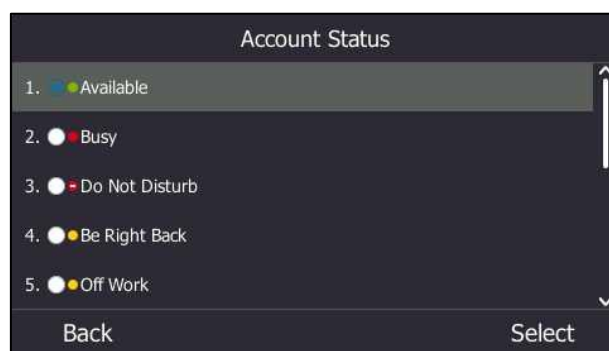

## History Screen



Press the **History** soft key to enter the History screen. You can view **All**, **Missed**, **Placed**, **Received** and **Forwarded** lists.

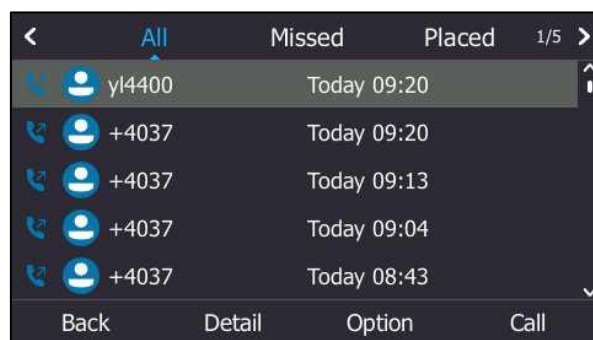
Each call history list supports up to 100 entries. You can view call history, place a call, add a contact or delete an entry from the call history list.



For more information, refer to [Call History Management](#) on page 76.

## Directory Screen


Press the **Directory** soft key to enter the Directory screen. The directory window displays the groups and the number of members. You can press  ,  to select the desired group.

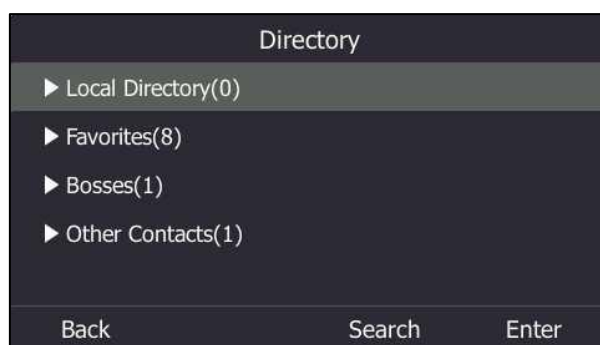



## Menu Screen

Press the **Menu** soft key to enter the Menu screen.

 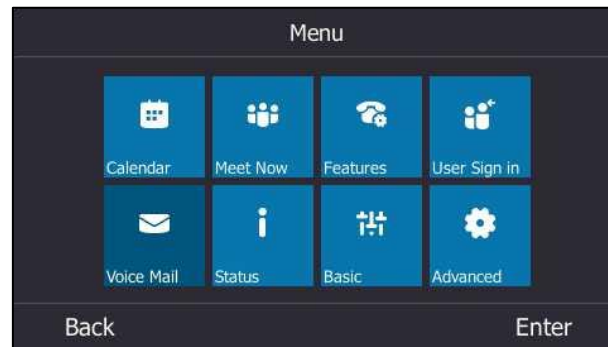

 
 
 
 
 


## Entering Data and Editing Fields

You can enter data and edit fields using the phone keypad.

Keypad on the phone provides different characters when using the **2aB**, **abc**, **ABC** or **123** input mode. You can change the following input modes to enter data and edit fields on your phone. When your phone keypad matches the input mode, you can press the keypad repeatedly to view the character (or numbers) options and stop to select. When the character (or numbers) you want to enter displays in the field, wait one second, and enter the next character (or numbers).






The following table lists the input modes and character (or numbers) options for the keypad:

Input Mode Keypad	2aB	abc	ABC	123
	1			1
	2abcABC	abc2äæååääãç	ABC2ÄÆÅÅÄÄÃ Ç	2
	3defDEF	def3èéëëð	DEF3ÈÉÊËÐ	3
	4ghiGHI	ghi4ìíî	GHI4ÌÍÎ	4
	5jklJKL	jkl5Ł	JKL5Ł	5
	6mnoMNO	mno6öøòóôõñ	MNO6ÖØÒÓÔÕ ŌÑ	6
	7pqrsPQRS	pqrs7ßŠ	PQRS7Š	7

Input Mode Keypad	2aB	abc	ABC	123
	8tuvTUV	tuv8ùúûü	TUV8ÙÚÛÜ	8
	9wxyzWXYZ	wxyz9ýþ	WXYZ9ÝÞ	9
	0	space	space	0
	*,?! \-()@/:_+& %=<> £\$¥¤[]{}~^_¡¢£\$# "	*,?! \-()@/:_+& %=<> £\$¥¤[]{}~^_¡¢£\$# "	*,?! \-()@/:_+& %=<> £\$¥¤[]{}~^_¡¢£\$# "	*,.@+ \ :
	#	#	#	#

**To enter or edit data:**

If you want to	Then you can
Enter only digits (1), uppercase (A) characters, lowercase (a) characters, or alphanumeric (2aB) characters.	<p>Press a keypad key one or more times (depending what input mode you're in) to enter the characters that is displayed on the keypad key.</p> <p>You can press the <b>abc</b> soft key one or more times to switch among uppercase (<b>ABC</b> soft key), alphanumeric (<b>2aB</b> soft key), numeric (<b>123</b> soft key) and lowercase (<b>abc</b> soft key) input modes.</p> <p>For example, if the input mode is <b>ABC</b>:</p> <ul style="list-style-type: none"> <li>- To enter "A", press  once.</li> <li>- To enter "B", press  twice quickly.</li> <li>- To enter "C", press  three times quickly.</li> <li>- To enter "2ÄÆÅÀÁÂÃÄÅÇ", press  more than three times quickly.</li> </ul> <p><b>Note:</b> When you are in the uppercase (<b>ABC</b> soft key) or lowercase (<b>abc</b> soft key) input mode,  is not available.</p>
Enter special characters.	<p>Press the keypad key  or , or long press .</p> <p><b>For  Key:</b></p> <ul style="list-style-type: none"> <li>- If it is in the uppercase (<b>ABC</b> soft key) or lowercase (<b>abc</b> soft key) input mode, it will provide the space character.</li> </ul>

If you want to	Then you can
	<ul style="list-style-type: none"> <li>- If it is in the numeric (<b>123</b> soft key) or alphanumeric (<b>2aB</b> soft key) input mode, it will only provide the digit 0.</li> <li>- Long press  on the pre-dialing screen will provide the special character "+".</li> </ul> <p><b>For  key:</b></p> <ul style="list-style-type: none"> <li>- It only provides the pound character "#".</li> </ul> <p><b>For  key:</b></p> <ul style="list-style-type: none"> <li>- If it is in the uppercase (<b>ABC</b> soft key), lowercase (<b>abc</b> soft key) or alphanumeric (<b>2aB</b> soft key) input mode, it will provide the following special characters:  <code>*.,?!\"-()@/_:~+&amp;%=&lt;&gt;£\$¥▣[]{}~^_!z\$#" </code>.</li> <li>- If it is in the numeric (<b>123</b> soft key) input mode, it will provide the following special characters: <code>*.@+\" : .</code></li> </ul>
Delete text you entered.	Press  or  to position the cursor to the right of the text you want to delete, and then press the <b>Delete</b> soft key to delete one character at a time.

## Phone Status

You can view phone status via phone user interface or web user interface.

Available information of phone status includes:


- General information (IPv4 address or IPv6 address, MAC address and firmware version).
  - IPv4 uses a 32-bit address.
  - IPv6 uses a 128-bit address.
- Network status (IPv4 status or IPv6 status, IP mode, and phone MAC address).
- Phone status (product name, hardware version, firmware version, product ID, phone MAC address and device certificate status).
- Location information (location is set to assist emergency responder)
- License (device license status and validity)



## Viewing the Phone Status

You can view phone status via phone user interface or web user interface.

**To view the phone status via phone user interface:**

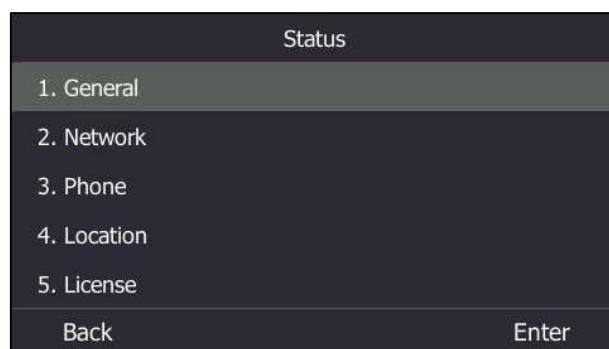1. Press **Menu**->**Status**.



2. Press  or  to scroll through the list.
3. Press the **Enter** soft key.


**To view the phone status via web user interface:**

1. Open the web browser on your PC.
2. Enter the IP address in the browser's address bar, and then press the **Enter** key.  
For example, "http://192.168.0.10" for IPv4 or "http://[2005:1:1:1:215:65ff:fe64:6e0a]" for IPv6.
3. Enter the user name (admin) and password (admin) in the login page.



4. Click **Confirm** to login.

The phone status is displayed on the first page of the web user interface.

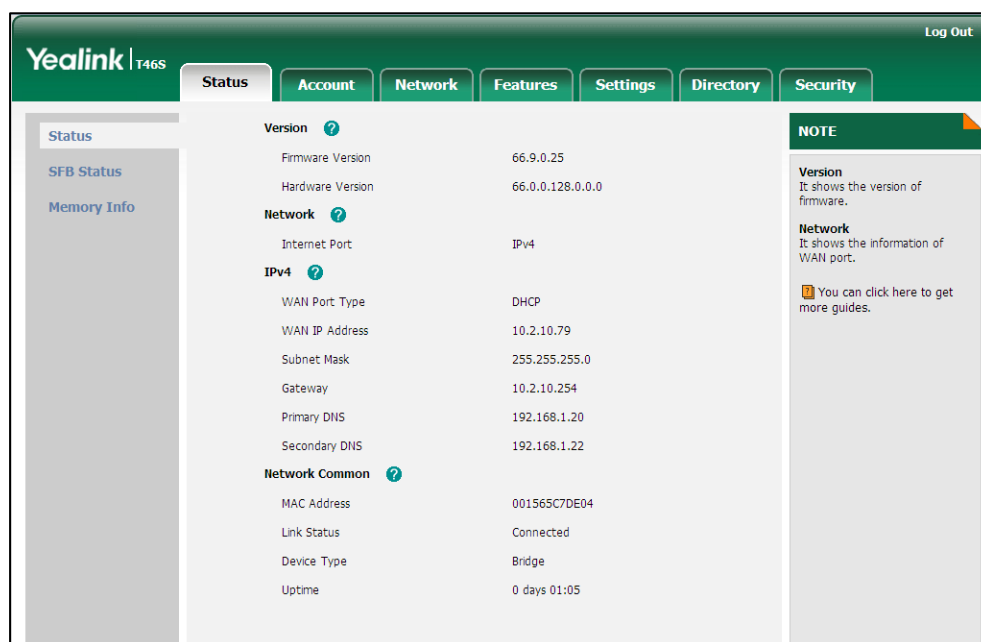

## Basic Network Settings

In order to use your phones, you must set up basic network. You can use DHCP or configure a static address to connect your phone to the network. If your phone cannot contact a DHCP server for any reason, you need to configure network settings manually. The phone can support either or both IPv4 and IPv6 addresses.

### Note

The wrong network settings may result in inaccessibility of your phone and may also have an impact on your network performance. For more information on these parameters, contact your system administrator.


## Configuring the DHCP

You can configure DHCP for IPv4 or IPv6. The following takes IPv4 as an example:

### To configure the DHCP via phone user interface:

1. Press **Menu**->**Advanced** (default password: admin) ->**Network**->**WAN Port**.
2. Press or , or the **Switch** soft key to select **IPv4** or **IPv4 & IPv6** from the **IP Mode** field.
3. Select **IPv4**, and then press the **Enter** soft key.

4. Press  or  , or the **Switch** soft key to select **DHCP** from the **Type** field.

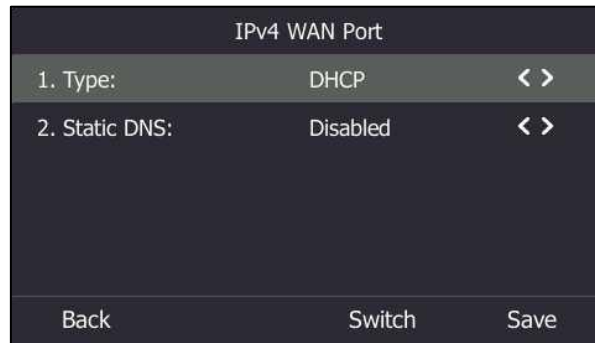

IPv4 WAN Port		
1. Type:	DHCP	< >
2. Static DNS:	Disabled	< >
<div>Back Switch Save</div>		






5. Press the **Save** soft key to accept the change.


If you want to configure DHCP for IPv6, select **IPv6** or **IPv4 & IPv6** from the **IP Mode** field in the step 2.

DHCP is configurable via web user interface at the path **Network->Basic**.

## Configuring the Static IPv4 Address

**To configure a static IPv4 address via phone user interface:**

1. Press **Menu->Advanced** (default password: admin) -> **Network->WAN Port**.
2. Press  or  , or the **Switch** soft key to select **IPv4** or **IPv4 & IPv6** from the **IP Mode** field.
3. Press  to select **IPv4**, and then press the **Enter** soft key.
4. Press  or  , or the **Switch** soft key to select the **Static IP** from the **Type** field.

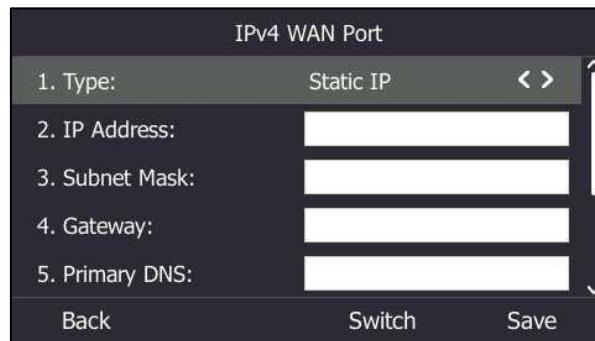

IPv4 WAN Port		
1. Type:	Static IP	< >
2. IP Address:	<input type="text"/>	
3. Subnet Mask:	<input type="text"/>	
4. Gateway:	<input type="text"/>	
5. Primary DNS:	<input type="text"/>	
<div>Back Switch Save</div>		






5. Enter the desired value in the **IP Address**, **Subnet Mask**, **Gateway**, **Primary DNS** and **Secondary DNS** field respectively.
6. Press the **Save** soft key to accept the change.  
The LCD screen will prompt "Reboot now?".
7. Press the **OK** soft key.


This configuration will take effect after a reboot.

Static IPv4 address is configurable via web user interface at the path **Network->Basic**.

## Configuring the Static IPv6 Address

To configure a static IPv6 address via phone user interface:

1. Press **Menu**->**Advanced** (default password: admin) ->**Network**->**WAN Port**.
2. Press  or  , or the **Switch** soft key to select **IPv6** or **IPv4 & IPv6** from the **IP Mode** field.
3. Press  select **IPv6**, and then press the **Enter** soft key.
4. Press  or  , or the **Switch** soft key to select the **Static IP** from the **Type** field.
5. Enter the desired value in the **IP Address**, **IPv6 IP Prefix**, **Gateway**, **Primary DNS** and **Secondary DNS** fields respectively.

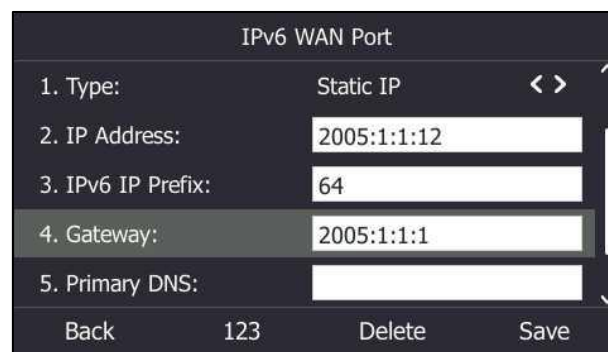

IPv6 WAN Port	
1. Type:	Static IP < > ^
2. IP Address:	2005:1:1:12
3. IPv6 IP Prefix:	64
4. Gateway:	2005:1:1:1
5. Primary DNS:	
Back	123 Delete Save

6. Press the **Save** soft key.
7. The LCD screen will prompt "Reboot now?".
8. Press the **OK** soft key to accept the change.

This configuration will take effect after a reboot.

Static IPv6 address is configurable via web user interface at the path **Network**->**Basic**.





# Customizing Your Phone

---

You can customize your T46S Skype for Business phone by personally configuring certain settings, for example, backlight, time & date, and ringtones. You can also manage the contacts and call history.

This chapter provides basic operating instructions for customizing your phone. Topics include:

- [General Settings](#)
- [Audio Settings](#)
- [Contact Management](#)
- [Call History Management](#)
- [Dial Plan](#)
- [Dial-now](#)

If you require additional information or assistance with your new phone, contact your system administrator.

## General Settings

### Remember Password

You can enable the remember password feature, so that a **Remember Password** option will appear at the phone login screen. Remember password feature is disabled by default, and it is configurable via web user interface only.

**To configure remember password feature via web user interface:**

1. Click on **Features->General Information**.

2. Select **Enabled** from the pull-down list of **Remember Password**.

The screenshot shows the Yealink T46S web interface with the 'Features' tab selected. The 'General Information' section is expanded, showing various settings. The 'Remember Password' option is highlighted with a red box, and its value is set to 'Enabled'. The interface includes a sidebar with navigation links (General Information, Audio, Intercom, Remote Control, Bluetooth, LED) and a top navigation bar with tabs (Status, Account, Network, Features, Settings, Directory, Security). A 'NOTE' section on the right provides additional information about 'Call Waiting' and 'Key As Send' features.

General Information	
Call Waiting	Enabled
Key As Send	#
Hotline Number	
Hotline Delay(0~10s)	4
Busy Tone Delay (Seconds)	0
Return code when refuse	603 (Decline)
Feature Key Synchronization	Disabled
Time-Out for Dial-Now Rule	1
DHCP Hostname	SIP-T46S
E911 Location Tip	Enabled
Update Checking Time	24
Use DHCP Option 120	Disabled
SFB Cert Service URL	
Enable SFB Automation	Disabled
SFB Inactive Time	5
SFB Away Time	5
Web Sign in	Enabled
Set as CAP	Disabled
<b>Remember Password</b>	<b>Enabled</b>
History Record Contacts Avatar	Enabled
Auto Discover	Enabled
Exchange Server Url	

NOTE

**Call Waiting**  
This call feature allows your phone to accept other incoming calls during the conversation.

**Key As Send**  
Select \* or # as the send key.  
You can click here to get more guides.

3. Click **Confirm** to accept the change.  
A dialog box pops up to prompt you that this configuration will take effect after a reboot.
4. Click **OK** to reboot the phone.

The login screen will be shown as below:

The screenshot shows a 'Sign In' screen with a dark background. At the top, it says 'Sign In'. Below that, there's a section for 'Sign In:' with 'User Sign-in' selected and a '< >' toggle. There are three input fields: 'Address:' with 'name@company.com', 'UserName:', and 'Password:'. Below these is a 'Remember Password:' toggle set to 'Off' with a '< >' toggle. At the bottom, there are three buttons: 'Back', 'Switch', and 'Sign In'.

(User Sign-in method)

The screenshot shows a 'Sign In' screen with a dark background. At the top, it says 'Sign In'. Below that, there's a section for 'Sign In:' with 'PIN Authentication' selected and a '< >' toggle. There are two input fields: 'Extension:' and 'PIN:'. Below these is a 'Remember Password:' toggle set to 'Off' with a '< >' toggle. At the bottom, there are three buttons: 'Back', 'Switch', and 'Sign In'.

(PIN Authentication method)

#### Note

Remember password feature is only applicable to **PIN Authentication** and **User Sign-in** method.


## Account Lock

You can lock your account to prevent your account being signed in or signed out randomly. If account lock feature is enabled, users are prompted for administrator password to sign in or sign out.

**To configure the account lock feature via phone user interface:**

1. Press **Menu->Advanced** (default password: admin) -> **Account Lock**.

2. Press ◀ or ▶ , or the **Switch** soft key to select **On** from the **Account Lock** field.

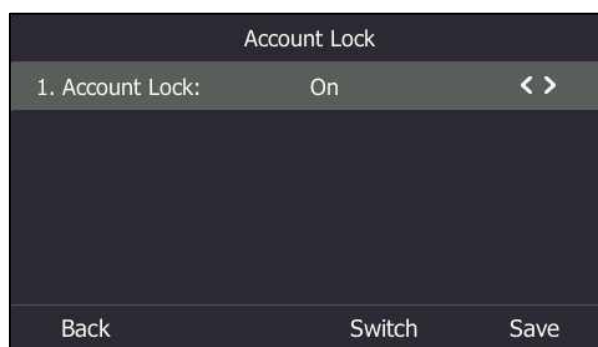

3. Press the **Save** soft key to accept the change.

Account lock is configurable via web user interface at the path **Account->Basic->Account Lock**.

## Always Online

Always online feature can maintain available status of the account when the phone is idle. If you enable the always online feature, your available status will not change to other status automatically until you manually change it.

**To configure the always online via phone user interface:**

1. Press **Menu->Basic->Always Online**.
2. Press ◀ or ▶ , or the **Switch** soft key to select the desired value from the **Always Online** field.



3. Press the **Save** soft key to accept the change.

Always online is configurable via web user interface at the path **Account->Basic->Always Online**.

## Screen Saver

The screen saver will automatically start when the phone is idle for the preset waiting time. The screen saver is used to blank the screen or fill it with moving images or patterns.

**The screen saver will be stopped if one of the following phone events occurs:**

- Press any key.
- Pick up/hang up the handset.
- There is an incoming call.
- A new prompt (e.g., someone adds you as a delegate or you add someone to be your delegate using the Skype for Business client).

If your phone is idle again for a specified period of time, the screen saver will start again. The time & date and certain feature status icons (e.g., a missed call, auto answer) will also display on the screen saver. For more information on the icons, refer to [Icon Instructions](#) on page 3. You can configure the phone whether to display the time & date on the screen saver or not.



You can configure the screen saver of the phone, and upload custom pictures to set up a screen saver of your picture via web user interface. You can configure the screen saver wait time, screen saver type and screen saver display clock via phone user interface or web user interface.

## Uploading a Custom Picture as Screen Saver

The custom pictures must meet the following:


Phone Model	Format	Resolution	Single File Size	Screen Size
T46S	*.jpg *.png *.bmp *.jpeg	<=1.8 megapixels	<=5MB	4.3 inches (Resolution: 480x272)

**To upload a custom picture as screen saver via web user interface:**

1. Click on **Settings->Preference**.
2. Select **Custom** from the pull-down list of **Screensaver Type**.

3. In the **Upload Screensaver** field, click **Browse** to locate the custom picture from your local system, and then click **Upload**.

This field appears only if **Screensaver Type** is set to **Custom**.

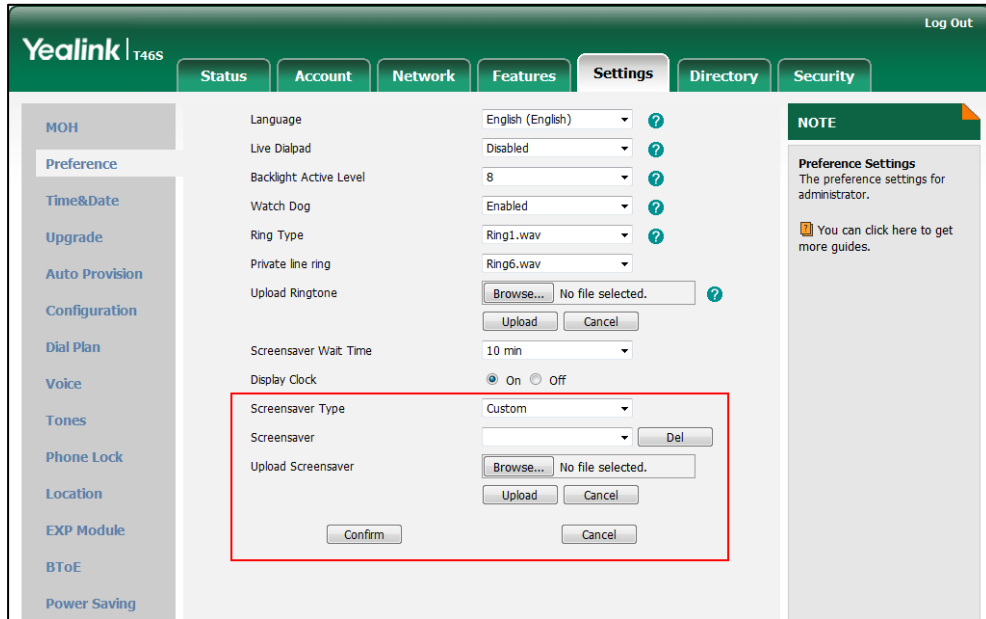

The custom picture appears in **Screensaver** list. You can only delete the custom picture by clicking **Del** in the **Screensaver** field.


#### Note

You can only upload one custom image at a time via web user interface.

## Configuring the Screen Saver

To configure the screen saver via phone user interface:

1. Press **Menu->Basic->Display->Screensaver**.

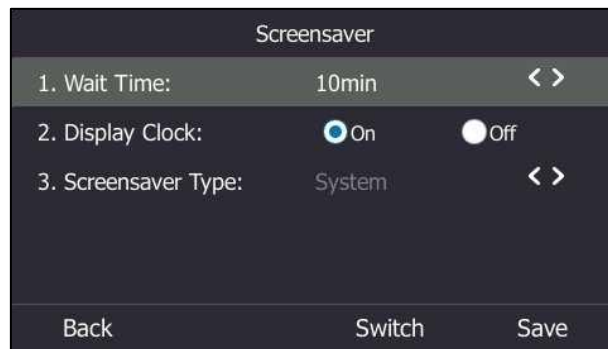

2. Press **◀** or **▶**, or the **Switch** soft key to select the desired wait time from the **Wait Time** field.
3. Press **◀** or **▶** mark the desired radio box in the **Display Clock** field.
4. Press **◀** or **▶**, or the **Switch** soft key to select the desired value from the **Screensaver Type** field.

This field is available only if you have uploaded custom image file(s) via web user interface.

- If you select **System**.

The phone will automatically set the built-in picture as the screen saver.

- If you select **Custom**.

The phone will automatically set the custom pictures you upload as the screen saver, and display these pictures alternately.

5. Press the **Save** soft key to accept the change.

Screen saver is configurable via web user interface at the path **Settings->Preference**.

## Power Saving

The power saving feature is used to turn off the backlight and screen to conserve energy. The phone enters power-saving mode after it has been idle for a certain period of time. In power-saving mode, the power LED illuminates solid red for 500ms and goes out for 3s alternately.

**The phone will exit power-saving mode if one of the following phone events occurs:**

- Press any key.
- Pick up/hang up the handset.
- There is an incoming call.
- A new prompt (e.g., someone adds you as a delegate or you add someone to be your delegate using the Skype for Business client).

If the screen saver is enabled (refer to [Screen Saver](#) on page 39) on your phone, power-saving mode will still occur.

You can configure the following power-saving settings:

- Office Hour
- Idle Timeout (minutes)

The office hour and idle timeout (minutes) settings work only if the power saving feature is enabled.

### Note

Power saving is configurable via web user interface only.

## Enabling the Power Saving

**To enable the power saving feature via web user interface:**

1. Click on **Settings->Power Saving**.

2. Select **Enabled** from the pull-down list of **Power Saving**.

The screenshot shows the Yealink T46S web interface. The 'Settings' tab is selected. In the 'Power Saving' section, the dropdown menu is set to 'Enabled' and is highlighted with a red box. Below this, the 'Office Hour' section displays time ranges for each day of the week (Monday to Sunday) using time pickers. The 'Idle TimeOut (minutes)' section includes input fields for 'Office Hour Idle TimeOut' (960), 'Off Hour Idle TimeOut' (10), and 'User input extension Idle TimeOut' (10). At the bottom of this section are 'Confirm' and 'Cancel' buttons. On the right side, a 'NOTE' panel contains the text 'settings-powersaving-note' and a link to 'You can click here to get more guides.'

3. Click **Confirm** to accept the change.

## Configuring the Office Hour

Office Hour specifies the starting time and ending time in the office each day.

**To configure the office hour via web user interface:**

1. Click on **Settings->Power Saving**.
2. Enter the starting time and ending time respectively in the desired day field.

This screenshot is similar to the previous one, showing the Yealink T46S web interface. The 'Power Saving' dropdown is set to 'Enabled'. The 'Office Hour' section is highlighted with a red box, showing time ranges for each day of the week. The 'Idle TimeOut (minutes)' section includes input fields for 'Office Hour Idle TimeOut' (960), 'Off Hour Idle TimeOut' (10), and 'User input extension Idle TimeOut' (10). At the bottom of this section are 'Confirm' and 'Cancel' buttons. On the right side, a 'NOTE' panel contains the text 'settings-powersaving-note' and a link to 'You can click here to get more guides.'

3. Click **Confirm** to accept the change.



## Configuring the Idle Timeout

Idle Timeout specifies the period of time before the phone enters power-saving mode. The following three types of idle timeout you can configure:

- **Office Hours Idle TimeOut:** Configures the idle timeout for office hours.
- **Off Hours Idle TimeOut:** Configures the idle timeout for non-office hours.
- **User input extension Idle TimeOut:** Configures idle timeout that applies after you use the phone (for example, press a key on the phone or pick up/hang up the handset). You can choose to set a higher User Input Extension Idle TimeOut than the Office Hours Idle TimeOut and Off Hours Idle TimeOut so that when you're actively using the phone, power-saving mode doesn't initiate as often.

By default, the Office Hours Idle Timeout is much longer than the Off Hours Idle Timeout. If you use the phone, the idle timeout that applies (User Input Extension Idle Timeout or Office Hours/Off Hours Idle TimeOut) is the timeout with the highest value. If the phone has an incoming call or new message, the User Input Extension Idle TimeOut is ignored.

**To configure the idle timeout via web user interface:**

1. Click on **Settings->Power Saving**.
2. Enter the desired value between 1 and 960 (minutes) in the **Office Hours Idle TimeOut** field.
3. Enter the desired value between 1 and 10 (minutes) in the **Off Hours Idle TimeOut** field.
4. Enter the desired value between 1 and 30 (minutes) in the **User Input Extension Idle TimeOut** field.

The screenshot shows the Yealink T46S web interface. The 'Settings' tab is selected, and the 'Power Saving' section is active. The 'Power Saving' dropdown is set to 'Enabled'. Under the 'Office Hour' section, a weekly schedule is shown with time ranges for each day. The 'Idle TimeOut (minutes)' section is highlighted with a red box, containing three input fields: 'Office Hour Idle TimeOut' (960), 'Off Hour Idle TimeOut' (10), and 'User Input extension Idle TimeOut' (10). Below these fields are 'Confirm' and 'Cancel' buttons. A 'NOTE' box on the right states: 'settings-powersaving-note. You can click here to get more guides.'

5. Click **Confirm** to accept the change.

## Backlight

Backlight has two options:

**Backlight Active Level:** The intensity of the LCD screen when the phone is active. You can change the intensity of the LCD screen. Digits (1-10) represent different intensities. 10 is the highest intensity.





**Backlight Inactive Level:** The intensity of the LCD screen when the phone is inactive for the designated backlight time. You can select a low intensity or turn off the backlight.

You can also change the intensity of the LCD screen of EXP40 connected to the T46S Skype for Business phone.

### Note

Backlight time is configurable on Skype for Business Server only. Contact your system administrator for more information.

#### To configure the backlight via phone user interface:

1. Press **Menu->Basic->Display->Backlight**.
2. Press  or  , or the **Switch** soft key to select the desired value from the **Backlight Active Level** field.
3. Press  or  , or the **Switch** soft key to select the desired value from the **Inactive Level** field.



4. Press the **Save** soft key to accept the change.

Backlight is configurable via web user interface at the path **Settings->Preference**.

## Contrast


You can only configure the contrast of the expansion module EXP40 connected to the T46S Skype for Business phone to a comfortable level on the phone. Ensure that the expansion module has been connected to the phone before configuration. The intensity of contrast ranges from 1 to 10 and the highest intensity is 10.

**To configure the contrast via phone user interface:**

1. Press **Menu->Basic->Display->Contrast**.

If EXP40 is not connected to the phone, the Contrast Setting screen displays "No EXP".

2. Press ◀ or ▶, or the **Switch** soft key to increase or decrease the intensity of contrast.  
The default contrast level is "6".

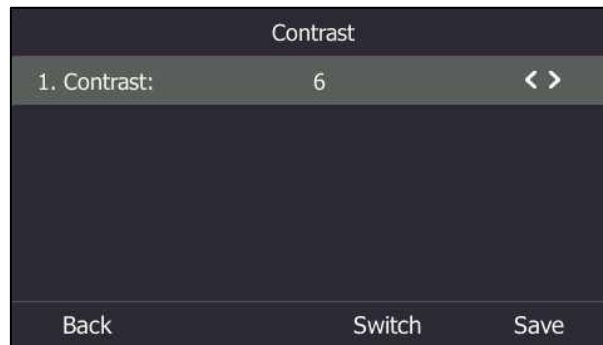


3. Press the **Save** soft key to accept the change.



## Showing Full Name

Showing full name allows the phone to extend the display length of the line key. If the showing full name feature is enabled, more characters can be displayed on the line keys.

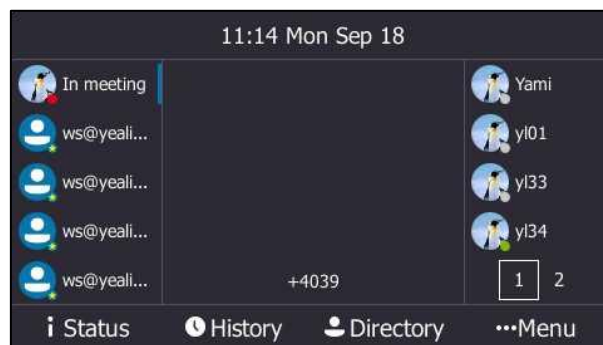When showing full name feature is set to Off:

**To configure the idle screen to display full name via phone user interface:**

1. Press **Menu->Basic->Display->Show full name**.


2. Press  or , or the **Switch** soft key to select **On** from the **Show full name** field.



3. Press the **Save** soft key to accept the change.

The phone will reboot to make the change take effect.

After a reboot, the display length of the line key label is extended and more characters can be displayed.

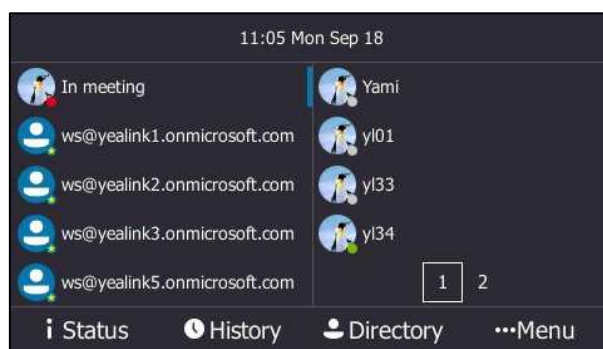



## Language


The default language of the phone user interface is English. If the language of your web browser is not supported by the phone, the web user interface will use English by default. You can change the language for the phone user interface and the web user interface respectively.

### Changing the Language for the Phone User Interface

**To change the language for the phone user interface:**

1. Press **Menu->Basic->Language**.
2. Press  or  to select the desired language.

- Press the desired language.

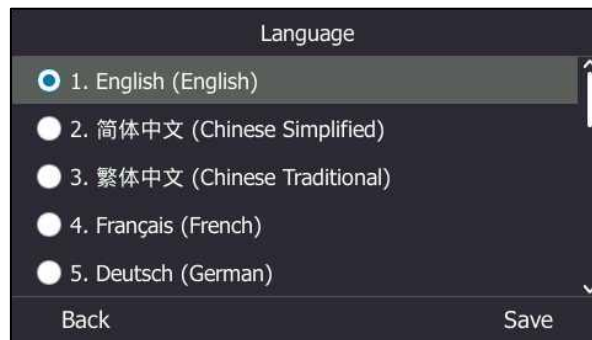


- Press **Save** to accept the change.

Text displayed on the phone user interface will change to the selected language.

## Changing the Language for the Web User Interface

**To change the language for the web user interface:**

- Click on **Settings->Preference**.
- Select the desired language from the pull-down list of **Language**.

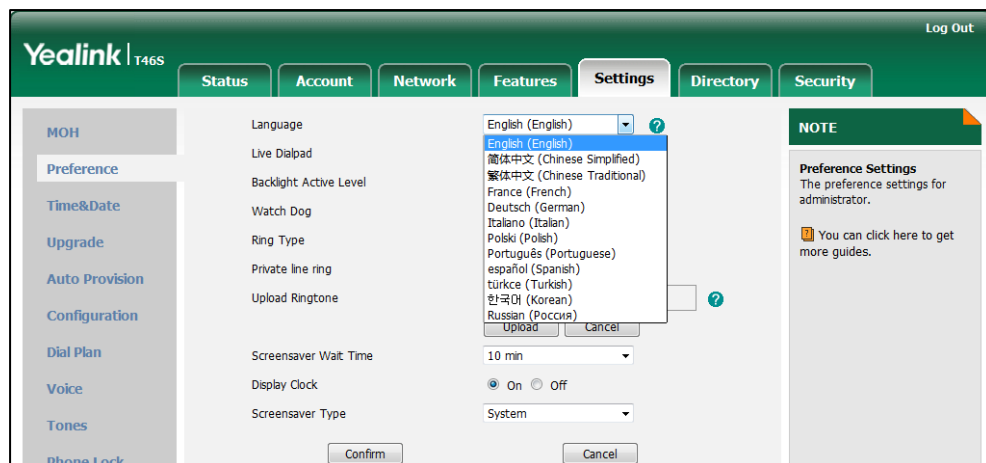

- Click **Confirm** to accept the change.







Text displayed on the web user interface will change to the selected language.

## Time & Date

You can configure the phone to obtain the time and date from the SNTP server automatically, or configure the time and date manually.

## Configuring the SNTP Setting

To configure the SNTP settings via phone user interface:

1. Press **Menu->Basic->Date & Time->General->SNTP Settings**.
2. Press  or , or the **Switch** soft key to select the time zone that applies to your area from the **Time Zone** field.  
The default time zone is "GMT+8".
3. Enter the domain names or IP addresses of SNTP servers in the **NTP Server1** and **NTP Server2** field respectively.
4. Press  or , or the **Switch** soft key to select automatic, enabled and disabled from the **Daylight Saving** field.
5. Press  or , or the **Switch** soft key to select the desired location from the **Location** field.

General		
1. Time Zone:	GMT+8	< >
2. NTP Server 1:	time.windows.com	
3. NTP Server 2:	time.nist.gov	
4. Daylight Saving:	Automatic	< >
5. Location:	China(Beijing)	< >
Back	Switch	Save

6. Press the **Save** soft key to accept the change.

SNTP Setting is configurable via web user interface at the path **Settings->Time & Date**.

### Note

Please refer to [Appendix A - Time Zones](#) for the list of available time zones on the Skype for Business phone.


If the phone cannot obtain the time and date from the Simple Network Time Protocol (SNTP) server, contact your system administrator for more information.

## Configuring the Time and Date Manually

To configure the date and time manually via phone user interface:

1. Press **Menu->Basic->Date & Time->General->Manual Settings**.

2. Enter the specific date and time or press  or  to edit specific date and time in the corresponding fields.

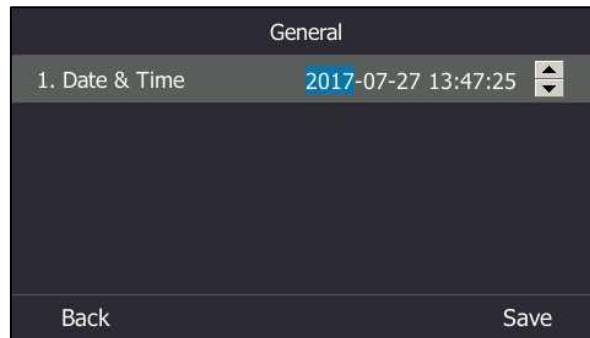






3. Press **Save** to accept the change.

The time and date displayed on the LCD screen will change accordingly.

## Configuring the Time and Date Format

**To configure the time and date format via phone user interface:**

1. Press **Menu->Basic->Date & Time ->Time & Date Format**.
2. Press  or , or the **Switch** soft key to select the desired date format from the **Date Format** field.
3. Press  or , or the **Switch** soft key to select the desired time format (**12 Hour** or **24 Hour**) from the **Time Format** field.

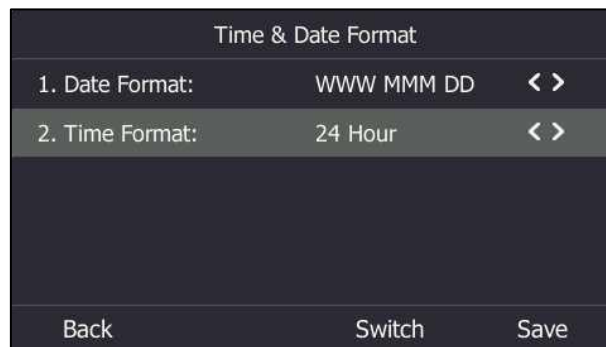

4. Press the **Save** soft key to accept the change.

There are 7 available date formats. For example, for the date format "WWW DD MMM", "WWW" represents the abbreviation of the week, "DD" represents the two-digit day, and "MMM" represents the first three letters of the month.

The date formats available:

Date Format	Example (2016-8-19)
WWW MMM DD	Fri Aug 19
DD-MMM-YY	19-Aug-16

Date Format	Example (2016-8-19)
YYYY-MM-DD	2016-08-19
DD/MM/YYYY	19/08/2016
MM/DD/YY	08/19/16
DD MMM YYYY	19 Aug 2016
WWW DD MMM	Fri 19 Aug

Time and date format is configurable via web user interface at the path **Settings->Time & Date**.

## Administrator Password

The **Advanced** option is only accessible to the administrator. The default administrator password is "admin". For security reasons, you should change the default administrator password as soon as possible.

**To change the administrator password via phone user interface:**

1. Press **Menu->Advanced** (default password: admin) -> **Set Password**.
2. Enter the desired value in the **Current PWD**, **New PWD** and **Confirm PWD** field respectively.

3. Press the **Save** soft key to accept the change.

Administrator password is configurable via web user interface at the path **Security->Password**.



## Key as Send

You can set the "#" key or "\*" key to perform as a send key while dialing.

**To configure key as send via phone user interface:**

1. Press **Menu->Features->Key as Send**.



- Press  or , or the **Switch** soft key to select # or \* from the **Key as Send** field, or select **Disabled** to disable this feature.



- Press the **Save** soft key to accept the change.

Key as send is configurable via web user interface at the path **Features->General Information->Key as send**.

## Phone Lock

You can choose to lock your phone in following situations:


- Prevent unauthorized outgoing calls.
- Prevent people from viewing or modifying phone information, such as your directory and call history.

When your phone is locked, you can:

- Placing calls to emergency and authorized numbers only unless your system administrator allows your phone to place outgoing calls.
- Answer incoming calls, unless your administrator has set your phone to require a password to answer calls.

## Setting a lock PIN

If the Skype for Business server is configured to forcibly lock the phone, user can use phone lock feature to lock the phone to prevent it from unauthorized use. And the Skype for Business phone will prompt the user to create a lock PIN at the initial sign-in.

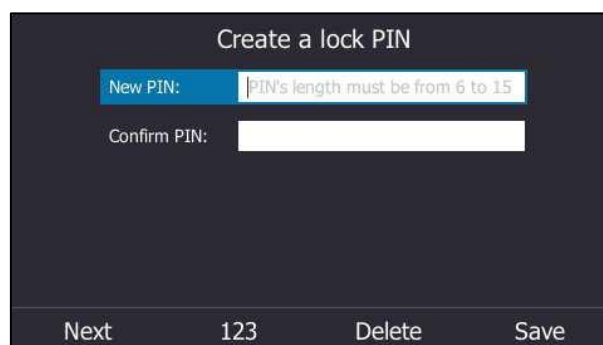

**To set a lock PIN:**

1. Enter the lock PIN in the **New PIN** field.
2. Press the **Next** soft key, and then enter the lock PIN again in the **Confirm PIN** field.
3. Press the **Save** soft key.

After you create a lock PIN, you can use it to unlock your phone.



**Note**

The PIN's length is controlled by the server. For more information, contact your administrator.

If you do not create a lock PIN when prompted, you will be automatically signed out of the phone in a set amount of time, and you must create a lock PIN when you sign in again.

## Locking Your Phone

When the phone lock feature is enabled, do one of the following to lock your phone:

- Press  (The second line key).
- Long press  for two seconds.
- The phone automatically locks after being idle for a set amount of time (in seconds).


## Configuring the Idle Timeout for Phone Lock

You can configure the amount of time (in minutes) the phone can be idle before it automatically locks.

**To configure the idle timeout for phone lock via phone user interface:**

1. Press **Menu->Basic->Phone Lock->Idle time-out**.
2. Enter the integer between 1 to 1440 minutes in the **Idle time-out(mins)** field.

The time is 10 minutes by default.

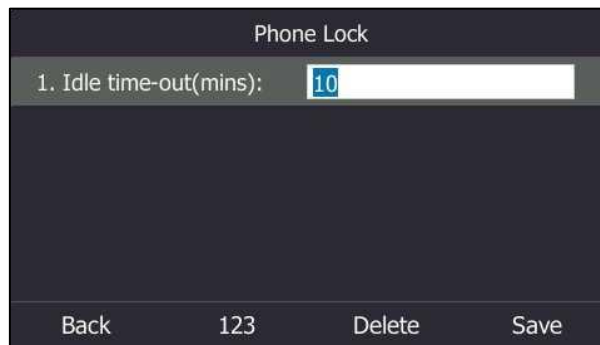

3. Press the **Save** soft key.


The phone will lock automatically when it has been inactive for 10 minutes.

## Unlocking Your Phone

You can unlock your phone using your lock PIN.

**To unlock the phone via phone user interface:**

1. Press the **Unlock** soft key.
2. Enter the Lock PIN.

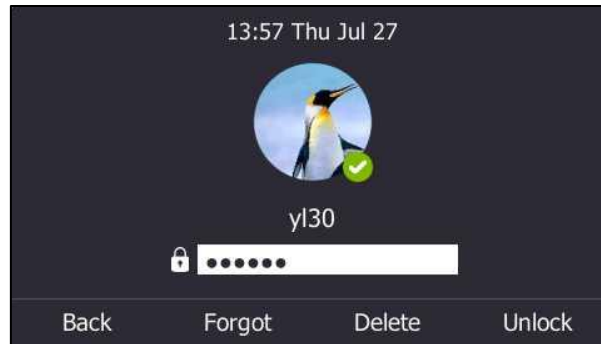

3. Press the **Unlock** soft key or **OK** to unlock the phone.

## Configuring the Unlock Attempts

You can specify the maximum number of unsuccessful unlock attempts for a locked phone that is not during a call. You will be automatically signed out of the phone when the unsuccessful unlock attempts exceeds the limit.

### Note

You can try to unlock your phone during a call as many times as you want.

**To configure the unlock attempts via phone user interface:**

1. Press **Menu->Basic->Phone Lock->Unlock attempts**.
2. Press **Left Arrow**, **Right Arrow** or the **Switch** soft key to select the desired value from the **Unlock attempts** field.




3. Press the **Save** soft key.

You will be automatically signed out of the phone after five unsuccessful unlock attempts.

## Changing Your Lock PIN

To change the phone Lock PIN via phone user interface:

1. Press **Menu**->**Basic**->**Phone Lock**->**Change PIN**.

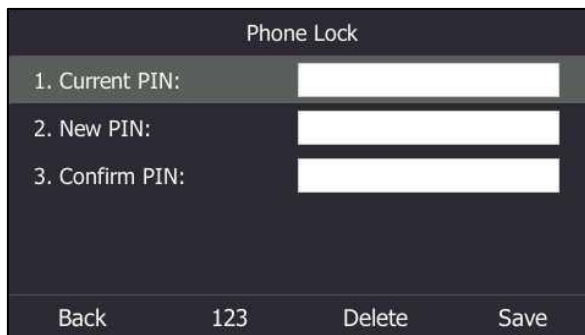

2. Enter the current lock PIN in the **Current PIN** field.
3. Enter the new lock PIN in the **New PIN** field.
4. Enter the new lock PIN again in the **Confirm PIN** field.
5. Press the **Save** soft key to accept the change.


Lock PIN is configurable via web user interface at the path **Settings**->**Phone Lock**.

## Resetting Your Lock PIN

If you forget your lock PIN, you can reset the lock PIN from your phone using your login password.

To reset the PIN when the phone is locked via phone user interface:

1. On the Lock screen, press the **Unlock** soft key.
2. Press the **Forgot** soft key.

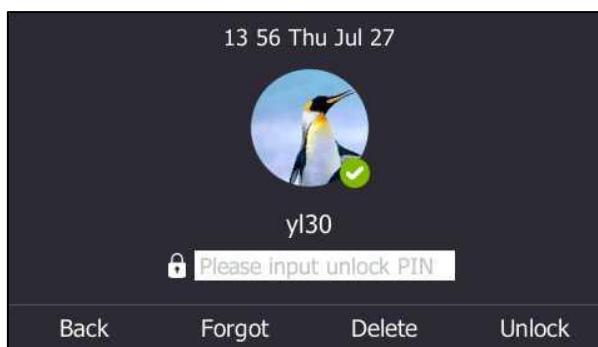




3. Enter your login password for your Skype for Business account.
4. Press the **Unlock** soft key.
5. Enter and confirm your new lock PIN.

## Disabling Phone Lock

If you do not want to lock your phone, you can disable phone lock.

**To disable phone lock feature via phone user interface:**

1. Press **Menu->Basic->Phone Lock->Phone Lock**.
2. Press ,  or the Switch soft key to select **Disabled** from the **Lock the phone** field.

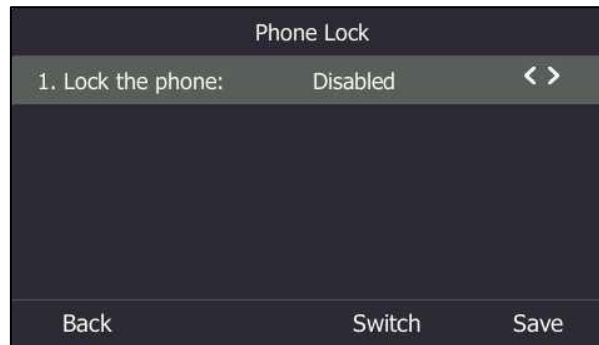

3. Press the **Save** soft key to accept the change.


Phone lock is configurable via web user interface at the path **Settings->Phone Lock**.

## Audio Settings

### Volume

You can adjust the ringer volume when the phone is idle or ringing. You can also adjust the receiver volume of currently engaged audio devices (handset, speakerphone or headset) when the phone is in use.

**To adjust the volume via phone user interface:**

1. Press  to adjust the ringer and audio volume.

If ringer volume is adjusted to minimum when the phone is idle, the minimum volume icon will appear on LCD screen.


### Phone's Ringtone



Phone's ringtones are used to indicate incoming calls and distinguish your phone from your neighbor's.

## Selecting a Ringtone

To select a ringtone for the phone via phone user interface:

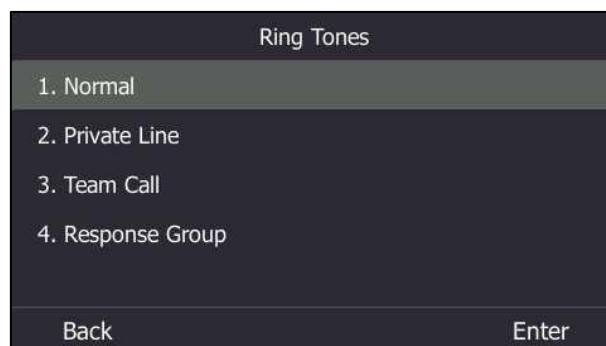1. Press **Menu->Basic->Sounds->Ring Tones->Normal**.



2. Press  or  to select the desired ringtone.
3. Press the **Save** soft key to accept the change.

Phone's ringtones is configurable via web user interface at the path

**Settings->Preference->Ring Type**.

## Uploading a Custom Ringtone

To set the custom ring tones, you need to upload the custom ring tones to the phone in advance. The ring tone format must meet the following:

Format	Total File Size	Note
.wav	<=8MB	2MB of space should be reserved for the phone.


### Note

The ring tone file must be PCMU/PCMA audio format, mono channel, 8K sample rate and 16 bit resolution.

To upload a custom ringtone for the phone via web user interface:

1. Click on **Settings->Preference**.

- In the **Upload Ringtone** field, click **Browse...** to locate a ringtone file (the file format must be \*.wav) from your local system.

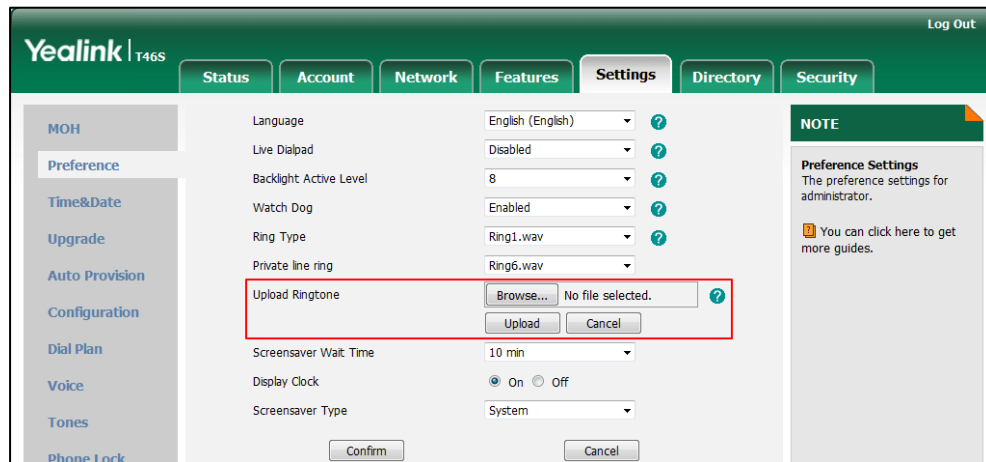

- Click **Upload** to upload the file.  
The custom ringtone appears in the pull-down list of **Ring Type**.

#### Note


The priority of ring tone for an incoming call on the phone is as follows: a boss/delegate ringtone (refer to [Boss-Admin](#) on page 132) > Contact ringtone (refer to [Adding Local Contacts](#) on page 65) > Phone ringtone.

## Key Tone

If you enable key tone, the phone will produce a sound when you press the keypad.

#### To configure key tone via phone user interface:

- Press **Menu->Basic->Sounds ->Key Tones**.
- Press or , or the **Switch** soft key to select **Enabled** or **Disabled** from the **Key Tone** field.

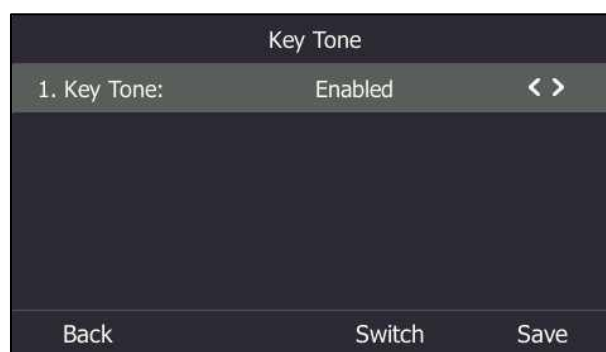

- Press the **Save** soft key to accept the change.


Key tone is configurable via web user interface at the path **Features->Audio**.

## Contact Management

The phone directory displays local directory and Skype for Business directory.

- Local directory (All Contacts or Favorites)
- Skype for Business directory (e.g., Favorites, Delegates, Bosses or Other Contacts)

If boss-admin is configured, the Bosses or Delegates group appears depending on your role. For more information on boss-admin feature, refer to [Boss-Admin](#) on page 132. You can add more Skype for Business groups via Skype for Business client.

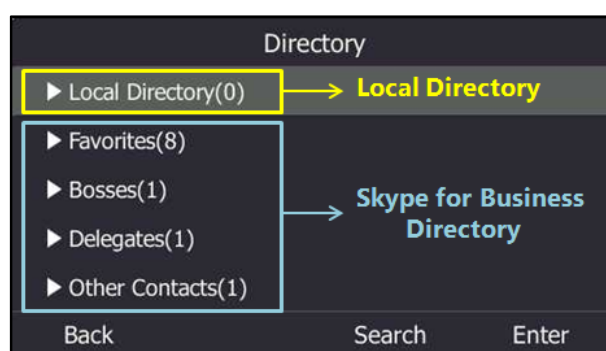

## Skype for Business Directory

The Skype for Business directory on your phone displays all Skype for Business contacts. You can search, add, view or delete Skype for Business contacts on the phone.

## Searching for Skype for Business Contacts


You can search for all Skype for Business contacts in the Microsoft Active Directory.

**To search for all Skype for Business contacts in the Microsoft Active Directory:**

1. Press the **Directory** soft key.
2. Press the **Search** soft key.
3. Enter a few continuous characters of the contact name or continuous numbers of the contact number to search for a desired Skype for Business contact.



The entries whose name or phone number matches the characters entered will appear on the LCD screen.

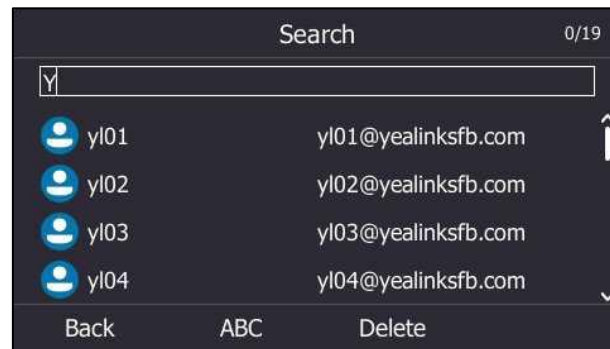

#### Note

You can also search for all contacts from the dialing screen. For more information, refer to [Placing a Call from the Search Results List](#) on page 85.

## Adding Skype for Business Contacts



You can add contacts to the Skype for Business directory in the following ways:


- From the search results
- From local directory
- From history records. For more information, refer to [Adding Contacts from History Records](#) on page 77.



## Adding Skype for Business Contacts from the Search Results

**To add a Skype for Business contact from search results via phone user interface:**

1. Do one of the following:
  - If you search for contacts from the dialing screen, do the following:
    - a) Press view search results.
    - b) Press the **More** soft key, and then press the **Add Sfb** soft key.
    - c) Press or to select the desired Skype for Business group, and then press the **OK** soft key.
  - If you search for contacts from the directory, do the following.
    - a) Press view search results.

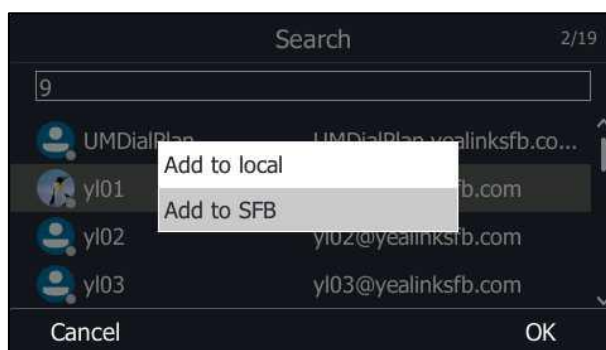- c) Press the **Option** soft key, and then press  or  to select **Add to SFB** from the prompt list.







- d) Press the **OK** soft key.
- e) Press  or  to select the desired Skype for Business group, and then press the **OK** soft key.



The Skype for Business contact is added to your phone.

## Adding Skype for Business Contacts from Local Directory



If you want to display a local contact on your Skype for Business client, you should add the local contact to the Skype for Business directory on the phone first.

**To add a Skype for Business contact from local directory via phone user interface:**

1. Press **Directory**->**Local Directory**.
2. Press  or  to select the desired group (All Contacts or Favorites) that contains the desired local contact.
3. Press **Enter** soft key.
4. Press  or  to highlight the desired contact.

5. Press the **Option** soft key, and then press  or  to select **Add to SFB** from the prompt list.



6. Press  or  to select the desired Skype for Business group, and then press **OK**.

## Viewing Skype for Business Contacts

You can view the following information about each Skype for Business contact on the phone:

- Name
- Presence Status
- Address
- Voicemail
- Email address
- Source

### Note



For more information on the presence status, refer to [Presence Status](#) on page 21.


## Viewing Skype for Business Contacts from the Directory



You can view all Skype for Business contacts from the Skype for Business directory.

**To view the Skype for Business contacts from the Skype for Business directory:**


1. Press the **Directory** soft key.

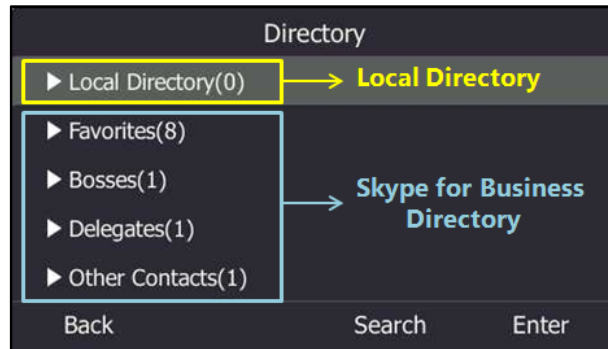- Press  or  to select the Skype for Business group (e.g., Favorites or Other Contacts) that contains the desired contact.



- Press the **Enter** soft key.
- Press  or  to select the desired contact.
- Press **Detail** soft key.

The detailed information of the contact appears on the LCD screen.

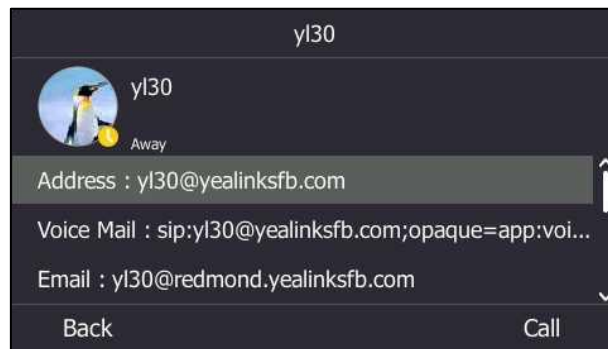


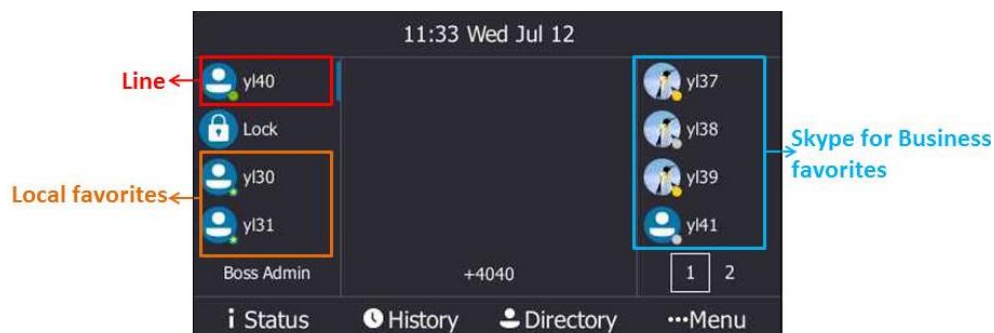
- Press the **Back** soft key to return to the previous screen.

## Viewing Skype for Business Favorites on the Idle Screen

You can also view Skype for Business favorites on the idle screen.

**To view the Skype for Business favorites on the idle screen:**

- By default, Skype for Business favorites are displayed behind the local favorites on the idle screen (local favorites are indicated by the icon  , Skype for Business favorites are indicated by the presence status icon).




## LED Instructions for Skype for Business Favorites

The line key LEDs on your phone can monitor Skype for Business favorites for status changes on the phone. For example, you can view the line key LED on the phone to monitor the status of a friend's line (busy or idle). The line key LED illuminates solid red when the friend's line is busy.

**To configure the line key LED via web user interface:**

1. Click on **Features->LED**.
2. Select the desired value from the pull-down list of **Line Key Led Light On**.
  - If it is enabled, the line key LEDs vary depending on the status of your Skype for Business favorites.
  - If it is disabled, the line key LEDs corresponding to your Skype for Business favorites are off.

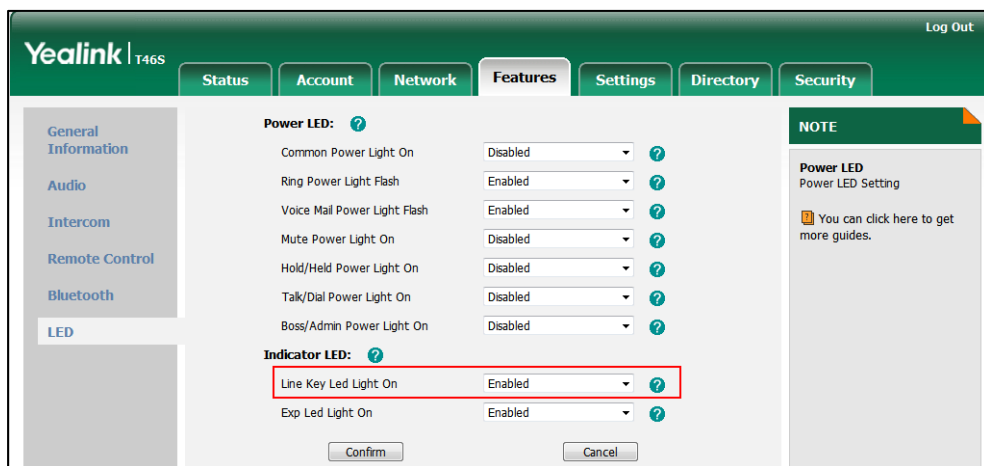

3. Click **Confirm** to accept the change.



### Line key LED (configured as a Skype for Business favorite)


LED Status	Description
Solid green	The Skype for Business favorite is available.
Solid red	The Skype for Business favorite is busy. The Skype for Business favorite is Do Not Disturb. The call of your Skype for Business favorite is parked. The call of your Skype for Business favorite is placed on hold. The held call of your Skype for Business favorite is resumed. The Skype for Business favorite is in a conference.
Solid yellow	The Skype for Business favorite is right back. The Skype for Business favorite is off work. The Skype for Business favorite is away.





LED Status	Description
Off	The Skype for Business favorite is unknown. The Skype for Business favorite is offline. Your phone is locked.

## Deleting Skype for Business Contacts

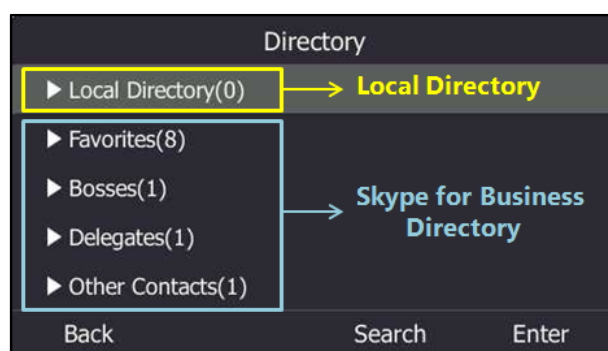
To delete a Skype for Business Contact from the Skype for Business directory:

1. Press the **Directory** soft key.
2. Press  or  to select the Skype for Business group that contains the desired contact.



3. Press the **Enter** soft key.
4. Press  or  to highlight the desired contact.
5. Press the **Option** soft key, and then press  or  to select **Delete from SfB** from the prompt list.

The LCD screen prompts "Delete the contact?".

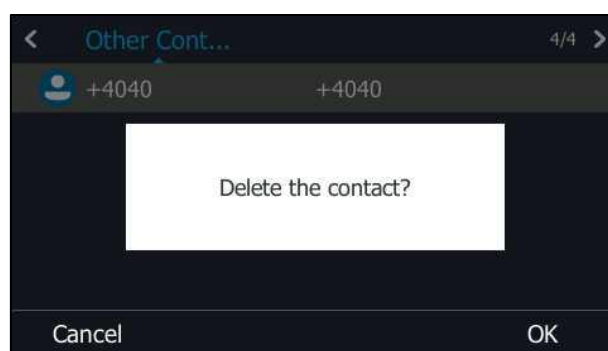

6. Press the **OK** soft key to confirm the deletion.

## Local Directory

Yealink Skype for Business phones also maintain a local directory. When adding a contact to the local directory, in addition to name and phone numbers, you can also specify the ringtone and group for the contact. Contacts can be added either one by one or in batch using a local contact file. Yealink Skype for Business phones support both \*.xml and \*.csv format contact files.

## Adding Local Contacts

You can add contacts to the local directory in the following ways:

- Manually
- From Skype for Business directory
- From history records. For more information, refer to [Adding Contacts from History Records](#) on page 77.

## Adding Local Contacts Manually

**To add a contact to the local directory manually:**

1. Press **Directory**->**Local Directory**->**All Contacts**.
2. Press the **Add** soft key.
3. Enter name, address, work number, mobile number, home number, title and email in the corresponding fields.

4. Press or , or the **Switch** soft key to select the desired ringtone from the **Ring** field.
5. Press the **Save** soft key to accept the change.

### Note



If the contact name already exists in the directory, the LCD screen will prompt "Contact name existed!".


Local directory is configurable via web user interface at the path **Directory**->**Local Directory**.





## Adding Local Contacts from Skype for Business Directory


**To add a local contact from Skype for Business directory via phone user interface:**

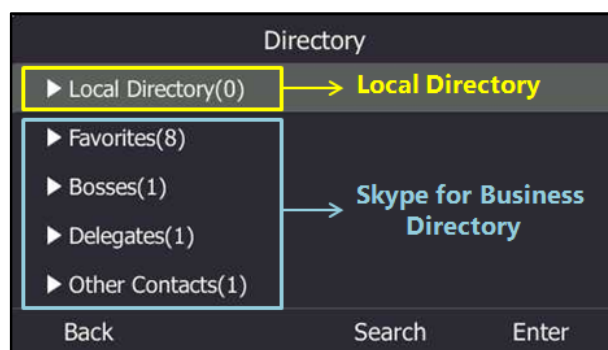

1. Press the **Directory** soft key.


- Press  or  to select the Skype for Business group (e.g., Favorites or Other Contacts) that contains the desired contact.

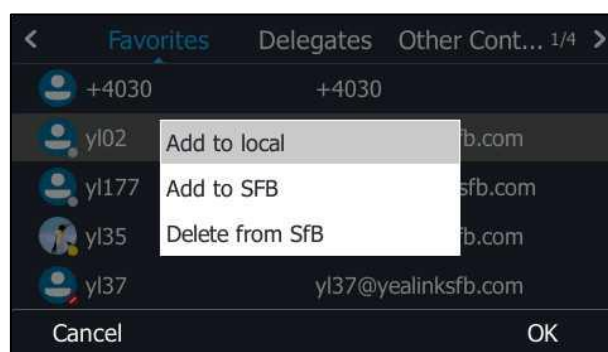

- Press **Enter** soft key.
- Press  or  to highlight the desired contact.
- Press the **Option** soft key, and then press  or  to select **Add to local** from the prompt list.



- Press  or  to edit the contact information.

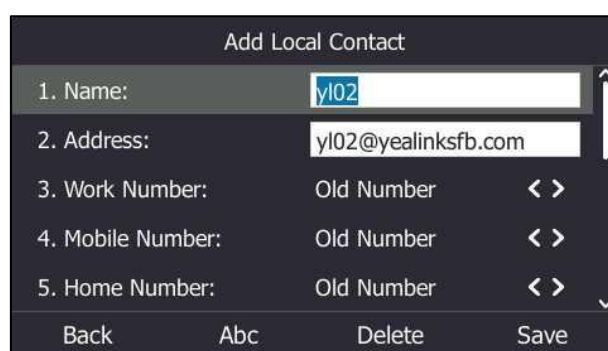

- Press the **Save** soft key to add a contact to the local directory.  
The Skype for Business contact is successfully saved to the local directory.

## Viewing Local Contacts







You can view the following information about each local contact on the phone:

- Name



- Address
- Work Number
- Mobile Number
- Home Number
- Title
- Email
- Ringtone
- Group

**To view the local contacts:**









1. Press **Directory**->**Local Directory**.
2. Press  or  to select the desired group.
3. Press  or  to highlight the desired contact.
4. Press the **Option** soft key, and then press  or  to select **Detail** from the prompt list.

The detailed information of the contact appears on the LCD screen.


5. Press the **Back** soft key to return to the pervious screen.

## Editing Local Contacts

**To edit a contact in the local directory:**

1. Press **Directory**->**Local Directory**.
2. Press  or  to select the desired group.
3. Press  or  to highlight the desired contact.
4. Press the **Option** soft key, and then press  or  select **Detail** from the prompt list.
5. Press  or  to highlight the contact information and then edit.

You can edit name, address, work number, mobile number, home number, title and email in the corresponding fields.

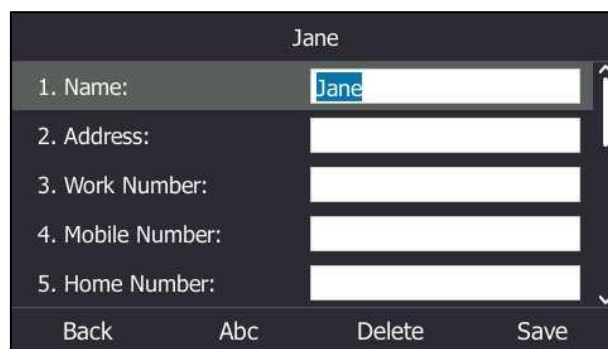







6. Press the **Save** soft key to accept change.


Local directory is configurable via web user interface at the path **Directory**->**Local Directory**.

## Deleting Local Contacts

**To delete a contact from the local directory:**

1. Press **Directory**->**Local Directory**.
2. Press  or  to select the desired group, and then press the **Enter** soft key.
3. Press  or  to highlight the desired contact.
4. Press the **Option** soft key, and then press  or  to select **Delete** from the prompt list.

The LCD screen prompts "Delete selected item?".

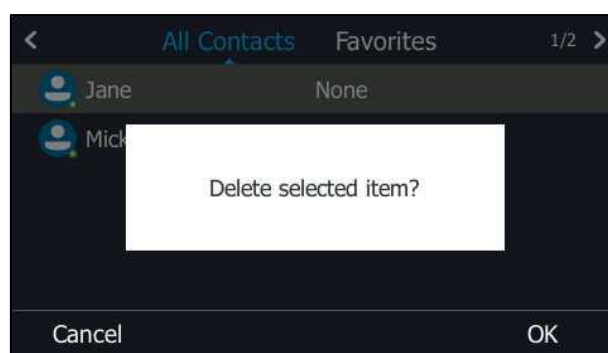

5. Press the **OK** soft key to confirm the deletion.

You can also delete all contacts by pressing the **Option** soft key, and then select **Delete All**.

Deleting a contact or all contacts is configurable via web user interface at the path

**Directory**->**Local Directory**.


## Importing/Exporting Contact Lists

You can manage your phone's local directory via phone user interface or web user interface. But you can only import or export the contact list via web user interface.

**To import an XML contact list file via web user interface:**

1. Click on **Directory**->**Local Directory**.

- Click **Browse...** to locate a contact list file (the file format must be \*.xml) from your local system.

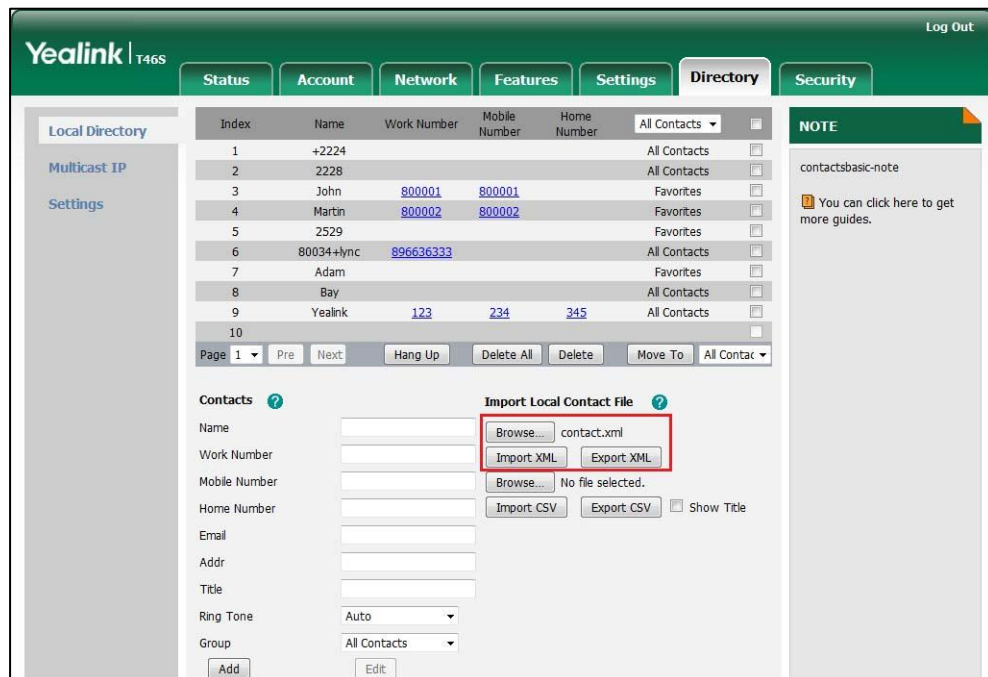

- Click **Import XML** to import the contact list.


The web user interface prompts "The original contact will be covered, continue?".

- Click **OK** to complete importing the contact list.


#### To import a CSV contact list file via web user interface:

- Click on **Directory->Local Directory**.
- Click **Browse...** to locate a contact list file (the file format must be \*.csv) from your local system.
- (Optional) Check the **Show Title** checkbox.

It will prevent importing the title of the contact information which is located in the first line of the CSV file.

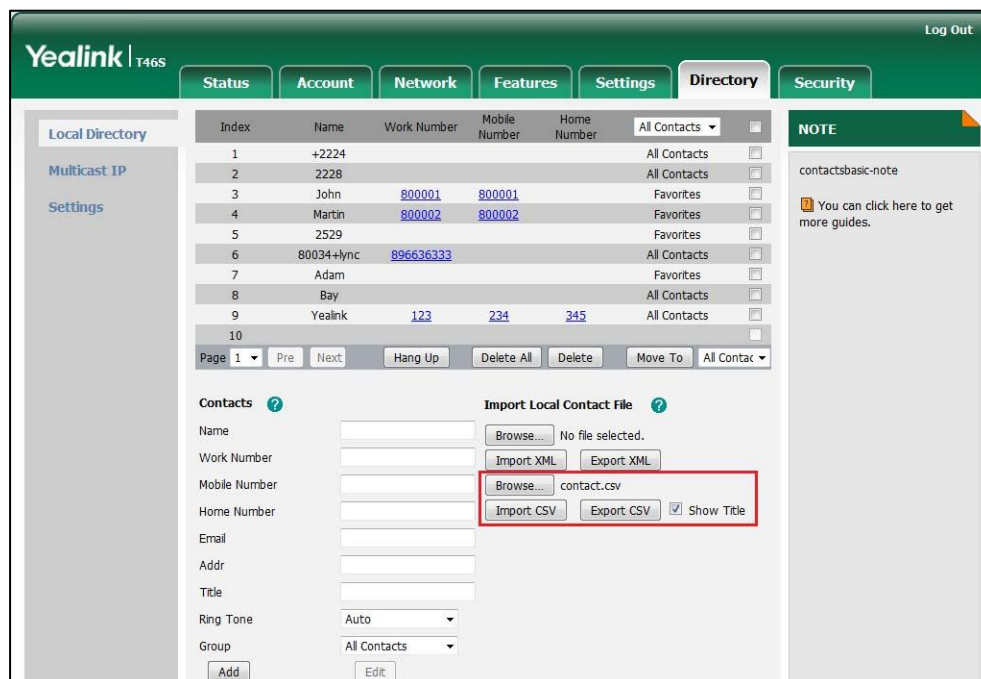

4. Click **Import CSV** to import the contact list.

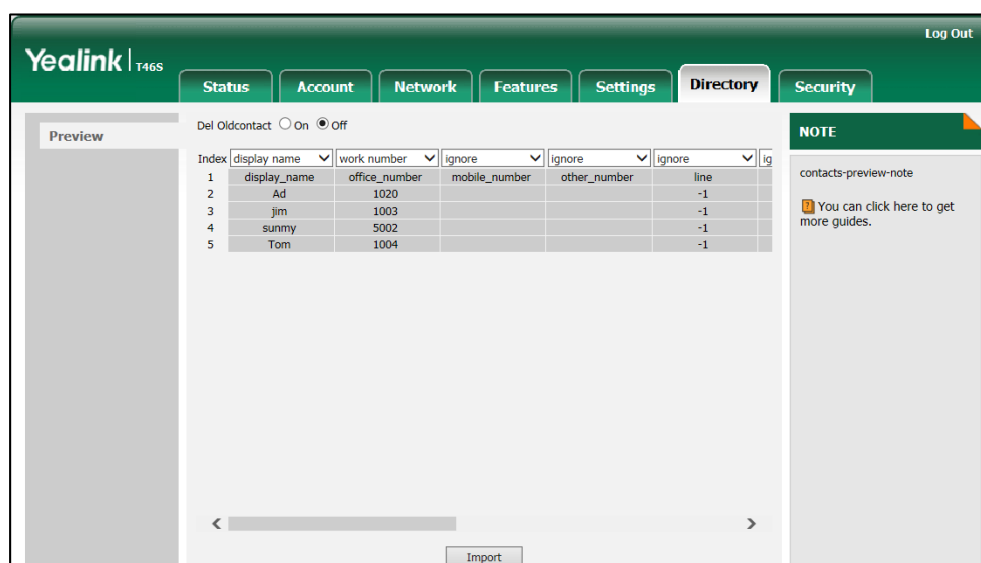

5. (Optional) Mark the **On** radio box in the **Del Oldcontact** field.  
It will delete all existing contacts while importing the contact list.
6. Select the contact information you want to import into the local directory from the pull-down list of **Index**.  
At least one item should be selected to be imported into the local directory.
7. Click **Import** to complete importing the contact list.

**To export a contact list via web user interface:**

1. Click on **Directory->Local Directory**.
2. Click **Export XML** (or **Export CSV**).
3. Click **Save** to save the contact list to your local system.

## Local Favorites

Favorites are the contacts in your directory that you call most often. You need to assign an index number for a local favorite contact. Local favorites display consecutively, according to their index number. The contact with the lowest index number displays first.

## Adding Local Favorites

You can add the local favorites manually or add local contacts as favorites.

**To add a local favorite via phone user interface:**





1. Press **Directory->Local Directory->Favorites**.
2. Press **Add** soft key.
3. Enter the contact name, address, work number, mobile number, home number, title and email in the corresponding fields.


4. Press or , or the **Switch** soft key to select the desired ringtone from the **Ring** field.
5. Press or , or the **Switch** soft key to select the index number from the **Index** field.  
The valid value of index number ranges from Null to 27 and the lowest number is Null. The contact with the lowest index number displays first.
6. Press the **Save** soft key to accept the change.

Adding a local favorite is configurable via web user interface at the path **Directory->Local Directory**.

**To add a local contact as the local favorite via phone user interface:**

1. Press **Directory->Local Directory->All Contacts**.
2. Press or to highlight the desired contact.
3. Press **Option** soft key, and then press or to select **Detail** from the prompt list.

4. Press the **OK** soft key.
5. Press  or , or **Switch** soft key to select **Favorites** from the **Group** filed.
6. Press  or , or the **Switch** soft key to select the desired index number from the **Index** field.

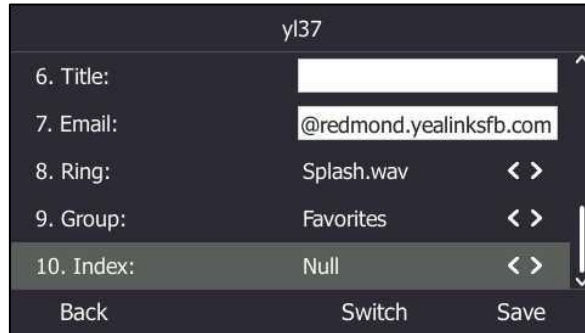


7. Press the **Save** soft key to accept the change.  
The entry is successfully saved to the local favorite.


Adding a local contact as the local favorite is configurable via web user interface at the path **Directory->Local Directory**.

## Viewing Local Favorites



You can view the local favorites on the idle screen or from local directory.

### To view the local favorites on the idle screen:

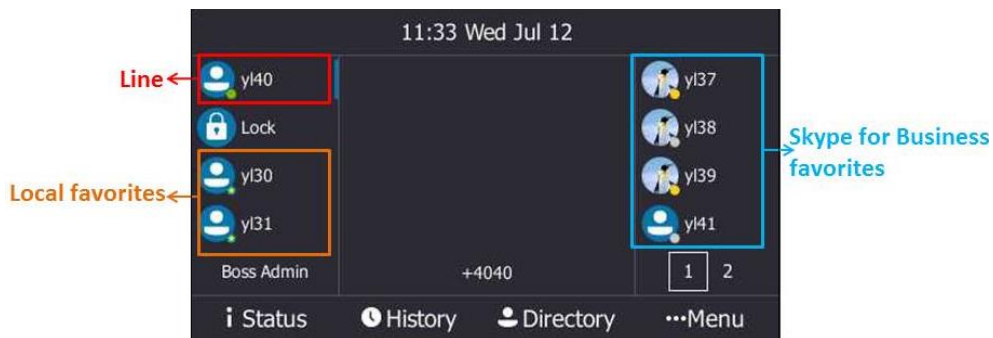1. The local favorite is indicated by the icon  on the idle screen.  
By default, local favorites are displayed before the Skype for Business favorites on the idle screen.









### To view the local favorites from the local directory:

1. Press **Directory->Local Directory->Favorites**.
2. Press the **Option** soft key, and then select **Detail** from the prompt list.  
The detailed information of the contact appears on the LCD screen.
3. Press  or  to view the detail.

## Reordering Local Favorites

To reorder your local favorites, assign the local favorite a different index number.

### To reorder your favorites:

1. Press **Directory**->**Local Directory**->**Favorites**.
2. Press  or  to highlight the desired contact.
3. Press **Option** soft key, and then press  or  to select **Detail** from the prompt list.
4. Press  or , or the **Switch** soft key to select the desired index number from the **Index** field.



Jane	
6. Title:	<input type="text"/>
7. Email:	<input type="text"/>
8. Ring:	Auto < >
9. Group:	Favorites < >
10. Index:	2 < >
<div>Back                      Switch                      Save</div>	

5. Press the **Save** soft key to accept the change.


The phone uses the new index number to order the favorite.


## Managing Local Favorites

Local favorites and Skype for Business favorites of T46S Skype for Business phones are displayed on the idle screen. By default, local favorites are displayed before the Skype for Business favorites.

You can configure whether to display local favorites on the idle screen and configure the display order of the local favorites.

**Example:** yl30 and yl31 are your local favorites. yl37, yl38, yl39 and yl41 are your Skype for Business favorites.

Local favorites are indicated by the icon . Skype for Business favorites are indicated by the presence status icon. The following figure shows a sample Favorites list on the idle screen.

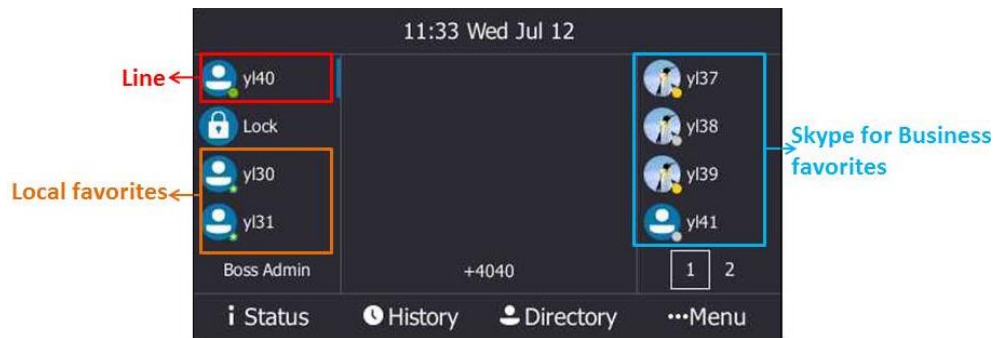

You can press the tenth line key to turn pages to view more favorites.

#### To configure the display priority of local favorite via web user interface:

1. Click on **Directory**->**Settings**.
2. Select the desired value from the pull-down list of **Local Favorite**.
3. Depending on your selection:
  - If **Disabled** is selected, only the Skype for Business favorites are displayed on the idle screen.
  - If **Preferential** is selected, local favorites will be displayed before the Skype for Business favorites on the idle screen.
  - If **General** is selected, the local favorites will be displayed behind the Skype for Business favorites on the idle screen.



4. Click **Confirm** to accept the change.

#### Note

You can configure the display priority of local favorite via web user interface only.

## Searching for Local Contacts

You can search for local contacts in the local directory.

#### To search for local contacts in the local directory:

1. Press **Directory**->**Local Directory**.
2. Press the **Search** soft key.
3. Enter a few continuous characters of the contact name or continuous numbers of the



contact number to search for a desired local contact.

The entries whose name or phone number matches the characters entered will appear on the LCD screen.



#### Note

You can also search for all contacts from the dialing screen. For more information, refer to [Placing a Call from the Search Results List](#) on page 85.





## Placing Calls to Contacts


### To place a call to favorites from the idle screen:


1. Press the desired line key (indicating a favorite) when the phone is idle.  
You can press the tenth line key to turn pages to view more favorites.






### To place a call from the directory:

1. Press the **Directory** soft key.
2. Press  or  to select the desired group and press the **Enter** soft key.
3. Press  or  to highlight the desired contact.

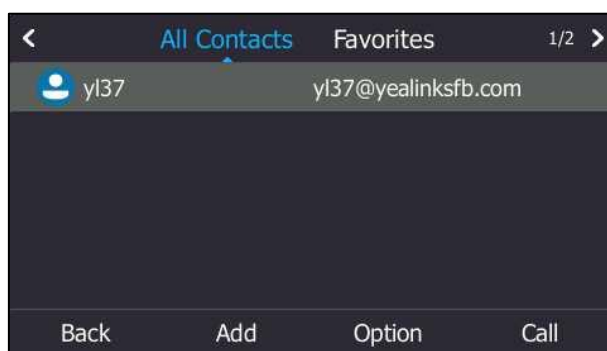4. Press the **Call** soft key or .







- If a contact has only one number, the contact number will be dialed out directly.
- If a contact has multiple numbers, you can press  or  to select the desired number, and then press the **Call** soft key or press .

## Call History Management


The T46S Skype for Business phone maintains call history lists of Missed, Placed, Received and Forwarded. Each call history list supports up to 100 entries.

### Viewing History Records

**To view the history records:**

1. Press the **History** soft key.  
The LCD screen displays all call records.
2. Press  or  to switch between **All**, **Missed**, **Placed**, **Received** and **Forwarded** call lists.
3. Press  or  to select the desired entry.
4. Press the **Detail** soft key.



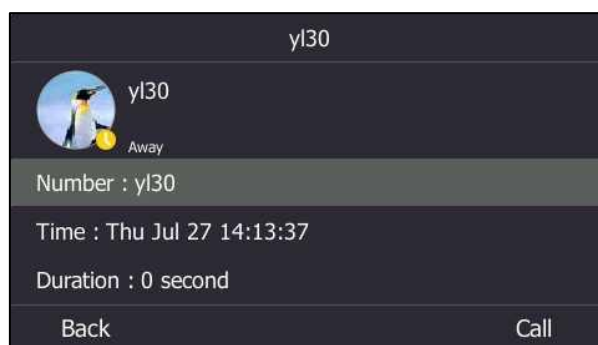


The detailed information of the entry appears on the LCD screen.



## Placing a Call from History Records

 You can place a call from the history records.







### To place a call from history records:


1. Press the **History** soft key.  
The LCD screen displays all call records.
2. Press  or  to switch between **All**, **Missed**, **Placed**, **Received** and **Forwarded** call lists.
3. Press  or  to select the desired entry.
4. Press  or the **Call** soft key.

## Adding Contacts from History Records

You can add local contacts and Skype for Business contacts from history records.

### To add contacts from history records:

1. Press the **History** soft key.  
The LCD screen displays all call records.
2. Press  or  to switch between **All**, **Missed**, **Placed**, **Received** and **Forwarded** call lists.
3. Press  or  to highlight the desired contact.
4. Press the **Option** soft key, and then press  or  to select **Add to local** or **Add to SFB** from the prompt list.

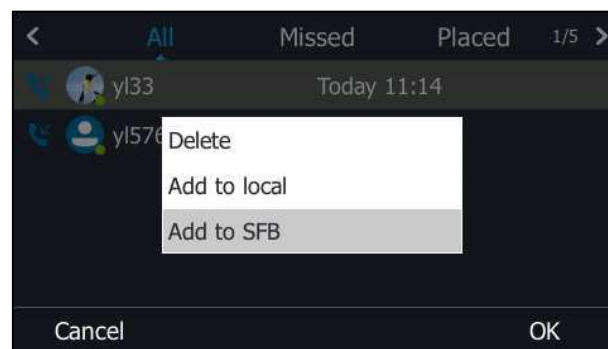

5. Depending on your selection:
  - If you select **Add to local**, edit the contact information.  
Press the **Save** soft key.
  - If you select **Add to SFB**, select the desired Skype for Business group.  
Press the **OK** soft key.

The history record will be added to your local directory or Skype for Business directory.


**Note**

Conference records cannot be added to directory.

## Deleting History Records

**To delete a history record:**

1. Press the **History** soft key.
2. Press ◀ or ▶ to switch between **All**, **Missed**, **Placed**, **Received** and **Forwarded** call lists.
3. Press ▲ or ▼ to select the desired entry.
4. Press the **Option** soft key, and then press ▲ or ▼ to select **Delete** from the prompt list.

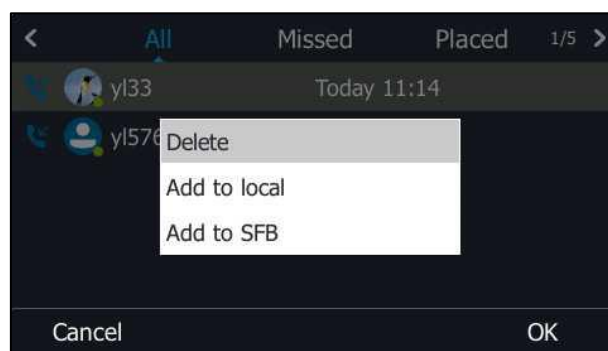



5. Press the **OK** soft key.

## Configuring Contact Avatar

Contacts avatar allows the call history to display the contact avatars. It is enabled by default, if you do not need contact avatars of the call history, you can disable this feature.

**To disable contact avatar via phone user interface:**

1. Press **Menu->Features>History Setting**.
2. Press ▲ or ▼ to select **Contact Avatar**.

3. Press  or  , or the **Switch** soft key to select **Disabled** from the **Contact Avatar** field.

History Setting		
1. History Record:	Disabled	< >
2. Contacts Avatar:	Disabled	< >
Back	Switch	Save





4. Press the **Save** soft key to accept the change.

Contact avatar is configurable via web user interface at the path **Features->General Information**.

## Disabling History Record

History record feature is enabled by default. If you do not want to save the call history, you can disable this feature.

**To disable history record via phone user interface:**

1. Press **Menu->Features>History Setting**.
2. Press  or  to select **History Record**.
3. Press  or  , or the **Switch** soft key to select **Disabled** from the **History Record** field.

History Setting		
1. History Record:	Disabled	< >
2. Contacts Avatar:	Enabled	< >
Back	Switch	Save

4. Press the **Save** soft key to accept the change.

## Dial Plan

Dial plan is a string of characters that governs the way for phones to process the inputs received from the phone's keypads. The system administrator can use regular expression to define dial

plan.

The dial plan is configured on the Skype for Business server by your system administrator, the phone can use the dial plan received from the Skype for Business server via In-band provisioning method. When user enters digits in the dialing screen, the phone will match the digits to a dial plan.

## Dial-now

You can configure one or more dial-now rules (up to 100) on your phone. When the dialed number matches the dial-now string, the number will be dialed out automatically. For example, a dial-now rule is configured as "1xxx", any entered four-digit string beginning with 1 will then be dialed out automatically on the phone.

Basic expression syntaxes you need to know:

Syntax	Description
.	The dot "." can be used as a placeholder or multiple placeholders for any character. Example: "12." would match "123", "1234", "12345", "12abc", etc.
x	An "x" can be used as a placeholder for any character. Example: "12x" would match "121", "122", "123", "12a", etc.
-	Numeric ranges are allowed within the brackets: Digit "-" Digit. Example: "[5-7]" would match the number "5", "6" or "7".
[]	The square brackets "[]" can be used as a placeholder for a single character which matches any of a set of characters. Example: "91[5-7]1234" would match "9151234", "9161234", "9171234".
()	The parentheses "()" can be used to group together patterns, for instance, to logically combine two or more patterns. Example: "([1-9])([2-7])3" would match "923", "153", "773", etc.
\$	The "\$" followed by the sequence number of a parenthesis means the characters placed in the parenthesis. The sequence number stands for the corresponding parenthesis. Example: A replace rule configuration, Prefix: "001(xxx)45(xx)", Replace: "9001\$145\$2". When you dial out "0012354599" on your phone, the Skype for Business phone will replace the number with "90012354599". "\$1" means 3 digits in the first parenthesis, that is, "235". "\$2" means 2 digits in the second parenthesis, that is, "99".

**To add a dial-now rule via web user interface:**

1. Click on **Settings**->**Dial Plan**.

2. Enter the desired value (e.g., 1xxx) in the **Rule** field.

The screenshot shows the Yealink T46S web interface. The 'Settings' tab is selected, and the 'Dial-now' configuration page is displayed. A table lists 10 indices for dial-now rules. The 'Rule' field for index 1 is highlighted with a red box and contains the text 'Rule 1xxx'. Below the table are 'Add', 'Edit', and 'Del' buttons. On the right, a 'NOTE' section explains symbols: 'Digit 0-9 \*' identifies a specific digit; '[digit-digit]' identifies any digit dialed in a range; '[digit-digit,digit]' specifies a range as a comma-separated list; 'x' matches any single digit/character; and '.' matches an arbitrary number of digits. A link to more guides is also present.

3. Click **Add** to add the dial-now rule.

For example: when you enter the number "1234" using the keypad, the phone will dial out "1234" automatically without pressing any key.

**Note** Dial-now rule is configurable via web user interface only.

## Delay Time for Dial-Now Rule

You can configure the delay time for dial-now rules. That is, you can configure your phone to automatically dial out the phone number which matches a dial-now rule, after the designated delay time.

**To configure the delay time for dial-now rule via web user interface:**

1. Click on **Features**->**General Information**.

- Enter the time between 1 and 14 (seconds) in the **Time-Out for Dial-Now Rule** field.

The screenshot shows the Yealink T46S web interface. The 'Features' tab is selected. In the 'General Information' section, the 'Time-Out for Dial-Now Rule' is set to 1, which is highlighted with a red box. Other settings include Call Waiting (Enabled), Key As Send (#), Hotline Number, Hotline Delay (0~10s) (4), Busy Tone Delay (Seconds) (0), Return code when refuse (603 (Decline)), Feature Key Synchronization (Disabled), DHCP Hostname (SIP-T46S), E911 Location Tip (Enabled), Update Checking Time (24), Use DHCP Option 120 (Disabled), SFB Cert Service URL, Enable SFB Automation (Disabled), SFB Inactive Time (5), SFB Away Time (5), Web Sign in (Enabled), Set as CAP (Disabled), Remember Password (Enabled), History Record Contacts Avatar (Enabled), Auto Discover (Enabled), and Exchange Server Url. A 'NOTE' section on the right explains 'Call Waiting' and 'Key As Send'.

- Click **Confirm** to accept the change.

For example: when you enter the number "1234" using the keypad, the phone will dial out "1234" automatically after 1 second without pressing any key.

**Note** Delay time for dial-now rule is configurable via web user interface only.



## Basic Call Features

---

The T46S Skype for Business phone is designed to be easily used like a regular phone on a public switched telephone network (PSTN). You can place calls, answer calls, transfer a call to someone else, or conduct a Skype for Business conference call. You can also use calendar, response groups or boss-admin Skype for Business feature.

This chapter provides basic operating instructions for the T46S Skype for Business phone. Topics include:

- [Switching among the Handset, Speakerphone and Headset Modes](#)
- [Placing Calls](#)[Answering Calls](#)
- [Ending Calls](#)
- [Call Mute](#)
- [Call Hold/Resume](#)
- [Call Forward](#)
- [Team-Call Group](#)
- [Response Groups](#)
- [Call Queue](#)
- [Inbound Private Line](#)
- [Call Transfer](#)
- [Skype for Business Conference](#)
- [Calendar](#)
- [Parking and Retrieving Calls on the Skype for Business Server](#)
- [Group Call Pickup](#)
- [Shared Line Appearance\(SLA\)](#)
- [Boss-Admin](#)
- [Voicemail](#)

If you require additional information or assistance with your new phone, contact your system administrator.

## Switching among the Handset, Speakerphone and Headset Modes

You can place and answer calls on your phone in one of the three ways:

- Pick up the handset to use the handset mode.
- Press the Speakerphone key to use the speakerphone mode. The key LED illuminates solid green.
- Press the HEADSET key to use the headset mode. The key LED illuminates solid green.

You can select the desired mode before placing a call. You can also dial the number first, and then choose the way you want to speak to the other party.

You can also alternate between Speakerphone, Headset, and Handset modes by pressing the Speakerphone key, the HEADSET key, or by picking up the handset during a call.

### Note

To permanently use the headset mode, refer to [Enabling the Headset Prior](#) on page 195.

## Placing Calls

You can place calls in numerous ways, including placing multiple calls, placing a call using a line key, placing a call from the search result list, dialing the hotline number or redialing numbers. You can also dial an entry/contact from call history or directory. For more information, refer to [Contact Management](#) on page 58 and [Call History Management](#) on page 76.

## Placing a Call

### To place a call:

1. Do one of the following:
  - Pick up the handset.
  - Press the Speakerphone key.
  - Press the HEADSET key.

2. Enter a number.

You can also select a desired contact from the search result list, call history or directory.

3. Press the OK key , # key or **Call**.

The # key is configured as a send key by default. You can also set the \* key as the send key, or set neither. For more information, refer to [Key as Send](#) on page 50.

Your system administrator can enable live dialpad feature, which enables your phone to automatically dial out the phone number after a period of time without pressing the send key. Check with your system administrator to find out if this feature is available on your phone.

**Note**

You can also dial using the URI. For example: yl39@yealinksf.com.

## Placing Multiple Calls

The phones can handle multiple calls at a time. However, only one active call (the call that has audio associated with it) can be in progress at any time. The phones can handle a maximum of 50 calls at one time.


### To place multiple call:

1. Do one of the following:
  - Press the first line key. The active call is placed on hold.
  - Press the **Hold** soft key to place the original call on hold.
2. Press the **NewCall** soft key.
3. Enter the desired number.  
You can also select a desired contact from the search result list, call history or directory.
4. Press the OK key, # key or **Call** soft key.


## Placing a Call from the Search Results List

On the Dialing screen, you can search for Skype for Business contacts, local contacts and Microsoft Outlook contacts.

### To place a call from the search results list:

1. Pick up the handset, press Speakerphone key or the first line key.
2. Enter a few continuous characters of the contact name or continuous numbers of the contact number to search for a desired contact.
3. Press  to view the search results.

The results will appear on the LCD screen:

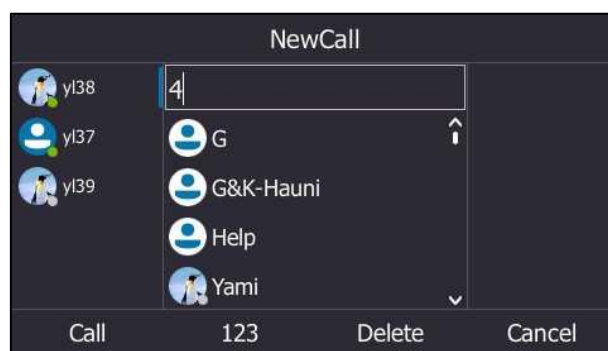


4. Select a desired contact to dial out.

## Dialing the Hotline Number

You can configure a hotline number and a delay. When you lift the handset, press the Speakerphone key or the first line key, the phone will dial out the hotline number automatically after a designated period of time.

**To configure the hotline number via phone user interface:**

1. Press **Menu->Features->Hotline**.
2. Enter the desired number in the **Hot Number** field.

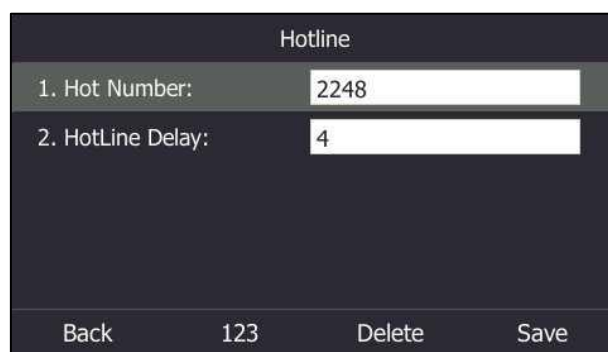


3. Enter the delay time in the **HotLine Delay** field.  
The valid values range from 0 to 10 (seconds) and the default value is "4".
4. Press the **Save** soft key to accept the change.

Hotline is configurable via web user interface at the path **Features->General Information**.

## Redialing Numbers


**To redial the last dialed number from your phone:**

1. Press  .  
A call to your last dialed number is attempted.

## Answering Calls

When you receive an incoming call on your phone, you can choose to answer it in various ways. You can answer a call or multiple calls, or answer calls automatically.

### Note

You can reject incoming calls by pressing  or **Reject** to stop the phone from playing ring tone. You can also change your status to Do Not Disturb and then the phone will ignore some incoming calls to your phone. For more information, refer to [Changing Presence Status](#) on page 23.

You can forward incoming calls to someone else by pressing the **FWD** soft key. You can also forward incoming calls to voice mail by pressing the **FWD VM** soft key. For more information, refer to [Dynamic Forwarding](#) on page 98.

## Answering When Not in Another Call

Do one of the following:

- Pick up the handset. The call is answered in handset mode.
- Press the Speakerphone key. The key LED illuminates solid green. The call is answered in hands-free (speakerphone) mode.

With the handset on-hook and headset mode deactivated, you can press the **Answer** soft key or the line key. The call is answered in hands-free (speakerphone) mode.

- Press the HEADSET key. The key LED illuminates solid green. The call is answered in headset mode.

With the headset mode activated, you can press the **Answer** soft key or the line key. The call is answered in headset mode.

## Answering When in Another Call

If you have an active call and an incoming call arrives on the phone, the incoming call information is displayed on the LCD screen.



## Answering When in Another Calls

1. Press the **Answer** soft key.



The incoming call is answered and the original call is placed on hold.

**Note** If call waiting is disabled, the phone that has an active call will reject other incoming calls automatically. For more information, refer to [Configuring the Call Waiting](#) on page 88.

## Answering Calls Automatically


You can enable auto answer feature to automatically answer an incoming call using the speakerphone.

**To configure auto answer via phone user interface:**

1. Press **Menu->Features->Auto Answer**.
2. Press  or  , or the **Switch** soft key to select **Enabled** from the **Auto Answer** filed.



3. Press the **Save** soft key to accept the change.

The  icon appears on the LCD screen.

Auto answer is configurable via web user interface at the path **Account->Basic->Auto Answer**.

**Note** Auto answer is only applicable when there is no other call in progress on the phone.


## Configuring the Call Waiting

You can enable or disable call waiting on the phone. If call waiting is enabled, you can receive another call when there is already an active call on the phone. Otherwise, another incoming call is automatically rejected by the phone with a busy message when there is an active call on the phone. You can also enable or disable the phone to play a warning tone when receiving another call.

**To configure call waiting via phone user interface:**

1. Press **Menu->Features>Call Waiting**.


2. Press ◀ or ▶, or the **Switch** soft key to select **Enabled** from the **Call Waiting** field.

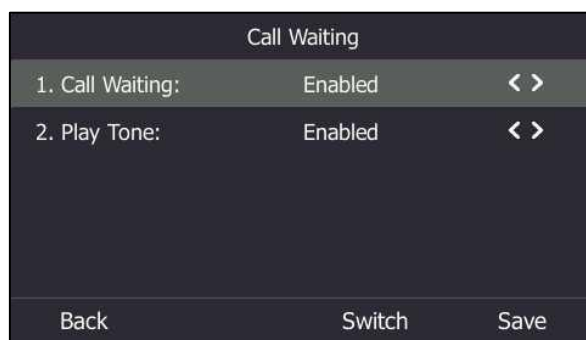

3. Press ◀ or ▶, or the **Switch** soft key to select **Enabled** from the **Play Tone** field.
4. Press the **Save** soft key to accept the change.

#### To use the call waiting:

1. When the phone receives an incoming call during a call.
2. Press ▶ to see the incoming call.

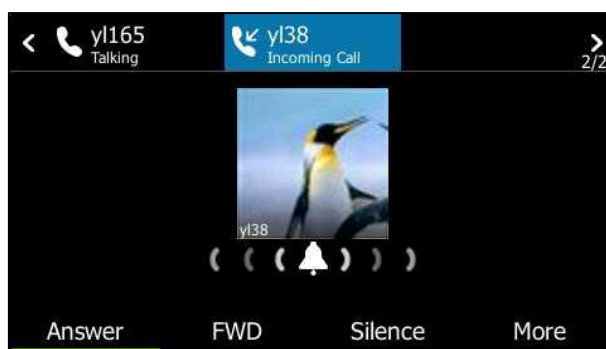

3. Do one of the following:
- Press the **Answer** soft key to answer the incoming call.  
The original call will be placed on hold.
  - Press the **FWD** soft key to forward the incoming call to another contact.
  - Press the **Silence** soft key to ignore the incoming call.
  - Press **More->Reject** to reject the incoming call.
  - Press **More->FWD VM** to forward the incoming call to voicemail.





Call waiting is configurable via web user interface at the path **Features->General Information->Call Waiting**.

Call waiting tone is configurable via web user interface at the path **Features->Audio->Call Waiting Tone**.



## Ending Calls

### To end a call:

Do one of the following:

- If you are using the handset, press  or the **EndCall** soft key or hang up the handset.
- If you are using the headset, press  or the **EndCall** soft key.
- If you are using the speakerphone, press  or , or the **EndCall** soft key.


### Note

When a call is placed on hold, you cannot press  to end it. You should press the **Resume** soft key to resume the call, and then press  to end it.


## Call Mute

You can mute the microphone of the active audio device during an active call, and then the other party cannot hear you. Call mute applies to all modes (Handset, Headset and Speakerphone).


### To mute a call:

1. Press  during an active call.

The LCD screen indicates that the call is muted. The mute key LED illuminates solid red when the call is muted.

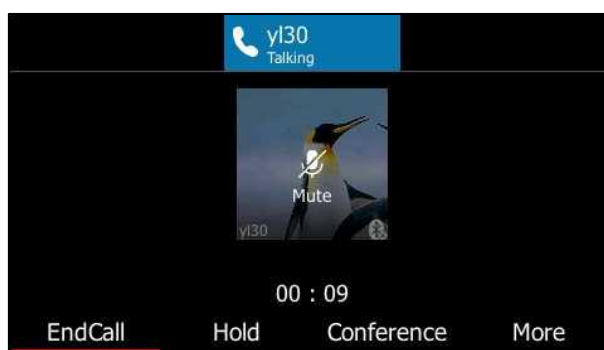

### To un-mute a call:


1. Press  again to un-mute the call.

## Call Hold/Resume

You can place an active call on hold. Only one active call can be in progress on the phone at any time. Other calls can be made and received while placing the original call on hold. If **Music on Hold** feature is enabled, the phone will play music when an active call is placed on hold. For more information, please refer to [Music on Hold](#) on page 91.



**To place a call on hold:**


1. Press  or press **Hold** during a call.

The LCD screen indicates that the call is on hold. The line key LED slow flashes green.



**Note**

The phone will beep softly every 30 seconds to remind you that you still have a call on hold.

**To resume a held call:**

1. Press  or the **Resume** soft key.

**Multiple Calls on Hold:**

1. Press  or  to switch between the calls, and then press the **Resume** soft key to retrieve the desired call.

If more than two calls are on hold, a numbered prompt appears on the LCD screen, for example "2/4", indicating that this is the first call out of second calls.

## Music on Hold

Music on Hold (MoH) is the business practice of playing recorded music to fill the silence that would be heard by the party who has been placed on hold. When a call is placed on hold, the Skype for Business phone will play a music to the held party.

Users can upload a custom music to the phone or use the music received from the Skype for Business server via In-band provisioning method.

The uploaded music format must meet the following:

Format	Single File Size	Duration
.wav	1~500K	1~30s

**Note**

The music file must be PCMU/PCMA audio format, mono channel, 8K sample rate and 16 bit resolution.

**To configure music on hold via web user interface:**

1. Click on **Settings**->**MOH**.
2. Select **Enabled** from the pull-down list of **MOH Enable**.

3. Select the desired mode from the pull-down list of **MOH Mode**.
  - If you select **Inband provision**, your phone will play the music received from the Skype for Business server to the held party.
  - If you select **Local Custom**, you can click **Browse** in the **Upload Music File** field to select a music file saved in your local computer.  
Click **Upload** to upload the custom music.  
The held party will hear your custom music.
4. Click **Confirm** to accept the change.

**Note**

The .wav music file should be 1-500k.

## Call Forward

You can configure your phone to forward incoming calls to another party or voicemail (static forwarding). You can also forward calls while your phone is ringing (dynamic forwarding).

## Static Forwarding

### Static Forwarding on T46S Skype for Business phone

T46S Skype for Business phone supports the following static forwarding ways:



- **Forward Calls to a Contact:** Incoming calls are forwarded to the preset number or contact.
- **Simultaneously Ring to a Contact:** The preset number will ring simultaneously when you receive incoming calls.
- **Forward to Voicemail:** Incoming calls are forwarded to voicemail.
- **Forward to Delegates:** If you have delegates assigned to your line, you can forward all incoming calls directly to your delegates.

- **Simultaneously Ring to Delegates:** If you have delegates assigned to your line, you can enable your delegates' phones to simultaneously ring when you receive incoming calls.
- **Simultaneously Ring to Team Call:** If you have a team-call group assigned to your line, you can enable a group of Skype for Business contacts to simultaneously ring when you receive incoming calls.

**To enable call forward:**

1. Press **Menu->Features->Call Forward**.



You can also press  when the phone is idle.

2. Press  or , or the **Switch** soft key to select **On** from the **Call Forward** field.
3. Select the desired forwarding type.
4. Press the **Save** soft key.

**To disable call forward:**

1. Press **Menu->Features->Call Forward**.

You can also press  when the phone is idle.

2. Press  or , or the **Switch** soft key to select **Off** from the **Call Forward** field
3. Press the **Save** soft key to accept the change.

## Static Forwarding on the Skype for Business Client

You can assign static forwarding feature using the Skype for Business client:

a) **Forward my calls to:**

- **Voicemail:** Incoming calls are forwarded to voicemail.
- **New Number or Contact:** Incoming calls are forwarded to the preset number or contact.
- **My Delegates:** If you have delegates assigned to your line, you can forward all incoming calls directly to your delegates.


b) **Simultaneously ring:**

- **New Number:** The preset number will ring simultaneously when you receive incoming calls.
- **My delegates:** If you have delegates assigned to your line, you can enable your delegates' phones to simultaneously ring when you receive incoming calls.
- **My Team-Call Group:** If you have a team-call group assigned to your line, you can enable a group of Skype for Business contacts to simultaneously ring when you receive incoming calls.


## Configuring Call Forwarding on Skype for Business Client

To forward incoming calls immediately without ringing your phone:

1. In Skype for Business client, click  and then select **Call Forwarding Settings**.

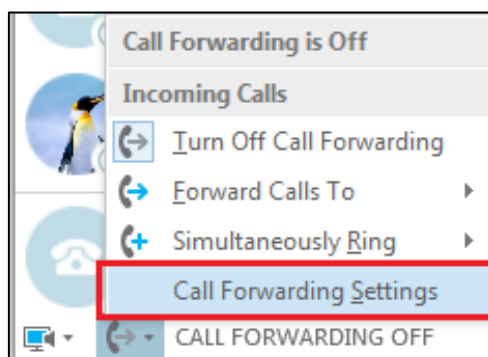


2. Mark the radio box of the **Forward my calls to** field.
3. Select the desired forwarding type from the pull down-list of **Forwarding my calls to**.  
Depending on your selection:

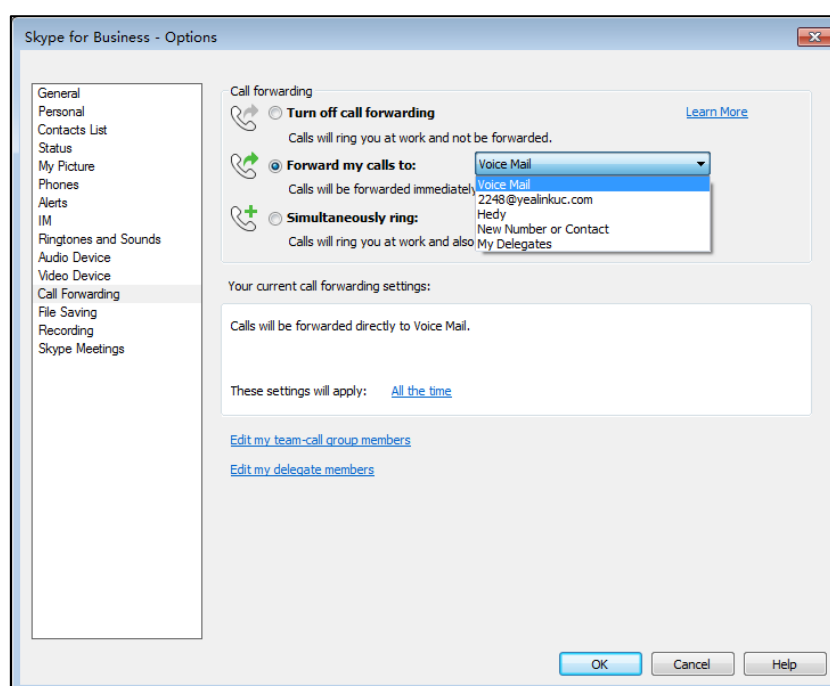

- a) If you select **Voicemail**:  
Incoming calls are forwarded directly to the voicemail.
- b) If you select **New Number or Contact**:  
Select the contact or enter the phone number you want to forward calls to.


After configuration, incoming calls are forwarded to the preset number or contact.

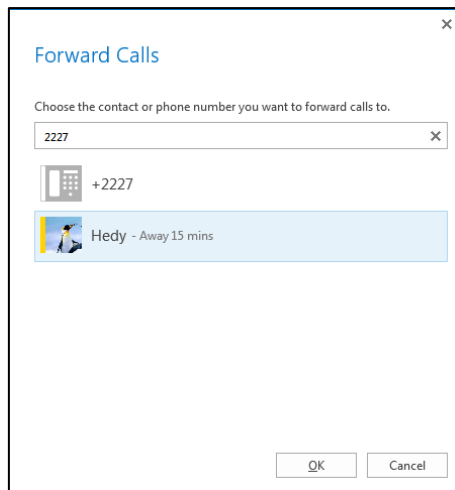

c) If you select **My Delegates**:


Add the delegates you want to forward calls to when you receive an incoming call.

The phone of the delegates will ring after the time specified by you.

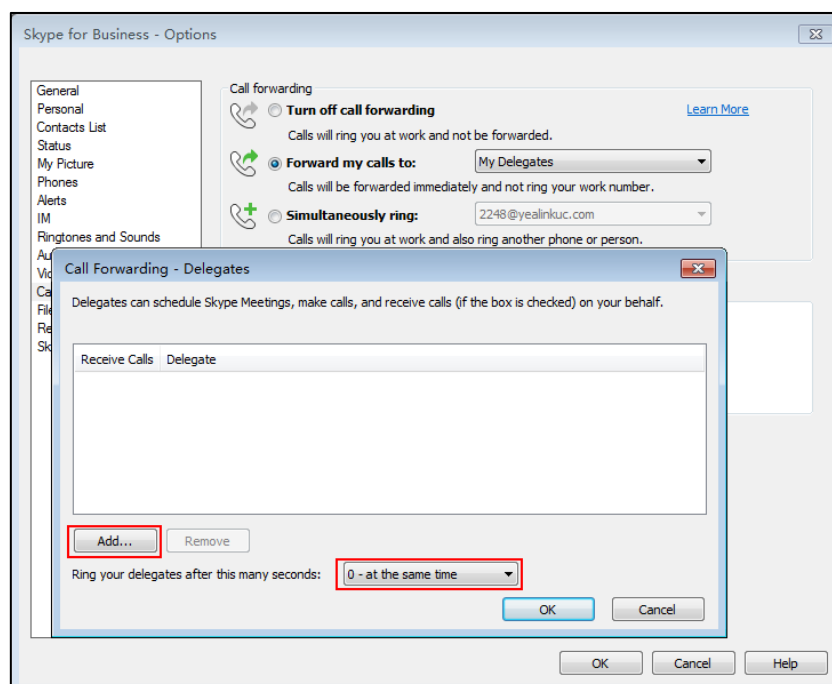


## Configuring Simultaneously Ring on Skype for Business Client

**To ring other phones simultaneously when your phone is ringing:**


1. In Skype for Business client, click  and then click **Call Forwarding Settings**.
2. Mark the radio box of the **Simultaneously ring** field.

Depending on your selection:

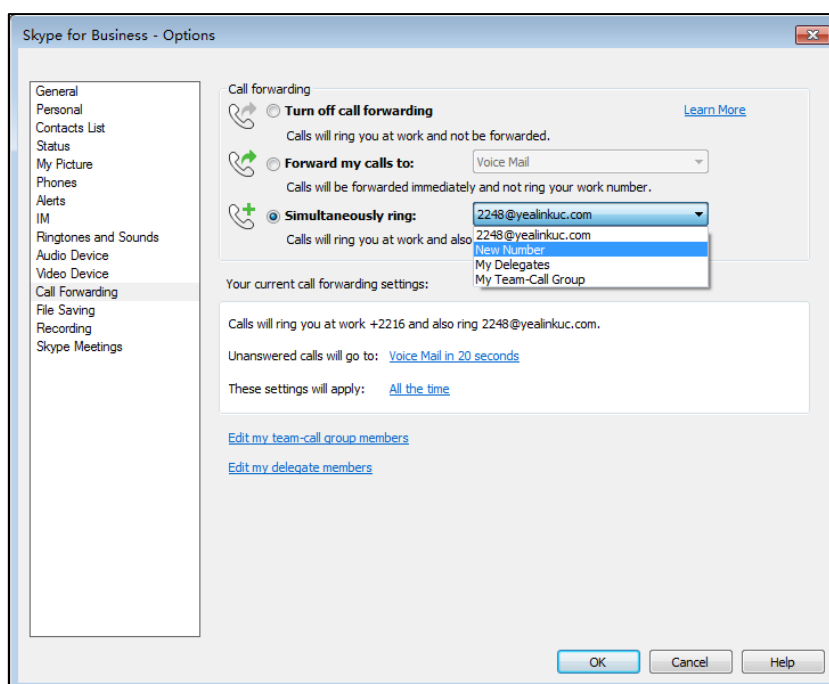


a) If you select **New Number**:

Enter the phone number in the pop-up window, and then click **OK** to accept the change. The number will ring simultaneously when you receive an incoming call.

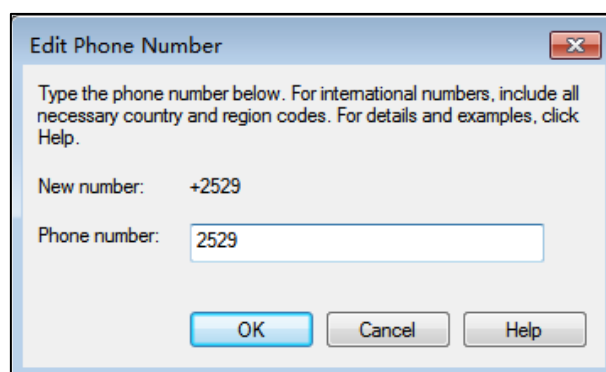

b) If you select **My Delegates**:


Add the delegates you want to ring simultaneously when you receive an incoming call. The phone of the delegates will ring after the time specified by you.

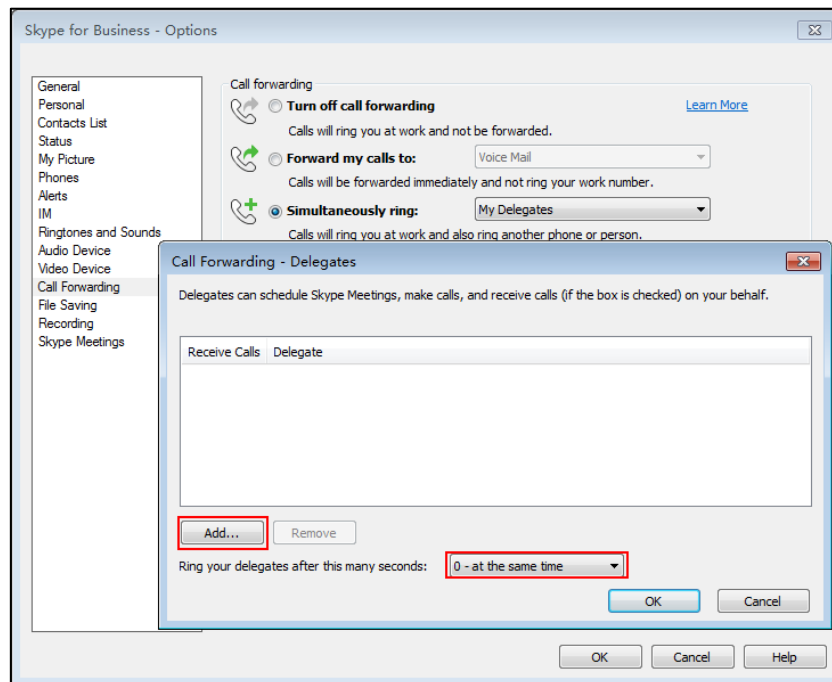

- c) If you select **My Team-Call Group**:

Add the contacts in the Team-Call Group. All members in the group will ring simultaneously when you receive an incoming call. The phone of the members in the group will ring after the time specified by you.


For more information on how to assign a distinct ringtone to team-call group, refer to [Team-Call Ringtone](#) on page 100.

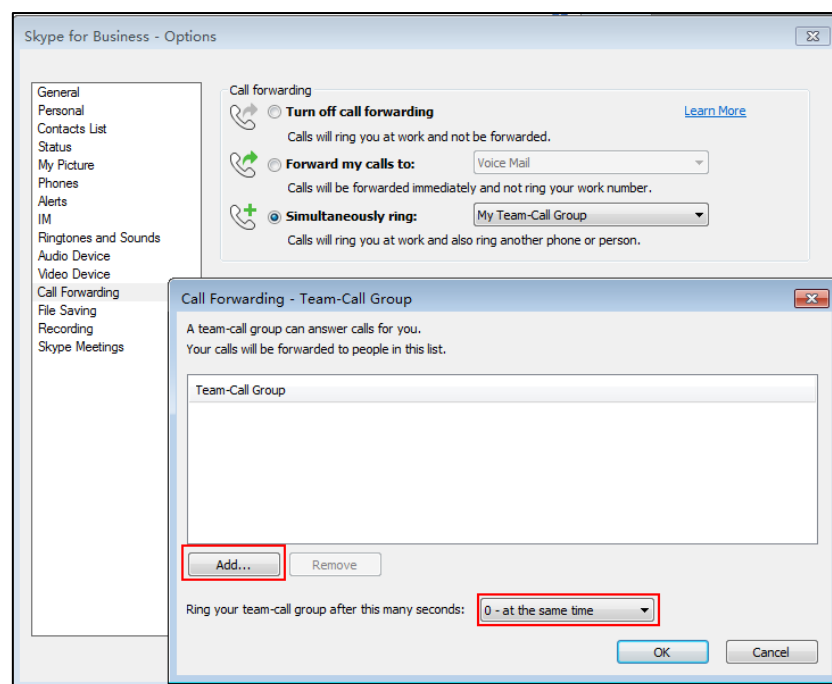

If one member answers the call, other phones will stop ringing.

#### To disable the call forwarding:

1. In Skype for Business client, click  and then select **Turn Off Call Forwarding**.

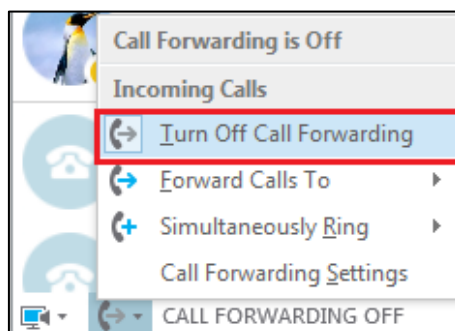



## Configuring the Delay Time for Rejecting Incoming Calls


You can configure the delay time for rejecting incoming calls. That is, incoming calls are rejected if it is not answered after designated delay time.

#### To configure the delay time for rejecting incoming calls:

1. Press **Menu->Features->Call Forward**.

You can also press  when the phone is idle.

2. Press  or , or the **Switch** soft key to select the desired value from the **Reject call delay(s)** field.

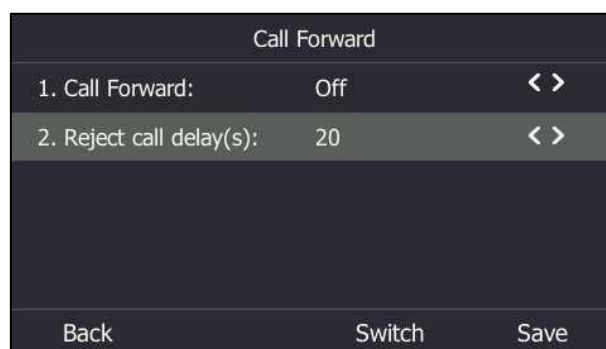

3. Press the **Save** soft key.

The unanswered calls will go to your voice mail in 20 seconds.

## Dynamic Forwarding

You can manually forward the call to another number while your phone rings.

#### To forward an incoming call to another party:

1. Press the **FWD** soft key when the phone is ringing.




2. Do one of the following:

- Enter the phone number, and then press the **Call** soft key.
- Press the **Directory** soft key to select the desired contact, and then press the **FWD** soft key.
- Press the **History** soft key to select the desired contact, and then press the **FWD** soft key.

The incoming call is forwarded to the entered number or the selected contact.

**To forward an incoming call to voicemail directly:**

1. Press the **More->FWD VM** soft key when the phone is ringing.

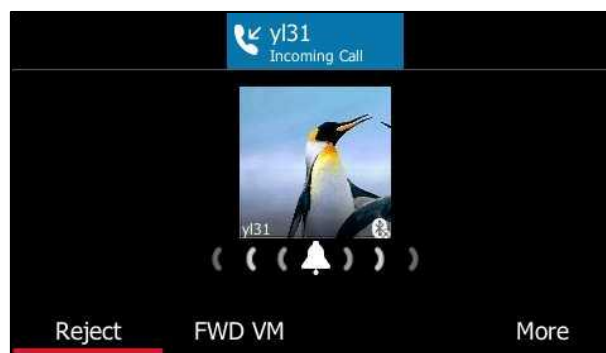


The incoming call will be forwarded to your voicemail directly.

## Team-Call Group

A team-call group is a team of people who can answer your work calls. You can use Skype for Business client to add or remove members, and select when they can answer calls for you. For more information on how to configure team-call group, refer to [Configuring Simultaneously Ring on Skype for Business Client](#) on page 95.

Assume that you have a team of people working on the same project or task. If you are away from your desk and your phone rings, anyone in the team-call group can answer the call for you. As soon as a team member picks up the phone, the other phones stop ringing.

For example, a user (yl30) calls a user named "yl31", other members in the team-call group of yl31 will ring too, their phones' screens are shown as below:

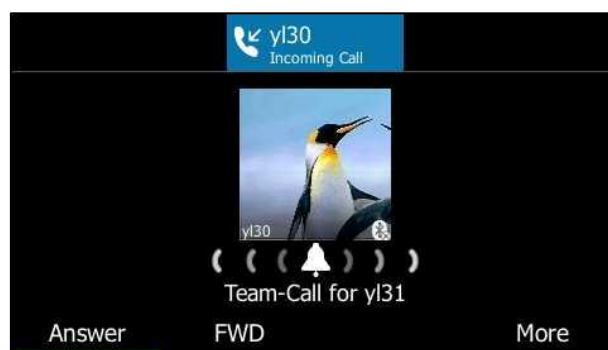




## Team-Call Ringtone

Team-call ringtone feature allows the phone to play a distinct ringtone when receiving a team call.

**To set a ringtone for the team call via phone user interface:**

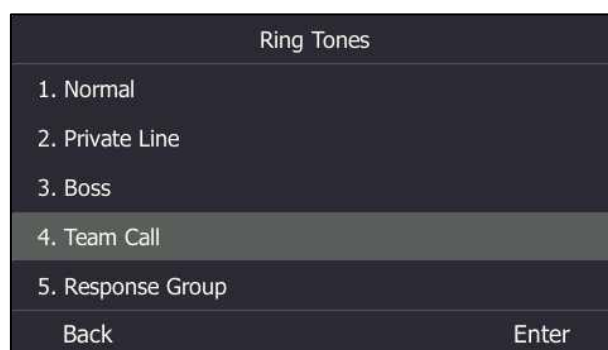1. Press **Menu->Basic->Sounds->Ring Tones->Team Call**.



2. Press  or  to select a ringtone.
3. Press the **Save** soft key to accept the change.


## Response Groups

If you sign into the phone using On-Premises account, you can use response group feature. Current Online environment does not support this feature.

A response group is a feature that route and queue incoming calls to groups of people, called agents, such as for a help desk or a customer service desk.

When someone calls a response group, the call is routed to an agent based on a hunt group or the caller's answers to interactive voice response (IVR) questions. The Response Group application uses standard response group routing methods to route the call to the next available agent. After a call agent accepts the call, other agents' phones stop ringing.

For example, you have been selected by your system administrator to be a call agent for a response group named "YEALINK". When a user named "yl48" calls your response group, your phone is shown as below:

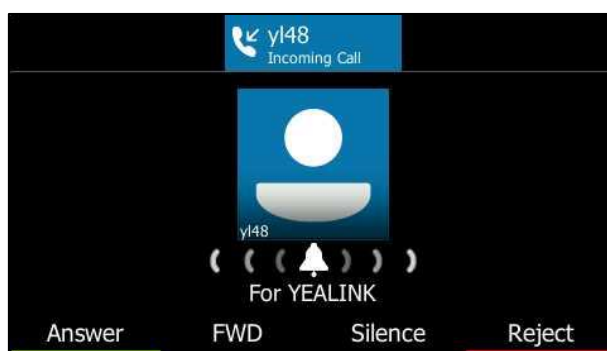

#### Note

Response group can be configured on Skype for Business Server only. Contact your system administrator for more information.



## Response Group Ringtone

Response group ringtone feature allows the phone to play a distinct ringtone when receiving a response group calls.

**To set a ringtone for the response group via phone user interface:**

1. Press **Menu->Basic->Sounds->Ring Tones->Response Group**.



2. Press  or  to select a ringtone.
3. Press the **Save** soft key to accept the change.

## Call Queue

If you sign into the phone using Online account, you can use call queue feature. On-Premises environment does not support this feature.

A call queue is a feature that route and queue incoming calls to groups of people, called agents, such as for a help desk or a customer service desk.

When someone calls in to a phone number that is setup up with a call queue, they will hear a greeting first (if any is setup), and then they will be put in the queue and wait for the available call agent. The person calling in will hear music while they are on hold waiting, and the call in the queue will ring all call agents at the same time. After a call agent accepts the call, other agents' phones stop ringing.

**Note**

Call queue can be configured on Server only. Contact your system administrator for more information.

## Inbound Private Line

If you sign into the phone using On-Premises account, you can use inbound private line feature. Current Online environment does not support this feature.

The Skype for Business server enables the system administrator to give users a second, private telephone line in addition to their primary telephone line. Private telephone lines are often assigned to bosses who want an unlisted telephone number at which they can be reached directly.

When the boss receives a private call, the private line will bypass call delegation and only his/her phone rings even though a secretary has been designated as his/her delegate for ring simultaneously feature.

The system administrator can assign a private line to boss in one of the following situations occurs:

- The boss doesn't want to miss important calls denied by his DND status.
- The boss doesn't want the delegate to answer some important or confidential calls for him.
- The boss wishes his friends and families to reach him directly or bypass his delegate.


In many organizations, bosses have administrative secretaries who answer their office phones for them. This is easily accomplished on the Skype for Business server by using call delegation. As a result, if one people dial the primary line of the boss, the phones of the delegate will ring simultaneously. If the people dial the private line of the boss, only boss's phone rings.

### **Characteristics of Private Lines:**

- A user can have only one private line.
- A user with a private line has only one voicemail.
- Calls to the private telephone line ring through. They do not follow "Do Not Disturb" rules.
- Private lines are inbound only and cannot be used to make outgoing calls.
- None of the following features are available with a private telephone line: delegation, and Response Group application.

For more information on planning for private telephone lines, refer to [Plan for private telephone lines](#).

When receiving a private call, the LCD screen of the phone will prompt “Call for private line”:

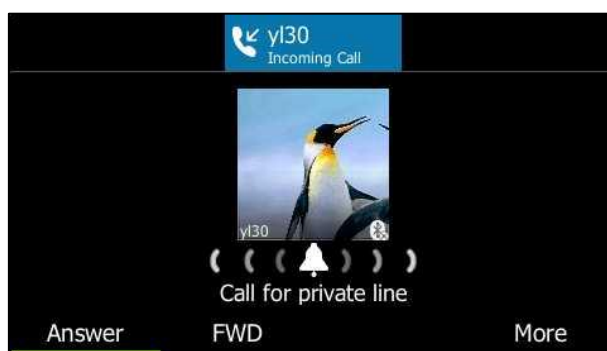

#### Note


Private lines can be configured on the Skype for Business server only. Contact your administrator for more information.



## Private Line Tones

Private line tone feature allows the Skype for Business phone to play a specific ringtone when receiving a private call.

**To select a ringtone for the private line via phone user interface:**

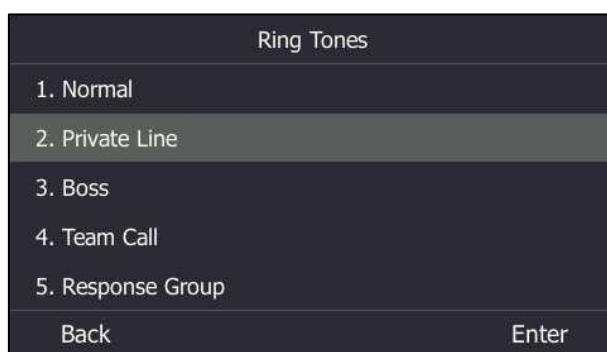1. Press **Menu->Basic->Sounds->Ring Tones->Private Line**.



2. Press  or  to select the desired ringtone.
3. Press the **Save** soft key to accept the change.

A ringtone for the private line is configurable via web user interface at the path **Settings->Preference->Private line ring**.

## Call Transfer


You can transfer a call to another party in one of the two ways:


- **Blind Transfer:** Transfer a call directly to another party without consulting.
- **Consultative Transfer:** Transfer a call with prior consulting.

## Blind Transfer

**To perform a blind transfer during a call:**

1. Press  or **More->B Trans** during a call.

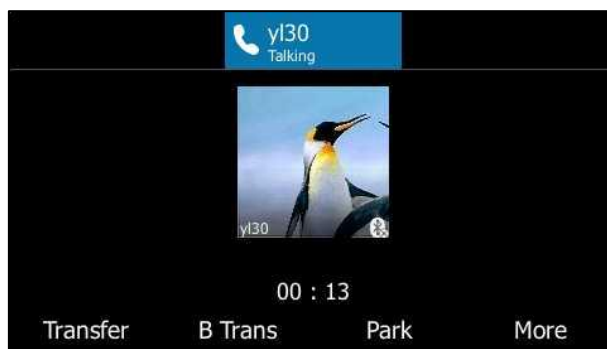



2. Enter a number or choose a contact from the recent calls or a directory.
3. Press  or the **Transfer** soft key to complete the transfer.  
Then the call is connected to the number to which you are transferring.


## Consultative Transfer


**To perform a consultative transfer:**

1. Press **More->Transfer** during a call.

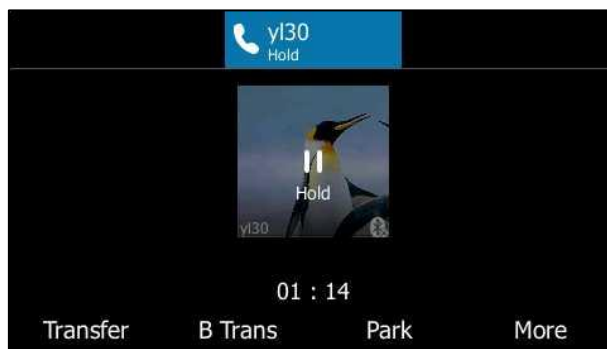

2. Enter a number or choose a contact from the recent calls or a directory.
3. Press  or **Call** soft key to dial out.

4. After the party answers the call, press  or **Transfer** soft key to complete the transfer.

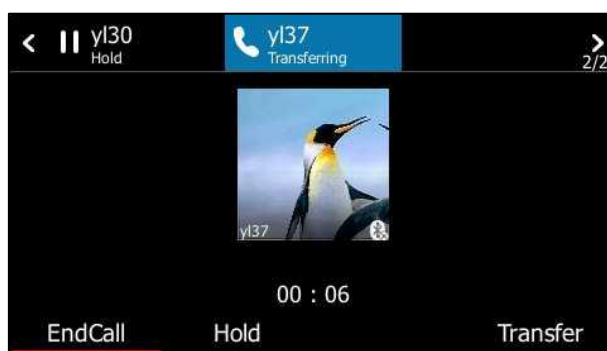

## Skype for Business Conference

This chapter provides basic operating instructions for managing Skype for Business conference. You can initiate a Skype for Business conference call on your phone or on the Skype for Business client. You can view the conference participants. And you can also manage the conference participants (e.g., promote or demote conference participants, enable or disable announcements).

### Initiating a Skype for Business Conference Call

You can initiate a Skype for Business conference call on your phone or on the Skype for Business client.

#### Note

You can join a Skype conference from the calendar. For more information, refer to [Joining Skype Conferences from the Calendar](#) on page 124.

### Initiating a Conference Call by Meet Now

**To initiate a Skype for Business conference call by meet now via phone user interface:**

1. Press **Menu->Meet Now**.  
You will initiate a Skype for Business conference call directly.
2. Press the **Add** soft key.
3. Enter a number or choose a contact from the recent calls or a directory.
4. Press the **Call** soft key.  
The contact is added to the conference call. You can only select one contact at a time to add to the conference call.
5. Press the **Add** soft key to add additional contacts to the conference call.

### Initiating a Conference Call during a Call

You can initiate a Skype for Business conference call by inviting contacts to the active call.

**To initiate a Skype for Business conference call via phone user interface:**

1. During a call, press the **Conference** soft key.
2. Enter a number or choose a contact from the recent calls or a directory.
3. Press the **Call** soft key to add additional contact to the conference call.
4. Press the **Add** soft key to add additional contacts to the conference call.

## Merging Multiple Calls into a Conference Call

### Merging All Calls into a Conference Call

You can merge all calls into a conference call. For more information on how to place multiple calls, refer to [Placing Multiple Calls](#) on page 85.

**Merge all calls into a conference via phone user interface:**

1. During multiple calls, press **More->Merge**.



All calls are merged into a conference call.

**Note** Multiple conferences cannot be merged into one conference call.


### Merging an Active Call and a Held Call into a Conference Call


If you do not want to merge all calls into a conference call, and just want to merge two individual calls into a conference call, you can do the following:




**Merge an active call and a held call into a conference via phone user interface:**

1. During multiple calls, press the **Conference** soft key.

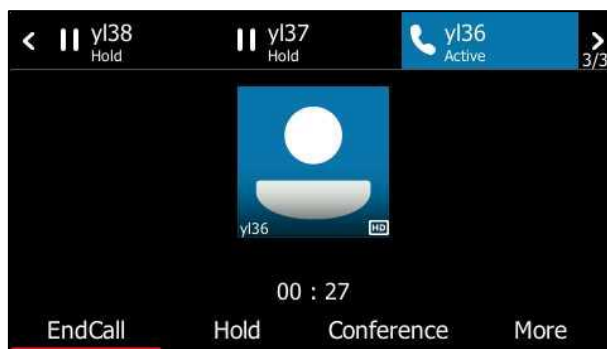



2. Press  to select a contact that is held.
3. Press the **Merge** soft key.

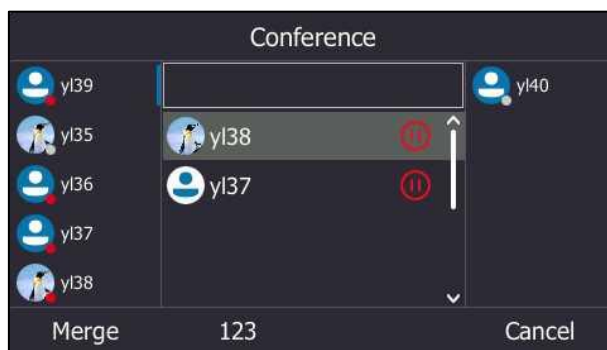
The active call and the selected held call are merged into a conference.



## Initiating a Group Conference Call

**To initiate a group conference call via phone user interface:**

1. Press the **Directory** soft key.
2. Press  or  to select the desired Skype for Business group.
3. Press the **Dial All** soft key to dial all contacts in the group.

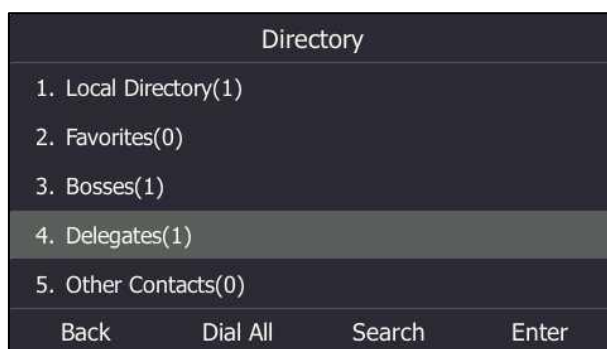


## Viewing the Conference Information

If you are a conference participant, you can send the conference dial-in number and PIN to contacts who want to join the conference.

**To view the dial-in number and conference ID via phone user interface:**

1. During a Skype for Business conference, press **More->Conf Info** to view the dial-in number and conference ID.

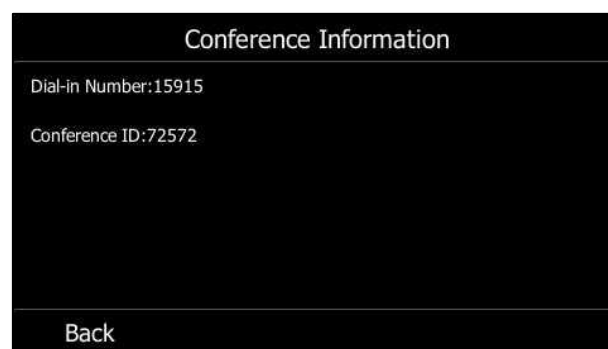




2. Notify other parties of the dial-in number and conference ID, other parties can use the dial-in number and conference ID to join this Skype for Business conference.  
If this conference is locked, anyone that tries to join the call will enter the lobby until the organizer or presenters accept(s) the call. For more information, refer to [Locking or Unlocking the Conference](#) on page 113.

## Viewing the Conference Participants


When you initiate or join a conference call, you can view the conference participants.

There are three roles in a conference: call

- **Organizer** (  ): A user who creates a conference. Organizer can manage the presenters and attendees.
- **Presenter** (  ): The participant who is invited to the conference will be a presenter by default. The presenter can manage other presenters and attendees.
- **Attendee** (  ): A user who is invited to a conference but who is not authorized to act as a presenter. The attendee cannot manage call participants.

**To view the conference participants via phone user interface:**

1. Press **More->Participants** to view the conference participants' information during a conference.

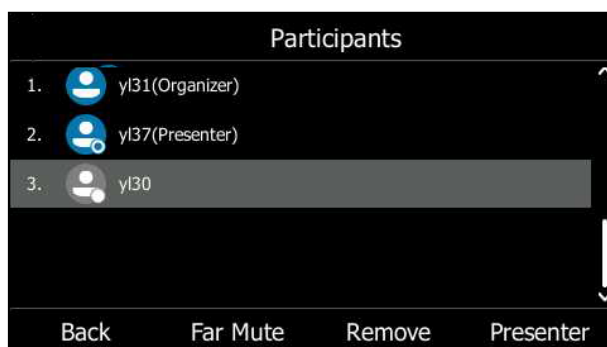

2. Press the **Back** soft key to return to the previous screen.

## Managing the Conference Participants

When you initiate a Skype for Business conference call, you will be an organizer and other participants are listed as presenters by default.

As an organizer or presenter, you can manage call participants in the following ways:

- Mute all participants or individual participants.
- Remove participants from the conference call.
- Demote a presenter to an attendee or promote an attendee to presenter.
- Enable or disable conference announcements.
- Lock or unlock a conference.

These options do not display for attendees.


## Muting and Unmuting All Conference Participants


The organizer or presenters can mute or unmute other conference participants.

If the organizer or presenters mute your audio, you must wait for the organizer or presenter to unmute your audio before you can speak in the conference again.


**To mute all conference participants by organizer or presenters:**

1. Press the **Mute All** soft key.

The mute icon  is displayed next to each person who is muted.

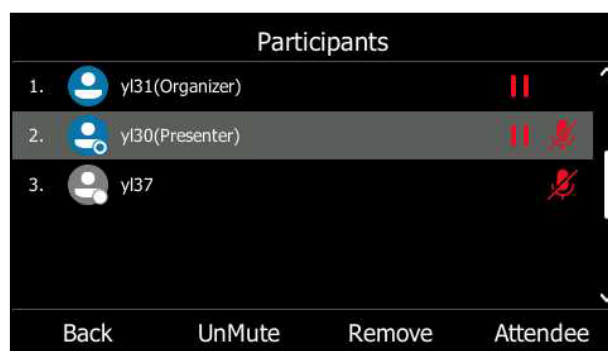


A notification is displayed on the participants' phones informing them that a presenter has muted the audience.

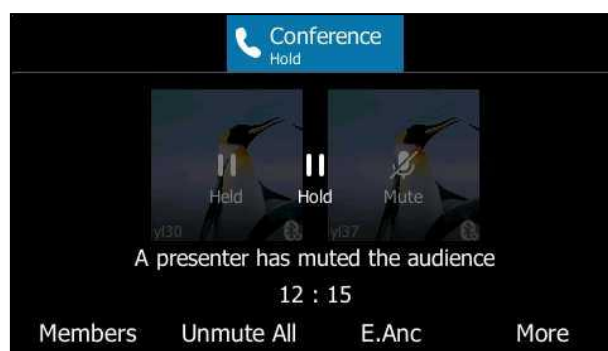


#### To unmute all conference participants by organizer or presenters:

1. Press the **Unmute All** soft key.

A notification is displayed on the participants' phones informing them that a presenter has unmuted the audience.

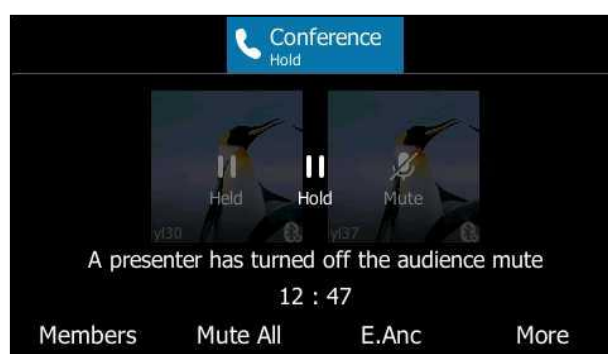




2. The muted participants press  to unmute.

## Muting and Unmuting Individual Conference Participants


The organizer and presenters can mute and unmute individual participants during conferences.


**To mute individual conference participant by organizer or presenters:**

1. Press **More->Participants**.
2. Press  or  to select the desired participant.

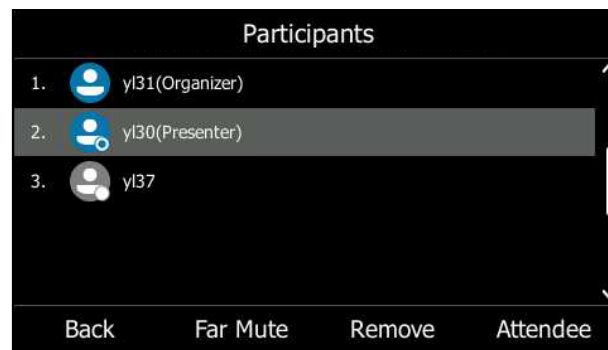

3. Press the **Far Mute** soft key.

The mute icon  is displayed next to each person who is muted.

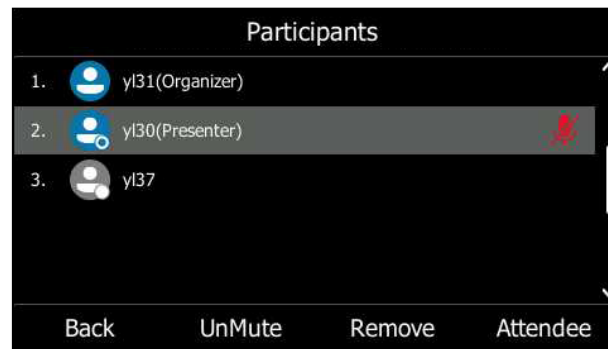




The mute key LED of the muted participant's phone illuminates solid red. And a notification is displayed on the muted participant's phone informing him or her that the presenter has muted the participant.



**To unmute the conference participants by organizer or presenters:**

1. Press **More->Participants**.

2. Press  or  to select the desired muted participant.

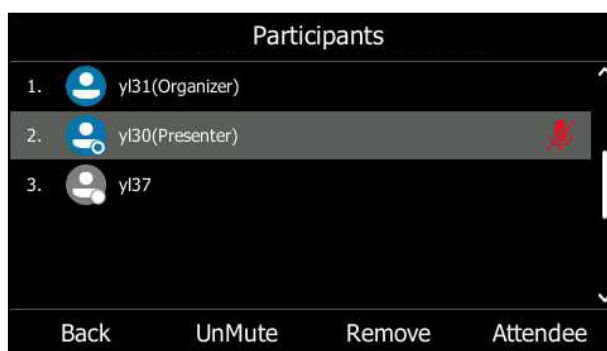

3. Press the **UnMute** soft key.

A notification is displayed on the participant's phone informing him or her that the presenter has unmuted the participant.





4. The muted participants press  to unmute.


## Demoting or Promoting Conference Participants





The organizer and presenters can promote other conference participants from attendees to presenters, or demote conference participants from presenters to attendees. But they cannot demote or promote themselves. The presenters cannot demote or promote the organizer. The attendees cannot promote or demote anyone.

### To demote or promote conference participant:

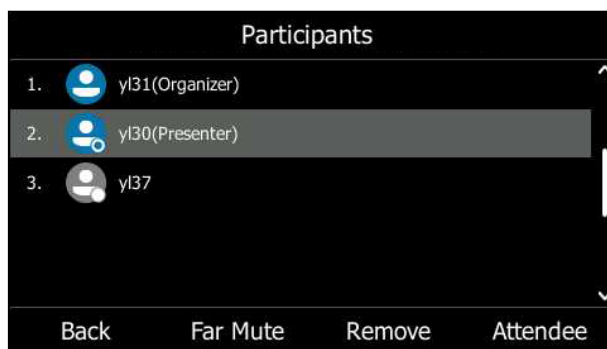1. Press **More->Participants**.

2. Press  or  to select the desired presenter.




3. Do one of the following:
  - Press the **Attendee** soft key to demote a presenter (  ) to attendee (  ).
  - Press the **Presenter** soft key to promote an attendee (  ) to presenter (  ).

## Enabling or Disabling the Announcement

Only the organizer and presenters can enable or disable the announcement. When the announcement feature is enabled, the phone will issue a voice message to announce that a participant joins or leaves the conference.

### To enable or disable conference announcements:


1. During a conference call, do one of the following:
  - Press **More->E.Anc** to enable announcements.  
An icon  appears on the LCD screen.
  - Press **More->U.Anc** to disable announcements.

## Locking or Unlocking the Conference

The organizer and presenters can lock a conference call to prevent other people from joining the conference call without approval.

When a conference is unlocked, anyone can join a conference call automatically with the conference dial-in number and conference ID. When the conference is locked, a contact must wait in the lobby for the organizer or presenters to admit the contact to the meeting.

### To lock or unlock a conference:

1. During a conference call, do one of the following:
  - Press **More->ConfLock** to lock the conference.  
An icon  (indicating the contacts waiting in the lobby) appears on the LCD screen.
  - Press **More->ConfUnLock** to unlock the conference.  
The conference is unlocked, and anyone can join the conference call.

## Admitting or Denying Participants to a Locked Conference Call

The conference participants can invite you to join a locked conference. You can also join locked conference by dialing dial-in number and Conference ID. For more information, please refer to [Joining a Skype Conference by Dialing the Conference Dial-in Number](#) on page 126.

**The organizer or presenters admit or deny participants to join a locked conference:**

1. Press **More->Lobby** to view the caller waiting in the lobby.






2. Do one of the following:
  - Press the **Admit** soft key.  
The caller joins the locked conference as a presenter successfully.
  - Press the **Reject** soft key.  
The caller fails to join the locked conference, and the caller drops the call automatically.

## Removing Conference Participants

An organizer can remove presenters and attendees. A presenter can remove other presenters and attendees. An attendee cannot remove other participants.

**To remove a conference participant:**

1. Press **More->Participants**.
2. Press  or  to select the desired participant.
3. Press the **Remove** soft key to remove the participant from the conference.

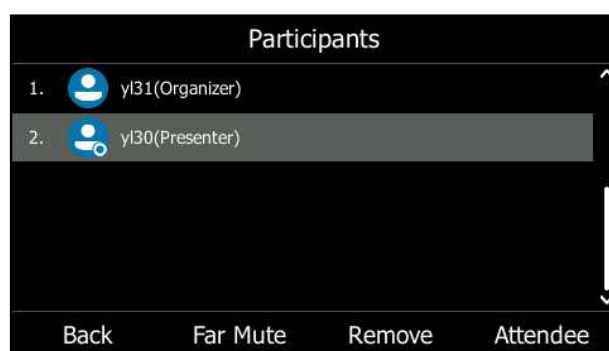



A notification prompts that the participant is removed.

## Leaving the Conference

All participants can leave the conference at any moment.

### To leave the conference:

1. Press the **EndCall** soft key.  
Other participants remain connected.

## Calendar

Yealink Skype for Business phones integrates with the Microsoft Exchange calendar feature. If your phone is configured to connect to the Microsoft Exchange Server, and the Microsoft® Outlook® application is installed at your site, you can view Skype conference, appointment, meeting and event, or join the Skype conference in your Microsoft Outlook application from your phone.

## Setting up an Appointment in Outlook


Appointments are blocks of time you schedule for only yourself (as opposed to meetings, to which you invite others). An appointment has a specific start time and a specific end time (as opposed to an event, which occurs for one or more full 24-hour periods).

### To set up an appointment in outlook:

1. Open Outlook and go to your calendar.




2. Click **Home** -> **New Appointment**.

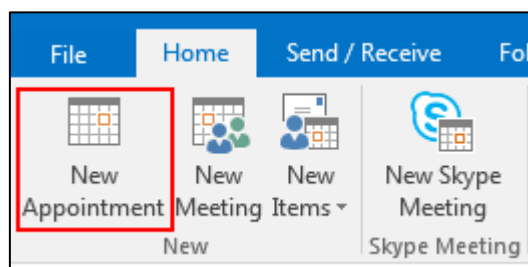

3. Enter a subject, location, and then select the start and end time.
4. Enter the content about the appointment.

5. To show others your availability during this time, on the **Appointment** tab, click the **Show As** box and then click **Free**, **Working else**, **Tentative**, **Busy** or **Out of Office**.

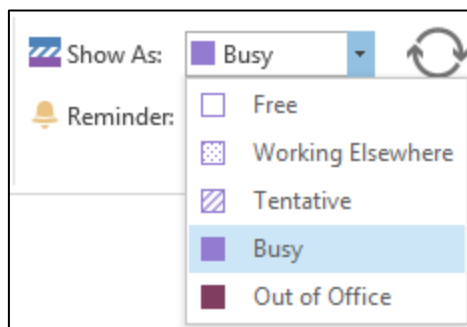

6. Click **Save & Close**.

By default, a reminder appears 15 minutes before the appointment start time.

## Setting up a Meeting in Outlook


You can send a meeting request to one or more people.

**To set up a meeting in outlook:**

1. Open Outlook and go to your calendar.




2. Click **Home** -> **New Meeting**.

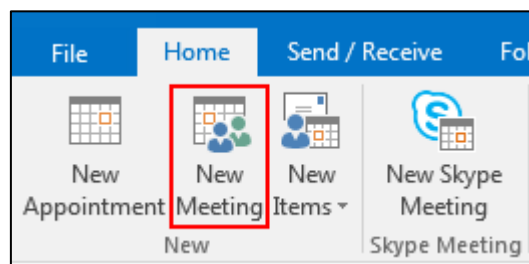

3. Enter a subject, location, and then select the start and end time.
4. Enter the content about the meeting.
5. To add attendees, do one of the following:
  - In the **To** box, add desired attendees.
  - Click **Scheduling Assistant** to help you find the best time for your meeting by analyzing when attendees are available and then click **Add Attendees** to add attendees.

6. To show others your availability during this time, on the **Appointment** tab, click the **Show As** box and then click **Free**, **Working Elsewhere**, **Tentative**, **Busy** or **Out of Office**.

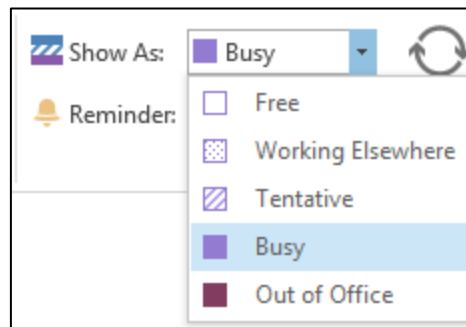

7. Click **Send**.

By default, a reminder appears 15 minutes before the meeting start time.

## Setting up an Event in Outlook


Events are day-long blocks of time that you schedule on your Outlook calendar—for example, a birthday, a payroll day, or anything else occurring on a particular day but not at a specific time.

**To set up an event in outlook:**

1. Open Outlook and go to your calendar.




2. Click **Home** -> **New Items**-> **All Day Event**.

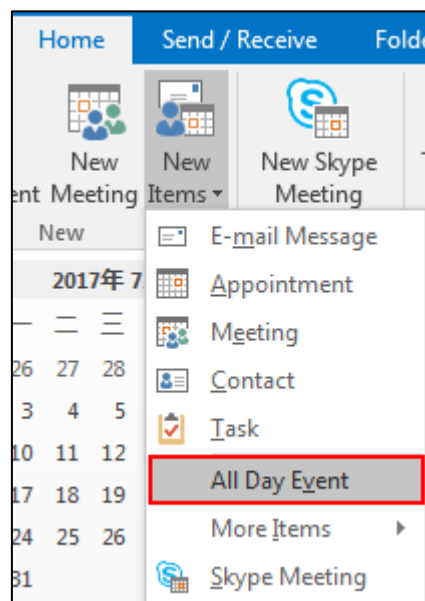

3. Enter a subject and location.
4. Enter the content about the event.

5. To show others your availability during this time, on the **Appointment** tab, click the **Show As** box and then click **Free**, **Working else**, **Tentative**, **Busy** or **Out of Office**.

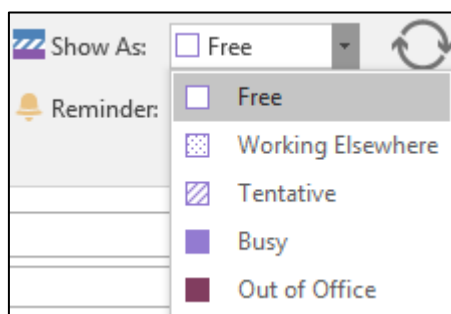

6. Click **Save & Close**.

By default, a reminder appears 15 minutes before the event start time.

## Setting up a Skype Conference in Outlook


The process of setting up a Skype meeting is the nearly identical to creating a normal meeting. The Skype meeting request will automatically include call-in information (conference number and conference ID). You can choose to join the Skype meeting using your Skype for Business phone.

### To set up a Skype conference in outlook:

1. Open Outlook and go to your calendar.




2. Click **HOME**-> **New Skype Meeting**.

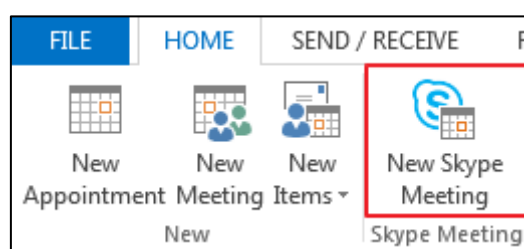

3. Enter a subject, location, and then select the start and end time.
4. Enter the content about the Skype meeting.
5. To add attendees, do one of the following:
  - In the **To** box, add desired attendees.
  - Click **Scheduling Assistant** to help you find the best time for your meeting by analyzing when attendees are available and then click **Add Attendees** to add attendees.
6. To show others your availability during this time, on the **Appointment** tab, click the **Show**

As box and then click **Free**, **Working Elsewhere**, **Tentative**, **Busy** or **Out of Office**.

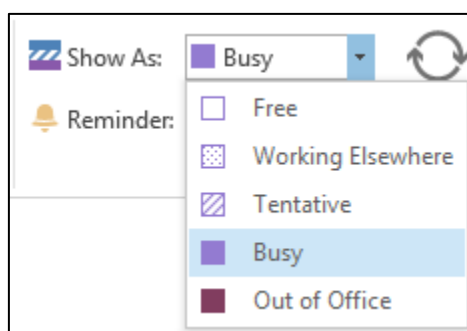

- Click **Send**.

By default, a reminder appears 15 minutes before the Skype meeting start time.

#### Note

If you change the Skype conference content (e.g., location, subject, time) via outlook after you have sent the invitation, the phone will update the Skype conference content.

## Using the Calendar


To use the calendar feature on your phone, you must sign into the phone using [User Sign-in](#), [Web Sign-In](#) or [Signing in via PC](#) method. So the phones can display the Microsoft Exchange calendar which gives you quick access to Skype conference, appointment, meeting and event.





### Viewing the Calendar

**To view the calendar via phone user interface:**

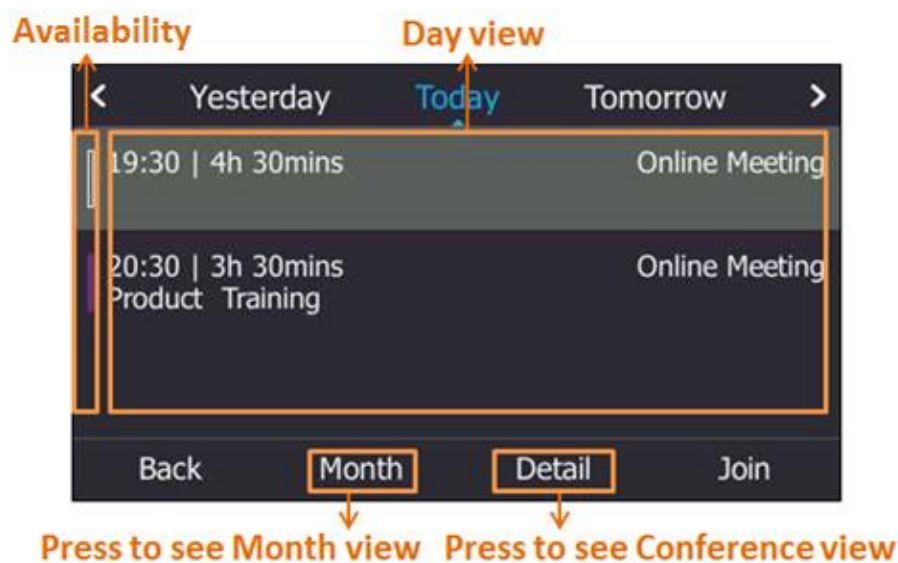- Press **Menu->Calendar**.

The calendar displays the schedules of today by default. You can view 1000 schedules at most on your T46S Skype for Business phone.







Name	Description	
<b>Availability</b>		Your availability during this time shows as <b>Free</b> or <b>Working Elsewhere</b> on the Outlook software.
		Your availability during this time shows as <b>Tentative</b> on the Outlook software.
		Your availability during this time shows as <b>Busy</b> on the Outlook software.
		Your availability during this time shows as <b>Out of Office</b> on the Outlook software.
<b>Month view</b>	Shows all the days which have schedules in the selected month.	
<b>Day view</b>	Shows all schedules of the selected day, including the subject, start and end time.	
<b>Schedule view</b>	Shows the details of the selected schedule, including the subject, participants, organizer, start and end time, location and content.	

2. Press the **Back** soft key to return to the pervious screen.

## Navigating Month View

Month view displays all the days which have schedules in the month, including the date and the number of schedules in selected day.





### To navigate month view:

1. Press **Menu->Calendar**.
2. Press the **Month** soft key to enter the Month view.
3. Do one of the following:
  - Press  to view the previous month.
  - Press  to view the upcoming month.
  - Press  or  to select the desired day.
  - Press the **Back** soft key to return to the pervious screen.

## Navigating Day View

Day view shows all schedules of the selected day, including the subject, start and end time.





### To navigate Day view:


1. Press **Menu**->**Calendar**.
2. Do one of the following:
  - Press  to view the schedules of the previous day.
  - Press  to view the schedules of the upcoming day.
  - Press  or  to select a schedule, and then press the **Detail** soft key to view details for a specific schedule.
  - Press the **Back** soft key to return to the previous screen.

## Navigating Schedule View



Schedule view displays the details of a selected schedule. You can view the schedules' subject, participants, organizer, start and end time, location and content.


### To view schedules via phone user interface:

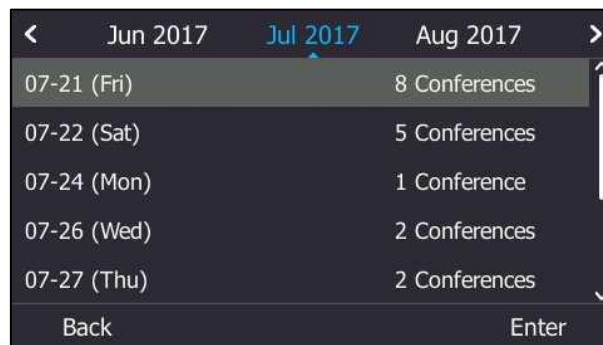1. Press **Menu**->**Calendar**.
2. Press the **Month** soft key to enter the Month view.
3. Press  or  to select a desired month.
4. Press  or  to select a desired day.



5. Press the **Enter** soft key.

6. Press  or  to select the desired schedule, and then press the **Detail** soft key to view details of a specific schedule.

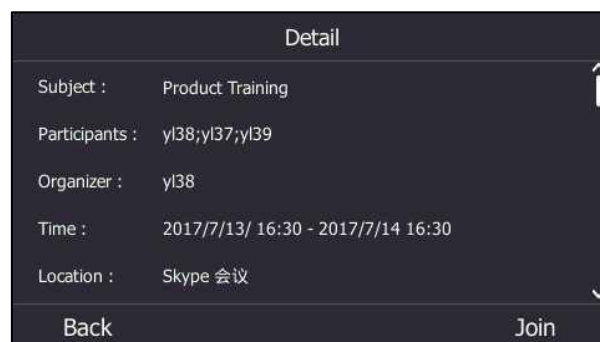

## Tracking the Calendar

When an organizer schedules a Skype meeting via the Outlook software, the attendees can respond to the meeting request via Outlook software.


Attendees can send one of the following responses to the organizer:

- Do not reply the invitation (show as **None** on the organizer's phone).
- Accept the invitation (show as **Accepted** on the organizer's phone)
- Tentatively accept the invitation (show as **Tentative** on the organizer's phone)
- Decline the invitation (show as **Declined** on the organizer's phone)

Organizer can verify whether all the attendees get the invitation and able to join the Skype meeting via the phone user interface.

**To track the calendar via phone user interface:**

1. Press **Menu**->**Calendar**.
2. Select a desired Skype meeting.
3. Press **Detail**->**Tracking**.

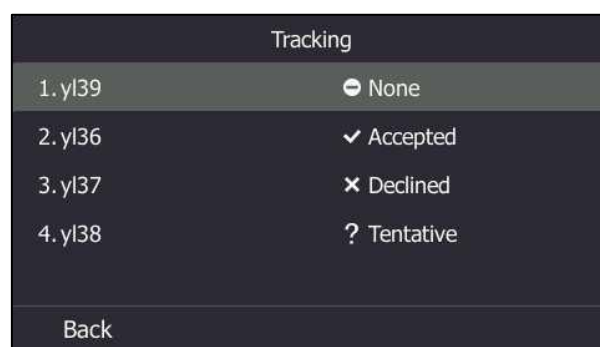


4. Press the **Back** soft key to return to the pervious screen.

## Working with Schedule Reminders

If you have a schedule, a reminder pop-up is displayed 15 minutes before it starts. The reminder



shows the main information of the schedule, including subject, start time, end time and the rest time.

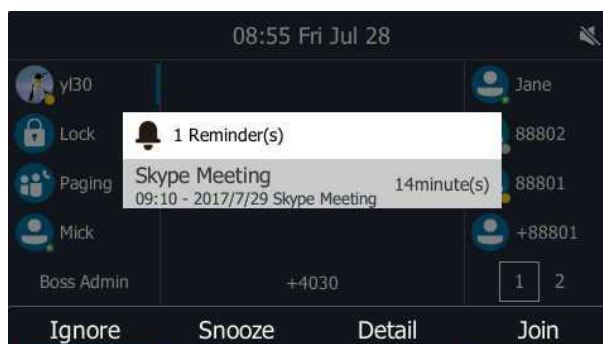

- Press the **Ignore** soft key to permanently remove the reminder from the screen and stop all future reminders for the Skype conference.
- Press the **Snooze** soft key to temporarily remove the reminder from the screen, until the next schedule reminder. The reminder will appear every 5 minutes by default and also appear 1 minute before the schedule starts. For more information on how to change the conference reminder interval, refer to [Configuring the Reminder](#) on page 124.
- Press the **Detail** soft key to view specific information about the Skype conference, including the Skype conference's subject, participants, organizer, start and end time, location and content.
- If you receive a Skype conference, press the **Join** soft key to join the Skype conference.


#### Note

When the phone is locked, you can press the **Ignore** or **Snooze** soft key without unlocking the phone. But you need to unlock the phone to view detailed information and join the Skype conference.

The reminder will show "overdue" when the schedule is overdue.



#### Note



You can press  on the phone to ignore all reminders.

When receives a Skype conference reminder during a call, you can press the **Join** soft key to join the Skype conference directly. Current call will be held and you can resume it after the Skype conference.


## Configuring the Reminder

If you enabled the reminder feature and temporarily remove the reminder from the screen, you can configure the reminder interval.

### To configure the reminder via phone user interface:

1. Press **Menu->Basic->Calendar Settings**.
2. Press  ,  or the **Switch** soft key to select **Enabled** from the **Reminder** field.
3. Enter the interval in the **Reminder Interval** field.

The interval is 5 minutes by default, it ranges from 1 to 15 minutes.

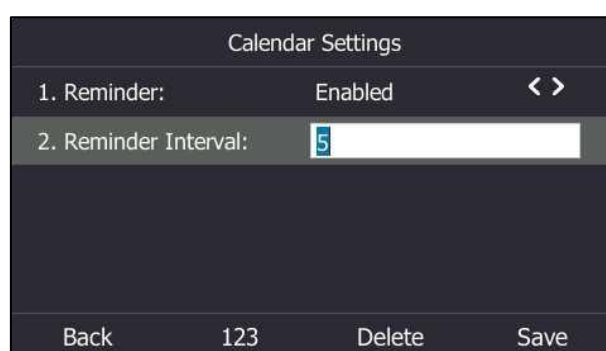

4. Press the **Save** soft key to accept the change.

## Joining Skype Conferences from the Calendar

You can join the Skype conferences from calendar in following three ways:

- **Joining a Skype conference from a conference reminder** (Once joined, presenter and attendee will be muted automatically, organizer will not be muted).
- **Joining a Skype conference from Schedule view** (Once joined, presenter and attendee will be muted automatically, organizer will not be muted).
- **Dialing the conference dial-in number to join a Skype conference** (Once joined, presenter, attendee and organizer will not be muted).

### Note


When the organizer sets up a conference in Outlook and enables **Mute all attendees** feature, all conference participants will be muted automatically once join the Skype conferences in above ways.

## Joining a Skype Conference from a Conference Reminder


### To join a Skype conference from a conference reminder:

Do one of the following:

- Press the **Join** soft key.

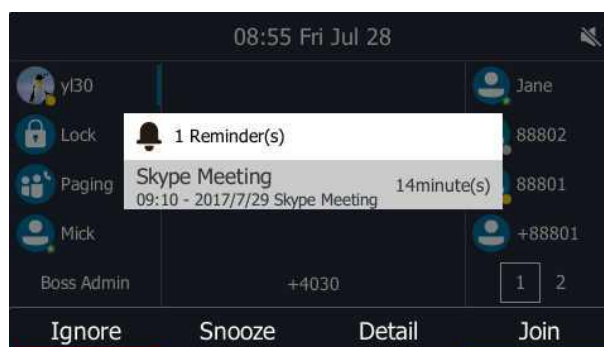


- Press the **Detail** soft key to view detail for a specific Skype conference, and then press the **Join** soft key.

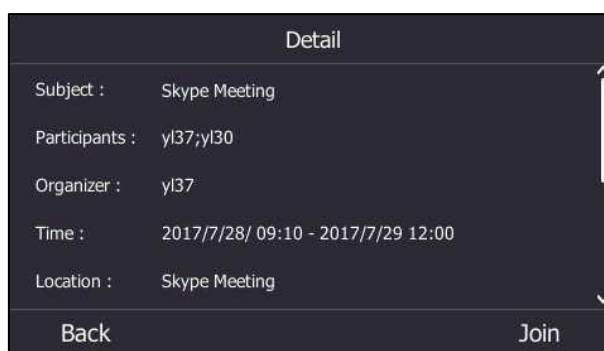


## Joining a Skype Conference from Schedule View

**To join a Skype conference from Schedule view:**

1. Press **Menu->Calendar**.
2. Press the **Month** soft key to enter the Month view.
3. Press (◀) or (▶) to select a desired month.
4. Press (▲) or (▼) to select a desired day.
5. Press (▲) or (▼) to select a desired Skype conference.
6. Do one of the following:
  - Press the **Join** soft key to join the Skype conference.

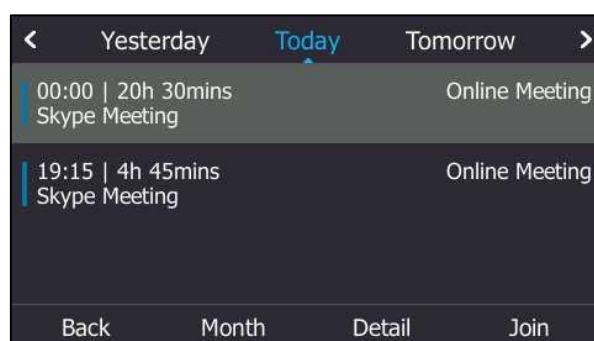

- Press **Detail** soft key to view specific information about the Skype conference, and then press the **Join** soft key.

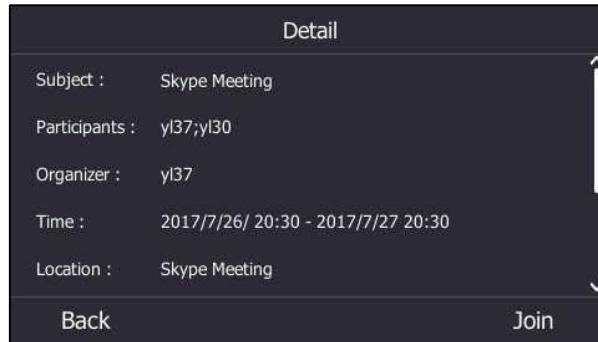

### Joining a Skype Conference by Dialing the Conference Dial-in Number

If you schedule a Skype conference call via Microsoft Outlook Conferencing (Plug-In), dial-in number and Conference ID will be sent to invitees in an email. They can join the Skype conference from phone by dialing dial-in number and Conference ID.

Invitees can also obtain the dial-in number and Conference ID from the phone.

 
#### To obtain the dial-in number and Conference ID form the phone:

1. Press **Menu**->**Calendar**.
2. Press the **Month** soft key to enter the Month view
3. Press ◀ or ▶ to select a desired month.
4. Press ▲ or ▼ to select a desired day.
5. Press ▲ or ▼ to select a desired conference.
6. Press the **Detail** soft key to view detail for specific Skype conference.
7. Press ▲ or ▼ to view the dial-in PIN number or Conference ID.



You can also view the dial-in number and Conference ID during a conference call. For more information, refer to [Viewing the Conference Information](#) on page 108.

#### To join a Skype conference by dialing the conference dial-in number:

1. Dial the conference dial-in number (e.g., 15915).
2. Enter the Conference ID (e.g., 230138), and then press  to join the Skype conference.

For more information on managing the Skype conference participants, refer to the [Managing the Conference Participants](#) on page 109.

## Parking and Retrieving Calls on the Skype for Business Server

Using the Skype for Business Call Park feature, you can park calls so that you can continue to make calls and answer other incoming calls on your phone.


Call park is different from call hold. Call hold keeps the held call on the same line, while call park places the call in a call orbit on the Skype for Business Server. Calls placed in the call orbit are given an orbit number and can be retrieved by any Skype for Business-compatible phone with access to the orbit.

### Parking Skype for Business Calls

#### To use call park:

1. During a call, press the **Park** soft key.

The call is placed in the call orbit and given a retrieval number.

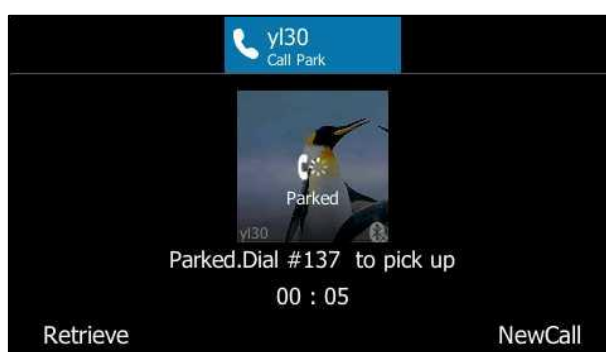

### Retrieving Parked Skype for Business Calls


#### Retrieve Parked Skype for Business Calls on the Same Phone:

1. Press the **Retrieve** soft key.

#### Retrieve Parked Skype for Business Calls on Another Phone:

1. Dial the retrieval number (for example: #137).

When someone retrieves the parked call, a notification showing that the call was picked up and by whom is shown on the phone of the person who parked the call.

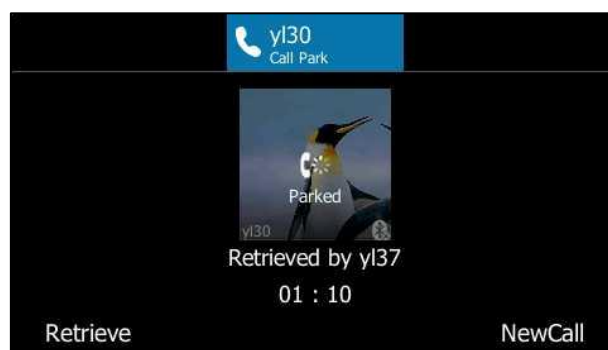

If no one retrieves a parked call within a set time limit, the call is returned to the person who parked the call. For example, if yl31 parked a call and no one retrieves the call, the server returns the call to yl31. If yl31 doesn't answer the parked call after it's returned, the call is terminated. The time limit for parked calls is set by the system administrator.

**Note**

If the call is ended by the other party before the call is retrieved, the prompting message "Parked call ended before it can be retrieved" will be displayed on the LCD screen of the person who parked the call.

## Group Call Pickup

If you sign into the phone using On-Premises account, you can use group call pickup feature. Current Online environment does not support this feature.


Group call pickup is used for picking up incoming calls within a pre-defined group. If the group receives many incoming calls at once, the user will pick up the first incoming call, by dialing the group pickup code. This feature depends on support from a Skype for Business server.

**Note**

Group and group pickup code are configurable on the Skype for Business Server only. Contact your system administrator for more information.

**To use group pickup via phone user interface:**

1. Enter the group pickup code (e.g., #505) on your phone when a phone number in your group receives an incoming call.

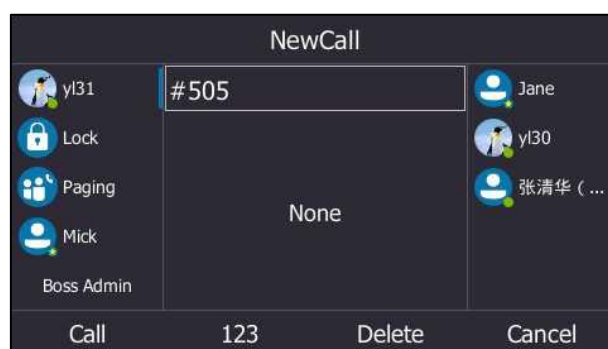

2. Press the **Call** soft key.  
The call is answered on your phone.

## Shared Line Appearance(SLA)

When your phone is registered with the Skype for Business Server, you can use the Shared Line Appearance (SLA) feature to share a single line with other contacts as a member of a group. System administrators assign members to SLA groups.

Any SLA group member can answer, hold, or resume calls on the shared line, and all group members can view the status of a call on the shared line on their phones. Each line supports up to 25 call appearances. Only one call at a time can be active on the shared line appearance. If a call is placed to the shared line with an active call in place, the incoming call is sent to another shared line.

### Note

SLA feature is configurable via Skype for Business server only. Contact your system administrator for more information.


A user can be assigned to be one SLA group only. If a user is assigned to multiple SLA groups, the phone will use Boss/Admin feature to handle delegation calls. For more information, refer to [Boss-Admin](#) on page 132.

## Viewing Shared Line Appearances


When you (group member) sign into your phone, your phone notifies that you join a SLA group, and your phones' line keys display shared line appearances automatically.

**Note**

When the number of the shared line appearances is more than one page, you can press the tenth line key to turn the page.

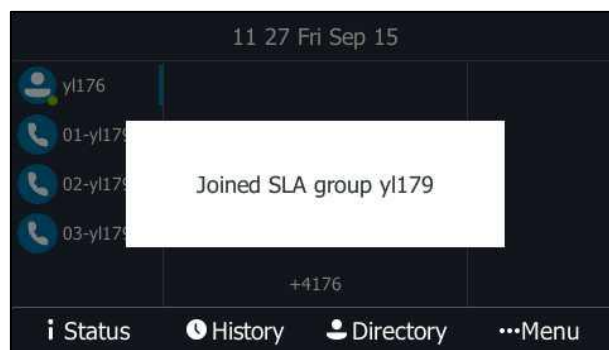


In the following figure, the line keys of a SLA group member (yl176) display all shared line appearances. By default, shared line appearances are displayed before the favorites. The name of the shared line appearance consists of the sequence number and the group name.

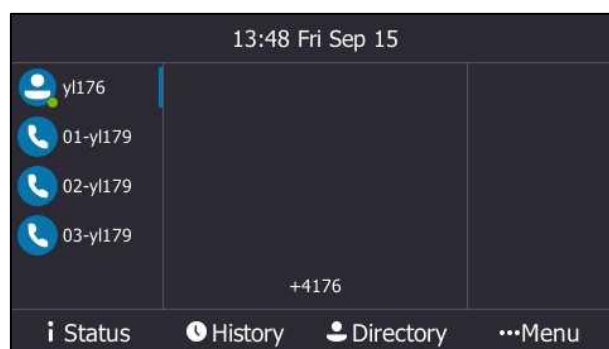



## Answering SLA Calls

Any incoming call to the shared line rings on all SLA group members' phones simultaneously. All members' phones are shown below:

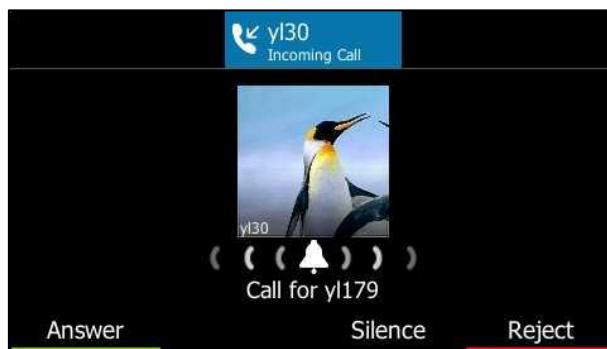

Any group member can press the **Answer** soft key to answer an incoming call for the shared line. When a group member answers an incoming call, the line key's LED indicator of the shared line appearance on all phones changes to solid red to indicate the call is answered.


Other members can view the status of a call on the shared line by pressing the corresponding line key.



(Caller: y130, Recipient: y177)

## Placing a SLA Call on Hold

**To place a SLA call on hold:**

1. Press  or the **Hold** soft key.


All group members are notified of the call's hold status by a flashing red LED light on the line key on all members' phones.

## Resuming Held SLA Calls

Any SLA member can resume a held call on the shared line.

**To resume a held call on the shared line:**

1. Press the corresponding line key (flashing red LED light) to view the held call.

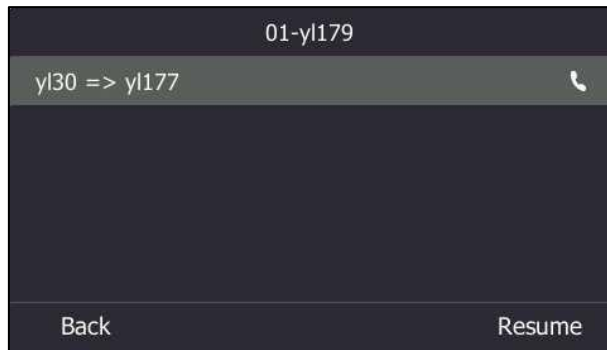

2. Press the **Resume** soft key.

## Missed and Received Calls on Shared Lines

If all SLA group members do not answer an incoming call, the call is logged as missed calls on all the phones.

If any SLA group member answers the incoming call, the call is logged as received calls on all the phones. The duration of the call is not displayed.

### Note

Only the call history of the receiver displays the duration

## Boss-Admin

When your phone is registered with Skype for Business server, you can use the Boss-Admin feature to manage shared lines. The Boss-Admin feature enables a "boss" phone and delegates' phones to ring simultaneously when a user calls the boss. When one party answers the call, the other phone will stop ringing. A boss can assign delegates, and delegates can manage calls on behalf of the boss's line.

**Boss-Admin Scenario:** The system administrator has configured the phone number 4031 to be the delegate of phone number 4030. For more information on how to assign delegates on the Skype for Business client, refer to [Assigning/Removing Delegates](#) on page 132.

- **Boss:** yl30 (phone number: 4030)
- **Delegate:** yl31 (phone number: 4031)
- **Other:** yl37 (phone number: 4037)


### Note


Boss-admin feature is configurable via Skype for Business client only.

## Assigning/Removing Delegates

You can assign delegates to your line using the Skype for Business client. However, you cannot assign yourself as a delegate. As a delegate, you can be assigned to multiple bosses' lines.


### To assign delegates using Skype for Business client:

1. Open Skype for Business client.
2. Sign into Skype for Business client as the person who wants to assign a delegate.
3. Click the  button, and then click **Call Forwarding Settings**.
4. Mark the radio box in **Simultaneously ring** field.
5. Select **My Delegates** from the pull-down list of **Simultaneously ring**.

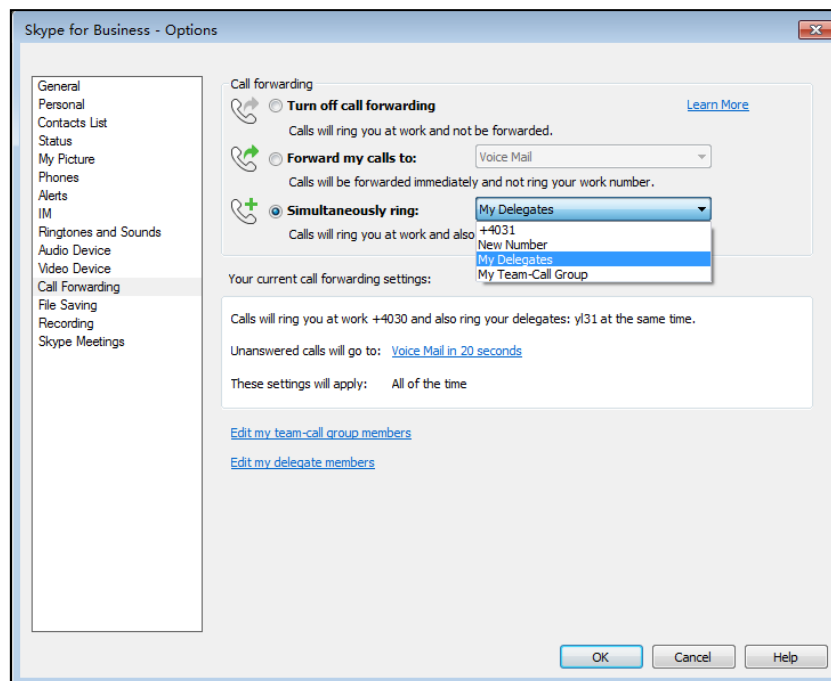

6. In the **Delegates** dialog box, click **Add**. Each delegate must be a Skype for Business contact.


7. Click the **Ring your delegates after this many seconds** pull-down list to determine when your delegates' phones ring.

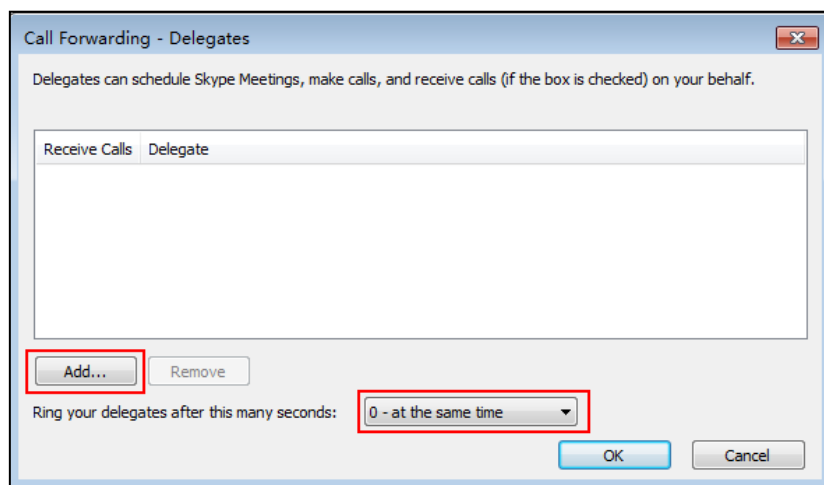


8. Click **OK**.
9. Click **OK** in the **Delegates** dialog box.
10. Click **OK** in the **Options** dialog box.

**To remove a delegate from Skype for Business client:**

1. Open Skype for Business client.
2. Sign into Skype for Business client as the person who wants to remove a delegate.  
Make sure **My Delegates** option is not selected in either the **Simultaneously ring** or **Forward my calls to** list.
3. Click **Edit my delegate members**.

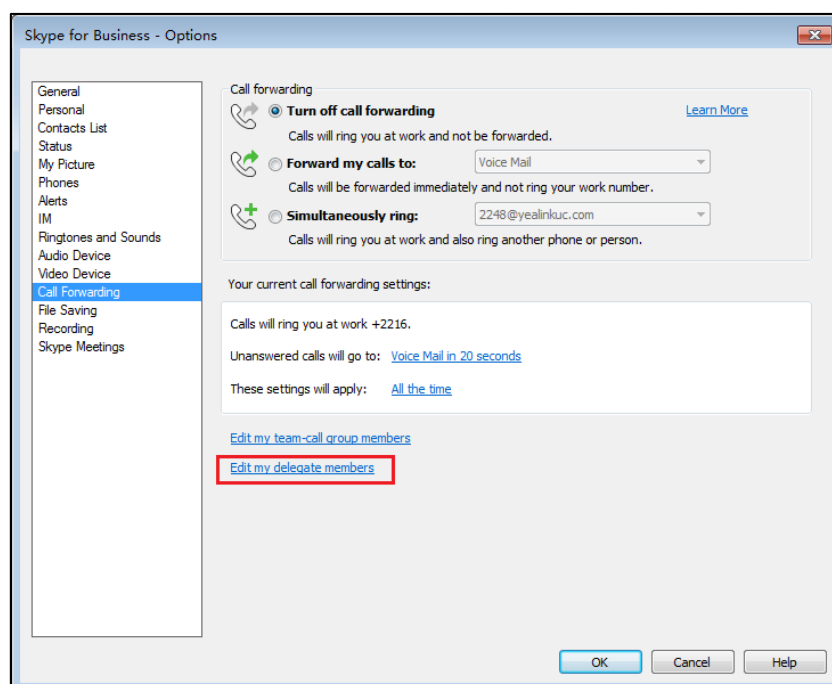

4. Check the checkbox of the delegate you want to remove.

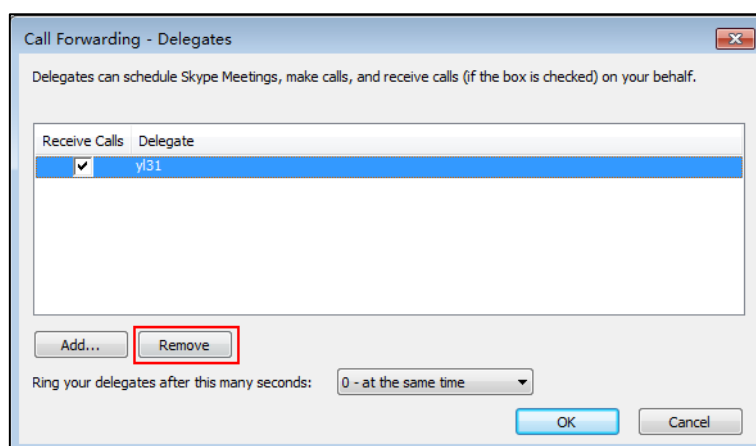

5. Click **Remove**.
6. Click **OK** in the **Delegates** dialog box.
7. Click **OK** in the **Options** dialog box.


## Viewing the Delegates Group

Your delegates are automatically added to the **Delegates** group on your phone and in the Skype for Business client.

**To view your delegates via phone user interface:**

1. Press **Directory**->**Delegates**.

Your delegate(s) will be displayed.

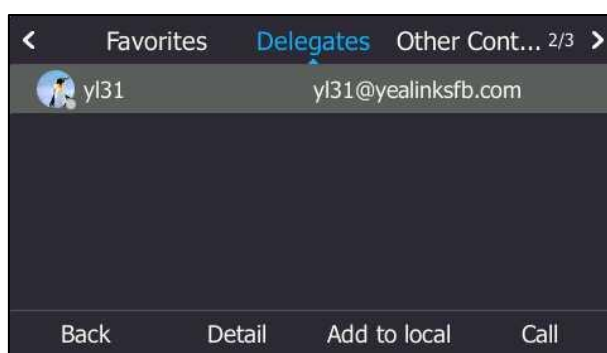


## Viewing the Boss Group

You can view the contacts for which you are assigned as a delegate in the **Bosses** group on your phone and in the Skype for Business client.

**To view your bosses via phone user interface:**

1. Press **Directory**->**Bosses**.

Your boss(es) will be displayed.

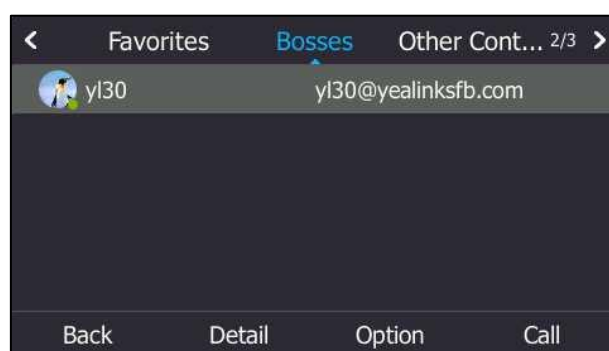






## Boss-Line Ringtone

As a delegate, you can set a distinct ringtone for your assigned boss's line. When you receive incoming calls from your assigned boss or your assigned boss receives an incoming call, your phone will play this ringtone.

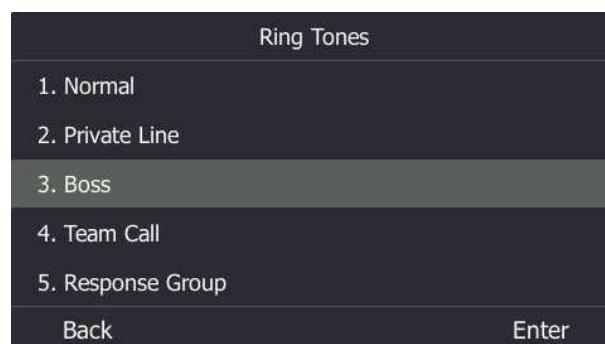**To set a ringtone for the boss's line via phone user interface:**

1. Press **Menu->Basic->Sounds->Ring Tones->Boss**.




2. Press  or  to select a boss.
3. Press  or  to select a ringtone.
4. Press the **Save** soft key to accept the change.

## Delegates-Call Ringtone

As a boss, you can set a distinct ringtone for incoming calls from your assigned delegate's line.

**To set a ringtone for the delegate's line via phone user interface:**

1. Press **Menu->Basic->Sounds->Ring Tones->Delegate call**.

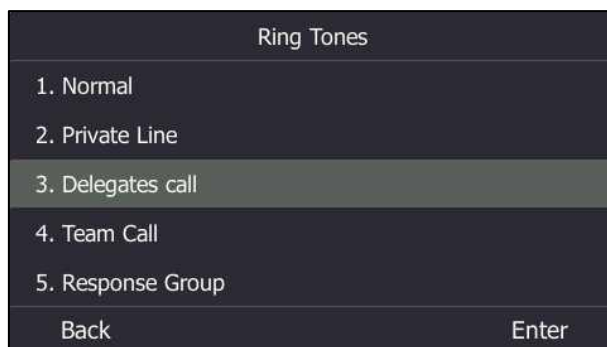

2. Press or to select a delegate.
3. Press or to select a ringtone.
4. Press the **Save** soft key to accept the change.

## Using the Boss-Admin Feature


### Answering Incoming Calls

When a user calls the boss, both boss's and delegate's phone will ring simultaneously.

**To answer an incoming call on a boss's phone:**

1. Press the **Answer** soft key or .


The delegate's phone stops ringing and the LCD screen of the delegate's phone is shown below:

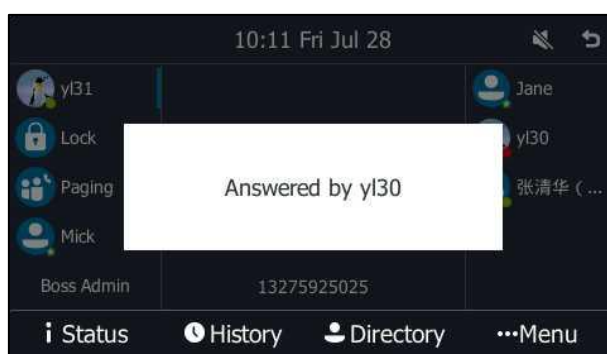

**To answer an incoming call on a delegate's phone:**


1. Press the **Answer** soft key or .

The boss's phone stops ringing and the LCD screen of the boss's phone is shown below:

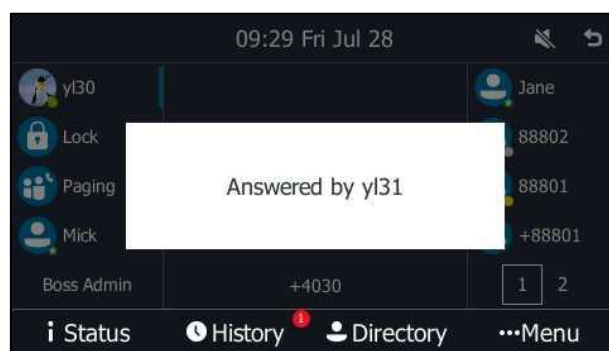


## Placing the Calls on Hold

**To place a call on hold on a boss's phone:**


1. Press the **Hold** soft key or  to place the call on hold.

The **Boss Admin** key LED of the delegate's phone flashes red. The Boss/Admin screen appears on the delegate's phone.

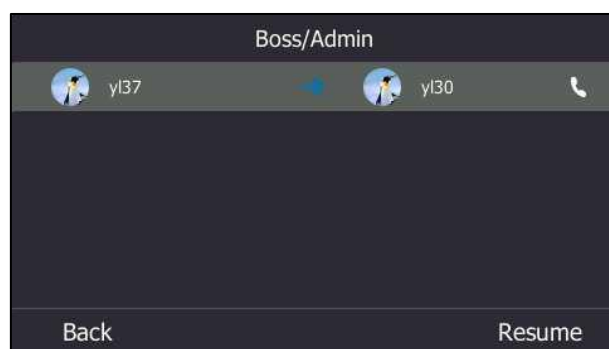


(A call from yl37 to yl30)

**To place a call on hold on a delegate's phone:**

1. Press the **Hold** soft key or  to place the call on hold.



The **Boss Admin** key LED of the boss's phone flashes red. The Boss/Admin screen appears on the boss's phone.

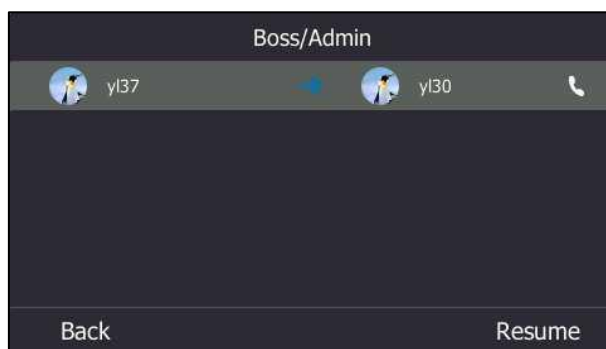

(A call from yl37 to yl30)

## Resuming the Held Calls

Either boss or delegate can resume the held call. Once one party resumes the call, the other party will drop the call automatically.


### To resume a call held on a boss's phone:

Do one of the following:

- The boss presses the **Resume** soft key or  to resume the held call.



- The delegate presses the **Boss Admin** key to view the calls that are held by boss.

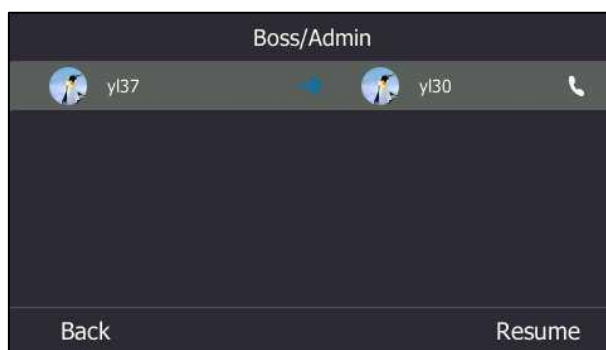


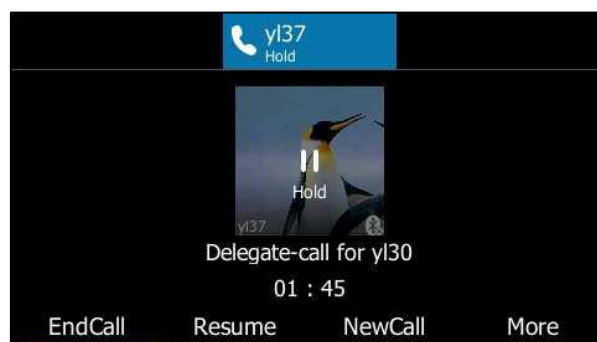
(A call from yl37 to yl30)

Press the **Resume** soft key. The call will be resumed by delegate, and the boss will drop the call automatically.


#### To resume a call held on a delegate's phone:

Do one of the following:

- The delegate presses the **Resume** soft key or  to resume the held call.



- The boss presses the **Boss Admin** key to view the calls that are held by delegate.

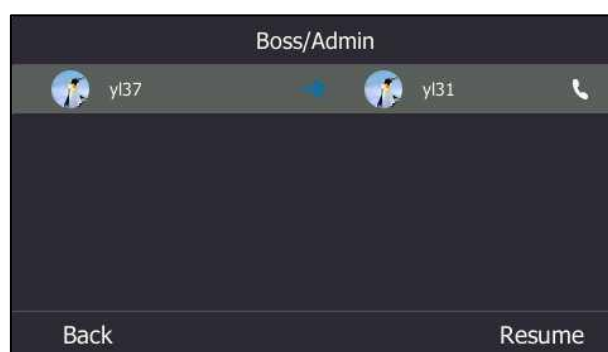

(A call from yl37 to yl30)

Press the **Resume** soft key. The call will be resumed by the boss, and the delegate will drop the call automatically.

## Transferring Calls to Boss's Voicemail


If a boss is unavailable to answer calls, delegates can transfer the calls directly to a boss's voicemail. The caller can follow the voice prompt to leave the voicemail.

### To transfer a delegation call to the boss's voicemail:

Before answering the delegation call or during a delegation call:

1. Press the **Boss VM** soft key to forward the incoming call to boss's voicemail directly.

The LCD screen of the delegate's phone is shown below:

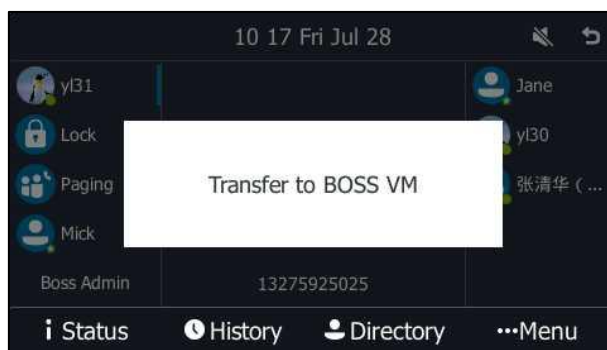


## Making a Safe Transfer to Boss

After a delegate answers a delegation call, the delegate can transfer the call to the boss's phone using the Safe Transfer feature, which enables the delegate to transfer the call to the boss's phone and prevent the call from going to the voicemail if the boss does not answer the call.


### To make a safe transfer to a boss's phone:

1. Press **More->Safe Tran** during a call. The call is placed on hold.

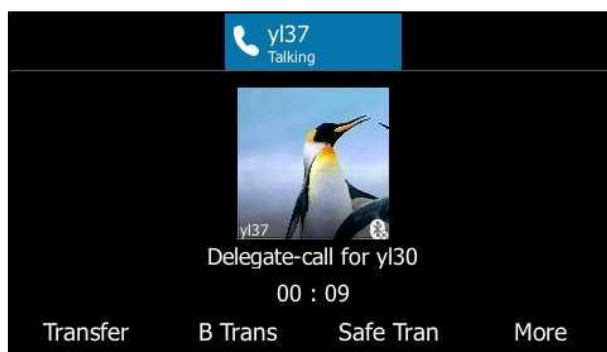

When the boss answers the call, the call will be transferred to the boss successfully.

When the boss is unavailable to answer the transferred call or rejects the transferred call, the delegate's phone displays as "Transfer failed". The delegate can resume the call.

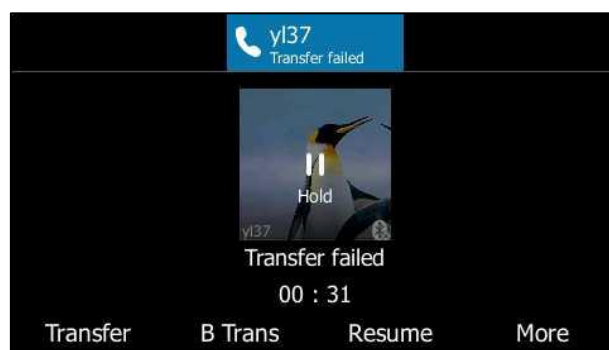

## Placing a Call on Behalf of a Boss

The delegate can make calls on behalf of his assigned boss's lines.


### To place a call on behalf of a boss's line:

1. Press **Directory**->**Bosses**.
2. Press or to select the desired boss.
3. Press the **Option** soft key, and then press or to select **On behalf** from the prompt list.



4. Enter a number or choose a contact from the recent calls or a directory.
5. Press or **Call** soft key to dial out.



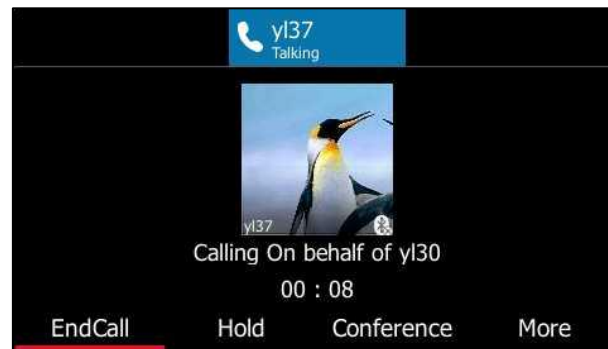

The delegate and third-party phones display a notification indicating that a delegate is calling on behalf of a boss.




## Initiating a Conference Call on Behalf of a Boss


The delegate can initiate a conference call on behalf of a boss's line.

**To initiate a conference call on behalf of a boss's line:**

1. Press **Directory->Skype for Business Directory->Bosses**.
2. Press  or  to select the desired boss.
3. Press the **Option** soft key, and then press  or  to select **On behalf of meet now** from the prompt list..

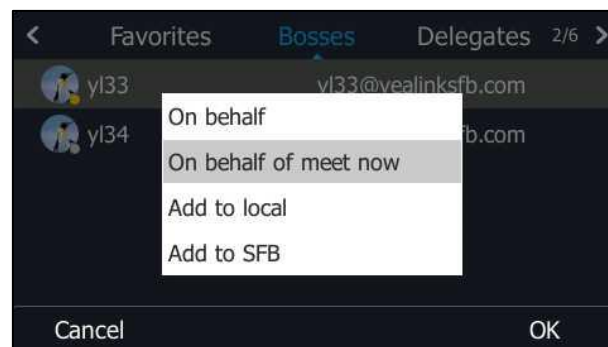

The delegate will initiate a Skype for Business conference call on behalf of a boss's line directly.

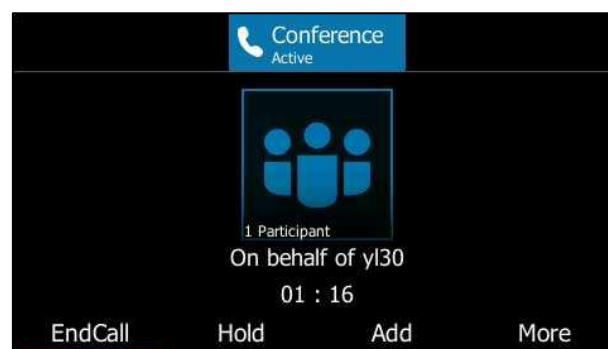

4. Press the **Add** soft key add more participants.

## Joining Conference Calls for a Boss

The delegate can join an incoming conference call on behalf of a boss's line and add the boss to the conference call.


### To add a boss's line to a conference call:

1. Press the **Answer** soft key to join an incoming conference call.



2. Press **More->Invite** to add the boss's line to the conference.

The LCD screen of the delegate's phone is shown below:

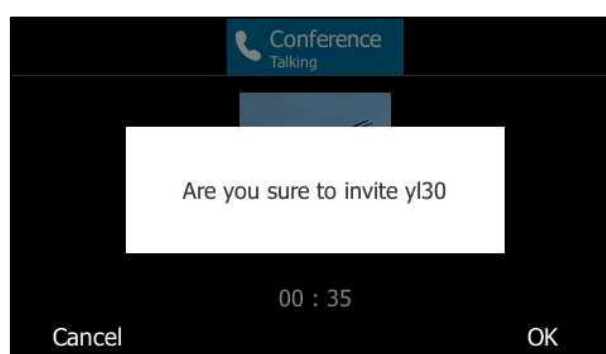


3. Press the **OK** soft key.
4. When the boss joins the conference call, the delegate presses **EndCall** to leave the conference call.

## Voicemail

If your phone is configured to connect to the Microsoft Exchange Server, you can leave voicemails for someone else using the T46S Skype for Business phone. You can also listen to voicemails that are stored in a voicemail. When receiving a new voicemail, the phone will play a warning tone. A number icon (indicating the number of voicemails you haven't retrieved) appears on the top-right of the Menu.

Press the **Menu** soft key to enter the **Menu** screen, and the number icon also appears on the top-right of the **Voice Mail** menu.

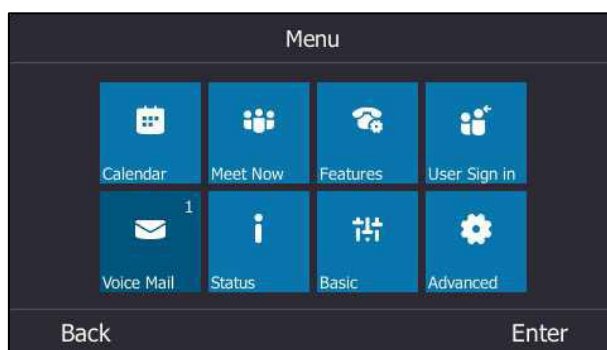

### Note

First time you listen to your voice mails, the message center will ask you to configure a voice mail access PIN.

When all new voice mails are retrieved, the flashing power indicator LED will go out and the number on **Voice Mail** menu will disappear.


## Leaving the Voicemail

You can leave a voicemail for someone else when he/she is busy or inconvenient to answer the call. Follow the voice prompt from the system server to leave a voicemail, and then hang up.

You can also dial the voicemail address of the Skype for business contact to leave the voicemail.

### To leave the voicemail via phone user interface:

1. Press the **Directory** soft key.
2. Press or to select the desired Skype for business group.
3. Press the **Enter** soft key.
4. Press or to select the desired contact.
5. Press the **Detail** soft key.
6. Press or to select the voicemail.

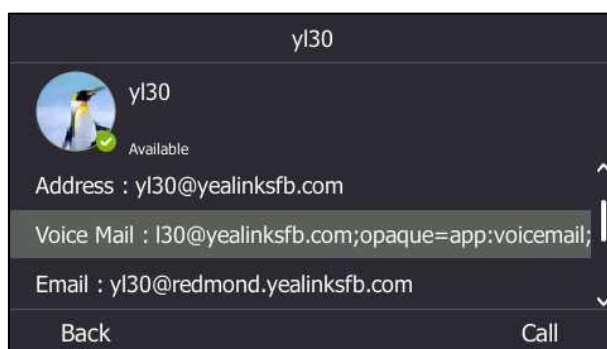


7. Press the **Call** soft key to leave the voicemail.


## Managing the Voicemail

### PIN Authentication

When you sign into the phone using [PIN Authentication](#) method, you can follow the voice prompts to listen to voicemails only.

**To listen to the voicemail when sign into the phone using PIN Authentication, do the following:**

1. When the LCD screen prompts that the phone receives a new voicemail and the power indicator LED slowly flashes red, press  or press **Menu->Voice Mail**.

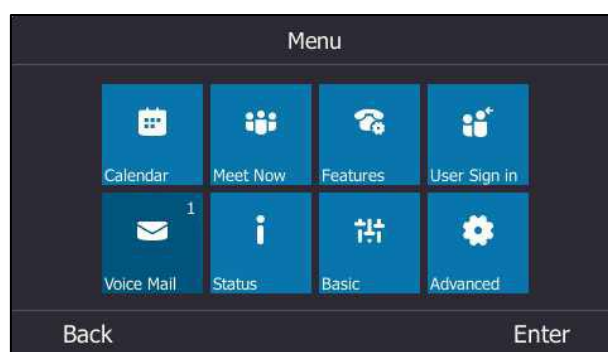


2. Follow the voice prompt to listen to your voicemails.

### User Sign-in/Web Sign-in/Sign in via PC

When you sign into the phone using [User Sign-in](#), [Web Sign-In](#) or [Signing in via PC](#) method, you can manage the voicemail, includes viewing a list of voicemails, call back to those who left the voicemails list, mark voicemails as read, delete voicemails and follow the voice prompts to listen to voicemails, etc.


### Accessing the Message Center

**To access the message center:**

1. When the LCD screen prompts that the phone receives a new voicemail and the power indicator LED slowly flashes red, do one of the following to access the message center:
  - Press  .



- Press **Menu->Voice Mail**, and then press the **Message** soft key.

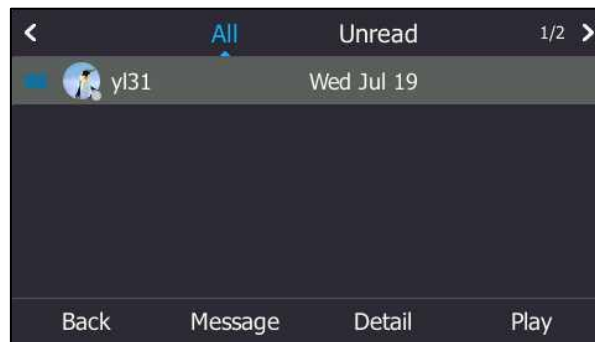


2. Follow the voice prompt to listen to your voicemails.

### Listening to the Voicemail

#### To listen to the voicemail:

1. Press **Menu->Voice Mail**.

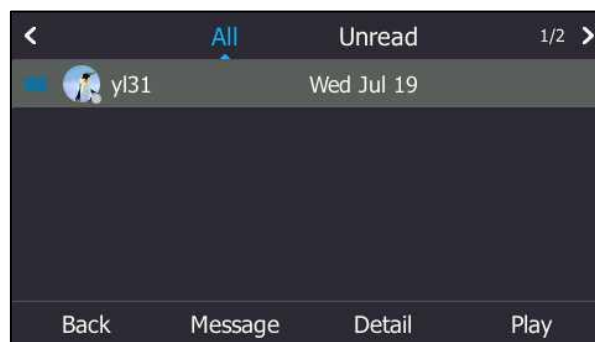


2. Press (◀) or (▶) to switch between unread voicemails and all voicemails.
3. Press (▲) or (▼) to select the desired voicemail.
4. Press the **Play** soft key, the phone will connect to the Exchange server to play the selected voicemail.


## Calling a Contact from Voicemail

To call a contact from voicemail:

1. Press **Menu->Voice Mail**.

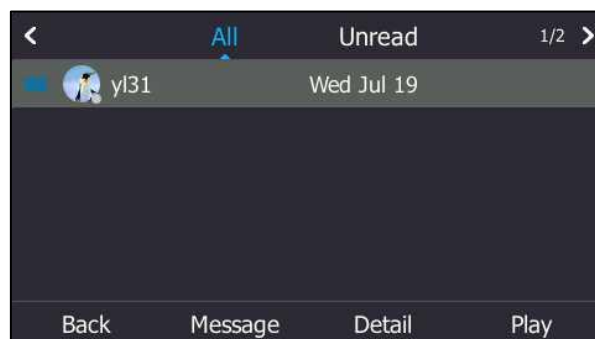

2. Press or to select the desired voicemail.
3. Press the **Detail** soft key to view the detail, and then press the **Call** soft key to call the contact.

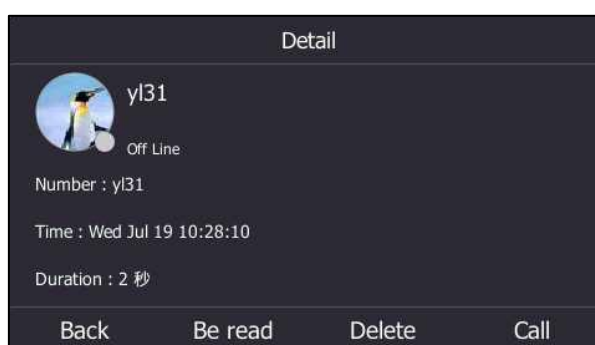

## Marking the Voicemail as Read or Unread

The following icons indicate the status of the voicemail:

- **Unread voicemail**
- **Read voicemail**



To mark the voicemail as read:



1. Press **Menu->Voice Mail**.
2. Press or to select the unread voicemails.
3. Press the **Detail** soft key to view the detail.
4. Press the **Be read** soft key.

The voicemail icon will change from to .

To mark the voicemail as unread:



1. Press **Menu->Voice Mail**.

2. Press  or  to select the voicemails.
3. Press the **Detail** soft key to view the detail.
4. Press the **Be unread** soft key.

The voicemail icon will change from  to .

## Deleting the Voicemail

**To delete the voicemail:**

1. Press **Menu->Voice Mail..**
2. Press  or  to select the desired voicemail.
3. Press the **Detail** soft key to view the detail, and then press the **Delete** soft key.

**5.**

## Advanced Phone Features

---

This chapter provides operating instructions for the advanced features of all phone. Topics include:

- [E911](#)
- [USB Recording](#)
- [Intercom](#)
- [Multicast Paging](#)
- [Privacy Mode](#)
- [Hot Desking](#)
- [Common Area Phone](#)
- [Branch Office Resiliency](#)
- [Better Together over Ethernet](#)

If you require additional information or assistance with your new phone, contact your system administrator.

### E911

E911 (Enhanced 911) is a location technology that enables the called party to identify the geographical location of the calling party. For example, if a caller makes an emergency call to E911, the feature extracts the caller's information for the police department to immediately identify the caller's location.


### E911 Location Tip

E911 location tip will appear to prompt the user that the location of the phone is not set. E911 location tip feature is configurable via web user interface only.


**To configure E911 location tip via web user interface:**

1. Click on **Features->General information**.

2. Select desired value from the pull-down list of **E911 Location Tip**.

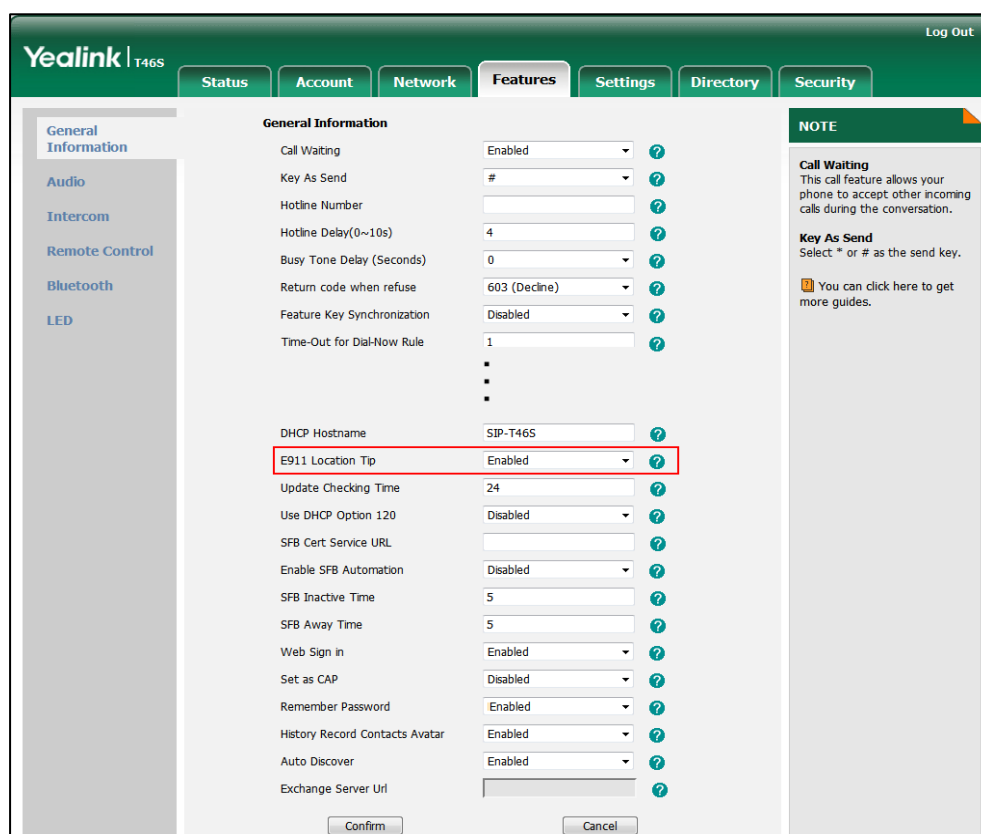

- If you select **Enabled**:  
When the location is not set, the LCD screen will display a location tip.
  - If you select **Disabled**:  
When the location is not set, the LCD screen will not display a location tip.
3. Click **Confirm** to accept the change.  
When E911 location tip feature is enabled and the location of the phone is not set, the LCD screen is shown as below after login:

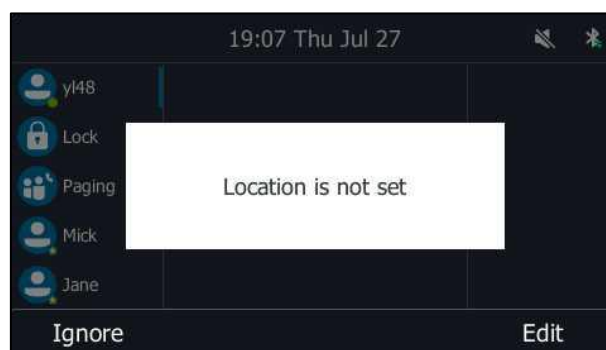

You can do one of the following:

- Press the **Ignore** soft key.


When the parameter **Location Required** is set to **Yes** on the Skype for Business server, the phone will return to the idle screen.

When the parameter **Location Required** is set to **Disclaimer** on the Skype for Business server, the phone will display the disclaimer configured on the Skype for Business server.

- Press the **Edit** soft key.

The phone will enter the **Location Edit** screen.

#### Note


If you ignore the location tip, an  icon will appear on the **Status** menu, indicating that the location is not set.



## Adding the Location Information

The location of the phone for emergency calls can be configured on the phone or on the Skype for Business server.

**To add the location information manually via phone user interface:**

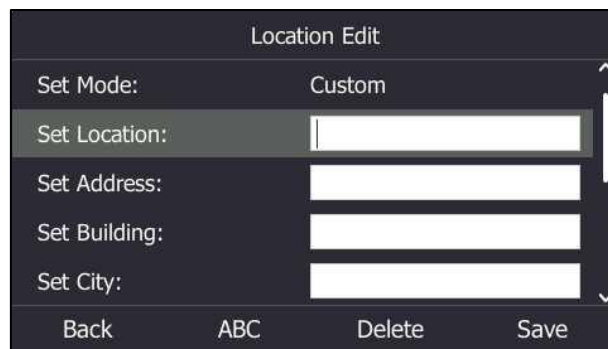1. Press **Menu->Basic->Location**.
2. Press the **Edit** soft key.



3. Enter the location name in the **Set Location** field.
4. Enter the address name in the **Set Address** field.
5. Enter the building name in the **Set Building** field.
6. Enter the city name in the **Set City** field.
7. Enter the state name in the **Set State** field.
8. Enter the postcode in the **Set Postcode** field.
9. Press  or  , or the **Switch** soft key to select the country from the **Set Country** field.
10. Press the **Save** soft key to accept the change.

Location is configurable via web user interface at the path **Settings->Location**.



#### Note


T46S Skype for Business phone has 24 country locations for you to choose. The country names are displayed in alphabetical order.

## Selecting the Default Location

If your system administrator has configured a location on the Skype for Business server and you add a location manually on the phone, you can select one of them to be the default location.

### To select the default location via phone user interface:

1. Press **Menu->Basic->Location**.
2. Press the **Edit** soft key.
3. Press ,  or the **Switch** soft key to select the desired value in the **Set Mode** field.
  - If you select **Default**.  
The phone's default location will be the one configured on the Skype for Business server.
  - If you select **Custom**.  
The phone's default location will be the one configured on the phone.

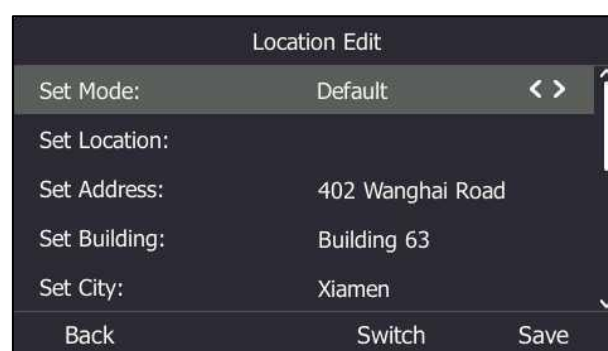

4. Press the **Save** soft key.

## Viewing the Location Information

### To view the location information via phone user interface:

1. Press **Menu->Status->Location**.


## Emergency Call




You can dial emergency numbers for assistance no matter whether you set the location or not. You can dial an Emergency Dial String number or Emergency Dial String Mask number even if the phone is locked. Keypad is available during an emergency call.



**To place an emergency call when the phone is locked:**

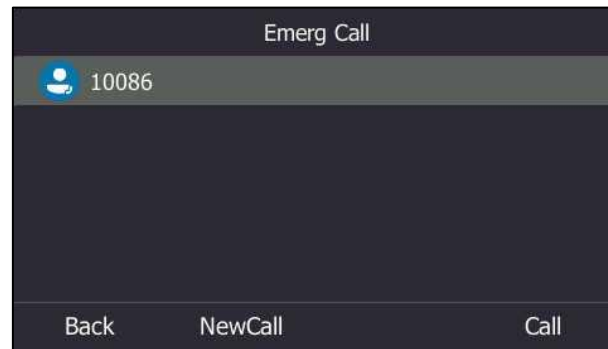1. Press the **Emerg Call** soft key.



2. Press  or  to select the desired emergency number.
3. Press  or the **Call** soft key.

If call forward feature is configured in advance, the call forward feature will be disabled automatically after dialing the emergency number. If the call forward feature is not manually enabled again after the emergency call, it will be enabled automatically after two hours and its previous settings will also be restored.

If the phone status is DND before dialing an emergency number, the phone status will change to available after the emergency call. And the phone status will restore to DND status in two hours. Other statuses will not be affected by the emergency call.

**Note**

Emergency Dial String number and Emergency Dial String Mask number are configurable on the Skype for Business Server only. The system administrator can configure up to 5 emergency numbers. For more information, contact your system administrator.

## USB Recording

The Skype for Business phones support recording. You can record active calls onto a USB flash drive connected to your phone, and the recordings are saved as \*.wav files. You can use USB recording feature only when your system administrator enables this feature.


**Note**

Before USB recording, especially those involving PSTN, it is necessary to know about the rules and restrictions of any governing call-recording in the country where you are. It is also very important to inform all the call parties that you are recording and ask for their consent before recording the conversation.

If you insert a USB flash drive to the phone when the phone is idle, the phone will detect the USB flash drive and display a flashing USB icon. After detecting the USB flash drive, the icon stops flashing and a message will display on the screen:



If you insert a USB flash drive to the phone during a call, a message will pop up to tell you how much time is available for recording. For more information on the available recording time, refer to [Viewing the Storage Space](#) on page 161.

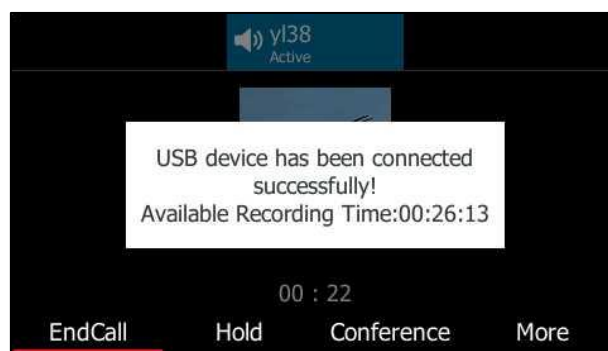

**Note** The size of a single recording file should be less than 2G.

**The Start REC soft key controls the recording function, and is available:**

- When the free space of USB flash drive is sufficient
- When there are one or more calls connected to your phone
- During an active call
- When calls are on hold or muted
- During a consultative transfer
- During a conference call

**The Start REC soft key is not available when:**

- You are placing a new call during a call
- No free space of USB flash drive
- The phone prompts you to answer an incoming call

- You park the call


## Recording a Call

You can record active calls or conferences.

### To record a call:


1. Press **More->Start REC** during a call.

The LCD screen displays a recording icon and recording duration.

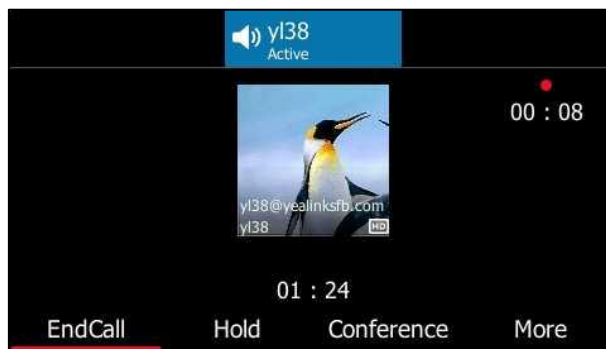

### During the recording, you can do the following:


- Press **More->Pause REC**. Then the pause recording icon appears on the LCD screen and the duration stops counting. Both you and the other party are not recorded.  
Press the **Resume REC** soft key to continue recording.
- Press **More->Stop REC**. Recording stops and a message is displayed on the screen:

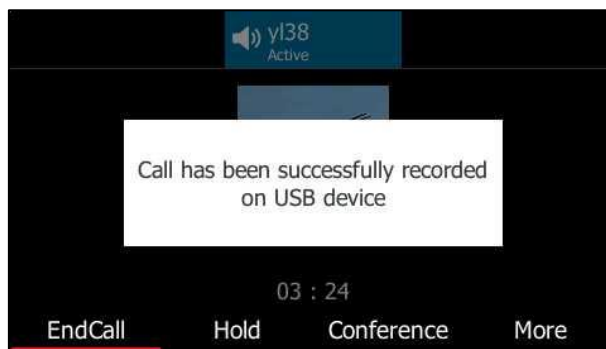

You can press **More->Start REC** to start recording again, the recording will be saved as a new ".wav" file.


- Press the HOLD key or the **Hold** soft key while recording, recording is paused. Then the pause recording icon appears on the LCD screen and the duration stops counting. Both you and the other party are not recorded.  
Press the **Resume** soft key to resume the call, the recording is continued.
- Press the MUTE key while recording, the muted party is not recorded.
- If there is insufficient free space (30 minutes left) on the USB flash drive during recording, a

message will display on the screen:

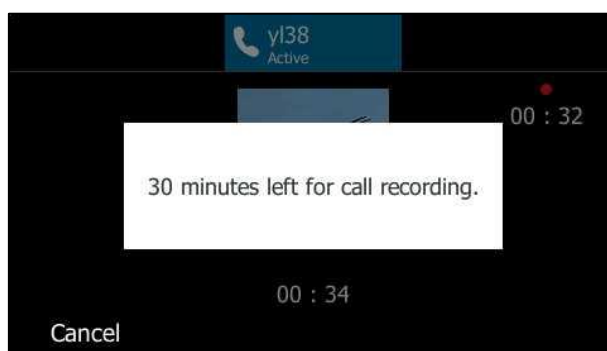

Press the **Cancel** soft key to return to the previous screen.

- If there is insufficient free space (10 minutes left) on the USB flash drive during recording, a message will display on the screen:

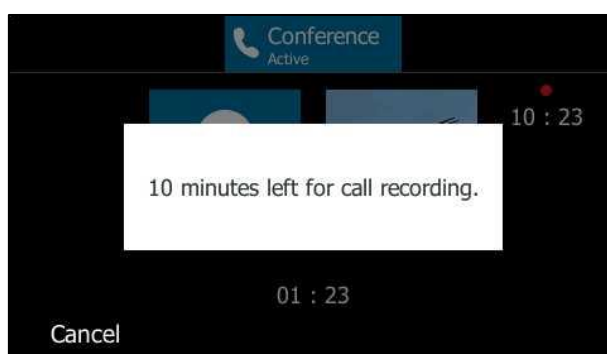

Press the **Cancel** soft key to return to the previous screen.

If no free space on the USB flash drive during recording, recording is stopped and saved on the USB flash drive automatically. The soft keys related to recording disappear. You cannot record a call unless the space of your USB flash drive is released.

## Stop Recording a Call


When you end a call during recording, the recording will be stopped and saved as \*.wav file on the USB flash drive automatically.

### To stop recording :

Do one of the following:

- Press **More->Stop REC.**

The recording icon and recording duration disappears. A message is displayed on the LCD screen:

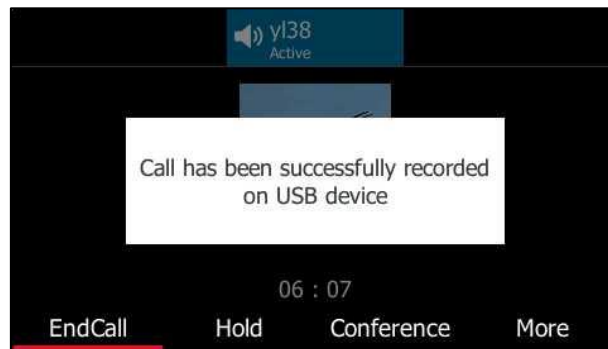

- Press the **EndCall** soft key.

The recording icon and recording duration disappears, and the phone returns to the Idle screen. A message is displayed on the LCD screen:



## Playing Back Recorded Calls

You can play back, browse and delete the recorded files on your phone.


### Note

You can play back the recorded calls on the phone or on a computer using an application capable of playing ".wav" files.


### To playing back recorded calls

1. Press **Menu->Menu USB->Browse Audio**.

The LCD screen shows all recorded files (file name, duration time and file size). The filename consists of the recording date & time and the other party's information (number, name or a conference call).

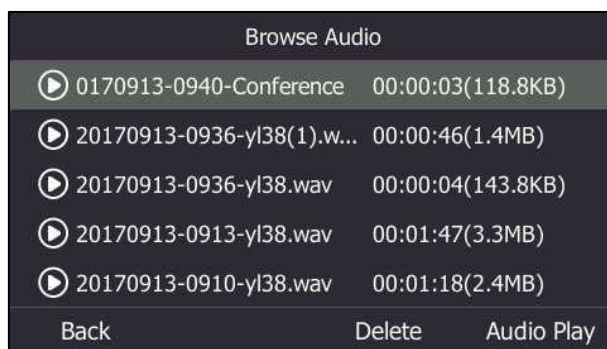

2. Press  or  to select a desired file.
3. Press the **Audio Play** soft key.

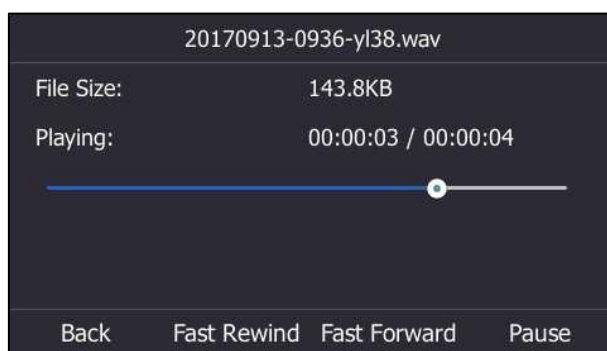



**During the recording playback, you can do the following:**


- Press the Speakerphone key, the HEADSET key, or pick up the handset to alternate among Speakerphone, Headset and Handset modes.
- Press the Volume key to adjust the volume of audio output.
- Press the **Pause** soft key to pause the playback. The **Audio Play** soft key appears on the LCD screen.  
Press the **Audio Play** soft key to continue the playback.
- Press the **Fast Forward** soft key to skip forward the playback. Press once to skip forward 8 seconds.
- Press the **Fast Rewind** soft key to rewind the playback. Press once to rewind 8 seconds.
- Press the **Back** soft key to stop the playback. The phone returns to the Browse Audio screen.

When you receive an incoming call while playing a recording, the recording is paused automatically and the phone rings. If you reject the incoming call or after you end the call, the recording remains paused until you press the **Audio Play** soft key again.

## Deleting the Recorded File

### To delete the recorded calls

1. Press **Menu->Menu USB->Browse Audio**.
2. Press  or  to highlight a desired recording.
3. Press the **Delete** soft key.

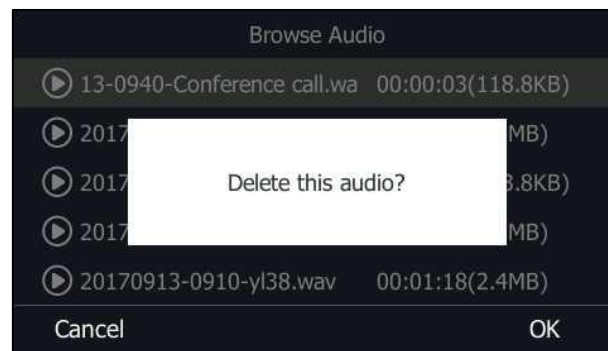

4. Press **OK** to delete.

## Viewing the Storage Space

You can view the storage space (for example, total space, used space, free space) of the USB flash drive on the phone.

### To view the storage space of the USB flash drive:

1. Press **Menu->Menu USB->Storage Space**.

Storage Space	
1. Total:	14.5GB
2. Used:	14.5GB(99.7% used)
3. Free:	50.1MB(0.3% free)
4. Remaining Time:	00:25:23
Back	

## Intercom


Intercom is a useful feature in an office environment to quickly connect with the operator or the secretary.

## Configuring the Intercom

The phone supports automatically answering an incoming intercom call by default. The phone automatically plays a warning tone when it receives an incoming intercom call. In addition, you can enable the phone to mute the microphone when it automatically answers an incoming intercom call. You can also enable the phone to automatically answer an incoming intercom call while there is already an active call on the phone. The active call is then placed on hold.

### Outgoing Intercom

You can enable or disable the phone to use the intercom feature. If Outgoing Intercom is enabled, a line key on the phone will be assigned to be an Intercom key automatically. You can press the Intercom key to enter the intercom list.

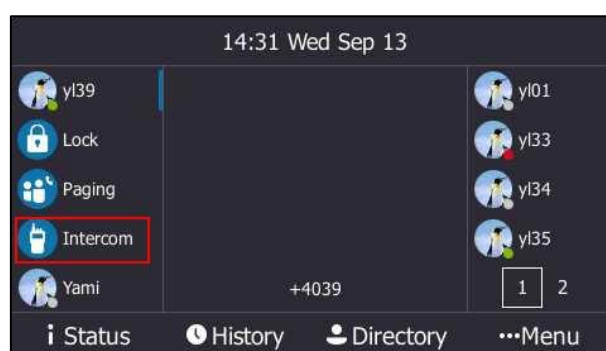

### Intercom Allow

You can enable or disable the phone to answer an incoming intercom call automatically. If Intercom Allow is enabled, the phone will automatically answer an incoming intercom call. If Intercom Allow is disabled, the phone will handle an incoming intercom call like a normal call instead of directly rejecting it. Intercom Allow is enabled by default.

### Intercom Mute

You can mute or unmute the phone's microphone for intercom calls automatically. If Intercom Mute is enabled, the microphone will be muted for intercom calls. If Intercom Mute is disabled, the microphone will work for Intercom calls. Intercom Mute is disabled by default.

### Intercom Tone

You can enable or disable the phone to play a warning tone when receiving an intercom call. If Intercom Tone is enabled, the phone will play a warning tone before answering the intercom call. If intercom Tone is disabled, the phone will automatically answer the intercom call without warning. Intercom Tone is enabled by default.

### Intercom Barge

You can enable or disable the phone to automatically answer an incoming intercom call while there is already an active call on the phone. If Intercom Barge is enabled, the phone will automatically answer the intercom call and place the active call on hold. If Intercom Barge is





disabled, the phone will handle an incoming intercom call like a waiting call. Intercom Barge is disabled by default.

### Note

To enable the phone to receive a new incoming call when it has an active call, make sure that call waiting feature is enabled on the phone in advance. For more information, refer to [Configuring the Call Waiting](#) on page 88.

### To configure the intercom feature:

1. Press **Menu->Features->Intercom**.
2. Press  ,  or **Switch** soft key to select the desired value.

Intercom		
1. Outgoing Intercom:	Off	< >
2. Intercom Allow:	On	< >
3. Intercom Mute:	Off	< >
4. Intercom Tone:	On	< >
5. Intercom Barge:	Off	< >
Back	Switch	Save



3. Press the **Save** soft key.

Intercom features are configurable via web user interface at the path **Features->Intercom**.

## Configuring the Target Extension Number

You need to configure the target extension number for outgoing intercom calls after you enable the intercom feature.

### To configure the target extension number via phone user interface:

1. Do one of the following to enter the intercom list:
  - Press the Intercom key.
  - Press **Menu->Features->Intercom List**.
2. Press  or  to select a desired item.  
The default tag is Empty if it is not configured before.
3. Press the **Option** soft key, and then press the **Edit** soft key.
4. (Optional.) Enter the string that will appear on the intercom list in the **Label** field.

5. Enter the target extension number in the **Value** field.

Edit Intercom	
1. Number:	1
2. Label:	Y136
3. Value:	4036
<div> <span>Back</span> <span>123</span> <span>Delete</span> <span>Save</span> </div>	

6. Press the **Save** soft key to accept the change.
7. Repeat steps 2 to 6, you can add more target extension numbers.

**To delete a target extension number via phone user interface:**

1. Do one of the following to enter the intercom list:
  - Press the Intercom key.
  - Press **Menu->Features->Intercom List**.
2. Press or to select a desired item.
3. Press the **Option** soft key, and then select **Delete** soft key.

The LCD screen prompts "Delete selected item?".

Intercom	
1. Y136	<div> <span>Cancel</span> <span>OK</span> </div>
2. mobile	
3. 111	
4. (Empty)	
5. (Empty)	

4. Press the **OK** soft key to accept the change.



If you want to delete all target extension numbers, you can press the **Delete All** soft key.


Intercom is configurable via web user interface at the path **Features->Intercom**.

## Placing an Intercom Call

**To place an intercom call via phone user interface:**

1. Do one of the following to enter the intercom list:
  - When the phone is idle, press the Intercom key or press **Menu->Features->Intercom List**.

- During a call, press the Intercom key.
- 2. Press  or  to select a desired item, and then press the **Intercom** soft key

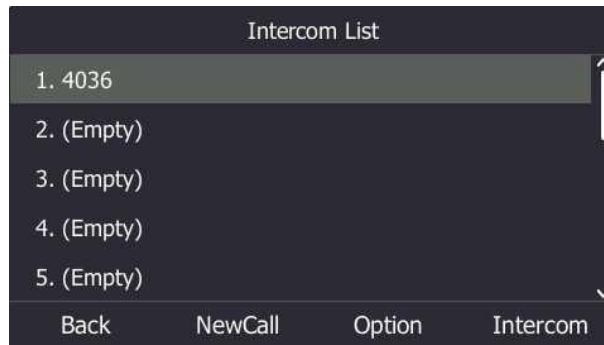

If the contact is not in the intercom list, press the **NewCall** soft key to initiate an intercom call.

The target phone plays a warning tone and answers your intercom call automatically in the hands-free (speakerphone) mode by default.

- 3. Press the **EndCall** soft key to end the intercom call.

## Multicast Paging



You can use multicast paging to quickly and easily broadcast time sensitive announcements to users who are listening to a specific multicast group. You can configure the paging list on the phone, which allows you to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can configure the phone to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

### Note

If G722 codec is used for multicast paging, the LCD screen will display an “HD” icon to indicate that it is providing high definition voice. Check with your system administrator to see if this feature is available on your phone.

## Sending RTP Stream

**To configure paging list via phone user interface:**

1. Press **Menu->Features->Paging List**.
2. Press  or  to select a desired paging group.  
The default tag is Empty if it is not configured before.
3. Press the **Option** soft key, and then press the **Edit** soft key.
4. Enter the multicast IP address and port number (e.g., 224.5.6.20:10008) in the **Address** field.

The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.


1. Number: 1

2. Address: 224.5.6.20:10008

3. Label: Test

Back Save

5. Enter the group name in the **Label** field.
6. Press the **Save** soft key to accept the change.

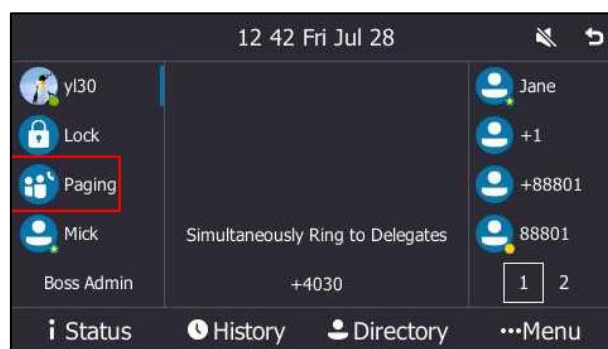

7. Repeat steps 2 to 6, you can add more paging groups.
- If the paging group is configured successfully, a line key is assigned as the Paging key automatically. You can press it to enter the paging list.

#### To delete a paging group via phone user interface:

1. Press the Paging key or press **Menu->Features->Paging List** when the phone is idle.
  2. Press or to select a desired group.
  3. Press the **Option** soft key, and then select **Delete** soft key.
- The LCD screen prompts "Delete selected paging group?".

Paging List

1. Test

2. (Empty)

3. (Empty)

4. (Empty)

5. (Empty)

Delete selected paging group?

Cancel OK

4. Press the **OK** soft key to accept the change.

If you want to delete all paging groups, you can press the **Delete All** soft key.

Paging list is configurable via web user interface at the path **Directory->Multicast IP**.

## Receiving RTP Stream

You can configure the phone to receive a Real Time Transport Protocol (RTP) stream from the pre-configured multicast address(es) without involving SIP signaling. You can specify up to 10 multicast addresses that the phone listens to on the network.

How the phone handles incoming multicast paging calls depends on Paging Barge and Paging Priority Active parameters configured via web user interface.

### Paging Barge

The Paging Barge parameter defines the priority of the voice call in progress. If the priority of an incoming multicast paging call is lower than that of the active call, it will be ignored automatically. If Disabled is selected from the pull-down list of Paging Barge, the voice call in progress will take precedence over all incoming multicast paging calls. Valid values in the Paging Barge field:

- **1 to 10:** Define the priority of the active call, 1 with the highest priority, 10 with the lowest.
- **Disabled:** The voice call in progress will take precedence over all incoming paging calls.

### Paging Priority Active

The Paging Priority Active parameter decides how the phone handles incoming multicast paging calls when there is already a multicast paging call on the phone. If enabled, the phone will ignore incoming multicast paging calls with lower priorities, otherwise, the phone will answer incoming multicast paging calls automatically and place the previous multicast paging call on hold. If disabled, the phone will automatically ignore all incoming multicast paging calls.

### To configure multicast listening addresses via web user interface:

1. Click on **Directory->Multicast IP**.
2. Select the desired value from the pull-down list of **Paging Barge**.
3. Select the desired value from the pull-down list of **Paging Priority Active**.
4. Enter the multicast IP address(es) and port number (e.g., 224.5.6.20:10008) which the phone listens to for incoming RTP multicast in the **Listening Address** field.
5. Enter the label in the **Label** field.

Label will appear on the LCD screen when receiving the multicast RTP stream.

**Yealink T46S** Log Out

Status Account Network Features **Settings** Directory Security

Local Directory  
Multicast IP  
Settings

**Multicast Listening**

Paging Barge: 10  
Paging Priority Active: Enabled

IP Address	Listening Address	Label	priority
1 IP Address	224.5.6.20:10008	Test	1
2 IP Address			2
3 IP Address			3
4 IP Address			4
5 IP Address			5
6 IP Address			6
7 IP Address			7
8 IP Address			8
9 IP Address			9
10 IP Address			10

**NOTE**  
contacts-multicastIP-note  
You can click here to get more guides.

- Click **Confirm** to accept the change.

#### Note

The priorities of listening addresses are predefined: 1 with the highest priority, 10 with the lowest. Multicast listening addresses are configurable via web user interface only.

## Using Multicast Paging

### To send RTP stream via the paging list:

- Do one of the following to enter the paging list.
  - When the phone is idle, press the Paging key or press **Menu->Features->Paging List**.
  - During a call, press the Paging key.
- Press or to select the desired group.

**Paging List**

- 1. Test
- 2. (Empty)
- 3. (Empty)
- 4. (Empty)
- 5. (Empty)

Back Option Paging

- Press or the **Paging** soft key to send RTP.
- You can do the following:
  - Press the **Hold** soft key to place the current multicast RTP session on hold.

The sender's phone places the multicast RTP session on hold and receiver's phone releases the session.

- To resume the held multicast RTP session, press the **Resume** soft key.  
The multicast RTP session is established again.
- Press the **EndCall** soft key to end the multicast RTP session.

#### Note

Multicast RTP is one way only from the sender to the multicast address(es) (receiver). For outgoing RTP multicasts, all other existing calls on the phone will be placed on hold.

## Privacy Mode

Privacy mode allows you to restrict your presence information, so that it is visible only to the contacts in your Skype for Business directory.

#### Note

Microsoft Active Directory includes all Skype for Business users configured by the system administrator. You can add them as your Skype for Business contacts. For more information on how to add Skype for Business contacts, refer to [Adding Skype for Business Contacts](#) on page 59.

When the privacy mode is disabled on the Skype for Business server, you can see the following two options available on the phone/Skype for Business client:

- **Everyone Can See My Status Regardless Of System Settings/I want everyone to be able to see my presence regardless of system settings (override default settings):**  
Everyone in my Microsoft Active Directory Domain can see my presence regardless of system settings.
- **Only Contacts Can See My Status If System Setting/I want the system administrator to decide:** Currently everyone can see my presence but this could be change in the future.


When the privacy mode is enabled on the Skype for Business server, you can see the following two options available on the phone or Skype for Business client:

- **Everyone can see my status/I want everyone to be able to see my presence:** Everyone in my Microsoft Active Directory Domain can see my presence.
- **Only contacts can see my status/I only want people in Contacts to see my presence:**  
Only the contacts in my Skype for Business directory can see my presence. The other contacts in my Microsoft Active Directory Domain see my presence is offline.

## Modifying the Privacy Mode from the Phone


**To modify the privacy mode from the phone:**

1. Press **Menu->Features->Private Mode**.
2. Do one of the following:
  - a) If the privacy mode is disabled on the Skype for Business server, the phone LCD screen displays as below:

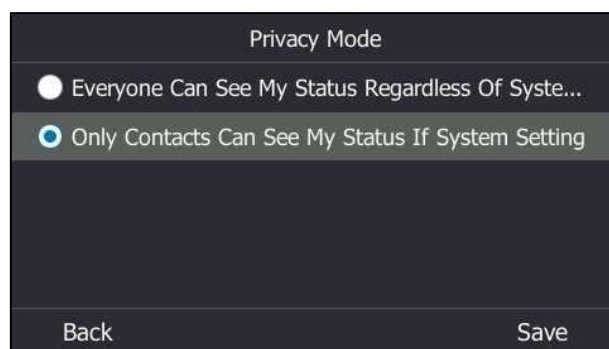

Mark the desired radio box.

- b) If the privacy mode is enabled on the Skype for Business server, the phone LCD screen displays as below:

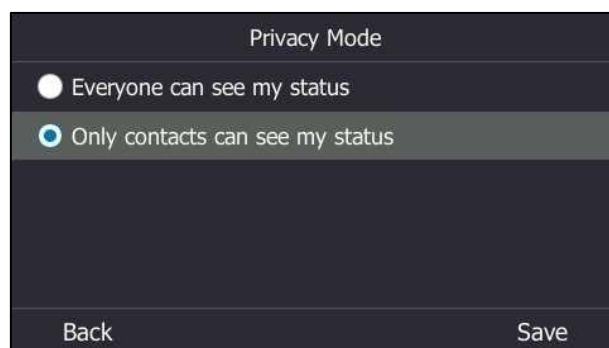


Mark the desired radio box.

3. Press the **Save** soft key to accept the change.


## Modifying the Privacy Mode from the Skype for Business Client

**To modify the privacy mode from the Skype for Business client:**

1. Open Skype for Business client.
2. Click .
3. In the **Skype for Business - Options** dialog box, click **Status**.
4. Do one of the following:




- a) If the privacy mode is disabled on the Skype for Business server:

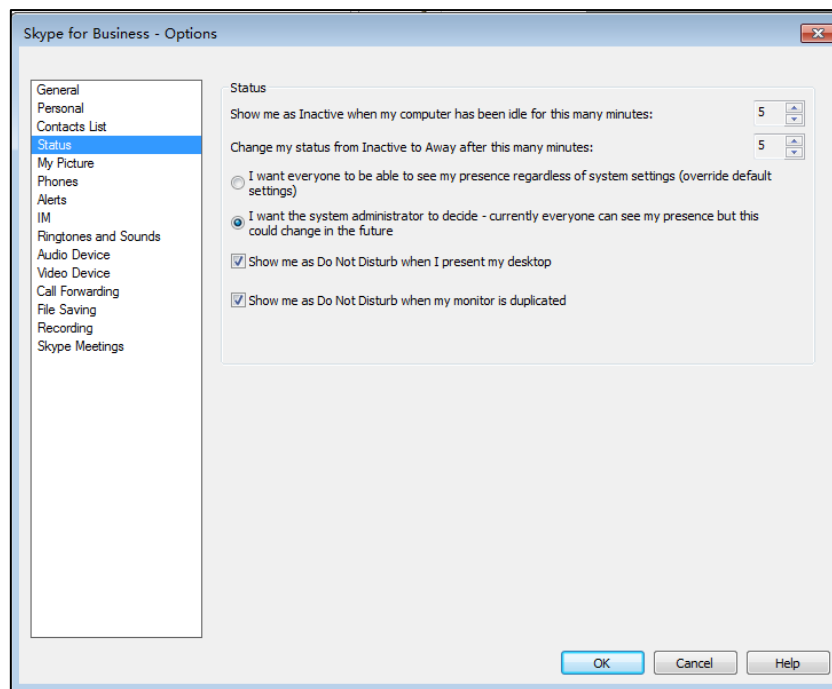

Mark the desired radio box.

- b) If the privacy mode is enabled on the Skype for Business server:

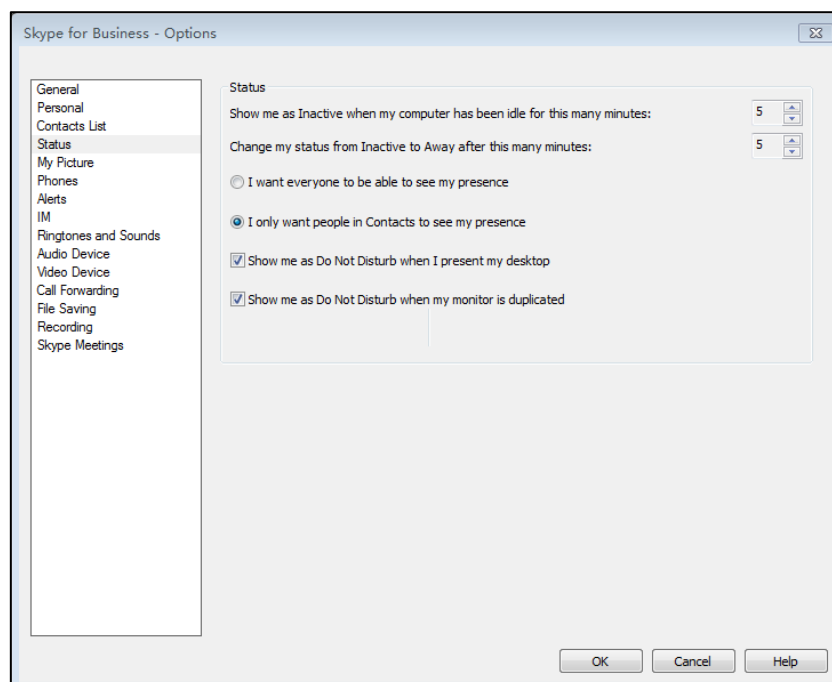

Mark the desired radio box.



5. Click **OK** to accept the change.

## Hot Desking


Hot desking originates from the definition of being the temporary physical occupant of a work station or surface by a particular employee. A primary motivation for hot desking is cost reduction. Hot desking is regularly used in places where not all employees are in the office at the same time, or not in the office for a long time, which means actual personal offices would often be vacant, consuming valuable space and resources.

## Configuring the Hot Desking

**To configure hot desking feature via phone user interface:**

1. Press **Menu->Features->Hot-Desking**.
2. Press  ,  or **Switch** soft key to select **Enabled** or **Disabled** from the **Hot-Desking** field.

This feature is enabled by default.

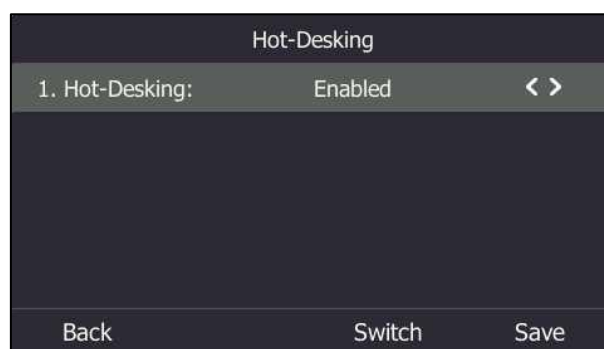

3. Press the **Save** soft key to accept the change.

### Note

You can configure the hot desking feature on your phone only when your system administrator has enabled this feature for your account on the Skype for Business Server.

Hot desking is configurable via web user interface at the path **Features->General Information->Hot Desking Enable**.

## Signing in with the Hot Desking User

Once you enable the hot desking feature on a phone, you can sign out from the host user account and sign in with the hot desking user. The hot desking user has access to own profile and settings.

**To sign in with the hot desking user:**


1. Do one of the following:

- When the phone is locked, press the **User Sign In** soft key.
- When the phone is unlocked, press **Menu->User sign in**.

The LCD screen prompts "Are you sure to start the hot-desking?".


2. Press the **OK** soft key to accept the change.

The Sign In screen displays.

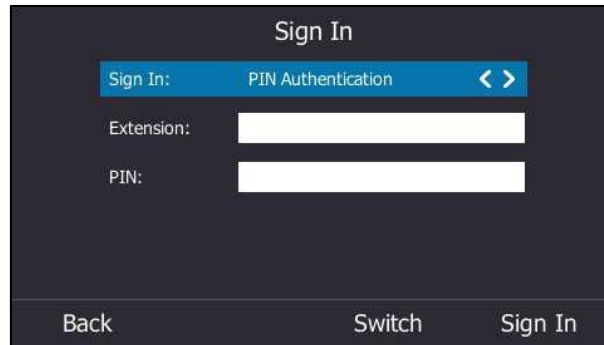

3. Press ◀ or ▶ to select the desired sign-in method, and then enter your login credentials.
4. Press the **Sign In** soft key.

The phone is signed out from host user and signed in with the hot desking user successfully. And the phone displays "It is in the hot-desking mode".

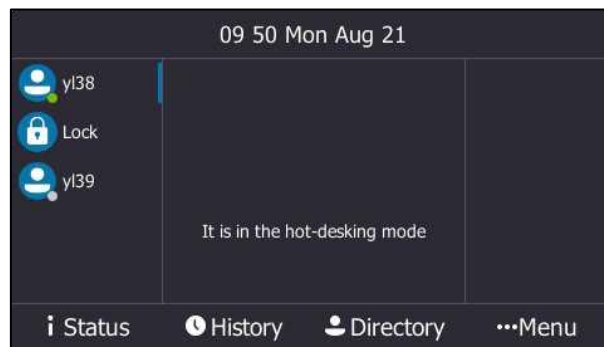

## Signing out from the Hot Desking User

**To sign out from the hot desking user manually:**

1. Do one of the following:
  - When the phone is locked, press the **Sign Out** soft key.
  - When the phone is unlocked, press the **Status** soft key to enter the account status screen, and then select **Sign Out**.

The phone is signed out from hot desking user and signs in automatically with the previously signed in host user account.

**To sign out from the hot desking user automatically:**

1. When the phone has been inactive for a designated time (this time is configured on the Skype for Business server), the phone will sign out from hot desking user automatically.
2. One minute before the phone signs out from hot desking user automatically, the phone will prompt you to sign out immediately or continue using the phone for 5 minutes.



After the phone is signed out from hot desking user, it will sign in automatically with the previously signed in host user account.

## Common Area Phone

Common Area Phones(CAPs) are Skype for Business phones that are not associated with an individual user. Instead of being located in someone's office, CAPs are typically located in building lobbies, cafeterias, employee lounges, conference rooms, and other locations where a large number of people are likely to gather. Unlike other phones on the Skype for Business server, which are typically maintained by using voice policies and dial plans that are assigned to individual users, CAPs do not have individual users assigned to them.

This chapter explains how to use the CAP. Topics include:



- [Configuring a Common Area Phone](#)
- [Signing into a Common Area Phone Account](#)
- [Signing Out of a CAP Account](#)


## Configuring a Common Area Phone

You can configure an individual phone to be a Common Area Phone.

**To configure a phone to be a Common Area Phone via phone user interface:**

1. Press **Menu->Advanced** (default password: admin)->**Common Area Phone**.

2. Press ,  or the **Switch** soft key to select **Enabled** from the **Set as CAP** field.

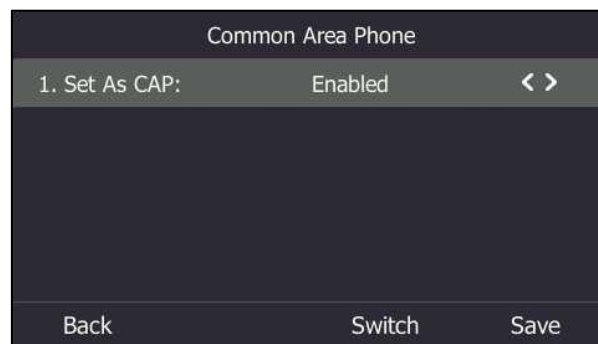

3. Press the **Save** soft key.

This configuration will take effect after a reboot.

## Signing into a Common Area Phone Account


You can use the following five sign-in methods to sign into a CAP.

- **PIN Authentication**
- **User Sign-in**
- **Web Sign-in**
- **Sign in via PC**
- **CAP Provisioning**

For more information on the first four sign-in methods, refer to [Signing into Skype for Business](#).

For more information on CAP Provisioning sign-in methods, refer to [CAP Provisioning Sign-in Method](#) on page 176.

After you sign into a CAP account, the idle screen is shown as below:

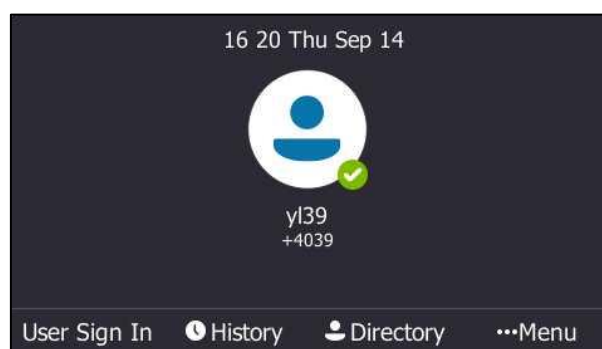

Users can sign into their own Skype for Business account to use their own user profile settings by pressing the User Sign In. For more information, refer to [Signing in with the Hot Desking User](#) on page 172.

**Note**


Some features on the CAP are unavailable compared with individual phone. Contact your system administrator for more information.

## CAP Provisioning Sign-in Method


If you are a technician who is given permission to provision CAP accounts. You can use a web browser to provision numerous CAPs quickly.

**To sign into a CAP using the CAP Provisioning method via phone user interface:**

1. Press the **Sign In** soft key.
2. Press  ,  or the **Switch** soft key to select **CAP Provisioning**.

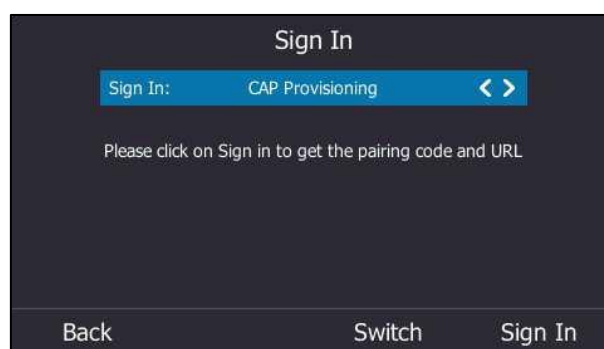


3. Press the **Sign In** soft key.  
The screen will show the pairing code and URL.

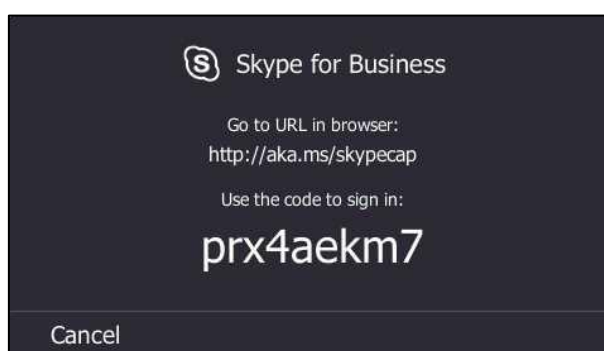

4. On your computer, enter the URL into your web browser.

5. Enter your Online account (make sure it has permission to provision CAP accounts) and password.

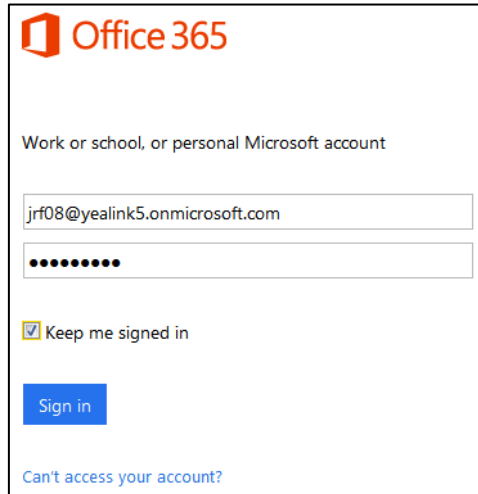


Office 365

Work or school, or personal Microsoft account

☒ Keep me signed in

[Can't access your account?](#)

6. (Optional) Check the **Keep me signed in** checkbox, so that you don't need to enter a password next time.
7. Click **Sign in**.
8. Search for the Online account you want to provision, and then click **Search**.  
The entry matches the characters entered will appear.

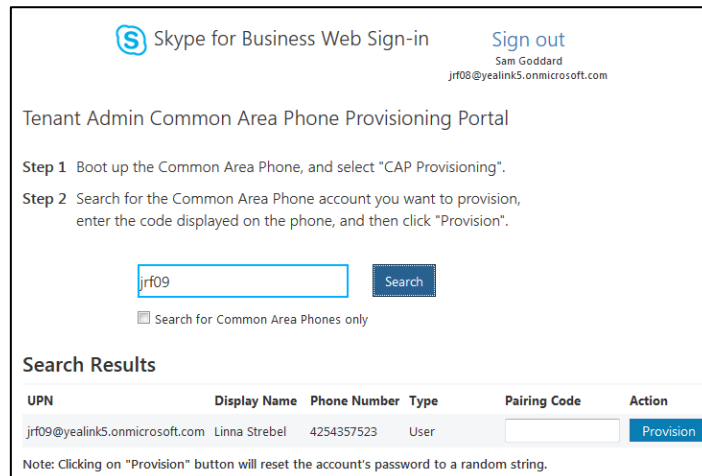

Skype for Business Web Sign-in Sign out  
Sam Goddard  
jrf08@yealink5.onmicrosoft.com

Tenant Admin Common Area Phone Provisioning Portal

**Step 1** Boot up the Common Area Phone, and select "CAP Provisioning".

**Step 2** Search for the Common Area Phone account you want to provision, enter the code displayed on the phone, and then click "Provision".


☐ Search for Common Area Phones only

**Search Results**

UPN	Display Name	Phone Number	Type	Pairing Code	Action
jrf09@yealink5.onmicrosoft.com	Linna Strebel	4254357523	User	<input type="text"/>	<input type="button" value="Provision"/>

Note: Clicking on "Provision" button will reset the account's password to a random string.

9. Enter the pairing code generated on the phone (e.g., prx4aekm7) into the web browser.

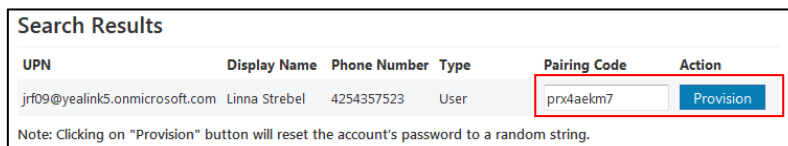

**Search Results**

UPN	Display Name	Phone Number	Type	Pairing Code	Action
jrf09@yealink5.onmicrosoft.com	Linna Strebel	4254357523	User	prx4aekm7	<input type="button" value="Provision"/>

Note: Clicking on "Provision" button will reset the account's password to a random string.


10. Click **Provision**.

The phone will sign into this CAP account automatically.

**Note** You can also sign into an individual phone using a CAP account via the PIN Authentication method. The phone will act as a CAP too. Contact your system administrator for the CAP account.

## Signing Out of a CAP Account

**To sign out of a CAP account:**

1. Press **Menu->Advanced** (default password: admin or the lock PIN)->**CAP Sign Out**.
2. Press  or the **CAP sign out** soft key.



The current CAP account will sign out.

## Branch Office Resiliency


If you sign into the phone using On-Premises account, you can use branch office resiliency feature. Current Online environment does not support this feature.

Branch office resiliency is critical for multi-site deployments of Skype for Business where the control servers are located at a central site or data center. It allows branch site users to continue to have Enterprise Voice service and voicemail (if voicemail rerouting settings are configured) when the branch site loses the connection to the central site.

When the WAN connection between the branch site and central site is unavailable, the phone goes into resiliency mode:

- Branch site user on the phone stays signed in with an indication of "Limited service due to outage" and "Limit functionality" on the LCD screen.
- Call between branch site users is established successfully with 2-way audio.
- Conference between branch site users can be established successfully.
- The call history cannot get modified. (Already downloaded call log entries will not be deleted).
- Calls can be placed from the call history on the phone.



- Contact list is unavailable but you can search for a contact on the phone.
- Presence icon on the phone LCD screen is displayed as  (Unknown).
- User is not able to change his presence status manually.
- User is not able to use calendar feature.
- User is not able to receive the voicemail as exchange is unreachable.
- Calls between the branch office phones can be transferred to another branch site user.
- Call forward settings cannot be changed.

When the WAN connection between the branch site and central site becomes available, the phone comes out of resiliency mode automatically. Notification of resiliency is automatically dismissed, and you can use phone features as normal.

**Note**

For more information on branch office resiliency, contact your system administrator.

## Better Together over Ethernet

Better Together over Ethernet (BToE) feature on Yealink T46S Skype for Business phones enables you to control call activity from your phones and your computer using your Skype for Business client. You can also use BToE to sign into your phone using your Skype for Business credentials. In order to use BToE, you need to download and install the Yealink BToE Connector application.

This chapter explains how to download and install the Yealink BToE Connector application, and how to enable and use BToE feature. Topics include:

- [Getting Started with Better Together over Ethernet](#)
- [Installing the Yealink Better Together over Ethernet Connector](#)
- [Enabling Better Together over Ethernet](#)
- [Using Better Together over Ethernet](#)
- [Disabling BToE on Your Phone](#)
- [Exiting BToE on Your Computer](#)
- [Uninstalling the Yealink BToE Connector](#)

If you require additional information or assistance, contact your system administrator.

## Getting Started with Better Together over Ethernet

To enable and use BToE, you need to ensure the following requirements are available on your PC:

- Skype for Business client
- A registered Skype for Business user (Obtain Skype for Business credentials from your system administrator)

- Running Windows Vista or later
- Administrator privileges are needed to install the Yealink BToE Connector

## Installing the Yealink Better Together over Ethernet Connector

The Yealink BToE Connector enables you to use BToE feature on your Skype for Business client and T46S Skype for Business phone. You need to download, install, and start the Yealink BToE Connector application before enabling BToE and pairing your phone with the Skype for Business client. This section shows you how to download and install the Yealink BToE Connector application on your PC.


Ask the Yealink FAE or reseller for the BToE Connector application, or download it online:

<http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.


### To install the Yealink BToE Connector on your PC:

1. Unzip the downloaded file.
2. Double click the installation application **Yealink BToE Connector for Lync.msi**.


A User Account Control dialog is displayed as below:

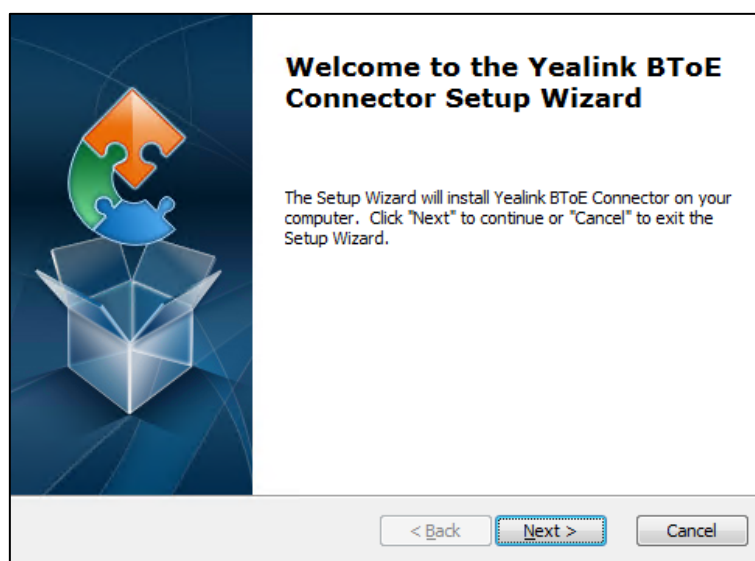

3. Click **Next** to continue.

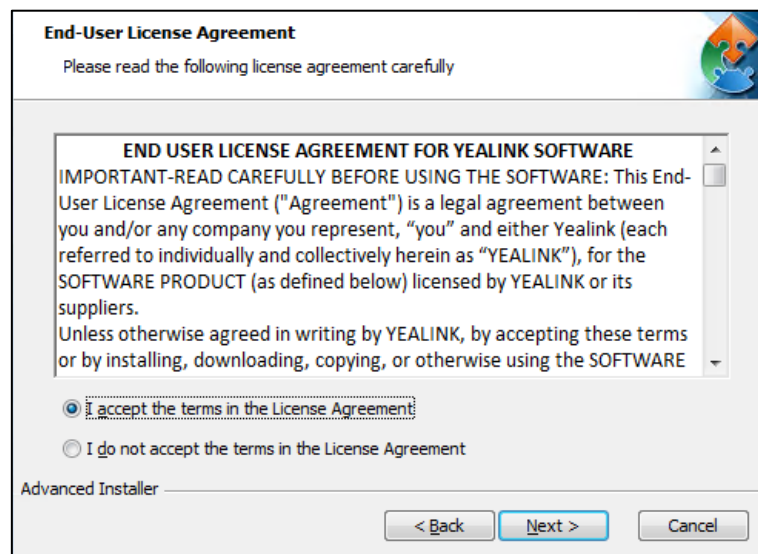


4. Mark the radio box of the **I accept the terms in the License Agreement** field, and then click **Next** to continue.

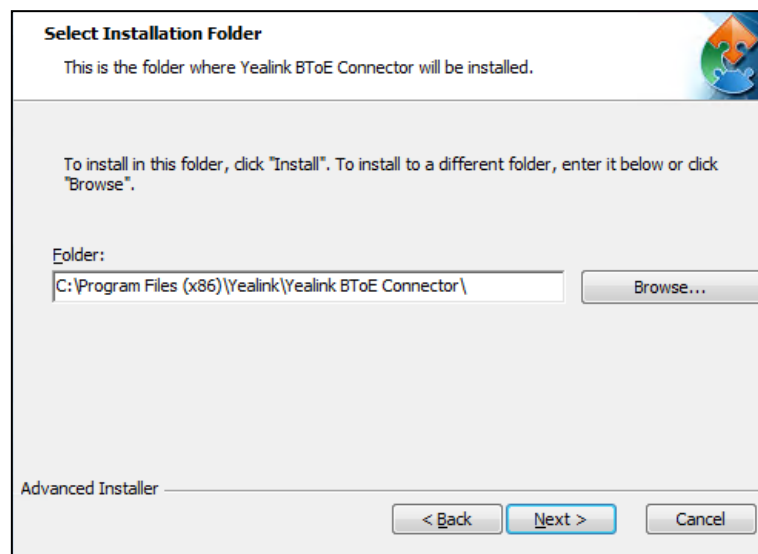


5. Click **Browse...** to select an installation folder and click **Install** to begin the installation.  
By default, the Yealink BToE Connector application is installed in the directory C:\Program Files\Yealink\Yealink BToE Connector\.

6. Click **Next** to continue.

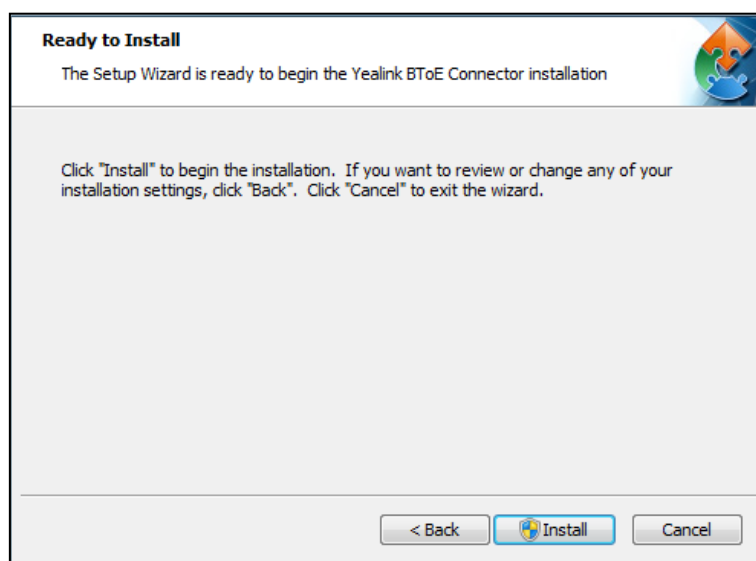


7. Click **Install**.

A dialog is displayed as below during installation:

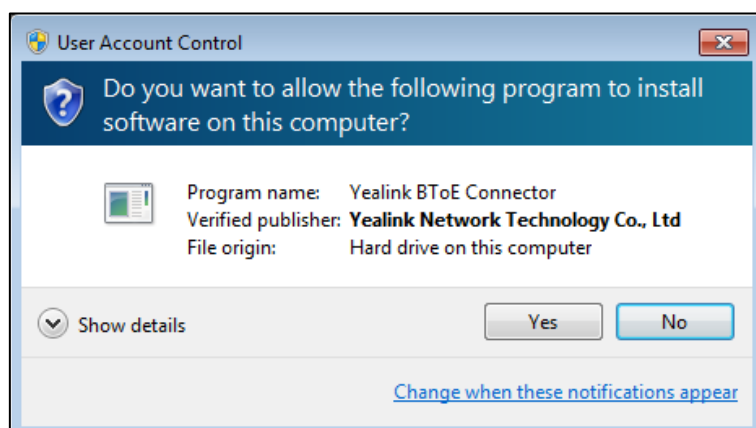


8. Click **Yes**.

The installation may take several minutes. A status bar showing the Yealink BToE Connector installation's progress is displayed as below:

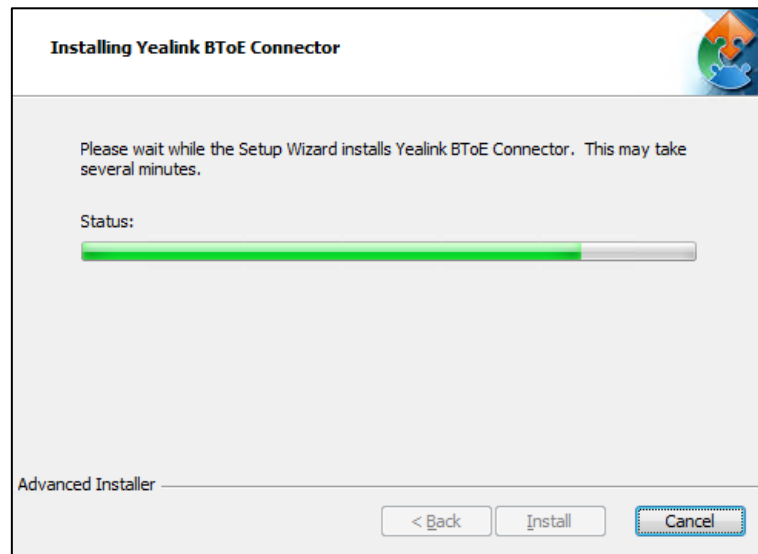


After the software has completed installing, a dialog is displayed as below:

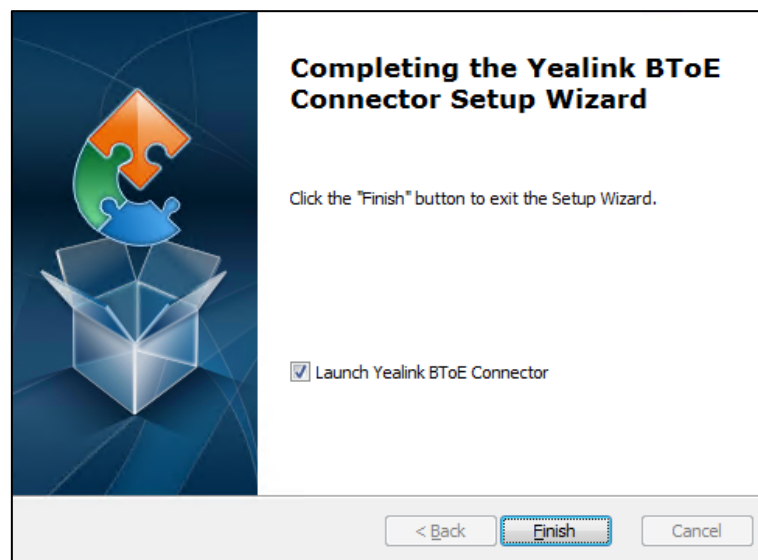


The checkbox of **Launch Yealink BToE Connector** is checked by default, as shown above. If the checkbox of **Launch Yealink BToE Connector** is not checked, you need to start the Yealink BToE Connector manually.


9. Click **Finish**.

### To set up the Yealink BToE connector:

Right-click  in the system tray, you can do the following:

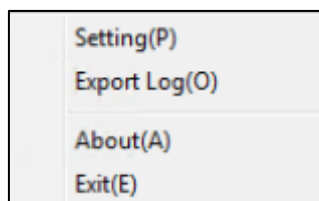

- Click **Settings(P)**.

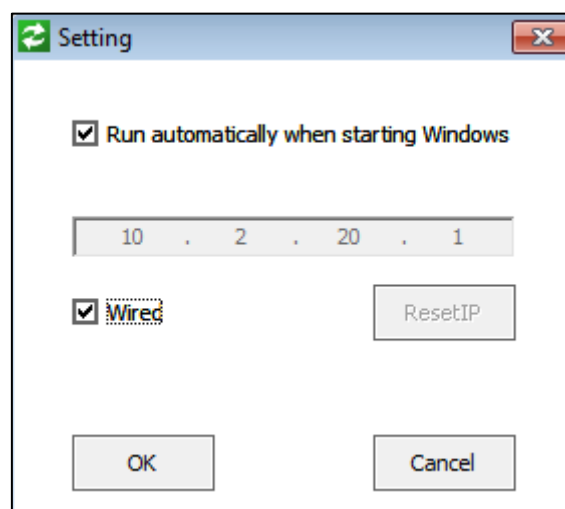

The **Run automatically when starting Windows** checkbox and **Wired** checkbox are checked by default.

If you uncheck the **Wired** checkbox, you can click **ResetIP** to clear the current IP address, and then enter the IP address of your phone manually.

- Click **Export Log(C)**, you can export the log file of Yealink BToE Connector, and then save the file to your local system.
- Click **About(A)**, you can view the informaion of Yealink BToE Connector.
- Click **Exit(E)**, you can close the software.

## Enabling Better Together over Ethernet

You need to pair your phone with your Skype for Business client to enable BToE. This section provides information on how to pair your phone with the Skype for Business client.

### Paired Status

Before you pair your phone with the Skype for Business client, you need to be familiar with the following paired status:


- **Unpaired:** Your phone and your Skype for Business client are not paired.

- **Paired (Sign Out):** Your phone and your Skype for Business client are paired but failing to sign in. The reason may be that the user signing on your phone differs from the one signing on the Skype for Business client, or there is no user signing on your phone.
- **Paired (Sign In):** Your phone and your Skype for Business client are paired and sign in successfully. This means the Skype for Business user signing on the phone is the same as the one signing on the Skype for Business client.

You can view the paired status via phone user interface or PC.

**To view the paired status via phone user interface:**

1. Press **Menu->Features->BToE**.
2. View the BToE paired status in the **BToE Pairing Status** field.

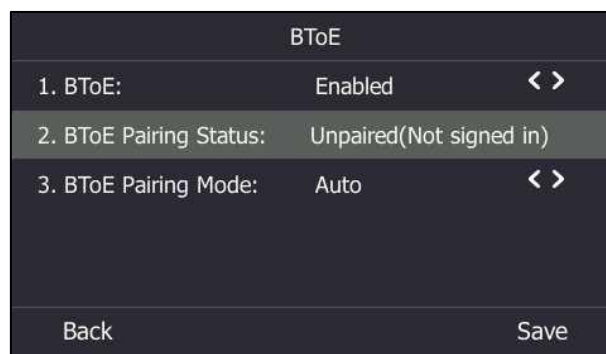

**To view the paired status on PC:**

1. Hover your mouse over the BToE icon in the system tray to view the BToE paired.

## Pairing Your Phone with Your Computer

There are two BToE Pairing modes on the phone. If **BToE Pairing Mode** is **Auto**, your phone will pair with your computer directly without a pairing code. If **BToE Pairing Mode** is **Manual**, You need to use a pairing code generated by your phone to manually pair your phone with your computer.

**To configure BToE feature via phone user interface:**

1. Press **Menu->Features->BToE**.
2. Press ◀ or ▶, or the **Switch** soft key to select **Enabled** from the **BToE** field.
3. Press ◀ or ▶, or the **Switch** soft key to select the desired value from the **BToE Pairing Mode** field.

The default value is **Auto**.

BToE		
1. BToE:	Enabled	< >
2. BToE Pairing Status:	Unpaired(Not signed in)	
3. BToE Pairing Mode:	Auto	< >
Back	Switch	Save

4. Press the **Save** soft key to accept the change.

Ensure that the Yealink BToE Connector application is running on your PC. To pair your phone with your Skype for Business client, do one of the following on your PC:


- a) **Connect an Ethernet cable from your computer to the PC port on your phone (network of the PC will be provided by the PC port of the phone).**

1. As the checkbox of **Wired** is checked by default, the IP address of your phone is automatically filled.


- If **BToE Pairing Mode** is **Auto**, your phone will pair with Skype for Business client directly.



- If **BToE Pairing Mode** is **Manual**, a six-digit pairing code displays. You should enter the six-digit pairing code shown on the phone into the notification on your computer.

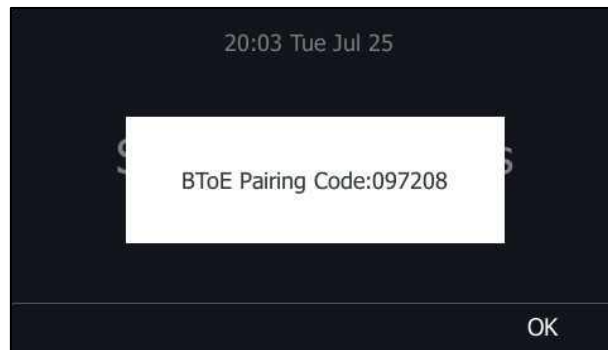


(A six-digit pairing code displays on your phone)

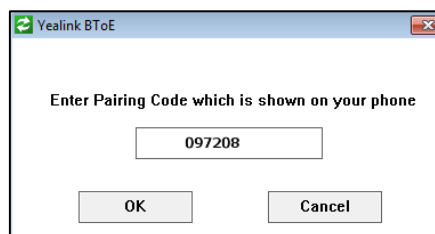

(Enter the pairing code shown on the phone into the notification on your computer)

**b) If your PC is not connected to the PC port on your phone using an Ethernet cable, do the following:**

1. Uncheck the **Wired** checkbox.
2. Enter the IP address of the phone that you want to pair.
3. Click **OK**.

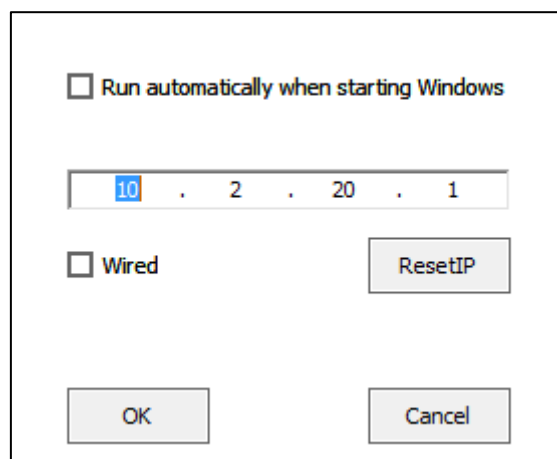

- If **BToE Pairing Mode** is **Auto**, your phone will pair with Skype for Business client directly.
- If **BToE Pairing Mode** is **Manual**, a six-digit pairing code displays. You should

enter the six-digit pairing code shown on the phone into the notification on your computer.

BToE is configurable via web user interface at the path: **Settings->BToE**.


## Signing in via PC


After you carry out the above steps, the computer and phone are paired. However if the phone and Skype for Business client are signed into with different user accounts, the BToE is not activated.

To activate the BToE, you can sign into the phone via your computer.

### To sign into the phone via PC:

1. When your phone and your computer are paired, but your phone is not signed in, a dialog box is displayed on your computer asking for your Skype for Business login credentials. If the dialog box does not display on your computer, select **Sign In** on your phone and then select **Sign in via PC**.

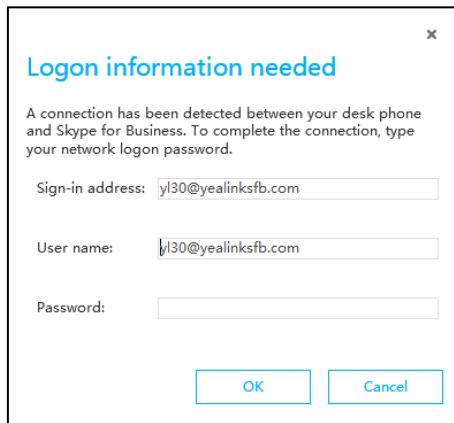

2. Enter your login credentials into the dialog displayed on your computer, click **OK**.  
The phone will sign into the same user account as the Skype for business client.  
When the same user account is signed into your phone and your Skype for Business client, your computer and phone are paired, and BToE is activated. The paired status changes to Paired (Sign In) and the BToE icon changes to  .


## Setting Your Phone as Your Primary Audio Device

Before you begin using the BToE feature, you need to ensure that your Skype for Business phone is set as your primary audio device in your Skype for Business client.

### To set your phone as your primary audio device

1. In your Skype for Business client, click the audio device icon.

2. Select your phone as your primary device, as shown next.

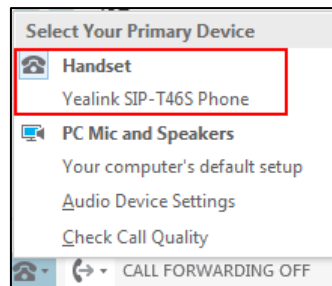

#### Note

If **Yealink SIP-T46S Phone** is not selected as audio device, you will not be able to use BToE feature (for example, calls made on the Skype for Business client will not be displayed on the phone).


## Using Better Together over Ethernet

This section provides information on how to use BToE on your phone and the Skype for Business client.

BToE enables you to call Skype for Business contacts using your Skype for Business client while providing you with quality audio through your phone. After BToE is enabled, you can answer, place, hold and resume calls with your Skype for Business contacts on your phone and the Skype for Business client on your PC simultaneously. What's more, your phone will be locked once paired PC is locked or in sleep mode.

### Placing BToE Calls

**Do one of the following:**


- Select a contact or enter the phone number, and then press the **Call** soft key on your phone.
- Hover the mouse over the avatar of the contact, and then click  in your Skype for Business client.

Your phone and the client are in the calling state.

### Answering BToE Calls

When you receive an incoming call, the incoming call information is displayed on your phone and your Skype for Business client.




**Do one of the following:**

- Press the **Answer** soft key on your phone.
- Click  in your Skype for Business client.

The incoming call is answered both on the phone and the Skype for Business client. The established call uses the phone as audio device by default.

## Pausing BToE Calls




**Do one of the following:**

- Press the **Hold** soft key or press  on your phone.
- Click  to display the control panel, and then click  in your Skype for Business client.

The call is placed on hold on your phone and your Skype for Business client.

## Resuming BToE Calls



**Do one of the following:**

- Press the **Resume** soft key or press  on your phone.
- Click  to display the control panel, and then click  in your Skype for Business client.

The call is resumed on your phone and your Skype for Business client.

## Moving Call Audio between Your Phone and Computer



During an active Skype for Business call, you can move the call audio from your phone to your computer or from your computer to your phone. Do the following:

1. Click  to display the control panel, and then click  in your Skype for Business client.
2. Click the desired audio device.
  - Click **PC MIC and Speakers** to move the call audio from your phone to your computer.  
The call on the phone will be released. The Skype for Business client uses the selected audio device to continue the call.
  - Click **Handset** to move the call audio from your computer to your phone.


## Using BToE to Lock and Unlock Your Phone

When your phone is paired with your computer and phone lock is enabled, you can lock and unlock your phone automatically when you lock or unlock your computer by default.

**To configure phone lock with PC via phone user interface:**

1. Press **Menu->Basic->Phone Lock->Phone Lock with PC**.
2. Press  or , or the **Switch** soft key to select **Enabled** from the **Phone Lock with PC** field.

This feature is enabled by default.

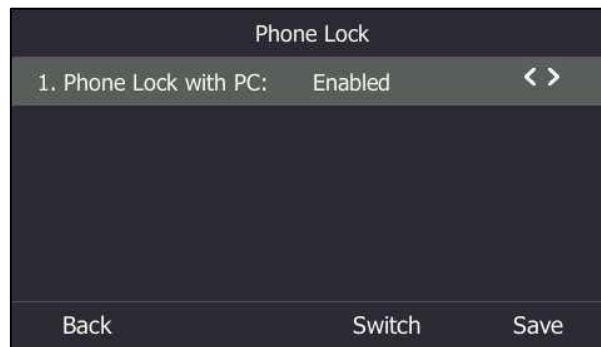

3. Press the **Save** soft key.

**Make sure the BToE status is Paired (Sign In) and the phone lock with PC feature is enabled:**

To lock you phone	To unlock you phone
The paired PC gets locked.	The paired PC gets unlocked.
The paired PC enters sleep mode.	The paired PC wakes up and is not locked.
The paired PC starts the screen saver.	The paired PC stops the screen saver and is not locked.
The account status of the Skype for Business client changes to inactive.	The account status of the Skype for Business client changes from inactive to active.
BToE status changes from <b>Paired (Sign In)</b> to <b>Paired (Sign Out)</b> or <b>Unpaired</b> .	BToE status changes from <b>Paired (Sign Out)</b> or <b>Unpaired</b> to <b>Paired (Sign In)</b> .

## Disabling BToE on Your Phone

You can disable the BToE feature on your phone and unpair your phone from the computer. When you disable BToE, you can no longer use BToE functions.


**Do one of the following:**

- Disconnect the Ethernet cable from the PC port on your phone.
- Press **Menu-> Features->BToE** on your phone, select **Disabled** from the **BToE** field. Press the **Save** soft key to accept the change.

## Exiting BToE on Your Computer

You can exit the Yealink BToE Connector at any time. When you exit the application, you can no longer use the BToE functions on your phone and computer.

### To exit BToE on your computer:


1. Right-click BToE icon (  ) in the system tray and click **Exit(E)**.

## Uninstalling the Yealink BToE Connector

### To uninstall the Yealink BToE connector:

1. Click the **Start** button .
2. Click **All Programs->Yealink BToE Connector->Uninstall**.

A dialog box asking if you're sure you want to uninstall this product is displayed.

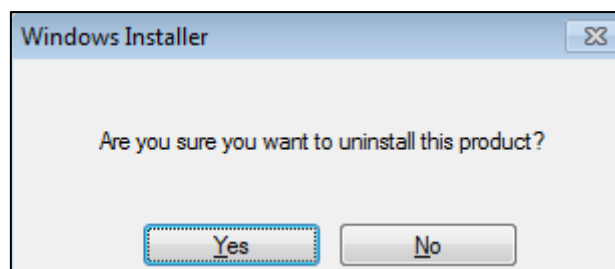

3. Click **Yes** to uninstall the Yealink BToE connector.

A dialog box showing the progress of the application uninstall is displayed.

## Using Optional Accessories with Your Phone

This section describes the optional accessories that you can use to extend your phone's capabilities. You can do the following:

- Using a Headset
- Using Bluetooth feature
- Using an Expansion Module

The following items are optional accessories for your phone:

- Headset YHS32/YHS33
- Wireless Headset Adapter EHS36
- Bluetooth USB Dongle BT40
- Expansion Module EXP40

You need to purchase them separately if required.

### Note

We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in reduced performance.

## Using a Headset

You can connect an analog or USB headset to your phone and use the headset to place and answer calls. If you want to use the analog headset, you require an optional headset YHS32/YHS33. For more information on how to use your USB headset, see your USB headset documentation from the manufacturer.

You can also pair and connect a Bluetooth headset with your phone. For more information, refer to [Pairing and Connecting the Bluetooth Headset](#) on page 198.

### Note

Your system administrator can disable the headset feature. Check with your system administrator to find out if it is available on your phone.

## Using an Analog Headset

### Connecting a YHS32/YHS33 Headset

#### To connect a YHS32/YHS33 headset

1. Simply insert the modular connector into the headset port on the back of your phone.

For the information on how to connect headset YHS32/YHS33, see the user guide on the specific headset's support page on [Yealink Technical Support](#).

#### Note

If both a Bluetooth headset and an analog headset are connected, only the Bluetooth headset can be used.

### Activating the Headset Mode

After connecting a headset to your phone, you can activate the headset mode and use headset when answering and placing calls.

#### To activate the headset mode:

1. Press the HEADSET key on the phone.

The HEADSET key LED illuminates solid green.

When you press the line key or the **Answer** soft key to answer an incoming call, the call is connected to your headset automatically. For more information on using the headset to answer a call, refer to [Answering Calls](#) on page 87.

With the handset on-hook, enter the desired number and press the **Call** soft key, the phone will then place a call using the headset automatically. For more information on using the headset to place a call, refer to [Placing Calls](#) on page 84.

### Deactivating the Headset Mode

If you don't want to use a headset when handling calls, you can deactivate the headset mode.

#### To deactivate the headset mode:

1. Press the HEADSET key again on the phone.

The HEADSET key LED goes out.

### Enabling the Headset Prior

You can use headset in priority when receiving or placing calls. This feature is especially useful for permanent or full-time headset users. To use this feature, you need to enable headset prior feature in advance.

#### To enable the headset prior:

1. Click on **Features->General Information**.



2. Select **Enabled** from the pull-down list of **Headset Prior**.

The screenshot shows the Yealink T46S web interface. The 'Features' tab is selected. On the left, a sidebar lists categories: General Information, Audio, Intercom, Remote Control, Bluetooth, and LED. The main area displays a list of features with their current settings. The 'Headset Prior' feature at the bottom is highlighted with a red box and is currently set to 'Disabled'. A 'NOTE' panel on the right provides details for 'Call Waiting' and 'Key As Send'.

Feature	Setting
Call Waiting	Enabled
Key As Send	#
Hotline Number	
Hotline Delay(0~10s)	4
Busy Tone Delay (Seconds)	0
Return code when refuse	603 (Decline)
Feature Key Synchronization	Disabled
Time-Out for Dial-Now Rule	1
Dial Search Delay	1
180 Ring Workaround	Disabled
Save Call Log	Enabled
Suppress DTMF Display	Disabled
Suppress DTMF Display Delay	Disabled
Play Local DTMF Tone	Enabled
DTMF Repetition	3
Multicast Codec	G722
Play Hold Tone	Enabled
Play Hold Tone Delay	30
Allow Mute	Enabled
Dual-Headset	Disabled
Auto-Answer Delay(1~4s)	1
<b>Headset Prior</b>	<b>Disabled</b>

**NOTE**

**Call Waiting**  
This call feature allows your phone to accept other incoming calls during the conversation.

**Key As Send**  
Select \* or # as the send key.

You can click here to get more guides.

3. Click **Confirm**.

#### Note

If headset prior is enabled, the headset mode will not be deactivated until you press the **HEADSET** key again.

If headset prior is disabled, the headset mode can be deactivated by pressing the Speakerphone key or the **HEADSET** key.

## Enabling the Dual Headset

You can use two headsets when dual headset feature is enabled. To use this feature, you must physically connect headsets to the headset jack and handset jack respectively. Once the phone connects to a call, the headset connected to the headset jack will have full-duplex capabilities, while the one connected to the handset jack will only be able to listen.

### To enable dual headset via web user interface:

1. Click on **Features**->**General Information**.
2. Select **Enabled** from the pull-down list of **Dual Headset**.

The screenshot shows the Yealink T46S web interface. The 'Features' tab is selected, and the 'General Information' section is expanded. The 'Dual-Headset' option is highlighted with a red box and is set to 'Enabled'. Other settings include 'Call Waiting' (Enabled), 'Key As Send' (#), 'Hotline Number' (empty), 'Hotline Delay' (4), 'Busy Tone Delay' (0), 'Return code when refuse' (603), 'Feature Key Synchronization' (Disabled), 'Time-Out for Dial-Now Rule' (1), 'Dial Search Delay' (1), '180 Ring Workaround' (Disabled), 'Save Call Log' (Enabled), 'Suppress DTMF Display' (Disabled), 'Suppress DTMF Display Delay' (Disabled), 'Play Local DTMF Tone' (Enabled), 'DTMF Repetition' (3), 'Multicast Codec' (G722), 'Play Hold Tone' (Enabled), 'Play Hold Tone Delay' (30), 'Allow Mute' (Enabled), 'Auto-Answer Delay' (1), and 'Headset Prior' (Disabled). A 'NOTE' section on the right explains 'Call Waiting' and 'Key As Send'.

3. Click **Confirm**.

## Using the Wireless Headset Adapter EHS36

EHS36 provides the technical interface between your phone and an EHS-compatible wireless headset, such as Sennheiser/Jabra (GN Netcom) or Plantronics headset.

For more information on how to connect EHS36, see the EHS36 User Guide on the wireless headset adapter's support page on [Yealink Technical Support](#).

After the EHS36 and your headset are connected successfully, you can use the control on your headset to handle calls. For more information on how to use your headset, see your headset documentation from the manufacturer.

## Using Bluetooth Feature

The T46S Skype for Business phone supports Bluetooth. Bluetooth enables low-bandwidth wireless connections within a range of 10 meters (32 feet). The best performance is in the 1 to 2 meters (3 to 6 feet) range. To use Bluetooth feature, you require a Bluetooth USB dongle BT40 to activate the Bluetooth mode.

Bluetooth mode is configurable via web user interface at the path **Features**->**Bluetooth**.

## Connecting the Bluetooth USB Dongle BT40


### To connecting the bluetooth USB dongle BT40:

Insert the USB dongle with "TOP" facing upwards into the USB port on the back of the phone.

For more information on Bluetooth USB dongle BT40, see the user guide on the Bluetooth USB dongle BT40's support page on [Yealink Technical Support](#).

## Activating the Bluetooth Mode

When you insert Bluetooth USB dongle BT40 into the USB port on the back of the phone, the following prompt appears on the LCD screen:

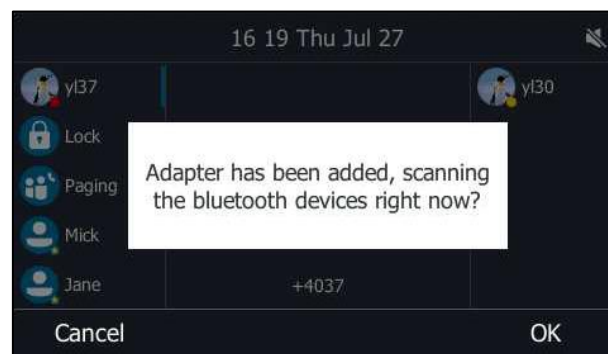

You can press **OK** to activate Bluetooth mode directly.

If you press **Cancel**, you can activate Bluetooth mode when you want to use the Bluetooth feature.

### To activate the Bluetooth mode via phone user interface:

1. Press **Menu->Basic->Bluetooth**.
2. Press or , or the **Switch** soft key to select **On** from the **Bluetooth** field.



3. Press the **Save** soft key to accept the change.

Bluetooth mode is configurable via web user interface at the path **Features->Bluetooth**.


## Pairing and Connecting the Bluetooth Headset

Before you pair a Bluetooth headset, check the indicator on the Bluetooth headset to make sure that the Bluetooth headset is discoverable. For more information, refer to the documentation from the Bluetooth headset manufacturer.


### To pair and connect your Bluetooth headset to your phone:

1. Press **Menu->Basic->Bluetooth**.
2. Press the **Scan** soft key to search the Bluetooth devices.


The LCD screen prompts the following message:

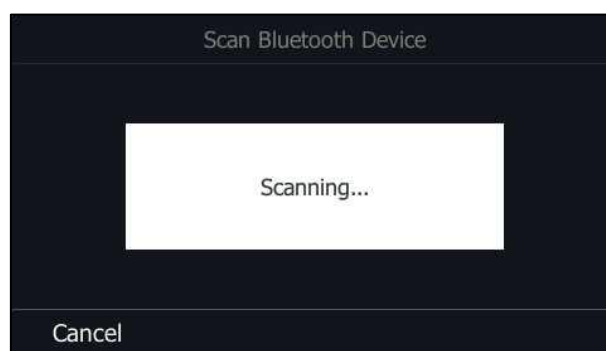

The phone proceeds to scan the local Bluetooth devices. When the phone completes scan, it will display the available Bluetooth devices on the LCD screen.

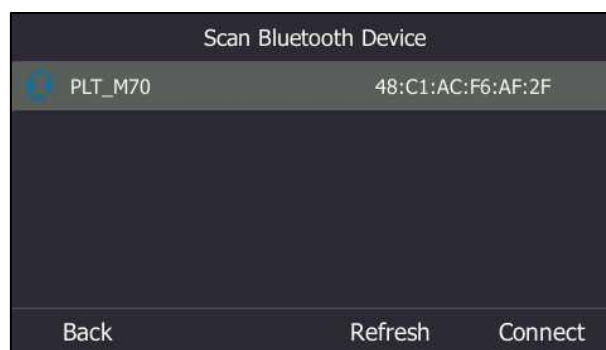

3. Select the desired Bluetooth headset and then press **Connect** soft key.
4. Enter the PIN (e.g., 0000) in the **Password** field.

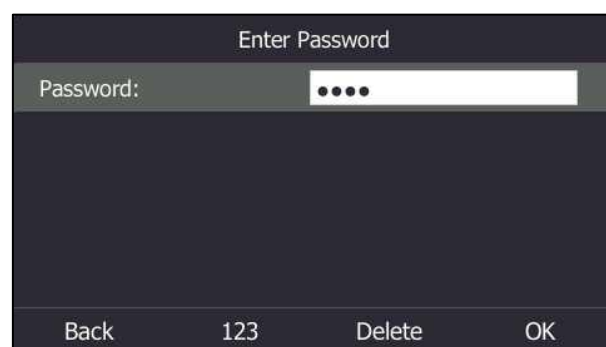

5. Press the **OK** soft key.

The Bluetooth headset is then automatically connected to your phone.

The Bluetooth icon  appears on the LCD screen.


With the Bluetooth headset paired and connected, you can use the Bluetooth headset to place and answer calls. For more information, refer to the documentation from the Bluetooth headset manufacturer.

## Viewing the Bluetooth headset information

**To view the Bluetooth headset information:**


1. Press **Menu**->**Basic**->**Bluetooth**->**Paired Bluetooth Device**.

The LCD screen displays a list of paired and connected Bluetooth headsets.

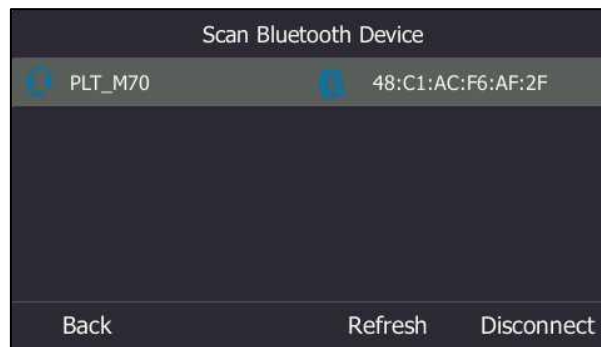

2. Select the desired Bluetooth headset.
3. Press the **Option** soft key, and then select **Detail** from the prompt list to view the Bluetooth headset information:

- **Device Name:** the name of the Bluetooth headset.
- **MAC:** the MAC address of the Bluetooth headset.

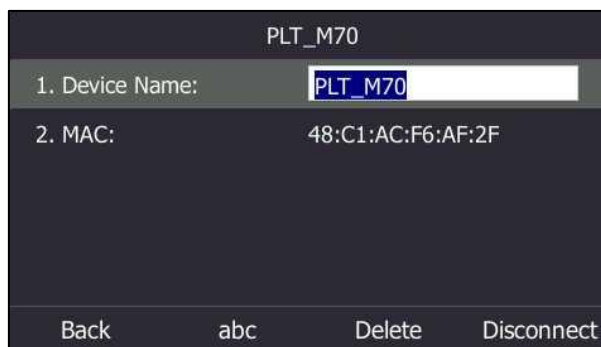

## Editing the Bluetooth Device Information


**To edit the Bluetooth device information via phone user interface:**

1. Press **Menu->Basic->Bluetooth->Edit My Device Information**.

The LCD screen displays the device name and MAC address. The MAC address cannot be edited.

2. Enter the desired name in the **Device Name** field.

The default device name is "Yealink-T46S".

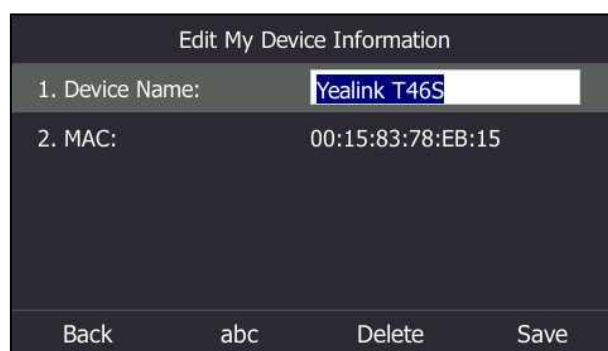

3. Press the **Save** soft key to accept the change.

The preconfigured Bluetooth device name will display in scanning list of other device.


## Deleting the Bluetooth Headset

You can delete your Bluetooth headset from your phone. When you delete the Bluetooth headset, it disappears from the **Paired Bluetooth Device** list. To connect it to your phone again, you need to scan and connect it again.

**To delete your Bluetooth headset from your phone:**

1. Press **Menu->Basic->Bluetooth->Paired Bluetooth Device**.
2. Select the Bluetooth headset you want to delete.
3. Press the **Option** soft key, and then select **Delete** from the prompt list.

The LCD screen prompts the following warning "Delete the selected item?".

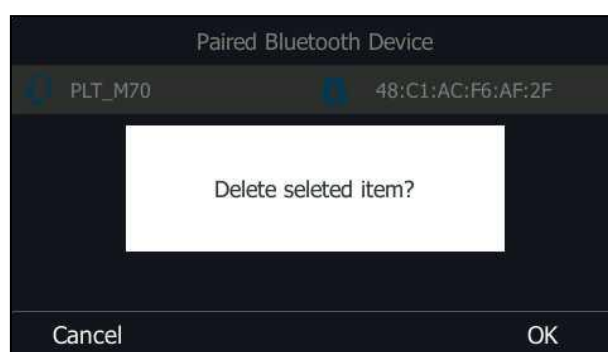

4. Press the **OK** soft key to confirm the deletion.

#### Note

You can also delete all headsets by pressing the **Option** soft key and then select **Delete All**. For more information, refer to the above steps.


If you cannot connect a Bluetooth headset to the phone successfully, we recommend that you delete the Bluetooth headset from the **Paired Bluetooth Device** list (if it exists) before pairing it.

## Disconnecting the Bluetooth Headset

You can disconnect the Bluetooth headset from your phone. After you disconnect the Bluetooth headset, it will still remain paired and be displayed in the **Paired Bluetooth Device** list. So you can easily connect it to your phone again.

**To disconnect your Bluetooth headset from your phone:**

1. Press **Menu->Basic->Bluetooth->Paired Bluetooth Device**.
2. Select the connected Bluetooth headset.

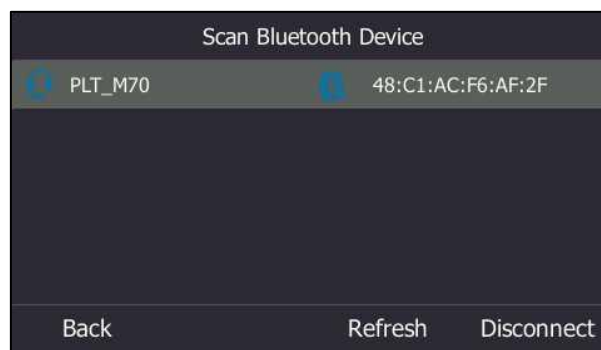

3. Press the **Disconnect** soft key.

The Bluetooth headset is disconnected. To connect it to your phone again, press the **Connect** soft key.

## Deactivating the Bluetooth Mode

You can deactivate the Bluetooth mode when you no longer use a Bluetooth device.

**To deactivate the Bluetooth mode via phone user interface:**

1. Press **Menu->Basic->Bluetooth**.

2. Press ◀ or ▶, or the **Switch** soft key to select **Off** from the **Bluetooth** field.



3. Press the **Save** soft key to accept the change.

The Bluetooth headset won't be connected anymore, but it will still be paired. When you activate the Bluetooth mode again, the paired Bluetooth headset will appear in the **Paired Bluetooth Devices** list.

Bluetooth mode is configurable via web user interface at the path **Features->Bluetooth**.

## Using an EXP40 Expansion Module

The Yealink EXP40 is ideal for receptionists, administrative assistants, call center agents, power-users, and executives who need to place a large volume of calls on a regular basis. When your T46S is registered with a Skype for Business server, you can assign Skype for Business contacts to EXP keys on your EXP40, so that you can quickly call contacts by pressing the corresponding EXP key. You can also monitor your Skype for Business contacts' presence status from your expansion module.

For more information on how to connect and use the EXP40, please refer to

[Yealink\\_EXP40\\_Skype\\_for\\_Business\\_Edition\\_Quick\\_Start\\_Guide](#).



# Troubleshooting

---

This chapter provides general troubleshooting information to help you solve the problems you might encounter when using your T46S Skype for Business phone.

If you require additional information or assistance with your new phone, contact your system administrator.

## Troubleshooting Solutions

### Why is the phone LCD screen blank?

- Ensure that the phone is properly plugged into a functional AC outlet.
- Ensure that the phone is plugged into a socket controlled by a switch that is on.
- If the phone is plugged into a power strip, try to plug it directly into a wall outlet instead.
- If the phone is powered from PoE, ensure you use a PoE-compliant switch or hub.

### Why does the phone display “Network unavailable”?

- Ensure that the Ethernet cable is plugged into the Internet port on the phone and the Ethernet cable is not loose.
- Ensure that the switch or hub in your network is operational.
- Contact your system administrator for more information.

### Why doesn't the phone display time and date correctly?

Check if you have configured the phone to obtain the time and date from the SNTP server automatically. If the phone fails to connect the SNTP server, contact your system administrator for more information. You can also configure the time and date manually. For more information, refer to [Time & Date](#) on page 47.

### How can I find the basic information of the phone?

Press the **OK** soft key to check the basic information of the phone when the phone is idle, such as the IP address and firmware version. For more basic information, refer to [Phone Status](#) on page 29.

### How to obtain the MAC address of a phone when the phone is not powered on?

Three ways to obtain the MAC address of a phone:

- You can ask your supplier for shipping information sheet which includes MAC addresses according to the corresponding PO (Purchase Order).


- You can find the MAC address on the label of the carton box.
- You can also find the MAC address from the phone's bar code on the back of the phone.

#### **Why can't I sign into the Skype for Business server on the phone?**

- Check your phone is properly connected to the switch or hub.
- Validate your domain name and sign-in information are correct.
- Ensure that DNS address is properly configured on the phone, or DHCP is configured to provide DNS address as part of DHCP response.
- Ensure that you enter the correct login username and password.
- Ensure that the phone can obtain the correct date and time through the NTP server.
- Ensure that the phone has obtained the license.
- Please check the Only Accept Trusted Certificates feature. If it is enabled, please disable it and try to sign in. If you sign in successfully after you disable this feature, you need to manually upload the certificate and then enable the Only Accept Trusted Certificates feature to try again.

#### **How to check if the application driver of the Yealink BToE Connector is installed on the PC?**

Do one of the following:


- After installation, if the Yealink BToE Connector and the application driver run successfully, the notification area of the system tray will prompt: **Device driver software installed successfully.**
- Do the following steps to check if the application driver is installed (take the Windows 2007 operating system as an example):
  1. Click the **Start** button .
  2. Click **Control Panel**->**Device Manager**.
  3. Double click **System devices**.
  4. Check if the driver **Yealink BToE Enumerator** is displayed.

If Yealink BToE Enumerator is not displayed, reinstall the Yealink BToE Connector application, and ensure that the application driver is installed during the installation process.

#### **How to cancel auto-start for the Yealink BToE connector?**

1. Right-click  in the system tray.
2. Click **Settings(P)**.

3. Uncheck **Run automatically when starting Windows** to cancel the auto-start feature. As shown next:

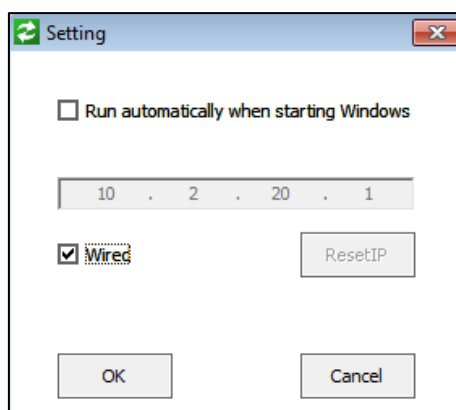

#### Why can't the phone pair with my Skype for Business client?

- Ensure that your Skype for Business client is installed on your PC and a Skype for Business user signs into Skype for Business server successfully.
- Ensure that the user signing on the phone is the same as the one signing on the Skype for Business client.
- Re-pair the phone and Skype for Business client manually.
- Ensure that Yealink BToE Connector and application driver are successfully installed on your PC, and both of them start successfully. If the phone still cannot pair with the Skype for Business client, reboot the PC.
- After a reboot, if the phone still cannot pair with the Skype for Business client, uninstall the Yealink BToE Connector and application driver, and then reinstall them.
- Ensure that Yealink BToE Connector is an allowed program in your system's firewall on your PC.

#### Why doesn't the phone display the Calendar menu?

- Ensure that your phone has signed in successfully.

#### Why doesn't the Calendar menu display the Skype conference, appointment, meeting or event set up in outlook?

- Ensure that you sign into the phone using [User Sign-in](#), [Web Sign-In](#) or [Signing in via PC](#) method.

#### Why can't I get a dial tone?

- Check for any loose connections and that the phone has been installed properly.
- Switch between the Handset, Headset (if present) or Hands-Free Speakerphone to check whether the dial tone is present for one of the audio modes.

If the dial tone exists on another audio mode, connect a different handset or headset to

isolate the problem.

### **Why doesn't the phone ring?**

Check the ringer volume on the phone. To adjust the ringer volume setting, press the Volume key when the phone is on-hook and idle. For more information, refer to [Volume](#) on page 55.

### **Why can't I receive calls?**

- Check that whether your status is DND mode, if it is, you should reset status. Refer to [Changing Presence Status](#) on page 23.
- Check that whether call forward is disabled on the phone. Refer to [Call Forward](#) on page 92.

### **Why doesn't my handset work?**

- Check that the headset cord is fully connected to the headset jack on the phone.
- Check that whether the headset volume is adjusted to an appropriate level. Refer to [Volume](#) on page 55.

### **Why does the phone play a tone when there is a call on hold? How to disable it?**

When there is a call on hold, the phone will play a hold tone every 30 seconds. Play hold tone is enabled by default. Play hold tone and the interval of playing a hold tone are configurable via web user interface only.

#### **To configure play hold tone and play hold tone delay via web user interface:**

1. Click on **Features->General Information**.
2. Select **Enabled** or **Disabled** from the pull-down list of **Play Hold Tone**.

- Enter the desired time (in seconds) in the **Play Hold Tone Delay** field.

The screenshot shows the Yealink T46S web interface. The 'Features' tab is selected. Under the 'General Information' section, the 'Play Hold Tone Delay' field is highlighted with a red box. The field is set to 30 seconds. Other fields in the section include 'Call Waiting' (Enabled), 'Key As Send' (#), 'Hotline Number', 'Hotline Delay(0~10s)' (4), 'Busy Tone Delay (Seconds)' (0), 'Return code when refuse' (603 (Decline)), 'Feature Key Synchronization' (Disabled), 'Time-Out for Dial-Now Rule' (1), 'Dial Search Delay' (1), '180 Ring Workaround' (Disabled), 'Save Call Log' (Enabled), 'Suppress DTMF Display' (Disabled), 'Suppress DTMF Display Delay' (Disabled), 'Play Local DTMF Tone' (Enabled), 'DTMF Repetition' (3), and 'Multicast Codec' (G722).

- Click **Confirm** to accept the change.

### How to export PCAP trace?

We may need you to provide a PCAP trace to help analyze your problem.

#### To export a PCAP trace via web user interface:

- Click on **Settings->Configuration**.
- Click **Start** to begin recording signal traffic.
- Recreate the error to be documented in the trace.
- Click **Stop** to end recording.
- Click **Export** to open file download window, and then save the file to your local system.


The screenshot shows the Yealink T46S web interface. The 'Settings' tab is selected. Under the 'Configuration' section, the 'Pcap Feature' section is highlighted with a red box. The 'Start' button is visible. Other sections in the 'Configuration' section include 'Export or Import Configuration', 'Export CFG Configuration File', and 'Export Call Log'.

### How to export/import phone configurations?

We may need you to provide your phone configurations to help analyze your problem. In some instances, you may need to import configurations to your phone.

### To export your phone configurations via web user interface:

1. Click on **Settings->Configuration**.
2. Click **Export** to open file download window, and then save the file to your local system.

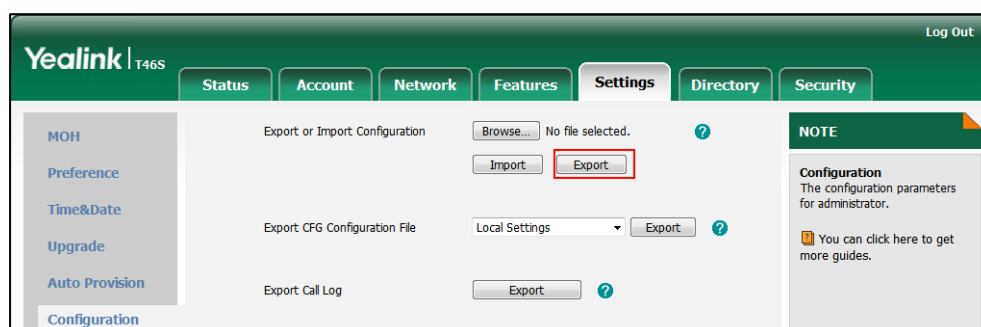

### To import phone configurations via web user interface:

1. Click on **Settings->Configuration**.
2. Click **Browse...** to locate a configuration file from your local system.
3. Click **Import** to import the configuration file.

#### Note

The file format of configuration file must be ".bin".


### Export All Diagnostic Files

Your system administrator may ask you to export all diagnostic files to analyze your phone problem.

### To export all diagnostic files via web user interface:

1. Click on **Settings->Configuration**.
2. Click **Start** in the **Export All Diagnostic Files** field to begin capturing signal traffic.  
The local log level will be automatically set to 6.
3. Reproduce the issue.
4. Click **Stop** in the **Export All Diagnostic Files** field to stop the capture.  
The local log level will be reset to 3.

- Click **Export** to open file download window, and then save the diagnostic file to your local system.

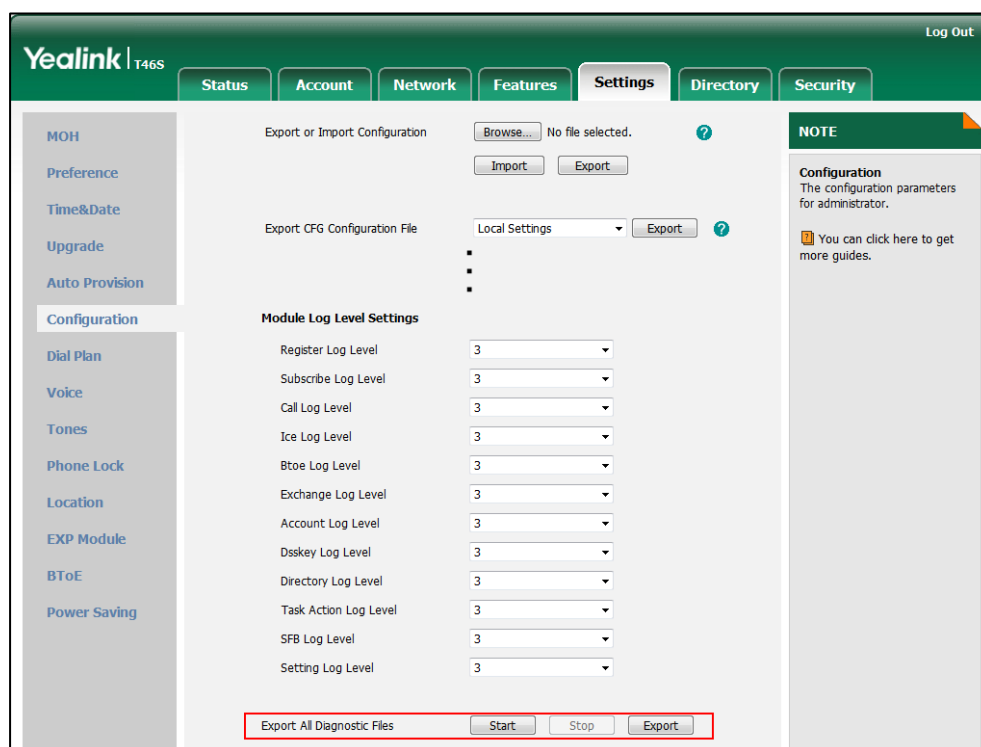


A diagnostic file named **allconfig.tgz** is successfully exported to your local system.

### How to export call log?

User can access call logs by downloading them to the local system for diagnosis purpose.

### To export the call log via web user interface:


1. Click on **Settings->Configuration**.
2. Click **Export** to open file download window, and then save the file to your local system.

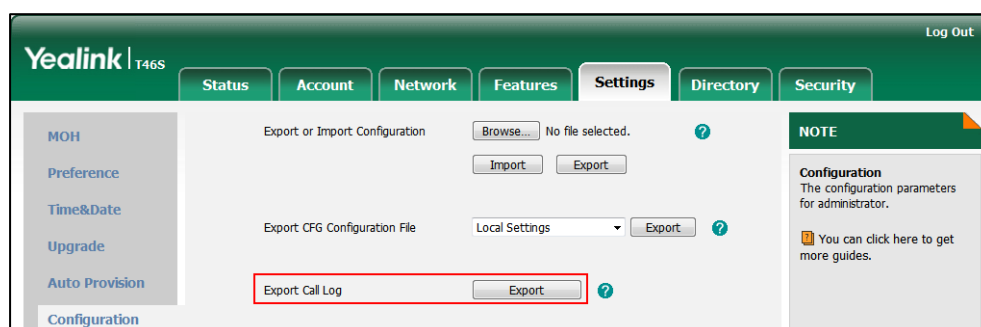

### How to change the user password?

#### To change the user password via web user interface:

1. Click on **Security->Password**.
2. Select **user** from the pull-down list of **User Type**.
3. Enter the new user password in the **New Password** field and **Confirm Password** field.

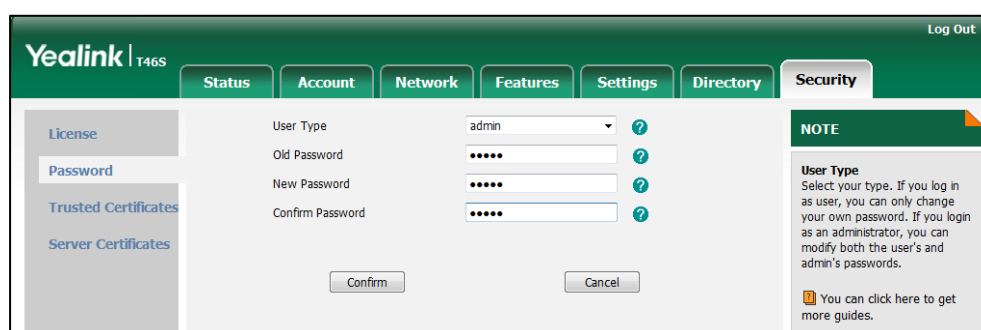

4. Click **Confirm** to accept the change.

### Note

If signing into the web user interface of the phone with the User Sign in, you need to enter the current user password in the **Old Password** field.

User password is configurable via web user interface only.


### How to reboot the phone?

#### To reboot the phone via phone user interface:


1. Press **Menu->Advanced** (default password: admin).




2. Press  or  to scroll to **Reboot**, and then press the **Enter** soft key.

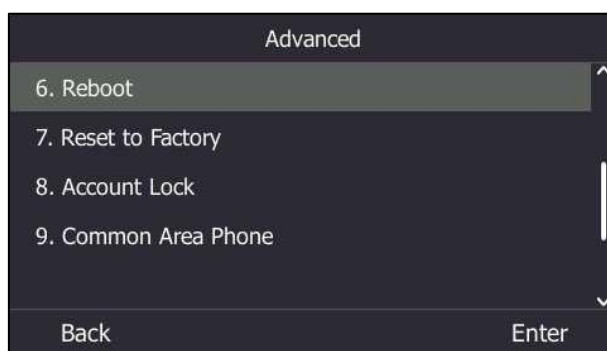

3. Press the **Reboot** soft key.

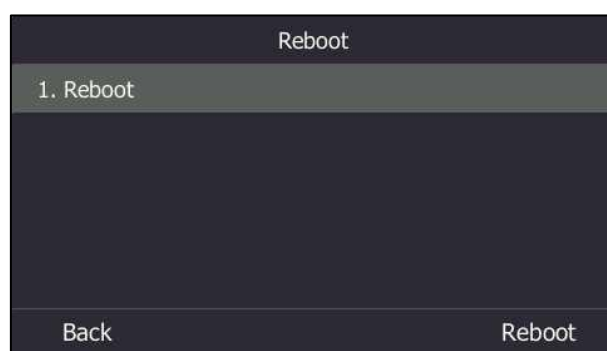


The LCD screen prompts "Reboot the phone?".

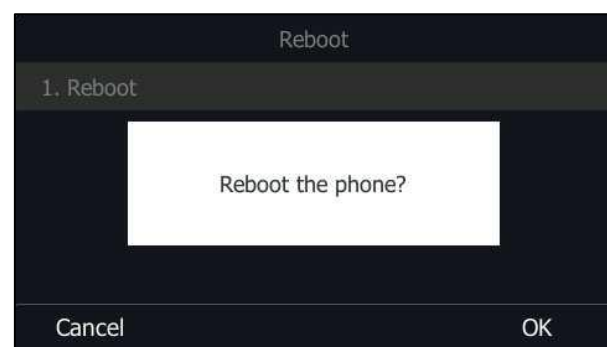

4. Press the **OK** soft key to reboot the phone.

**Note**


You can long press  to reboot the phone  
Any reboot of your phone may take a few minutes.

### How to upgrade firmware?

#### To upgrade firmware via web user interface:

1. Click on **Settings->Upgrade**.

- Click **Browse...** to locate the firmware from your local system.

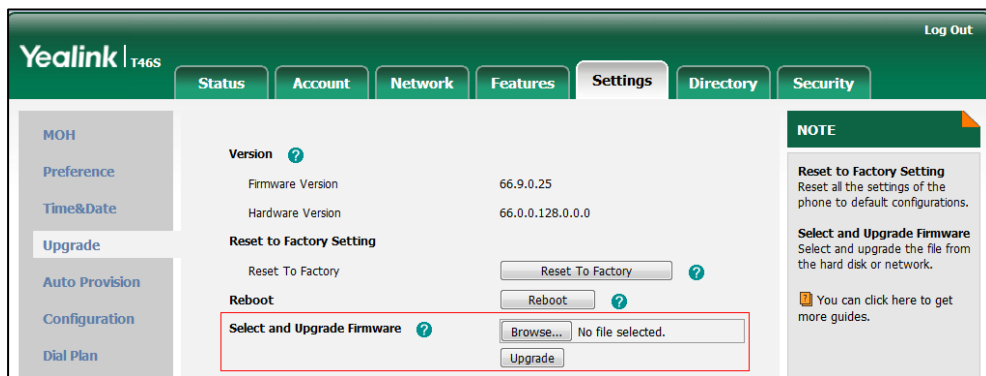

- Click **Upgrade** to upgrade the firmware.

The browser pops up the dialog box "Firmware of the SIP phone will be updated. It will take 5 minutes to complete. Please don't power off!".

- Click **OK** to confirm upgrading.

T46S phones can also be upgraded from the Skype for Business server. For more information on how to upgrade the T46S phone from the Skype for Business server, refer to [Updating Phone Firmware from Microsoft Skype for Business Server](#).

### How to reset your phone?

Generally, some common issues may occur while using the phone. Your system administrator may ask you to reset your phone to factory configurations after you have tried all troubleshooting suggestions but still do not solve the problem. This operation will delete all your personal configuration settings, and reset all settings to the manufacturer default setting.

#### Note

Check with your system administrator if you want to keep some personalized settings before resetting your phone.

### To reset the phone via phone user interface:


- Press **Menu**->**Advanced** (default password: admin) ->**Reset to Factory**.
- Press **Left** or **Right** arrow, or the **Switch** soft key to select the **Reset to factory** from **Reset Option** field.
- Press the **Save** soft key.

The LCD screen prompts the following warning:




4. Press the **OK** soft key.

The LCD screen prompts "Welcome Initializing...Please wait".

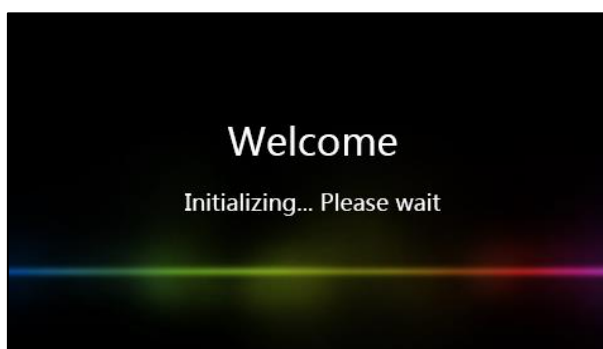

The phone will be reset to factory successfully after startup.

**Not**

You can also long press the  soft key to perform the reset function when the phone is idle.

Reset of the phone may take a few minutes. Do not power off until the phone starts up successfully.



# Regulatory Notices

## Service Agreements

Contact your Yealink Authorized Reseller for information about service agreements applicable to your product.

## Limitations of Liability

TO THE FULL EXTENT ALLOWED BY LAW, YEALINK EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF YEALINK OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT YEALINK'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

## Safety Instructions

**Save these instructions. Read these safety instructions before use!**

The following basic safety precautions should always be followed to reduce risk of fire, electrical shock, and other personal injury.



### General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- During the process of storage, transportation, and operation, please always keep the device dry and clean.
- During the process of storage, transportation, and operation, please avoid collision and crash of the device.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Without prior written consent, no organization or individual is permitted to make any change to the structure or the safety design of the device. Yealink is under no circumstance liable to consequences or legal issues caused by such changes.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.



### Environmental Requirements

- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Place the device on a stable and level platform.

- Please place no heavy objects on the device in case of damage and deformation caused by the heavy load.
- Keep at least 10 cm between the device and the closest object for heat dissipation.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.
- Keep the device away from any household appliance with strong magnetic field or electromagnetic field, such as a microwave oven or a refrigerator.

#### **Operating Requirements**

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- Do not tread on, pull, or over-bend any cable in case of malfunction of the device.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately. Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.

#### **Cleaning Requirements**

- Before cleaning the device, stop using it and disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Keep the power plug clean and dry. Using a dirty or wet power plug may lead to electric shock or other perils.

## Appendix A - Time Zones

Time Zone	Time Zone Name
-11	Samoa
-10	United States-Hawaii-Aleutian, United States-Alaska-Aleutian
-9:30	French Polynesia
-9	United States-Alaska Time
-8	Canada(Vancouver,Whitehorse), Mexico(Tijuana,Mexicali), United States-Pacific Time
-7	Canada(Edmonton,Calgary), Mexico(Mazatlan,Chihuahua), United States-MST no DST, United States-Mountain Time
-6	Guatemala, El Salvador, Honduras, Nicaragua, Costa Rica, Belize, Canada-Manitoba(Winnipeg), Chile(Easter Islands), Mexico(Mexico City,Acapulco), United States-Central Time
-5	Peru, Bahamas(Nassau), Canada(Montreal,Ottawa,Quebec), Cuba(Havana), United States-Eastern Time
-4:30	Venezuela(Caracas)
-4	Canada(Halifax,Saint John), Chile(Santiago), Paraguay(Asuncion), United Kingdom-Bermuda(Bermuda), United Kingdom(Falkland Islands), Trinidad&Tobago
-3:30	Canada-New Foundland(St.Johns)
-3	Argentina(Buenos Aires), Brazil(DST), Brazil(no DST), Denmark-Greenland(Nuuk)
-2:30	Newfoundland and Labrador
-2	Brazil(no DST)
-1	Portugal(Azores)
0	Denmark-Faroe Islands(Torshavn), GMT, Greenland, Ireland(Dublin), Morocco, Portugal(Lisboa,Porto,Funchal), Spain-Canary Islands(Las Palmas), United Kingdom(London)
+1	Albania(Tirane), Austria(Vienna), Belgium(Brussels), Caicos, Chad, Croatia(Zagreb), Czech Republic(Prague), Denmark(Kopenhagen), France(Paris), Germany(Berlin), Hungary(Budapest), Italy(Rome), Luxembourg(Luxembourg), Macedonia(Skopje), Namibia(Windhoek), Netherlands(Amsterdam), Spain(Madrid), Switzerland(Bern), Sweden(Stockholm)
+2	Estonia(Tallinn), Finland(Helsinki), Gaza Strip(Gaza), Greece(Athens), Israel(Tel Aviv), Jordan(Amman), Latvia(Riga), Lebanon(Beirut), Moldova(Kishinev), Romania(Bucharest), Russia(Kaliningrad), Syria(Damascus), Turkey(Ankara), Ukraine(Kyiv, Odessa)
+3	East Africa Time, Iraq(Baghdad), Russia(Moscow)
+3:30	Iran(Teheran)
+4	Armenia(Yerevan), Azerbaijan(Baku), Georgia(Tbilisi), Abu Dhabi, Kazakhstan(Aktau), Russia(Samara)
+4:30	Afghanistan(Kabul)
+5	Kazakhstan(Aqtobe), Kyrgyzstan(Bishkek), Pakistan(Islamabad), Russia(Chelyabinsk)
+5:30	India(Calcutta)
+5:45	Nepal(Katmandu)
+6	Kazakhstan(Astana, Almaty), Russia(Novosibirsk,Omsk)
+6:30	Myanmar(Naypyitaw)
+7	Russia(Krasnoyarsk), Thailand(Bangkok)
+8	Australia(Perth), China(Beijing), Russia(Irkutsk, Ulan-Ude), Singapore(Singapore)
+8:45	Eucla
+9	Japan(Tokyo), Korea(Seoul), Russia(Yakutsk,Chita)
+9:30	Australia(Adelaide), Australia(Darwin)

Time Zone	Time Zone Name
+10	Australia(Brisbane), Australia(Hobart), Australia(Sydney,Melbourne,Canberra), Russia(Vladivostok)
+10:30	Australia(Lord Howe Islands)
+11	New Caledonia(Noumea), Russia(Srednekolymsk Time)
+11:30	Norfolk Island
+12	New Zealand(Wellington,Auckland), Russia(Kamchatka Time)
+12:45	New Zealand(Chatham Islands)
+13	Tonga(Nukualofa)
+13:30	Chatham Islands
+14	Kiribati