

User Access Level of Web/Phone/Handset User Interface

Overview

User access level feature is used to achieve different access levels for different authorized users. It is useful for protecting the IP phone from unauthorized configuration, and popularly used for the Hosted PBX solution. The following describes how to customize the access permission for configurations on the web user interface and phone user interface.

This guide applies to the following Yealink IP phones:

- SIP VP-T49G, CP860 and W56P IP phones running firmware version 80 or later
- SIP-T48G, SIP-T48S, SIP-T46G, SIP-T46S, SIP-T42G, SIP-T42S, SIP-T41P, SIP-T41S, SIP-T40P, SIP-T29G, SIP-T27P, SIP-T27G, SIP-T23P/G, SIP-T21(P) E2 and SIP-T19(P) E2 IP phones running firmware version 81 or later

Scenario

For a Hosted PBX solution, IP phones are provided to customers for free but required a minimum consumption monthly. All PBX services associated features on the deployed IP phones are preconfigured to avoid customers from using other Hosted PBX's service, and the Hosted PBX system administrator can restrict the user access permission using user access level feature. For example, the Hosted PBX system administrator restricts the write permission of the account associated configurations. This means customers can only read these configurations on both web user interface and phone user interface.

Introduction

Yealink SIP VP-T49G, SIP-T48G/S, SIP-T46G/S, SIP-T42G/S, SIP-T41P/S, SIP-T40P, SIP-T29G, SIP-T27P/G, SIP-T23P/G, SIP-T21(P) E2, SIP-T19(P) E2, CP860 and W56P IP phones support access levels of admin, var and user. The following describes the detailed information of each access level:

- **Admin:** The administrator access level. With this access level, all configurations on both web user interface and phone user interface can be read and written. The authentication identity for this access level is **admin**. And the default password is **admin**.
- **Var:** The value-added reseller access level. Generally, with this access level, most configurations on the web user interface and phone user interface can be read and written. The authentication identity for this access level is **var**. And the default password is **var**.

- **User:** The end user access level. Generally, only a few configurations are allowed to be written and read for access user. The authentication identity for this access level is **user**. And the default password is **user**.

Specification

Access permissions of all configuration items available on Yealink W56P/SIP

VP-T49G/SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860 IP phones' web user interface and phone/handset user interface can be defined in a fixed WebItemsLevel.cfg file. Each configuration item in the file is formatted as:

ItemName = X₁X₂

The valid values of X₁, X₂ include 0, 1, 2 and 3.

X₁ is used for specifying the access level. The access levels: 2 = admin, 1 = var, 0 = user, 3 = none.

X₂ is used for defining the access permission. 2 means the configuration item is read-only for X₁ and higher access levels, the highest is always writable. 1 means the configuration item is read-only for X₁ access level, and writable for higher access levels. 0 means the configuration item is writable for X₁ and higher access levels. 3 means the configuration item is read-only for X₁ and higher access levels.

The following table lists the possible values of X₁X₂ and the configuration results with different access levels:

(W: writable; R: read-only; N: hidden)

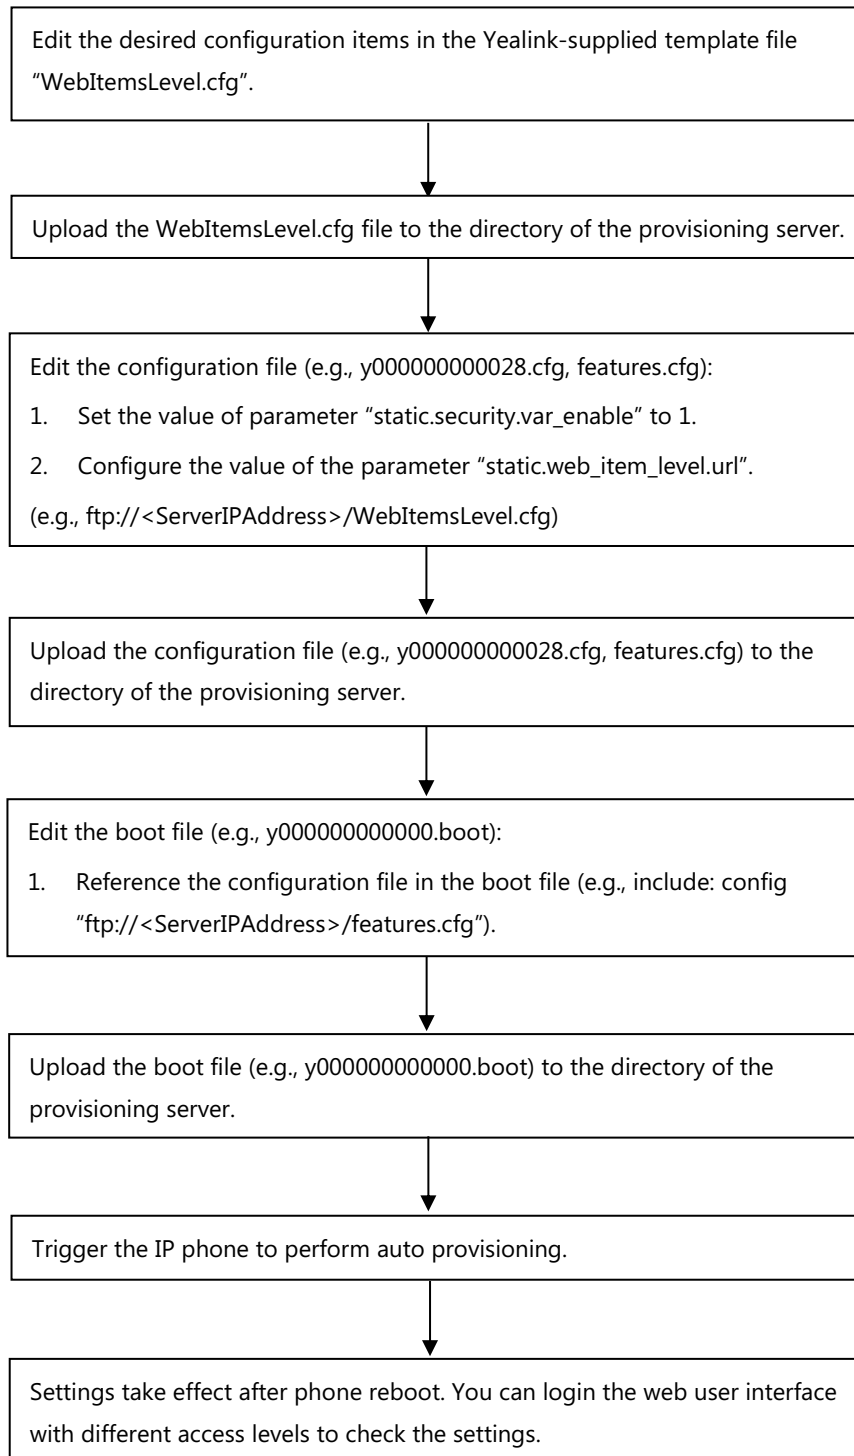
Results Values of X ₁ X ₂	admin (2)	var (1)	user (0)
0	WR	WR	WR
1	WR	WR	N
2	WR	N	N
3	N	N	N
00	WR	WR	WR
01	WR	WR	R
02	WR	R	R
03	R	R	R
10	WR	WR	N
11	WR	R	N
12	WR	R	N
13	R	R	N

Results Values of X_1X_2	admin (2)	var (1)	user (0)
20	WR	N	N
21	WR	N	N
22	WR	N	N
23	R	N	N
30/31/32/33	N	N	N

Application

This section will introduce procedures to configure access permission of the web user interface in detail. The flow chart of configuring user access level is shown as below:

Note: The boot file is only applicable to IP phones running firmware version 81 or later. The parameter varies from firmware version to firmware version (refer to [Configuring Yealink IP Phones](#)).



Customizing WebItemsLevel.cfg

You can ask Yealink Field Application Engineer for the template file "WebItemsLevel.cfg", or you can download it online:

<http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

We recommend you only edit the desired configuration items in the supplied "WebItemsLevel.cfg" file, and keep other configuration items constant.

WebItemsLevel.cfg downloaded via auto provisioning will override that in the phone flash. Access level of any configuration item missed (including configuration value left blank) in the downloaded WebItemsLevel.cfg file will be changed to user by default.

Web User Interface

The following shows configuration segments for the web user interface in the WebItemsLevel.cfg file for reference:

Sample 1: Configuration items in the WebItemsLevel.cfg for navigation bar settings of the Features page:

```
[ Features ]
features-forward = 0
features-general = 0
features-audio = 0
features-intercom = 0
features-transfer = 1
features-callpickup = 0
features-remote = 2
features-phonelock = 0
features-acd = 0
features-sms = 2
features-actionurl = 1
features-bluetooth = 0
features-poweredled = 2
features-notifypop = 0
```

According to the above configuration of access level, when logging in the web user interface with user access level, the web user interface displays as below:

The screenshot displays the Yealink T46G web user interface. The top navigation bar includes tabs for Status, Account, Network, DSSKey, Features, Settings, Directory, and Security. The 'Features' tab is selected. On the left sidebar, the 'Forward&DND' section is highlighted, with sub-items: General Information, Audio, Intercom, Call Pickup, Phone Lock, ACD, Bluetooth, and Notification Popups. The main configuration area is divided into two sections: 'Forward' and 'DND'. The 'Forward' section includes settings for Forward Emergency (Disabled), Forward Authorized Numbers, Mode (Phone/Custom), Account (1011), Always Forward (On/Off), Busy Forward (On/Off), and No Answer Forward (On/Off). The 'DND' section includes settings for DND Emergency (Disabled), DND Authorized Numbers, Mode (Phone/Custom), Account (1011), DND Status (On/Off), DND On Code, and DND Off Code. A 'NOTE' section on the right provides additional information about Call Forward and DND modes. The interface includes 'Confirm' and 'Cancel' buttons at the bottom.

Forward

Forward Emergency: Disabled

Forward Authorized Numbers:

Mode: ☒ Phone ☐ Custom

Account: 1011

Always Forward

Target:

On Code:

Off Code:

Busy Forward

Target:

On Code:

Off Code:

No Answer Forward

After Ring Time(0~120s): 12

Target:

On Code:

Off Code:

DND

DND Emergency: Disabled

DND Authorized Numbers:

Mode: ☒ Phone ☐ Custom

Account: 1011

DND Status: ☐ On ☒ Off

DND On Code:

DND Off Code:

NOTE

Call Forward
It allows users to redirect an incoming call to a third party.

Call Forward Mode
Phone: Call forward feature is effective for the IP phone.
Custom: Call forward feature can be configured for each or all accounts.

Do Not Disturb (DND)
It allows IP phones to ignore incoming calls.

DND Mode
Phone: DND feature is effective for the IP phone.
Custom: DND feature can be configured for each or all accounts.

You can click here to get more guides.

Confirm Cancel

When logging in the web user interface with var access level, the web user interface displays as below:

The screenshot displays the Yealink T46G web user interface. The top navigation bar includes tabs for Status, Account, Network, DSSKey, Features, Settings, Directory, and Security. The left sidebar shows a list of configuration options, with 'Forward&DND' highlighted. The main content area is divided into two sections: 'Forward' and 'DND'. The 'Forward' section includes settings for Forward Emergency (Disabled), Forward Authorized Numbers, Mode (Phone/Custom), Account (1011), Always Forward (On/Off), Busy Forward (On/Off), and No Answer Forward (On/Off). The 'DND' section includes settings for DND Emergency (Disabled), DND Authorized Numbers, Mode (Phone/Custom), DND Status (On/Off), DND On Code, and DND Off Code. A 'NOTE' section on the right provides information about Call Forward and DND modes. The bottom of the page has 'Confirm' and 'Cancel' buttons.

Forward

Forward Emergency: Disabled

Forward Authorized Numbers:

Mode

Account: 1011

Always Forward

Target:

On Code:

Off Code:

Busy Forward

Target:

On Code:

Off Code:

No Answer Forward

After Ring Time(0~120s): 12

Target:

On Code:

Off Code:

DND

DND Emergency: Disabled

DND Authorized Numbers:

Mode

Account: 1011

DND Status: On/Off

DND On Code:

DND Off Code:

NOTE

Call Forward
It allows users to redirect an incoming call to a third party.

Call Forward Mode
Phone: Call forward feature is effective for the IP phone.
Custom: Call forward feature can be configured for each or all accounts.

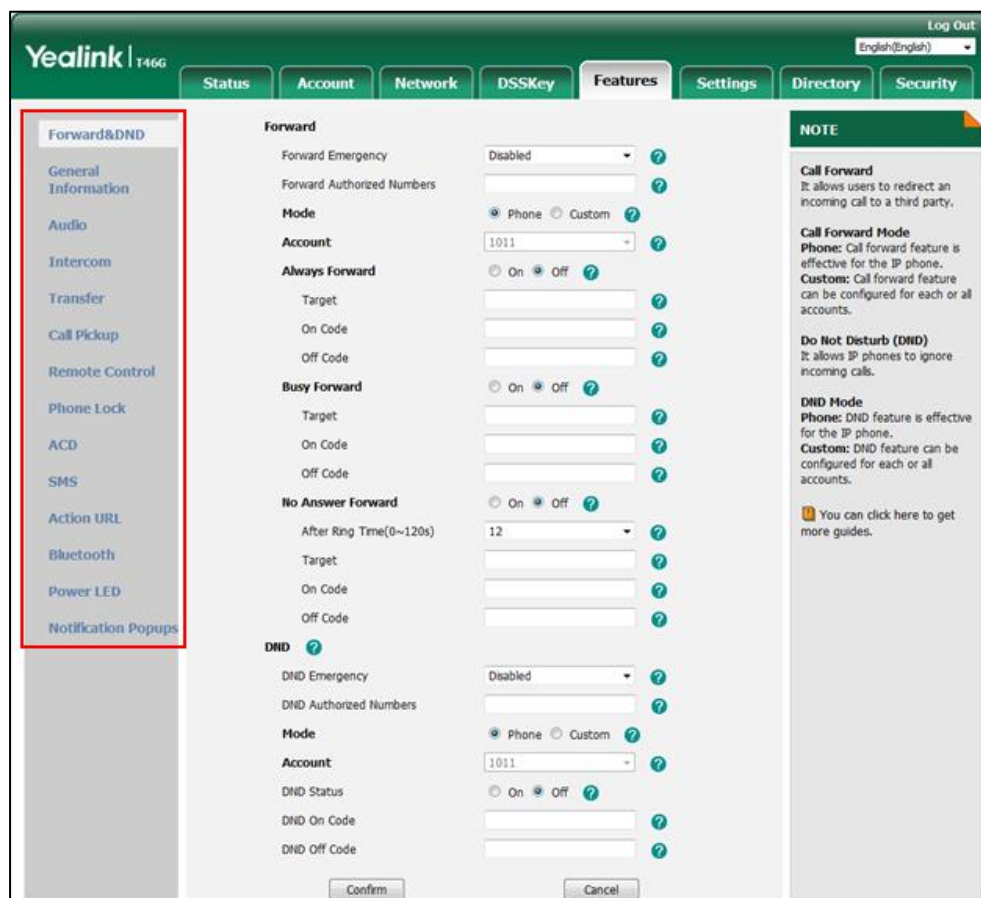
Do Not Disturb (DND)
It allows IP phones to ignore incoming calls.

DND Mode
Phone: DND feature is effective for the IP phone.
Custom: DND feature can be configured for each or all accounts.

You can click here to get more guides.

Confirm Cancel

When logging in the web user interface with admin access level, the web user interface displays as below:



Note: Configuration items for navigation bar are not writable on both web user interface and phone user interface. So, configuration items for navigation bar can be configured only using the format "ItemName = X".

If the access permission of the first navigation configuration item for each main page is restricted, the access to the main web page will be denied.

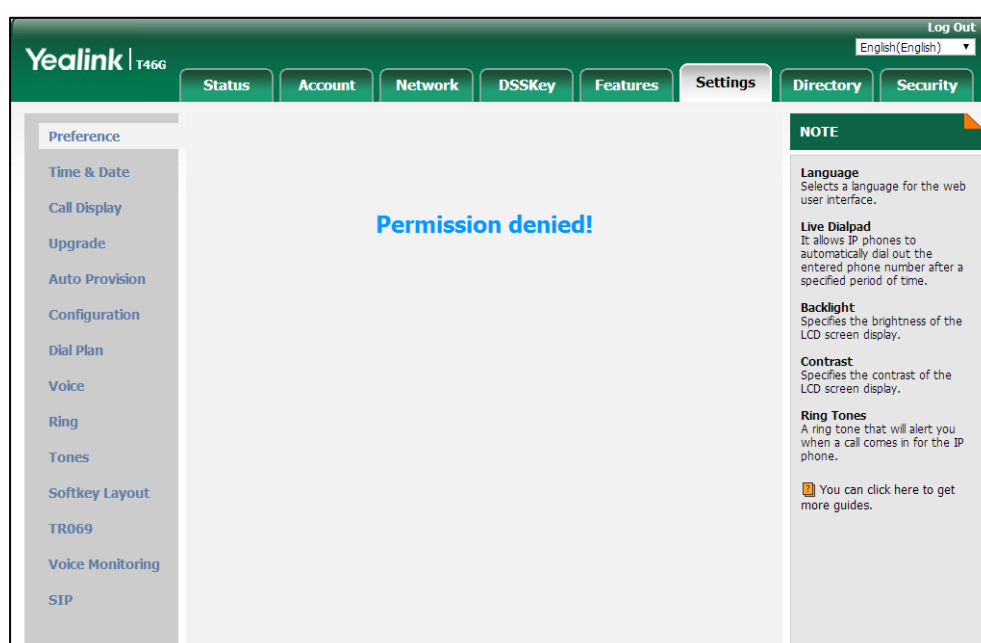
The following table lists the first navigation configuration items for each main page:

Main Page	First Navigation Item	Configuration Item
Account	Register	account-register
Network	Basic	network-basic
DSSKey/Dsskey (not applicable to W56P)	Line Key 1-11 (for SIP VP-T49G/SIP-T48G/T48S), Line Key 1-9 (for SIP-T46G/T46S/T29G), Line Key 1-7 (for SIP-T27P/G), Line Key 1-5 (for SIP-T42G/T42S/T41P/T41S), Line Key (for SIP-T40P/T23P/T23G),	linekey

Main Page	First Navigation Item	Configuration Item
	Line Key (for SIP-T21(P) E2), Programable key (for SIP-T19(P) E2/CP860)	
Features	Forward&DND	features-forward
Settings	Preference	settings-preference
Directory	Local Directory	contacts-basic
Security	Password	password

For example, set the value of the configuration item "settings-preference" to be 1.

When logging into with user access level, the access to the Settings web page will be denied.



Sample2: Configuration items in the WebItemsLevel.cfg for the Register settings of Account page:

```
[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 11
display_name = 01
register_name = 03
user_name = 01
account_password = 12
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
backup-outbound-proxy-server = 01
NAT_traversal = 12
```

```

sip_server = 2
sip_server2 = 2
outbound-proxy-server-port = 2
backup-outbound-proxy-server-port = 2

```

According to the above configuration of access level, when logging in the web user interface with user access level, the web user interface displays as below:

Yealink T46G

Log Out English(English)

Status Account Network DSSKey Features Settings Directory Security

Register Basic Codec Advanced

Account Account 1 ?

Register Status Registered

Line Active Enabled ?

Display Name 240161 ?

Register Name 240161 ?

User Name 240161 ?

Enable Outbound Proxy Server Enabled ?

Outbound Proxy Server 1 ylas.yealink.com ?

Outbound Proxy Server 2 ?

Proxy Fallback Interval 3600 ?

Confirm Cancel

NOTE

Account Registration
Registers account(s) for the IP phone.

Server Redundancy
It is often required in VoIP deployments to ensure continuity of phone service, for events where the server needs to be taken offline for maintenance, the server fails, or the connection between the IP phone and the server fails.

NAT Traversal
A general term for techniques that establish and maintain IP connections traversing NAT gateways. STUN is one of the NAT traversal techniques.

When logging in the web user interface with var access level, the web user interface displays as below:

Yealink T46G

Log Out English(English)

Status Account Network DSSKey Features Settings Directory Security

Register Basic Codec Advanced

Account Account 1 ?

Register Status Registered

Line Active Enabled ?

Label 240161 ?

Display Name 240161 ?

Register Name 240161 ?

User Name 240161 ?

Password ***** ?

Enable Outbound Proxy Server Enabled ?

Outbound Proxy Server 1 ylas.yealink.com ?

Outbound Proxy Server 2 ?

Proxy Fallback Interval 3600 ?

NAT Disabled ?

Confirm Cancel

NOTE

Account Registration
Registers account(s) for the IP phone.

Server Redundancy
It is often required in VoIP deployments to ensure continuity of phone service, for events where the server needs to be taken offline for maintenance, the server fails, or the connection between the IP phone and the server fails.

NAT Traversal
A general term for techniques that establish and maintain IP connections traversing NAT gateways. STUN is one of the NAT traversal techniques.

You can configure NAT traversal for this account.

You can click here to get more guides.

When logging in the web user interface with admin access level, the web user interface displays as below:

The screenshot shows the Yealink T466 web user interface. The top navigation bar includes tabs for Status, Account, Network, DSSKey, Features, Settings, Directory, and Security. The 'Account' tab is selected. On the left, there is a sidebar with options: Register, Basic, Codec, and Advanced. The main content area displays the 'Account' configuration for 'Account 1'. Fields include: Register Status (Registered), Line Active (Enabled), Label (240161), Display Name (240161), Register Name (240161), User Name (240161), Password (*****), SIP Server 1 (Server Host: ylas.yealink.com, Port: 5060, Transport: UDP, Server Expires: 3600, Server Retry Counts: 3), SIP Server 2 (Server Host: , Port: 5060, Transport: UDP, Server Expires: 3600, Server Retry Counts: 3), Enable Outbound Proxy Server (Enabled), Outbound Proxy Server 1 (Server Host: ylas.yealink.com, Port: 5060), Outbound Proxy Server 2 (Server Host: , Port: 5060), Proxy Fallback Interval (3600), and NAT (Disabled). A 'NOTE' section on the right contains information about Account Registration, Server Redundancy, and NAT Traversal. At the bottom, there are 'Confirm' and 'Cancel' buttons.

For more information on parameters of the WebItemsLevel.cfg file, refer to [Appendix-A: Configuration Parameters](#) on page 23.

Phone/Handset User Interface

For SIP

VP-T49G/SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860 IP phones:

The following shows configuration segments for the phone user interface in the WebItemsLevel.cfg file for reference:

If you set the access permission of the high level, it will have an impact on that of the low level. In the following examples, the call forward menu has a higher level than always forward/busy forward/no answer forward submenu.

Example1: Configuration items in the WebItemsLevel.cfg for call forward menu and its submenu settings:

```
[ GUI ]
callcontrol_forward = 02
always-forward = 10
busy-forward = 00
NoAnswer-forward = 00
```

Note: The configuration of busy forward is the same as the one of the no answer forward, so the following figures take busy forward as an example.

According to the above configuration of access level, when logging in to the phone user interface with user access level, the access permission of each submenu is displayed as below:

Always forward submenu is hidden for user access level:



Busy forward/no answer forward submenu is read-only for user access level:



When logging in to the phone user interface with var access level, the access permission of each submenu is displayed as below:

Always forward submenu is read-only for var access level:

The screenshot shows a configuration window titled "Always Forward". It contains four numbered items: "1. Always Forward:" with a dropdown menu set to "Disabled", "2. Forward to:", "3. On Code:", and "4. Off Code:". At the bottom, there is a "Back" button and three empty button slots.

Busy forward/no answer forward submenu is read-only for var access level:

The screenshot shows a configuration window titled "Busy Forward". It contains four numbered items: "1. Busy Forward:" with a dropdown menu set to "Disabled", "2. Forward to:", "3. On Code:", and "4. Off Code:". At the bottom, there is a "Back" button and three empty button slots.

When logging in to the phone user interface with admin access level, the phone user interface displays as below:

Always forward submenu is writable for admin access level:

The screenshot shows a configuration window titled "Always Forward". It contains four numbered items: "1. Always Forward:" with a dropdown menu set to "Disabled", "2. Forward to:", "3. On Code:", and "4. Off Code:". At the bottom, there are four buttons: "Back", an empty slot, "Switch", and "Save".

Busy forward/no answer forward submenu is writable for admin access level:



Example2: Configuration items in the WebItemsLevel.cfg for call forward menu and its submenu settings:

```
[ GUI ]
callcontrol_forward = 00
always-forward = 01
busy-forward = 02
NoAnswer-forward = 00
```

According to the above configuration of access level, when logging in to the phone user interface with user access level, the access permission of each submenu is displayed as below:

Always forward submenu is read-only for user access level:



Busy forward submenu is read-only for user access level:



No answer forward submenu is writable for user access level:

The screenshot shows a configuration window titled "No Answer Forward". It contains five numbered settings: 1. "No Answer Forward:" set to "Disabled" with left and right arrow icons; 2. "Forward to:" with an empty text field; 3. "After Ring Time:" set to "12s" with left and right arrow icons; 4. "On Code:" with an empty text field; and 5. "Off Code:" with an empty text field. At the bottom are four buttons: "Back", an empty button, "Switch", and "Save".

When logging in to the phone user interface with var access level, the access permission of each submenu is displayed as below:

Always forward submenu is writable for var access level:

The screenshot shows a configuration window titled "Always Forward". It contains four numbered settings: 1. "Always Forward:" set to "Disabled" with left and right arrow icons; 2. "Forward to:" with an empty text field; 3. "On Code:" with an empty text field; and 4. "Off Code:" with an empty text field. At the bottom are four buttons: "Back", an empty button, "Switch", and "Save".

Busy forward submenu is read-only for var access level:

The screenshot shows a configuration window titled "Busy Forward". It contains four numbered settings: 1. "Busy Forward:" set to "Disabled" with left and right arrow icons; 2. "Forward to:" with an empty text field; 3. "On Code:" with an empty text field; and 4. "Off Code:" with an empty text field. At the bottom are four buttons: "Back", an empty button, an empty button, and an empty button.

No answer forward submenu is writable for var access level:

No Answer Forward

1. No Answer Forward: Disabled

2. Forward to:

3. After Ring Time: 12s

4. On Code:

5. Off Code:

Back Switch Save

When logging in to the phone user interface with admin access level, the phone user interface displays as below:

Always forward submenu is writable for admin access level:

Always Forward

1. Always Forward: Disabled

2. Forward to:

3. On Code:

4. Off Code:

Back Switch Save

Busy forward submenu is writable for admin access level:

Busy Forward

1. Busy Forward: Disabled

2. Forward to:

3. On Code:

4. Off Code:

Back Switch Save

No answer forward submenu is writable for admin access level:

For W56P IP DECT phones:

The following shows configuration segments for the handset user interface in the WebItemsLevel.cfg file for reference:

If you set the access permission of the high level, it will have an impact on that of the low level. In the following examples, the Settings menu has a higher level than other submenus.

Example: Configuration items in the WebItemsLevel.cfg for Telephony submenu settings:

```
[ GUI ]
Auto_Answer = 01
Auto_Intercom = 02
Default_Line = 03
Incoming_Lines = 02
Speed_Dial = 0
Blacklist = 1
```

According to the above configuration of access level:

For user access level, the Blacklist submenu is hidden. The Auto Answer, Auto Intercom, Default Line and Incoming Lines submenus are read-only. Only the Speed Dial submenu is writable.

For var access level, the Auto Intercom, Default Line and Incoming Lines submenus are read-only. The Auto Answer, Speed Dial and Blacklist submenus are writable.

For admin access level, only the Default Line submenu is read-only, the others are writable.

For more information on parameters of the WebItemsLevel.cfg file, refer to [Appendix-A: Configuration Parameters](#) on page 23.

Configuring Yealink IP Phones

User access level feature is disabled for Yealink W56P/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860 IP phones in neutral firmware version by default. Before using this feature, you need to enable it through auto provisioning introduced as following. User access level feature is configurable only via configuration files.

For SIP VP-T49G/CP860/W56P:

To configure user access level feature for Yealink IP phones:

1. Edit the following parameters in the configuration file (e.g., y000000000051.cfg).

Parameters	Permitted Values	Default
security.var_enable	0 or 1	0
Description: This parameter is used to enable or disable the login of the web/phone/handset user interface with different access levels. 0 -Disabled 1 -Enabled Note: It takes effect after reboot. Web User Interface: None Phone User Interface: None		
security.default_access_level	0, 1 or 2	0
Description: This parameter is used to configure the default access level to access the phone/handset user interface. 0 -user 1 -var 2 -admin Note: It works only if the value of the parameter "security.var_enable" is set to 1 (Enabled). It takes effect after reboot. Web User Interface:		

Parameters	Permitted Values	Default
None Phone User Interface: None		
web_item_level.url	FTP, TFTP, HTTP or HTTPS download URL	Blank
Description: This parameter is used to configure the access URL of the WebItemsLevel.cfg file. Note: It takes effect after reboot. Web User Interface: None Phone User Interface: None		

The parameter settings in the configuration file for reference are shown as below:

security.var_enable = 1

web_item_level.url = ftp://192.168.1.100/WebItemsLevel.cfg

security.default_access_level = 1

2. Upload the configuration file to the directory of the provisioning server.
3. Configure the access URL of the provisioning server for the IP phone.
4. Trigger the IP phone to perform auto provisioning.

For more information on auto provisioning Yealink IP phones, refer to [Yealink SIP-T2 Series_T19\(P\) E2_T4_Series_CP860_W56P_IP_Phones_Auto_Provisioning_Guide](#).

For

SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2:

To configure user access level feature for Yealink IP phones:

1. Edit the following parameters in the configuration file (e.g., features.cfg).

Parameters	Permitted Values	Default
static.security.var_enable	0 or 1	0
Description: This parameter is used to enable or disable the login of the web/phone user interface with different access levels. 0 -Disabled 1 -Enabled Note: It takes effect after reboot. Web User Interface: None Phone User Interface: None		
static.security.default_access_level	0, 1 or 2	0
Description: This parameter is used to configure the default access level to access the phone user interface. 0 -user 1 -var 2 -admin Note: It works only if the value of the parameter "static.security.var_enable" is set to 1 (Enabled). It takes effect after reboot. Web User Interface: None Phone User Interface: None		
static.web_item_level.url	FTP, TFTP, HTTP or	Blank

Parameters	Permitted Values	Default
	HTTPS download URL	
<p>Description:</p> <p>This parameter is used to configure the access URL of the WebItemsLevel.cfg file.</p> <p>Note: It takes effect after reboot.</p> <p>Web User Interface:</p> <p>None</p> <p>Phone User Interface:</p> <p>None</p>		

The parameter settings in the configuration file for reference are shown as below:

```
static.security.var_enable = 1
```

```
static.web_item_level.url = ftp://192.168.1.100/WebItemsLevel.cfg
```

```
static.security.default_access_level = 1
```

- Upload the configuration file to the directory of the provisioning server.
- Reference the configuration file in the boot file (e.g., y0000000000000000.boot).
include:config "ftp://192.168.1.100/features.cfg"
- Upload the boot file to the directory of the provisioning server.
- Configure the access URL of the provisioning server for the IP phone.
- Trigger the IP phone to perform auto provisioning.

The boot file is only applicable to IP phones running firmware version 81 or later. For more information on auto provisioning Yealink IP phones, refer to [Yealink_SIP-T2 Series_T19\(P\) E2_T4_Series_IP_Phones_Auto_Provisioning_Guide_V81](#).

Logging the Web/Phone/Handset User Interface with Different Access Levels

When the user access level is enabled, you can login the web/phone/handset user interface with different access levels.

To login the web user interface with different access levels:

- Press the **OK/✓** key when the phone is idle to obtain the IP address.
For W56P, press the **OK->Status->Base** to obtain the IP address.
- Enter the IP address (e.g., http://192.168.0.10 or 192.168.0.10) in the address bar of web browser on your PC and then press the **Enter** key.
- Enter the user name (admin/var/user) and password (admin/var/user) in the login page.
- Click **Confirm** to login.

When logging in with different access levels, you can see different permissions of web user interface.

To login the phone user interface with different access levels:

1. Press **Menu->UserMode**.
2. Press ◀ or ▶ , or the **Switch** soft key to select the desired access level in the **User Type** field.
3. Enter the password in the **Password** field.



4. Press the **Save** soft key to accept the change.

You can see different permissions of phone user interface when logging in with different access levels.

To login the handset user interface with different access levels:


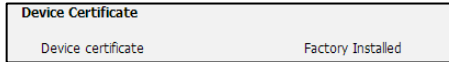

1. Press **OK->User Mode**.
2. Press ◀ or ▶ to select the desired access level in the **User Type** field.
3. Enter the password in the **Password** field.
4. Press the **Save** soft key to accept the change.

You can see different permissions of handset user interface when logging in with different access levels.

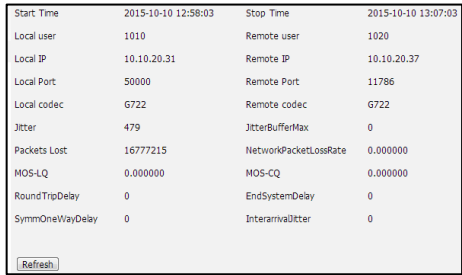
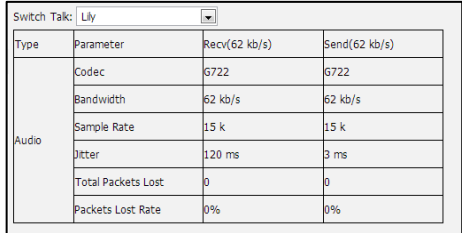
Appendix-A : Configuration Parameters

Configuration Parameters of Web User Interface


The following table lists configuration items in the WebItemsLevel.cfg file with associated configurations on the web user interface (take SIP-T46G IP phones as an example for reference):

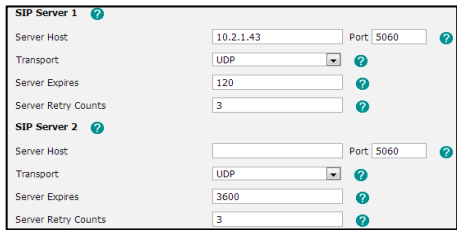
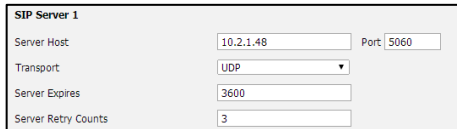
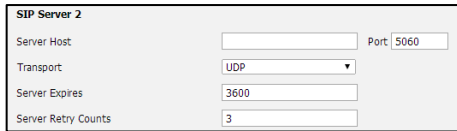
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Status-Menu]	Status-Basic = 0	Status->Status (the whole page)
	Status-RTP = 0 (not applicable to W56P IP DECT phones)	Status->RTP Status (the whole page)
	Status-VoIP = 0 (only applicable to W56P IP DECT phones)	Status->Handset&VoIP
	Status-TalkStats = 0 (only applicable to SIP VP-T49G IP phones)	Status->Talk Statistics (the whole page)
[Status]	version = 0	Status->Version 
	DeviceCertificate = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Status->Device Certificate 
	network = 0	Status->Network 
	IPv4 = 0	Status->IPv4

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface																
[Status]		<div>IPv4 </div> <table><tr><td>WAN Port Type</td><td>DHCP</td></tr><tr><td>WAN IP Address</td><td>10.3.6.205</td></tr><tr><td>Subnet Mask</td><td>255.255.255.0</td></tr><tr><td>Gateway</td><td>10.3.6.254</td></tr><tr><td>Primary DNS</td><td>192.168.1.167</td></tr><tr><td>Secondary DNS</td><td>192.168.1.166</td></tr></table>	WAN Port Type	DHCP	WAN IP Address	10.3.6.205	Subnet Mask	255.255.255.0	Gateway	10.3.6.254	Primary DNS	192.168.1.167	Secondary DNS	192.168.1.166				
	WAN Port Type	DHCP																
	WAN IP Address	10.3.6.205																
	Subnet Mask	255.255.255.0																
	Gateway	10.3.6.254																
Primary DNS	192.168.1.167																	
Secondary DNS	192.168.1.166																	
IPv6 = 0 (not applicable to W56P IP DECT phones)		<div>Status->IPv6</div> <div>IPv6 </div> <table><tr><td>WAN Port Type</td><td>DHCP</td></tr><tr><td>WAN IP Address</td><td>2006:1:1:1:215:65ff:fe45:6e47/64</td></tr><tr><td>Gateway</td><td>2006:1:1:1::/64</td></tr><tr><td>Primary DNS</td><td>::</td></tr><tr><td>Secondary DNS</td><td>::</td></tr></table>	WAN Port Type	DHCP	WAN IP Address	2006:1:1:1:215:65ff:fe45:6e47/64	Gateway	2006:1:1:1::/64	Primary DNS	::	Secondary DNS	::						
WAN Port Type	DHCP																	
WAN IP Address	2006:1:1:1:215:65ff:fe45:6e47/64																	
Gateway	2006:1:1:1::/64																	
Primary DNS	::																	
Secondary DNS	::																	
NetworkCommon = 0		<div>Status->Network Common</div> <div>Network Common </div> <table><tr><td>MAC Address</td><td>0015654146DD</td></tr><tr><td>WAN Prot. Status</td><td>100Mbps Full Duplex</td></tr><tr><td>PC Port Status</td><td>Link Down</td></tr><tr><td>Device Type</td><td>Router</td></tr><tr><td>Uptime</td><td>0 days 21:35</td></tr></table>	MAC Address	0015654146DD	WAN Prot. Status	100Mbps Full Duplex	PC Port Status	Link Down	Device Type	Router	Uptime	0 days 21:35						
MAC Address	0015654146DD																	
WAN Prot. Status	100Mbps Full Duplex																	
PC Port Status	Link Down																	
Device Type	Router																	
Uptime	0 days 21:35																	
AccountStatus = 0 (not applicable to W56P IP DECT phones)		<div>Status->Account Status</div> <div>Account Status </div> <table><tr><td>Account1</td><td>1010@10.2.1.199 : Registered</td></tr><tr><td>Account2</td><td>Disabled</td></tr><tr><td>Account3</td><td>Disabled</td></tr><tr><td>Account4</td><td>Disabled</td></tr><tr><td>Account5</td><td>Disabled</td></tr><tr><td>Account6</td><td>Disabled</td></tr></table>	Account1	1010@10.2.1.199 : Registered	Account2	Disabled	Account3	Disabled	Account4	Disabled	Account5	Disabled	Account6	Disabled				
Account1	1010@10.2.1.199 : Registered																	
Account2	Disabled																	
Account3	Disabled																	
Account4	Disabled																	
Account5	Disabled																	
Account6	Disabled																	
Ext = 0 (only applicable to SIP-T48G/T48S/T46G/T46S/T29G/T27P/T27G IP phones)		<div>Status->Ext</div> <div>For SIP-T29G and SIP-T27P/G:</div> <div>Ext </div> <table><tr><td>EXP20</td><td>1</td><td>Hardware Version</td><td>32.1.0.0</td></tr><tr><td>EXP20</td><td>1</td><td>Firmware Version</td><td>9.16.0.0</td></tr></table> <div>For SIP-T48G/S and SIP-T46G/S:</div> <div>Ext </div> <table><tr><td>EXP40</td><td>1</td><td>Hardware Version</td><td>66.0.0.0</td></tr><tr><td>EXP40</td><td>1</td><td>Firmware Version</td><td>6.16.0.0</td></tr></table>	EXP20	1	Hardware Version	32.1.0.0	EXP20	1	Firmware Version	9.16.0.0	EXP40	1	Hardware Version	66.0.0.0	EXP40	1	Firmware Version	6.16.0.0
EXP20	1	Hardware Version	32.1.0.0															
EXP20	1	Firmware Version	9.16.0.0															
EXP40	1	Hardware Version	66.0.0.0															
EXP40	1	Firmware Version	6.16.0.0															
[Status-VoIP]	registered-handset =	Status->Registered Handsets																

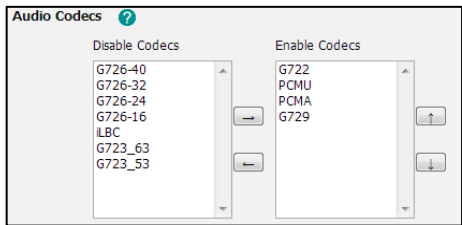
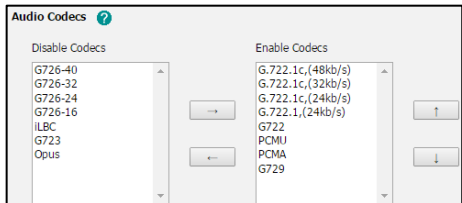
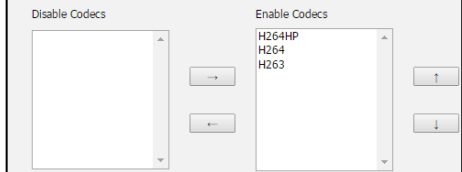
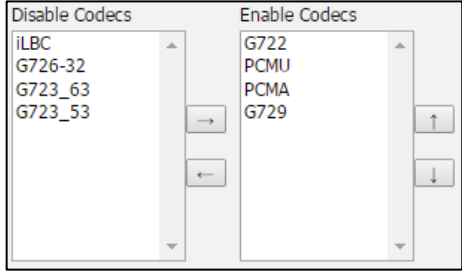
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
(only applicable to W56P IP DECT phones)	0	
	registered-new-hands et = 0	Status->Register New Handsets
	voip-status = 0	Status->Paging Status
	Paging = 0	Status->VoIP Status
[RTP-Status] (only applicable to SIP VP-T49G IP phones)	rtcp-status = 11	Status->RTP Status 
[Talk-Stats] (only applicable to SIP VP-T49G IP phones)	talk-stats = 0	Status->Talk Statistics 
[Account]	account-register = 0	Account->Register (the whole page)
	account-basic = 0	Account->Basic (the whole page)
	account-codec = 0	Account->Codec (the whole page)
	account-adv = 2 (0 for SIP VP-T49G/CP860/W56P IP phones)	Account->Advanced (the whole page)
	account-assign = 0 (only applicable to W56P IP DECT phones)	Account->Number Assignment (the whole page)
	account-handsetname = 0 (only applicable to W56P IP DECT phones)	Account->Handset Name (the whole page)

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	account-direct = 0 (only applicable to SIP VP-T49G IP phones)	Account->SIP IP Call (the whole page)
[Account-Register]	switch-account = 0 (not applicable to SIP-T19(P) E2/CP860 IP phones)	Account->Register->Account
	account_status = 0	Account->Register->Register Status
	line_active = 0	Account->Register->Line Active
	account_label = 0	Account->Register->Label
	display_name = 0	Account->Register->Display Name
	register_name = 01	Account->Register->Register Name
	user_name = 01	Account->Register->User Name
	account_password = 01 (2 for SIP VP-T49G/CP860/W56P IP phones)	Account->Register->Password
	enabled-outbound-proxy-server = 2 (01 for SIP VP-T49G/CP860/W56P IP phones)	Account->Register->Enable Outbound Proxy Server
	outbound-proxy-server = 2 (01 for SIP VP-T49G/CP860/W56P IP phones)	<p>SIP VP-T49G/CP860/W56P:</p> <p>Account->Register->Outbound Proxy Server 1</p> <p>Account->Register->Outbound Proxy Server 1->Port</p> <div> Outbound Proxy Server 1 <input type="text"/> Port: 5060 </div> <p>SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Account->Register->Outbound Proxy Server 1</p>

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Account-Register]	outbound-proxy-server-port = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Account->Register->Outbound Proxy Server 1->Port
	backup-outbound-proxy-server = 2 (01 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/CP860/W56P: Account->Register->Outbound Proxy Server 2 Account->Register->Outbound Proxy Server 2->Port  SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Account->Register->Outbound Proxy Server 2
	backup-outbound-proxy-server-port = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Account->Register->Outbound Proxy Server 2->Port
	proxy-fallback-interval = 2 (01 for SIP VP-T49G/CP860/W56P IP phones)	Account->Register->Proxy Fallback Interval
	transport-item = 2 (only applicable to SIP VP-T49G/CP860/W56P IP phones)	Account->Register->Transport
	NAT_traversal = 2	SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/W56P: Account->Register->NAT SIP VP-T49G:

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Account-Register]		Account->Register->NAT Account->SIP IP Call->NAT
	sip_server = 2	SIP VP-T49G/CP860/W56P: Account->Register->SIP Server 1/2  SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Account->Register->SIP Server 1 
	sip_server2 = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Account->Register->SIP Server 2 
[Account-Basic]	switch-account = 0 (not applicable to SIP-T19(P) E2/CP860 IP phones)	Account->Basic->Account
	proxy_require = 2 (0 for SIP VP-T49G/CP860/W56P IP phones)	Account->Basic->Proxy Require
	send_anonymous = 1	Account->Basic->Local Anonymous
	anonymous_rejection_enabled = 0	Account->Basic->Local Anonymous Rejection
	anonymous_call_enabled = 0 (for neutral firmware)	Account->Basic->Send Anonymous Code

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Account-Basic]	version only)	
	anonymous_call_OnCode = 1 (for neutral firmware version only)	Account->Basic->Send Anonymous Code->On Code
	anonymous_call_OffCode = 1 (for neutral firmware version only)	Account->Basic->Send Anonymous Code->Off Code
	send_anonymous_rejection_code = 0 (for neutral firmware version only)	Account->Basic->Send Anonymous Rejection Code
	anonymous_rejection_OnCode = 1 (for neutral firmware version only)	Account->Basic->Send Anonymous Rejection Code->On Code
	anonymous_rejection_OffCode = 1 (for neutral firmware version only)	Account->Basic->Send Anonymous Rejection Code->Off Code
	misscall-log = 0 (not applicable to W56P IP DECT phones)	Account->Basic->Missed Call Log
	auto-answer = 0 (not applicable to W56P IP DECT phones)	Account->Basic->Auto Answer
	auto-answer-mute = 0 (only applicable to CP860 IP phones)	Account->Basic->Auto Answer Mute
	ring-type = 0 (not applicable to W56P IP DECT	Account->Basic->Ring Type

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	phones)	
[Account-Codec]	switch-account = 0 (not applicable to SIP-T19(P) E2/CP860 IP phones)	Account->Codec->Account
	codecs-group = 0	<p>Account->Codec->Audio Codecs</p> <p>SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:</p>  <p>SIP VP-T49G:</p>  <p>Video codecs</p>  <p>W56P:</p> 
[Account-Adv]	switch-account = 0 (not applicable to SIP-T19(P) E2/CP860	Account->Advanced->Account

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Account-Adv]	IP phones)	
	UDP_keep-alive = 2 (only applicable to SIP VP-T49G/CP860/W56P IP phones)	Account->Advanced->Keep Alive Type Account->Advanced->Keep Alive Interval(Seconds)
	udp-keep-alive-type = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Account->Advanced->Keep Alive Type
	udp-keep-alive-interval = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Account->Advanced->Keep Alive Interval(Seconds)
	rport = 2	Account->Advanced->RPort
	subscribe-period = 2	Account->Advanced->Subscribe Period(Seconds)
	DTMF_items = 2	SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/W56P: Account->Advanced->DTMF Type Account->Advanced->DTMF Info Type Account->Advanced->DTMF Payload Type(96~127) SIP VP-T49G: Account->Advanced->DTMF Type Account->Advanced->DTMF Info Type Account->Advanced->DTMF Payload Type(96~127) Account->SIP IP Call->DTMF Type Account->SIP IP Call->DTMF Info Type Account->SIP IP Call->DTMF Payload Type(96~127)
	reliable_retransmission	Account->Advanced->Retransmission

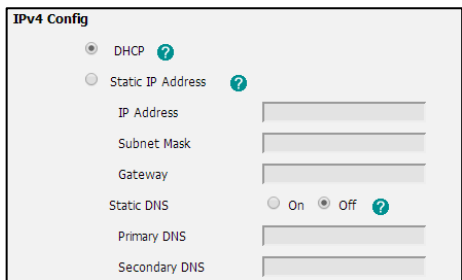
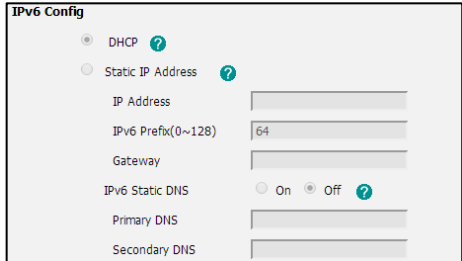



Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Account-Adv]	n = 2	
	subscribe-register = 2	Account->Advanced->Subscribe Register
	MWI-items = 2	Account->Advanced->Subscribe for MWI Account->Advanced->MWI Subscription Period(Seconds) Account->Advanced->Subscribe MWI To Voice Mail
	voice_mail = 2 (0 for SIP VP-T49G/CP860/ W56P IP phones)	Account->Advanced->Voice Mail
	voice_mail_display = 2 (not applicable to W56P IP DECT phones)	Account->Advanced->Voice Mail Display
	caller-ID-header = 2	Account->Advanced->Caller ID Source
	use-session-timer = 2	Account->Advanced-> Session Timer
	session-timer = 2	Account->Advanced->Session Expires(30~7200s)
	session-refresher = 2	Account->Advanced->Session Refresher
	user-equal-phone = 2	Account->Advanced->Send user=phone
	voice-encryption = 2	SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/W56P: Account->Advanced->RTP Encryption(SRTP) SIP VP-T49G: Account->Advanced->RTP Encryption(SRTP) Account->SIP IP Call->RTP Encryption(SRTP)
	ptime-item = 2	Account->Advanced->PTime(ms)
	BLF-list-URI = 2 (not applicable to	Account->Advanced->BLF List URI

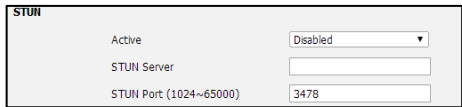
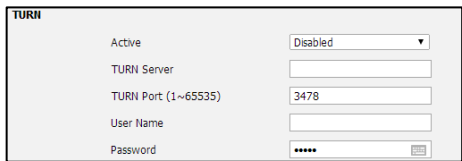
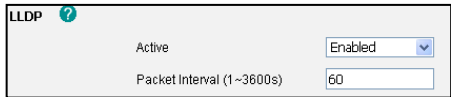

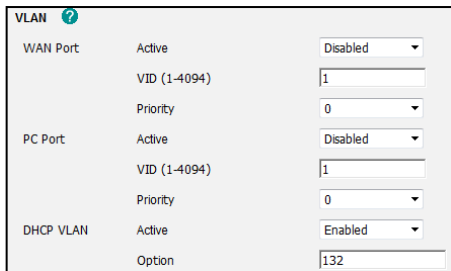
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Account-Adv]	SIP-T19(P) E2/ CP860/W56P IP phones)	
	BlfListCode = 2 (not applicable to SIP-T19(P) E2/ CP860/W56P IP phones)	Account->Advanced->BLF List Pickup Code
	BLFListBargeInCode = 2 (not applicable to SIP-T19(P) E2/ CP860/W56P IP phones)	Account->Advanced->BLF List Barge In Code
	BLF-List-Retrieve-Code = 2 (not applicable to SIP-T19(P) E2/ CP860/W56P IP phones)	Account->Advanced->BLF List Retrieve Call Parked Code
	share-line = 2	Account->Advanced->Shared Line
	Call-Pull-Feature-Access-Code = 2 (not applicable to SIP-T19(P) E2/W56P IP DECT phones)	Account->Advanced->Call Pull Feature Access Code (only appear when the parameter "account.X.shared_line" is set to 1)
	dialog-info-call-pickup = 2 (not applicable to SIP-T19(P) E2/ CP860/W56P IP phones)	Account->Advanced->Dialog Info Call Pickup
	BLA-number = 2 (not applicable to W56P/SIP VP-T49G IP phones)	Account->Advanced->BLA Number

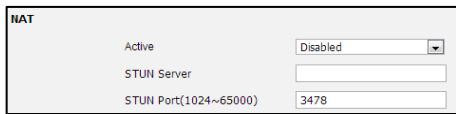





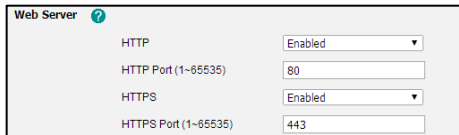
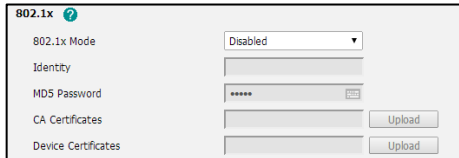
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Account-Adv]	BLA-subscription-period = 2 (not applicable to W56P/SIP VP-T49G IP phones)	Account->Advanced->BLA Subscription Period
	SIP-send-MAC = 2	Account->Advanced->SIP Send MAC
	SIP-send-line = 2	Account->Advanced->SIP Send Line
	SIP-Reg-retry-timer = 2	Account->Advanced->SIP Registration Retry Timer(0~1800s)
	conference-type = 2	Account->Advanced->Conference Type
	conference-uri = 2	Account->Advanced->Conference URI
	ACD-subscrip-period = 2 (not applicable to W56P IP DECT phones)	Account->Advanced->ACD Subscribe Period(120~3600s)
	Earlymedia = 2 (not applicable to W56P IP DECT phones)	Account->Advanced->Early Media
	SIPServerType = 2	Account->Advanced->SIP Server Type
	Music-ServerURI = 2 (not applicable to W56P IP DECT phones)	Account->Advanced->Music Server URI
	Direct-Call-Pickup-Code = 2 (not applicable to W56P IP DECT phones)	Account->Advanced->Directed Call Pickup Code
	Group-Call-Pickup-Code = 2 (not applicable to W56P IP DECT phones)	Account->Advanced->Group Call Pickup Code

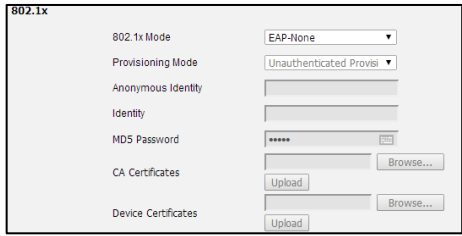
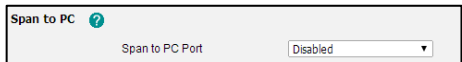

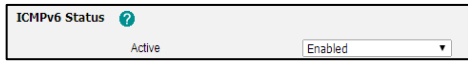
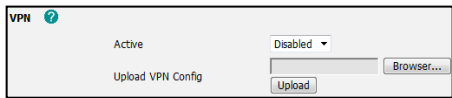
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Account-Adv]	Distinctive-Ring-Tones = 2 (not applicable to W56P IP DECT phones)	Account->Advanced->Distinctive Ring Tones
	UnregisterOnReboot = 2	Account->Advanced->Unregister When Reboot
	Out-Dialog-BLF = 2 (not applicable to SIP-T19(P) E2/CP860/W56P IP phones)	Account->Advanced->Out Dialog BLF
	RTCP-Collector-Name = 2 (not applicable to W56P IP DECT phones)	Account->Advanced->VQ RTCP-XR Collector Name
	RTCP-Collector-Address = 2 (not applicable to W56P IP DECT phones)	Account->Advanced->VQ RTCP-XR Collector Address
	RTCP-Collector-Port = 2 (not applicable to W56P IP DECT phones)	Account->Advanced->VQ RTCP-XR Collector Port
	Number-Of-Linekey = 2 (1 for SIP VP-T49G IP phone; not applicable to SIP-T19(P) E2/CP860/W56P IP phones)	Account->Advanced->Number of line key (only appear when the parameter "features.auto_linekeys.enable" is set to 1)
[Account-Assign] (only applicable to	incoming-lines = 0	Account->Number Assignment->Incoming lines

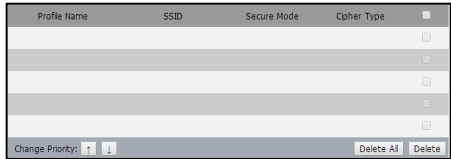
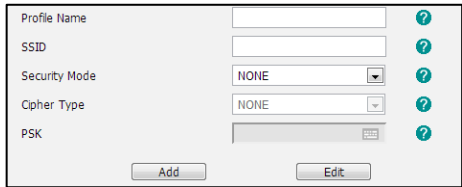
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
W56P IP DECT phones)	outgoing-lines = 0	Account->Number Assignment->Outgoing lines
[Account-Handsetname] (only applicable to W56P IP DECT phones)	Handsetname = 1	Account->Handset Name
[Network]	network-basic = 0	Network->Basic (the whole page)
	network-pcport = 0 (not applicable to CP860/W56P IP phones)	Network->PC Port (the whole page)
	network-nat = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Network->NAT (the whole page)
	network-advanced = 2 (0 for SIP VP-T49G/CP860/W56P IP phones)	Network->Advanced (the whole page)
	network-wifi = 0 (only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Network->Wi-Fi (the whole page)
	shotlevel = 0 (only applicable to SIP VP-T49G/CP860/W56P IP phones)	
[Network-Basic]	ipaddress-mode = 0 (2 for SIP VP-T49G/CP860/W56P IP phones)	Network->Basic->Internet Port->Mode(IPv4/IPv6)

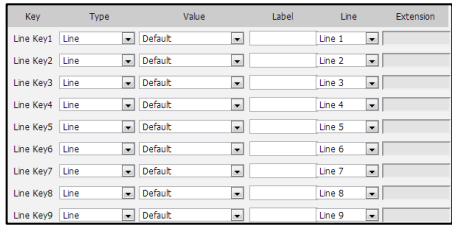
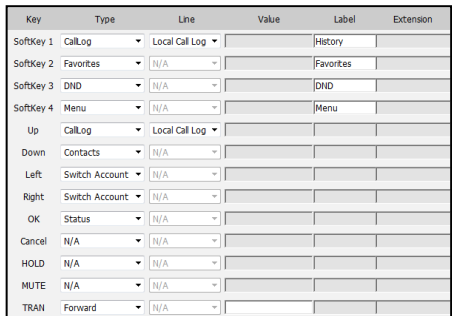
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Network-Basic]	ipv4config = 0 (2 for SIP VP-T49G/CP860/ W56P IP phones)	Network->Basic->IPv4 Config 
	ipv6config = 0 (2 for SIP VP-T49G/CP860 IP phones; not applicable to W56P IP DECT phones)	Network->Basic->IPv6 Config 
	wan-ppoe = 2 (only applicable to VP SIP-T49G/W56P IP phones)	Network->Basic->PPPoE Network->Basic->PPPoE->User Name Network->Basic->PPPoE->Password
[Network-PCPort]	pcport-active = 0 (not applicable to CP860/W56P IP phones)	Network->PC Port->PC Port Active 
[Network-Nat] (not applicable to SIP VP-T49G/CP860/ W56P IP phones)	manual = 2	Network->NAT->Nat Manual 
	manual-switch = 2	Network->NAT->Nat Manual->Active
	manual-ip = 2	Network->NAT->Nat Manual->IP Address
	ICE = 2	Network->NAT->ICE 
	ICE-switch = 2	Network->NAT->ICE->Active
	STUN = 2	Network->NAT->STUN

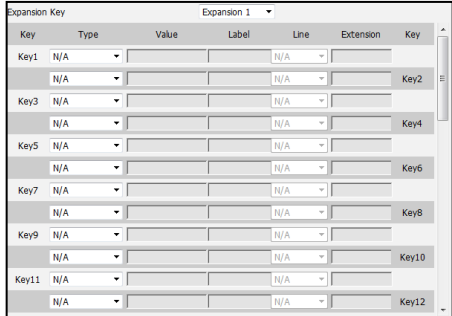
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Network-Nat] (not applicable to SIP VP-T49G/CP860/ W56P IP phones)		
	STUN-switch = 2	Network->NAT->STUN->Active
	STUN-server = 2	Network->NAT->STUN->STUN Server
	STUN-port = 2	Network->NAT->STUN->STUN Port (1024~65000)
	TURN = 2	Network->NAT->TURN 
	TURN-switch = 2	Network->NAT->TURN->Active
	TURN-server = 2	Network->NAT->TURN->TURN Server
	TURN-port = 2	Network->NAT->TURN->TURN Port (1~65535)
	TURN-username = 2	Network->NAT->TURN->User Name
	TURN-password = 2	Network->NAT->TURN->Password
[Network-Advanced]	LLDP-items = 2	Network->Advanced->LLDP 
	CDP-items = 2 (not applicable to W56P IP DECT phones)	Network->Advanced->CDP 
	VLAN-items = 2	Network->Advanced->VLAN 
	NAT-items = 2 (only applicable to SIP)	Network->Advanced->NAT


Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Network-Advanced]	VP-T49G/CP860/ W56P IP phones)	
	port-link = 2 (not applicable to W56P IP DECT phones)	<p>Network->Advanced->Port Link</p> 
	voice-QoS = 2	<p>Network->Advanced->Voice QoS</p> <p>W56P/CP860/SIP-T48G/T48S/T46G/T46S/ T42G/T42S/T41P/T41S/T40P/T29G/T27P/ T27G/T23P/T23G/T21(P) E2/T19(P) E2:</p>  <p>SIP VP-T49G:</p> 
	reserve-port = 0 (only applicable to SIP VP-T49G IP phones)	<p>Network->Advanced->Reserved Port</p> 
	local-RTP-port = 2 (not applicable to SIP VP-T49G IP phones)	<p>Network->Advanced->Local RTP Port</p> 
	web-server = 2	<p>Network->Advanced->Web Server</p> 
	8021x = 2	<p>Network->Advanced->802.1x</p> <p>SIP VP-T49G/W56P/CP860:</p> 

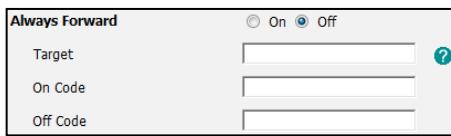

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Network-Advanced]		SIP-T48G/T48S/T46G/T46S/T42G/T42S/ T41P/T41S/T40P/T29G/T27P/T27G/T23P/ T23G/T21(P) E2/T19(P) E2: 
	span-to-pc-port = 2 (not applicable to CP860/W56P IP phones)	Network->Advanced->Span to PC 
	reg-surge-prev = 2	Network->Advanced->Registration Random 
	ICMPv6_Status = 2 (only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Network->Advanced->ICMPv6 Status 
	open-VPN = 2 (not applicable to SIP-T19(P) E2 IP phones)	Network->Advanced->VPN 
[Network-Wifi]	wifi-active = 0 (2 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Network->Wi-Fi->Wi-Fi Active
	wifi-list = 0 (2 for SIP VP-T49G IP phones; only applicable to SIP	Network->Wi-Fi

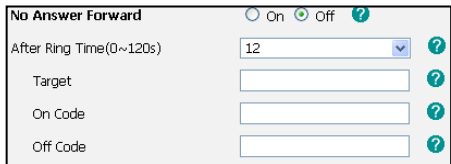
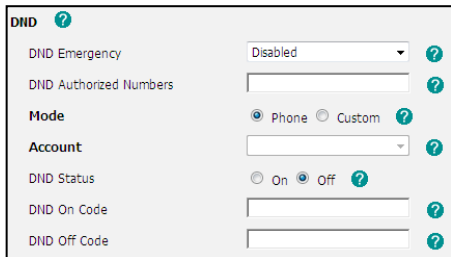
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Network-Wifi]	VP-T49G/SIP-T48G/ T48S/T46G/T46S/ T29G IP phones)	
	wifi-label = 0 (only applicable to SIP-T48G/T48S/T46G/ T46S/T29G IP phones)	Network->Wi-Fi->Profile Name
	wifi-ssid = 0 (only applicable to SIP-T48G/T48S/T46G/ T46S/T29G IP phones)	Network->Wi-Fi->SSID
	wifi-mode = 0 (only applicable to SIP-T48G/T48S/T46G/ T46S/T29G IP phones)	Network->Wi-Fi->Security Mode
	wifi-type = 0 (only applicable to SIP-T48G/T48S/T46G/ T46S/T29G IP phones)	Network->Wi-Fi->Cipher Type
	wifi-psk = 0 (only applicable to SIP-T48G/T48S/T46G/ T46S/T29G IP phones)	Network->Wi-Fi->PSK
	wifi-edit = 2 (only applicable to SIP VP-T49G IP phones)	Network->Wi-Fi-> 
	wifi-status-detection- timeout = 0 (only applicable to SIP VP-T49G IP phones)	Network->Wi-Fi->Time-Out For Wi-Fi Status Detection
[DSSKey] (not applicable to W56P IP DECT	linekey = 0 (not applicable to SIP-T19(P) E2/CP860	Dsskey->Line Key (the whole page(s) for all the line keys)

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
phones)	IP phones)	
	programmablekey = 0	Dsskey->Programable Key (the whole page)
	extkey = 0 (only applicable to SIP-T48G/T48S/T46G/T46S/T29G/T27P/T27G IP phones)	Dsskey->Ext Key (the whole page)
[LineKey] (not applicable to SIP-T19(P) E2/CP860/W56P IP phones)	line-key = 0	Dsskey->Line Key (for all the line keys on each page) 
	Enable-Page-Tips = 0 (only applicable to SIP-T46G/T46S/T29G/T42G/T42S/T41P/T41S/T27P/T27G IP phones)	Dsskey->Line Key->Enable Page Tips
	Label-Length = 0 (only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Dsskey->Line Key->Label Length
[ProgramKey] (not applicable to W56P IP DECT phones)	programmable-key = 0	Dsskey->Programable Key 
[ExtKey] (only applicable to	ext-key = 0	Dsskey->Ext Key

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
SIP-T48G/T48S/ T46G/T46S/T29G/ T27P/T27G IP phones)		
[Features]	features-forward = 0	Features->Forward&DND (the whole page)
	features-general = 0	Features->General Information (the whole page)
	features-audio = 0	Features->Audio (the whole page)
	features-intercom = 0 (not applicable to W56P IP DECT phones)	Features->Intercom (the whole page)
	features-transfer = 0	Features->Transfer (the whole page)
	features-callpickup = 0	Features->Call Pickup (the whole page)
	features-remote = 2 (0 for SIP VP-T49G/CP860 IP phones; not applicable to W56P IP DECT phones)	Features->Remote Control (the whole page)
	features-phonelock = 0	Features->Phone Lock (the whole page)
	features-acd = 2 (0 for SIP VP-T49G/CP860 IP phones; not applicable to W56P IP DECT phones)	Features->ACD (the whole page)
	features-sms = 0 (not applicable to W56P IP DECT phones)	Features->SMS (the whole page)

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Features]	features-actionurl = 2 (0 for SIP VP-T49G/CP860 IP phones; not applicable to W56P IP DECT phones)	Features->Action URL (the whole page)
	features-bluetooth = 0 (only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Features->Bluetooth (the whole page)
	features-powered = 0 (not applicable to CP860 IP phones)	Features->Power LED (the whole page)
	features-notifypop = 0 (not applicable to W56P IP DECT phones)	Features->Notification Popups (the whole page)
[Forward&DND]	head-forward = 0	Features->Forward&DND-> 
	forward-emergency = 0 (not applicable to W56P IP DECT phones)	Features->Forward&DND->Forward ->Forward Emergency
	forward-authorized-numbers = 0 (not applicable to W56P IP DECT phones)	Features->Forward&DND->Forward ->Forward Authorized Numbers
	forward-mode = 0 (not applicable to SIP-T19(P) E2/CP860 IP phones)	Features->Forward&DND->Forward ->Mode
	forward-account = 0	Features->Forward&DND->Forward

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Forward&DND]	(not applicable to SIP-T19(P) E2/CP860 IP phones)	->Account
	always-forward = 0	Features->Forward&DND->Always Forward 
	always-forward-enabled = 0	Features->Forward&DND->Forward->Always Forward->On/Off
	always-forward-target = 0	Features->Forward&DND->Forward->Always Forward->Target
	always-forward-OnCode = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->Always Forward->On Code
	always-forward-OffCode = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->Always Forward->Off Code
	busy-forward = 0	Features->Forward&DND->Busy Forward 
	busy-forward-enabled = 0	Features->Forward&DND->Forward->Busy Forward->On/Off
	busy-forward-target = 0	Features->Forward&DND->Forward->Busy Forward->Target
	busy-forward-OnCode = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->Busy Forward->On Code
	busy-forward-OffCode = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->Busy Forward->Off Code

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Forward&DND]	version only)	
	NoAnswer-forward = 0	Features->Forward&DND->No Answer Forward 
	NoAnswer-forward-enabled = 0	Features->Forward&DND->Forward->No Answer Forward->On/Off
	NoAnswer-forward-ringtimes = 0	Features->Forward&DND->Forward->No Answer Forward->After Ring Time (0~120s)
	NoAnswer-forward-target = 0	Features->Forward&DND->Forward->No Answer Forward->Target
	NoAnswer-forward-OnCode = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->No Answer Forward->On Code
	NoAnswer-forward-OffCode = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->No Answer Forward->Off Code
	DND = 0	Features->Forward&DND->DND 
	DND-Emergency = 0 (not applicable to W56P IP DECT phones)	Features->Forward&DND->DND->DND Emergency
	DND-Authorized-Numbers = 0 (not applicable to	Features->Forward&DND->DND->DND Authorized Numbers

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Forward&DND]	W56P IP DECT phones)	
	DND-mode = 0 (01 for SIP VP-T49G/CP860/ W56P IP phones; not applicable to SIP-T19(P) E2/CP860 IP phones)	Features->Forward&DND->DND->Mode
	DND-account = 0 (01 for SIP VP-T49G/CP860/ W56P IP phones; not applicable to SIP-T19(P) E2/CP860 IP phones)	Features->Forward&DND->DND->Account
	DND-Status = 0 (01 for SIP VP-T49G/CP860/ W56P IP phones)	Features->Forward&DND->DND->DND Status
	DND-OnCode = 0 (01 for SIP VP-T49G/CP860/ W56P IP phones; for neutral firmware version only)	Features->Forward&DND->DND->On Code
	DND-OffCode = 0 (01 for SIP VP-T49G/CP860/ W56P IP phones; for neutral firmware version only)	Features->Forward&DND->DND->Off Code
[General-Information]	call_waiting = 0	Features->General Information->Call Waiting Features->General Information->Call Waiting On Code (for neutral firmware version only)

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[General-Information]		Features->General Information->Call Waiting Off Code (for neutral firmware version only)
	auto-redial = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Auto Redial
	auto_redial_interval = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Auto Redial Interval(1~300s)
	auto_redial_times = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Auto Redial Times (1~300)
	key_as_send = 0	Features->General Information->Key As Send
	reserve-pound = 2	Features->General Information->Reserve # in User Name
	hotline-number = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Hotline Number
	hotline-delay = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Hotline Delay(0~10s)
	busytone_delay = 0	Features->General Information->Busy Tone Delay (Seconds)
	return-code-refuse = 0	Features->General Information->Return Code When Refuse
	return-code-DND = 0	Features->General Information->Return Code When DND
	call_completion = 0 (not applicable to	Features->General Information->Call Completion

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[General-Information]	W56P IP DECT phones)	
	feature-key-synchronization = 0	Features->General Information->Feature Key Synchronization
	TimeOut-for-DialNow = 0	Features->General Information->Time Out for Dial Now Rule
	RFC-2543-Hold = 2	Features->General Information->RFC 2543 Hold
	use-outbound-in-dialog = 2	Features->General Information->Use Outbound Proxy In Dialog
	IsDeal-180 = 2	Features->General Information->180 Ring Workaround
	logon-wizard = 2 (not applicable to CP860/W56P IP phones)	Features->General Information->Logon Wizard
	PswPrefix = 0 (2 for SIP VP-T49G/CP860 IP phones; not applicable to W56P IP DECT phones)	Features->General Information->PswPrefix
	PswLength = 0 (2 for SIP VP-T49G/CP860 IP phones; not applicable to W56P IP DECT phones)	Features->General Information->PswLength
	PswDial = 0 (2 for SIP VP-T49G/CP860 IP phones; not applicable to W56P IP DECT phones)	Features->General Information->PswDial
	SaveCallHistory = 2	Features->General Information->Save Call Log

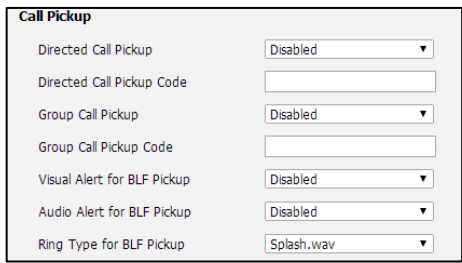
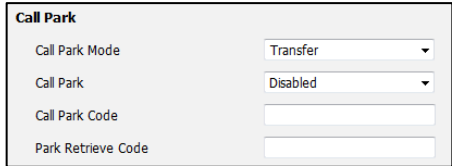
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[General-Information]	SuppressDTMFDisplay = 1	Features->General Information->Suppress DTMF Display
	SuppressDTMFDisplay Delay = 1	Features->General Information->Suppress DTMF Display Delay
	play-local-DTMF-tone = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Play Local DTMF Tone
	DTMFRepetition = 0 (not applicable to W56P IP DECT phones)	Features->General Information->DTMF Repetition
	MulticastCodec = 0 (not applicable to SIP-T19(P) E2/W56P IP phones)	Features->General Information->Multicast Codec
	PlayHoldTone = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Play Hold Tone
	PlayHoldToneDelay = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Play Hold Tone Delay
	AllowMute = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Allow Mute
	DualHeadset = 0 (1 for SIP VP-T49G IP phones; not applicable to CP860/W56P IP phones)	Features->General Information->Dual Headset

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[General-Information]	AutoAnswerDelay = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Auto Answer Delay(1~4s)
	enable-auto-answer-tone = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Enable Auto Answer Tone
	HeadsetPrior = 0 (not applicable to CP860/W56P IP phones)	Features->General Information->Headset Prior
	DTMFReplaceTran = 0 (not applicable to W56P IP DECT phones)	Features->General Information->DTMF Replace Tran
	TranSendDTMF = 1 (not applicable to W56P IP DECT phones)	Features->General Information->Tran Send DTMF
	SendPoundKey = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Send Pound Key
	FwdInternational = 0	Features->General Information->Fwd International
	Diversion-History-Info = 1	Features->General Information->Diversion/History-Info
	allow-trans-exist-call = 0 (not applicable to W56P/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Features->General Information->Allow Trans Exist Call

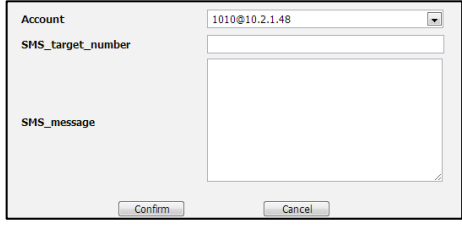
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[General-Information]	blf-led-mode = 0 (not applicable to W56P/SIP VP-T49G/SIP-T19(P) E2/CP860 IP phones)	Features->General Information->BLF LED Mode
	ReLogOffTime = 2	Features->General Information->Auto Logout Time(1~1000min)
	call-number-filter = 0	Features->General Information->Call Number Filter
	Use_Logo = 0 (not applicable to W56P/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Features->General Information->Use Logo
	upload_logo = 0 (not applicable to W56P/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Features->General Information->Upload Logo
	sip-trust-control = 2	Features->General Information->Accept SIP Trust Server Only
	allow-IP-call = 0	SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/W56P: Features->General Information->Allow IP Call SIP VP-T49G: Account->SIP IP Call->Allow IP Call
	IP-direct-auto-answer = 0 (not applicable to W56P IP DECT phones)	SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/W56P: Features->General Information->IP Direct Auto Answer SIP VP-T49G:

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[General-Information]		Account->SIP IP Call->IP Direct Auto Answer
	calllog-show-num = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Call List Show Number
	voicemail-tone = 0	Features->General Information->Voice Mail Tone
	DHCP-hostname = 0	Features->General Information->DHCP Hostname
	reboot-in-talking = 0	Features->General Information->Reboot In Talking
	Hide-Feature-Access-Codes = 0 (not applicable to W56P IP DECT phones)	Features->General Information->Hide Feature Access Codes
	display-method-on-dialing = 2	Features->General Information->Display Method on Dialing
	auto-linekeys = 1 (not applicable to SIP-T19(P) E2/CP860/W56P IP phones)	Features->General Information->Auto Linekeys
	end-call-onhook = 0 (only applicable to W56P IP DECT phones)	Features->General Information->End Call On Hook
	call-waiting-tone = 0	Features->Audio->Call Waiting Tone

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Features-Audio]	button-sound = 0 (not applicable to W56P IP DECT phones)	Features->Audio->Key Tone
	send-sound = 0 (not applicable to W56P IP DECT phones)	Features->Audio->Send Tone
	redial_tone = 0 (not applicable to W56P IP DECT phones)	Features->Audio->Redial Tone
	headset-send-volume = 1 (not applicable to CP860/W56P IP phones)	Features->Audio->Headset Send Volume (-50~50)
	handset-send-volume = 1 (not applicable to CP860/W56P IP phones)	Features->Audio->Handset Send Volume (-50~50)
	handfree-send-volume = 1 (not applicable to CP860/W56P IP phones)	Features->Audio->Handfree Send Volume (-50~50)
	Ringer_Dev = 0 (not applicable to CP860/W56P IP phones)	Features->Audio->Ringer Device for Headset
[Features-Intercom] (not applicable to W56P IP DECT phones)	allow-intercom = 0	Features->Intercom->Allow Intercom
	intercom-mute = 0	Features->Intercom->Intercom Mute
	intercom-tone = 0	Features->Intercom->Intercom Tone
	intercom-barge = 0	Features->Intercom->Intercom Barge

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Features-Transfer]	semi-attend-transfer = 0	Features->Transfer->Semi-Attended Transfer
	blind-tran-onhook = 0	Features->Transfer->Blind Transfer On Hook
	Semi-Attend-Trans-OnHook = 0	Features->Transfer->Attended Transfer On Hook
	transfer-on-conference-hang-up = 0 (not applicable to W56P IP DECT phones)	Features->Transfer->Transfer on Conference Hang up
	TransferModeViaDsskey = 0 (not applicable to SIP-T19(P) E2/CP860/W56P IP phones)	Features->Transfer->Transfer Mode Via Dsskey
[Features-Callpickup]	Call-Pickup = 0	Features->Call Pickup->Call Pickup 
	Call-Park = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Features->Call Pickup->Call Park 
[Features-Remote] (not applicable to W56P IP DECT phones)	pushxml-server-addr = 2	Features->Remote Control->Push XML Server IP Address
	XMLSIPNotify = 2	Features->Remote Control->SIP Notify
	XMLBlockInCalling = 2 (1 for SIP)	Features->Remote Control->Block XML in Calling

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	VP-T49G/CP860/ W56P IP phones)	
	ActionURLimitIP = 2	Features->Remote Control->Action URI Allow IP List
	CSTAControl = 2 (not applicable to SIP VP-T49G/CP860/ W56P IP phones)	Features->Remote Control->CSTA Control
[Features-Lock] (not applicable to W56P IP DECT phones)	Lock_Enable = 0 (2 for SIP VP-T49G/CP860 IP phones)	Features->Phone Lock->Phone Lock Enable
	keyboard_lock = 0 (2 for SIP VP-T49G/CP860 IP phones)	Features->Phone Lock->Phone Lock Type
	Phone_Unlock_PIN = 0 (2 for SIP VP-T49G/CP860 IP phones)	Features->Phone Lock->Phone Unlock PIN(0~15 Digit)
	Phone_lock_time_out = 0 (2 for SIP VP-T49G/CP860 IP phones)	Features->Phone Lock->Phone Lock Time Out(0~3600s)
	emergency_setting = 0 (2 for SIP VP-T49G/CP860 IP phones)	Features->Phone Lock->Emergency
[Features-ACD] (not applicable to W56P IP DECT phones)	ACD-auto-available = 2	Features->ACD->ACD->ACD Auto Available
	ACD-auto-available-timer = 2	Features->ACD->ACD->ACD Auto Available Timer(0~120s)
[Features-SMS]	send-sms = 0	Features->SMS->

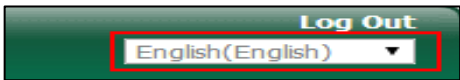
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
(only applicable to SIP VP-T49G IP phones)		
[Features-ActionURL] (not applicable to W56P IP DECT phones)	setup-complete = 2	Features->Action URL->Setup Completed
	log-on = 2	Features->Action URL->Registered
	log-off = 2	Features->Action URL->Unregistered
	register-fail = 2	Features->Action URL->Register Failed
	off-hook = 2	Features->Action URL->Off Hook
	on-hook = 2	Features->Action URL->On Hook
	incoming-call = 2	Features->Action URL->Incoming Call
	outgoing-call = 2	Features->Action URL->Outgoing Call
	call-establish = 2	Features->Action URL->Established
	Call-Terminated = 2	Features->Action URL->Terminated
	DND-On = 2	Features->Action URL->Open DND
	DND-Off = 2	Features->Action URL->Close DND
	Forward-On-Code = 2	Features->Action URL->Open Always Forward
	Forward-Off-Code = 2	Features->Action URL->Close Always Forward
	Busy-Forward-On = 2	Features->Action URL->Open Busy Forward
	Busy-Forward-Off = 2	Features->Action URL->Close Busy Forward
	No-Answer-Forward-On = 2	Features->Action URL->Open NoAnswer Forward
	No-Answer-Forward-Off = 2	Features->Action URL->Close NoAnswer Forward
	TransferCall = 2	Features->Action URL->Transfer Call
	Blind-transfer-call = 2	Features->Action URL->Blind Transfer
	Attended-transfer-call = 2	Features->Action URL->Attended Transfer

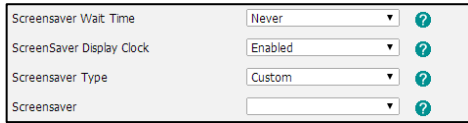
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Features-ActionURL] (not applicable to W56P IP DECT phones)	Hold = 2	Features->Action URL->Hold
	Unhold = 2	Features->Action URL->UnHold
	Mute = 2	Features->Action URL->Mute
	Unmute = 2	Features->Action URL->UnMute
	Missed-call = 2	Features->Action URL->Missed Call
	IPChange = 2	Features->Action URL->IP Changed
	IdletoBusy = 2	Features->Action URL->Idle To Busy
	BusytoIdle = 2	Features->Action URL->Busy To Idle
	RejectIncomingCall = 2	Features->Action URL->Reject Incoming Call
	AnswerNewInCall = 2	Features->Action URL->Answer New-In Call
	TransferFailed = 2	Features->Action URL->Transfer Failed
	TransferFinished = 2	Features->Action URL->Transfer Finished
	ForwardIncomingCall = 2	Features->Action URL->Forward Incoming Call
	UCServer = 2	Features->Action URL->UCServer (only appear when the parameter "action_url.is_ume" is set to 1)
	ReportIP = 2	Features->Action URL->Report IP (only appear when the parameter "action_url.is_ume" is set to 1)
	AutopFinish = 2	Features->Action URL->Autop Finish
	OpenCallWait = 2	Features->Action URL->Open Call Waiting
	CloseCallWait = 2	Features->Action URL->Close Call Waiting
	Headset = 2 (not applicable to CP860 IP phones)	Features->Action URL->Headset
	Handfree = 2 (not applicable to CP860 IP phones)	Features->Action URL->Handfree
	CancelCallOut = 2	Features->Action URL->Cancel Call Out

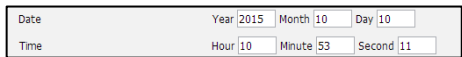
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	RemoteBusy = 2	Features->Action URL->Remote Busy
	CallRemoteCanceled = 2	Features->Action URL->Call Remote Canceled
[Features-Bluetooth]	bluetooth-active = 0 (only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Features->Bluetooth->Bluetooth Active
[Features-PowerLED] (not applicable to CP860 IP phones)	common-power-light-on = 0	Features->Power LED->Common Power Light On
	ring-power-light-flash = 0	Features->Power LED->Ringing Power Light Flash
	mail-power-light-flash = 0 (only applicable to W56P IP DECT phones)	Features->Power LED->Voice/Text Mail Power Light Flash
	miss-call-light-flash = 0 (only applicable to W56P IP DECT phones)	Features->Power LED->Miss Call Power Light Flash
	mute-power-light-flash = 0 (not applicable to W56P IP DECT phones)	Features->Power LED->Mute Power Light Flash
	hold-power-light-flash = 0 (not applicable to W56P IP DECT phones)	Features->Power LED->Hold/Held Power Light Flash
	talk-power-light-flash = 0 (not applicable to W56P IP DECT)	Features->Power LED->Talk/Dial Power Light On

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Features-PowerLED] (not applicable to CP860 IP phones)	phones)	
	misscall-power-light-flash = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Features->Power LED->MissCall Power Light Flash
[Features-Notification Popup] (not applicable to W56P IP DECT phones)	Display-Voice-Mail-Popup = 0	Features->Notification Popups->Display Voice Mail Popup
	Display-Missed-Call-Popup = 0	Features->Notification Popups->Display Missed Call Popup
	Display-Forward-Call-Popup = 0	Features->Notification Popups->Display Forward Call Popup
	Display-Text-Message-Popup = 0	Features->Notification Popups->Display Text Message Popup
[Settings]	settings-preference = 0	Settings->Preference (the whole page)
	settings-datetime = 0	Settings->Time & Date (the whole page)
	settings-calldisplay = 0	Settings->Call Display (the whole page)
	settings-upgrade = 0	Settings->Upgrade (the whole page)
	settings-autop = 2 (0 for SIP VP-T49G/CP860/W56P IP phones)	Settings->Auto Provision (the whole page)
	settings-config = 0	Settings->Configuration (the whole page)
	settings-dialplan = 2 (0 for SIP VP-T49G/CP860/W56P IP phones)	Settings->Dial Plan (the whole page)
	settings-voice = 2 (0 for SIP VP-T49G/CP860/W56P IP phones)	Settings->Voice (the whole page)
	settings-ring = 2	Settings->Ring (the whole page)

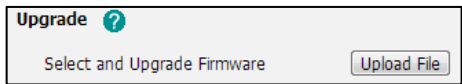
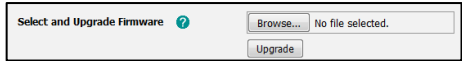
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings]	(1 for SIP VP-T49G/CP860 IP phones; not applicable to W56P IP DECT phones)	
	settings-tones = 2 (0 for SIP VP-T49G/CP860/ W56P IP phones)	Settings->Tones (the whole page)
	settings-softkey = 2 (not applicable to W56P IP DECT phones)	Settings->Softkey Layout (the whole page)
	settings-tr069 = 2	Settings->TR069 (the whole page)
	settings-voicemonitoring = 2 (0 for SIP VP-T49G/CP860 IP phones; not applicable to W56P IP DECT phones)	Settings->Voice Monitoring (the whole page)
	settings-sip = 2 (0 for SIP VP-T49G/CP860/ W56P IP phones)	Settings->SIP (the whole page)
	settings-powersaving = 0 (only applicable to SIP VP-T49G/SIP-T48G/ T48S/T46G/T46S/ T29G IP phones)	Settings->Power Saving (the whole page)
	settings-camera = 0 (only applicable to SIP VP-T49G IP phones)	Settings->Camera (the whole page)
	settings-video = 0 (only applicable to SIP	Settings->Video (the whole page)

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	VP-T49G IP phones)	
[Settings-Preference]	web-language = 0	<p>SIP VP-T49G/CP860/W56P: Settings->Preference->Language</p> <p>SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2:</p> 
	live-dialpad = 0 (not applicable to W56P IP DECT phones)	Settings->Preference->Live Dialpad
	inter-digit-time = 0 (not applicable to W56P IP DECT phones)	Settings->Preference->Inter Digit Time(1~14s)
	transparency = 0 (only applicable to SIP-T48G/S IP phones)	Settings->Preference->Transparency
	UnusedBackLight = 0 (only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Settings->Preference->Backlight Inactive Level (Unused BackLight)
	backlight = 0 (only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G/T27P/T27G IP phones)	Settings->Preference->Backlight Active Level (Active Backlight Level)
	BacklightTime = 0 (not applicable to SIP-T19(P) E2 and W56P IP phones)	Settings->Preference->Backlight Time(seconds)
	contrast_ctrl = 0 (only applicable to	Settings->Preference->Contrast


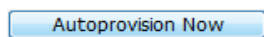
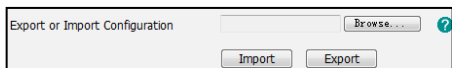
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-Preference]	CP860/SIP-T40P/T27P /T27G/T23P/T23G/ T21(P) E2/T19(P) E2 IP phones)	
	watchdog = 2	Settings->Preference->Watch Dog
	ring_type_setting = 0 (not applicable to W56P IP DECT phones)	Settings->Preference->Ring Type Settings->Preference->Upload Ringtone
	Wallpaper = 0 (only applicable to SIP VP-T49G/SIP-T48G/ T48S/T46G/T46S/ T29G IP phones)	Settings->Preference->Wallpaper Settings->Preference->Upload Wallpaper(480*272) Settings->Preference->Wallpaper with DSSkey unfold (only applicable to SIP-T48G/S IP phones)
	screen-saver-wait-time = 0 (only applicable to SIP VP-T49G IP phones)	Settings->Preference->Screensaver Wait Time
	screen-saver-type = 0 (only applicable to SIP VP-T49G IP phones)	Settings->Preference->Screensaver Type Settings->Preference->Screensaver
	ScreenSaver = 0 (only applicable to SIP-T48G/T48S/T46G/ T46S/T29G IP phones)	Settings->Preference-> 
	ScreenSaverUpload = 0 (only applicable to SIP-T48G/T48S/T46G/ T46S/T29G IP phones)	Settings->Preference->Upload Screensaver (only appear when the parameter "screensaver.type" is set to 1.)
[Time&Date]	DHCP-Time = 0	Settings->Time & Date->DHCP Time
	manual-time = 0	Settings->Time & Date->Manual Time
	time_zone = 0	Settings->Time & Date->Time Zone
	daylight-time = 0	Settings->Time & Date->Daylight Saving

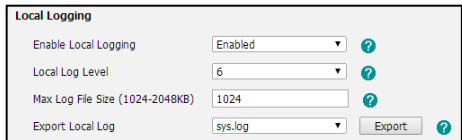
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Time&Date]		Time
	location = 0	Settings->Time & Date->Location
	time_type = 0	Settings->Time & Date->Fixed Type
	daylight_date = 0	Settings->Time & Date->Start Date Settings->Time & Date->End Date
	offset = 0	Settings->Time & Date->Offset(minutes)
	NTP_priority = 0	Settings->Time & Date->NTP by DHCP Priority
	prim_server = 0	SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41 P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/ T21(P) E2/T19(P) E2/CP860/W56P: Settings->Time & Date->Primary Server SIP VP-T49G: Settings->Time & Date->Primary NTP Server
	sec_server = 0	SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41 P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/ T21(P) E2/T19(P) E2/CP860/W56P: Settings->Time & Date->Secondary Server SIP VP-T49G: Settings->Time & Date->Secondary NTP Server
	update_interval = 0	Settings->Time & Date->Synchronism(15~86400s)
	manual-time-settings = 0	Settings->Time & Date->Manual Time 
	time_format_setting = 0	Settings->Time & Date->Time Format
	date_format_setting = 0	Settings->Time & Date->Date Format
	Display-Contact-Photo o = 0 (only applicable to SIP VP-T49G/SIP-T48G/	Settings->Call Display->Display Contact Photo

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-CallDisplay]	T48S/T46G/T46S/T29G IP phones)	
	Incoming-Call-Ringer-Animation = 0	Settings->Call Display->Display Called Party Information
	Call-Display-Method = 0	Settings->Call Display->Call Information Display Method
[Settings-Upgrade]	version_info = 0	Settings->Upgrade->Version <div> Version Firmware Version 28.71.0.60 Hardware Version 28.1.0.128.0.0.0 </div>
	reset_to_factory = 2 (1 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/CP860/W56P: Settings->Upgrade->Reset to Factory Setting SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Settings->Upgrade->Reset to factory
	reset = 0 (2 for SIP VP-T49G/CP860/W56P IP phones)	Settings->Upgrade->Reset
	reset_local_settings = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Upgrade->Reset local settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)
	reset_nonstatic_settings = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Upgrade->Reset non-static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)
	reset_static_settings = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Upgrade->Reset static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-Upgrade]	reset_userdata = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Upgrade->Reset userdata & local config (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)
	reset_local_config = 0 (only applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Upgrade->Reset Local Configuration (only appear when the parameter "auto_provision.custom.protect" is set to 1.)
	reboot_device = 0	Settings->Upgrade->Reboot
	upgrade_firmware = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/CP860/W56P: Settings->Upgrade->Upgrade  SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Settings->Upgrade->Select and Upgrade Firmware 
	upgrade_handset_firmware = 1 (only applicable to W56P IP DECT phones)	Settings->Upgrade->Select and Upgrade Handset Firmware
[Settings-AutoProvision]	pnip-active = 2	Settings->Auto Provision->PNP Active
	dhcp-active = 2	Settings->Auto Provision->DHCP Active
	custom-option = 2	Settings->Auto Provision->Custom Option(128~254)
	DHCP-Option-Value = 2	Settings->Auto Provision->DHCP Option Value
	server-URL = 2	Settings->Auto Provision->Server URL
	account = 2	Settings->Auto Provision->User Name
	password = 2	Settings->Auto Provision->Password
	attempt-expired-time	Settings->Auto Provision->Attempt



Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
Settings-AutoProvision]	= 2	Expired Time(s)
	common-AES-key = 2	Settings->Auto Provision->Common AES Key
	MAC-Oriented-AES-key = 2	Settings->Auto Provision->MAC-Oriented AES Key
	zero_active = 2 (not applicable to W56P IP DECT phones)	Settings->Auto Provision->Zero Active
	wait_time = 2 (not applicable to W56P IP DECT phones)	Settings->Auto Provision->Wait Time(1~100s)
	poweron-active = 2	Settings->Auto Provision->Power On
	repeatedly-active = 2	Settings->Auto Provision->Repeatedly
	repeat-interval = 2	Settings->Auto Provision->Interval(Minutes)
	weekly-active = 2	Settings->Auto Provision->Weekly
	weekly-upgrade-interval = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Auto Provision->Weekly Upgrade Interval(0~12week)
	inactivity-time-expire = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Auto Provision->Inactivity Time Expire(0~120min)
	autop-time = 2	Settings->Auto Provision->Time
	day-of-week = 2	Settings->Auto Provision->Day of Week


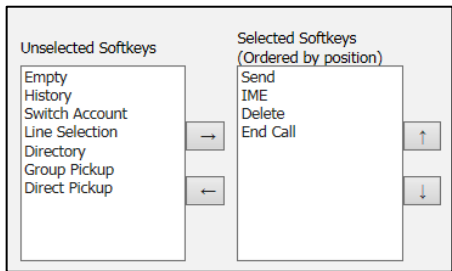
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-AutoProvision]		
	flexible-switch = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Auto Provision->Flexible Auto Provision
	flexible-interval = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Auto Provision->Flexible Interval Days
	flexible-autotime = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Auto Provision->Flexible Time
	btn-autop-now = 2	Settings->Auto Provision-> 
[Settings-Config]	opt-configfile = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	Settings->Configuration->Export or Import Configuration 
	opt-factory-configfile = 0 (2 for SIP VP-T49G/CP860/W56P IP phones)	Settings->Configuration->Import Factory Configuration (for SIP VP-T49G/CP860/W56P: only appear when the parameter "features.custom_factory_config.enable" is set to 1; for other IP phones: only appear when the parameter "static.features.custom_factory_config.enable" is set to 1)
	export-cfg-config-file = 0 (2 for SIP VP-T49G/CP860/W56P IP phones)	Settings->Configuration->Export CFG Configuration File

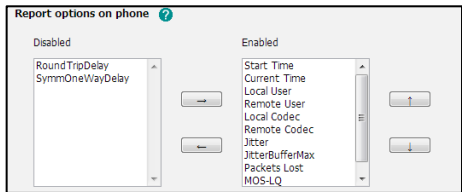
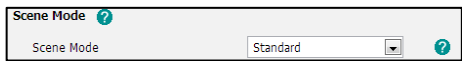
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-Config]	W56P IP phones)	
	import-cfg-config-file = 0 (2 for SIP VP-T49G/CP860/ W56P IP phones)	Settings->Configuration->Import CFG Configuration File
	pcap_trace = 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	Settings->Configuration->Pcap Feature Settings->Configuration->Packet Capture Count (only applicable to SIP VP-T49G IP phones) Settings->Configuration->Packet Capture Clip Bytes (only applicable to SIP VP-T49G IP phones) Settings->Configuration->Pcap Filter Type (only applicable to SIP VP-T49G IP phones) Settings->Configuration->Packet Filter String (only applicable to SIP VP-T49G IP phones)
	syslog = 1 (only applicable to SIP VP-T49G/CP860/ W56P IP phones)	Settings->Configuration->Export System Log
	SystemLogLevel = 2 (only applicable to SIP VP-T49G/CP860/ W56P IP phones)	Settings->Configuration->System Log Level
	Local_Logging = 0 (not applicable to SIP VP-T49G/CP860/ W56P IP phones)	Settings->Configuration->Local Logging 
	Local_Log_Switch = 0 (not applicable to SIP VP-T49G/CP860/ W56P IP phones)	Settings->Configuration->Local Logging->Enable Local Logging
	Local_Log_Level = 0	Settings->Configuration->Local

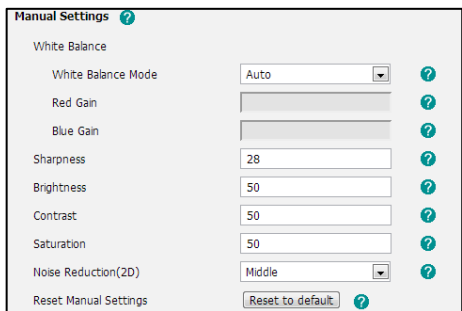
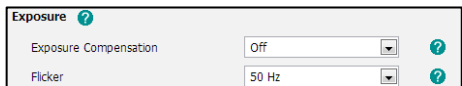

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-Config]	(not applicable to SIP VP-T49G/CP860/W56P IP phones)	Logging->Local Log Level
	Local_Log_Max_File_Size = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Configuration->Local Logging->Max Log File Size (1024-2048KB)
	Local_Log_Export = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Configuration->Local Logging->Export Local Log
	Syslog_Switch = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Configuration->Syslog->Enable Syslog Feature
	Syslog_Server = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Configuration->Syslog->Syslog Server Settings->Configuration->Syslog->Syslog Server->Port
	Syslog_Transport_Type = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Configuration->Syslog->Transport Type
	Syslog_Level = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Configuration->Syslog->Syslog Level
	Syslog_Facility = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Configuration->Syslog->Syslog Facility
	Syslog_Prepended_Mac = 2	Settings->Configuration->Syslog->Prepended MAC in Syslog

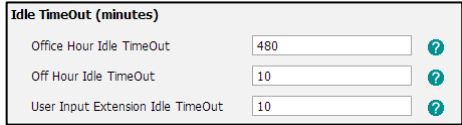
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-Config]	(not applicable to SIP VP-T49G/CP860/W56P IP phones)	
	ExportAllDiagnosticFiles = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Configuration->Export All Diagnostic Files
[Settings-DialPlan]	replace-rule = 0	Settings->Dial Plan->Replace Rule (the whole page)
	dial-now = 0	Settings->Dial Plan->Dial Now (the whole page)
	area-code = 0	Settings->Dial Plan->Area Code (the whole page)
	block-out = 0	Settings->Dial Plan->Block Out (the whole page)
	replace-rule-control = 0	Settings->Dial Plan->Replace Rule->Prefix Settings->Dial Plan->Replace Rule->Replace Settings->Dial Plan->Replace Rule->Account (not applicable to SIP-T19(P) E2/CP860 IP phones)
	dial-now-control = 0	Settings->Dial Plan->Dial Now->Rule Settings->Dial Plan->Dial Now->Account (not applicable to SIP-T19(P) E2/CP860 IP phones)
	area-code-control = 0	Settings->Dial Plan->Area Code->Code Settings->Dial Plan->Area Code->Min Length (1-15) Settings->Dial Plan->Area Code->Max Length (1-15) Settings->Dial Plan->Area Code->Account (not applicable to SIP-T19(P) E2/CP860 IP phones)
	block-out-control = 0	Settings->Dial Plan->Block Out->BlockOut NumberX(X=1,2,...,10)

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-DialPlan]		Settings->Dial Plan->Block Out->Account (not applicable to SIP-T19(P) E2/CP860 IP phones)
[Settings-Voice]	echo-cancellation = 2 (0 for SIP VP-T49G/CP860/ W56P IP phones)	Settings->Voice->Echo Cancellation 
	jitter-buffer = 2 (0 for SIP VP-T49G/CP860/ W56P IP phones)	Settings->Voice->JITTER BUFFER 
[Settings-Ring] (not applicable to W56P IP DECT phones)	personal-ring = 2 (1 for SIP VP-T49G/CP860 IP phones)	Settings->Ring->Internal Ringer Text Settings->Ring->Internal Ringer File
[Settings-Tones]	tone-items = 2 (0 for SIP VP-T49G/CP860/ W56P IP phones)	Settings->Tones->Select Country Settings->Tones->Dial Settings->Tones->Secondary Dial Settings->Tones->Ring Back Settings->Tones->Busy Settings->Tones->Congestion (not applicable to W56P IP DECT phones) Settings->Tones->Call Waiting Settings->Tones->Dial Recall (not applicable to W56P IP DECT phones) Settings->Tones->Info (not applicable to W56P IP DECT phones) Settings->Tones->Stutter (not applicable to W56P IP DECT phones) Settings->Tones->Message (not applicable to W56P IP DECT phones) Settings->Tones->Auto Answer (not applicable to W56P IP DECT phones)
	tone-country = 2 (not applicable to SIP)	Settings->Tones->Select Country

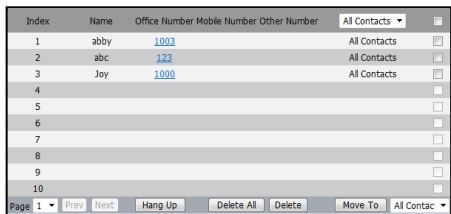
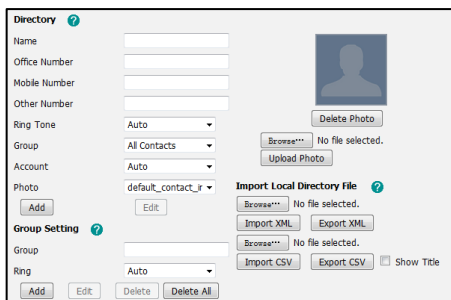
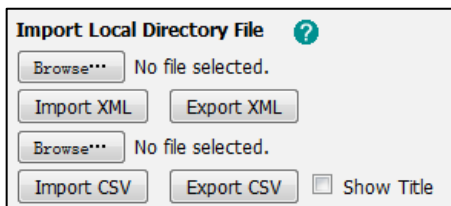




Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-Tones]	VP-T49G/CP860/ W56P IP phones)	
[Softkey] (not applicable to W56P IP DECT phones)	Custom_SoftKey = 2	Settings->Softkey Layout->Custom Softkey
	SoftKey_Type = 2	Settings->Softkey Layout->Call States 
	SoftKey_Select = 2	Settings->Softkey Layout-> 
[TR069]	head = 2	Settings->TR069-> TR069 ?
	EnableTR069 = 2	Settings->TR069->Enable TR069
	ACSUsername = 2	Settings->TR069->ACS Username
	ACSPassword = 2	Settings->TR069->ACS Password
	ACSURL = 2	Settings->TR069->ACS URL
	EnablePeriodicInform = 2	Settings->TR069->Enable Periodic Inform
	PeriodicInformInterval = 2	Settings->TR069->Periodic Inform Interval (seconds)
	RequestUsername = 2	Settings->TR069->Connection Request Username
	RequestPassword = 2	Settings->TR069->Connection Request Password
[Settings-VoiceM onitoring]	RTCP-Session-Report = 2	Settings->Voice Monitoring->VQ RTCP-XR Session Report
	RTCP-Interval-Report = 2	Settings->Voice Monitoring->VQ RTCP-XR Interval Report
	RTCP-Interval-Period = 2	Settings->Voice Monitoring->Period for Interval Report
	RTCP-Warning-Moslq = 2	Settings->Voice Monitoring->Warning threshold for Moslq

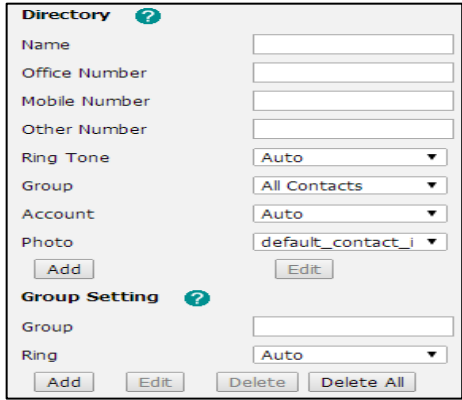
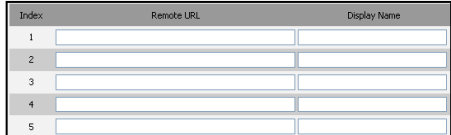
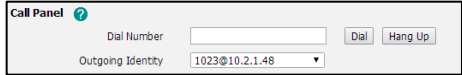


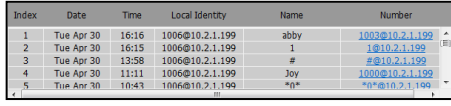
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-VoiceMonitoring]	RTCP-Critical-Mosq = 2	Settings->Voice Monitoring->Critical threshold for Mosq
	RTCP-Warning-Delay = 2	Settings->Voice Monitoring->Warning threshold for Delay
	RTCP-Critical-Delay = 2	Settings->Voice Monitoring->Critical threshold for Delay
	Display-VQReport-On-Web = 2	Settings->Voice Monitoring->Display Report options on Web
	Display-VQReport-On-UI = 2	Settings->Voice Monitoring->Display Report options on phone
	Voice-RTCP-XR-REPORT = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Settings->Voice Monitoring->Voice RTCP-XR Report
	RTCP-Report-Options = 2	Settings->Voice Monitoring->Report options on phone 
[Settings-SIP]	sip-session-timer = 2	Settings->SIP->SIP Session Timer T1 (0.5~10s)
		Settings->SIP->SIP Session Timer T2 (2~40s)
		Settings->SIP->SIP Session Timer T4 (2.5~60s)
	local-SIP-port = 2	Settings->SIP->Local SIP Port
	TLS-SIP-Port = 2	Settings->SIP->TLS SIP Port
[Settings-Camera] (only applicable to SIP VP-T49G IP phones)	scene-mode = 2	Settings->Camera->Scene Mode 
	manual-settings = 2	Settings->Camera->Manual Settings (only appear when the parameter

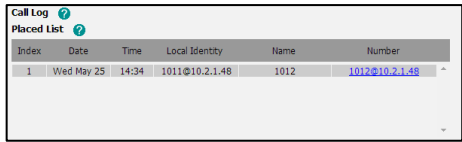
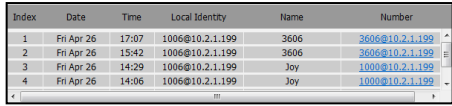
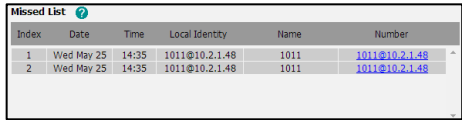
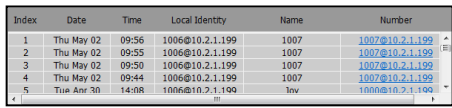
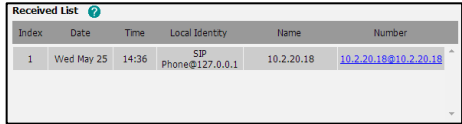
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-Camera] (only applicable to SIP VP-T49G IP phones)		<p>"camera.scene_mode" is set to 0)</p> 
	exposure = 2	<p>Settings->Camera->Exposure</p> 
	status-bar-icon = 2	Settings->Camera->Camera Icon on Status Bar
[Settings-Video] (only applicable to SIP VP-T49G IP phones)	video-active = 0	Settings->Video->Video Active
	auto-start-video = 0	Settings->Video->Auto Start Video
	auto-answer-video-mute = 0	Settings->Video->Auto Answer Video Mute
	uplink-bandwidth = 2	Settings->Video->Uplink Bandwidth
	downlink-bandwidth = 2	Settings->Video->Downlink Bandwidth
[Settings-Power Saving] (only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	enable = 2 (not applicable to SIP VP-T49G IP phones)	Settings->Power Saving->Power Saving
	office_hour = 0 (2 for SIP VP-T49G IP phones)	<p>Settings->Power Saving->Office Hour</p> 
	office_Monday = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->Monday

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-Power Saving] (only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	office_Tuesday = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->Tuesday
	office_Wednesday = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->Wednesday
	office_Thursday = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->Thursday
	office_Friday = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->Friday
	office_Saturday = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->Saturday
	office_Sunday = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->Sunday
	idle_timeout = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->Idle TimeOut (minutes) 
	office_timeout = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->Office Hour Idle TimeOut
	off_timeout = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->Off Hour Idle TimeOut
	user_input_ext_timeout = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->User Input Extension Idle TimeOut

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Contacts]	contacts-basic = 0	Directory->Local Directory (the whole page)
	contacts-remote = 1 (0 for SIP VP-T49G/CP860/ W56P IP phones)	Directory->Remote Phone Book (the whole page)
	contacts-callinfo = 0 (not applicable to W56P IP DECT phones)	Directory->Phone Call Info (the whole page)
	contacts-LDAP = 1 (0 for SIP VP-T49G/CP860/ W56P IP phones; not applicable to SIP-T19(P) E2 IP phones)	Directory->LDAP (the whole page)
	contacts-multicastIP = 1 (0 for SIP VP-T49G/CP860 IP phones; not applicable to W56P IP DECT phones)	Directory->Multicast IP (the whole page)
	contacts-favorite = 0	Directory->Setting (the whole page)
[Contacts-Basic] (only applicable to W56P IP DECT phones)	download-contacts = 0	Directory->Local Directory->File Template Download
	importcontacts = 0	Directory->Local Directory->Import Contacts
	export-contacts = 0	Directory->Local Directory->Export Contacts
	contact-list = 0 (not applicable to W56P IP DECT phones)	Directory->Local Directory

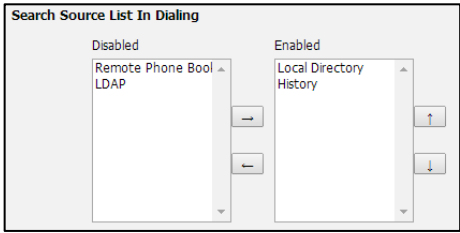
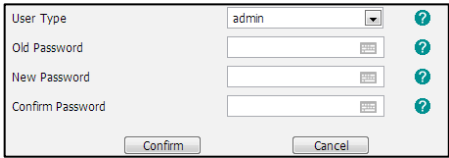
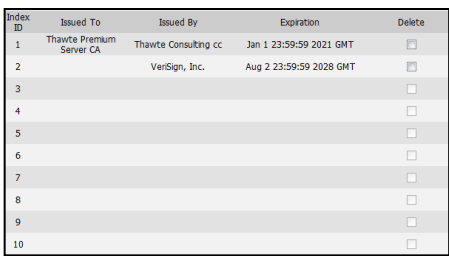

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[LocalPhoneBook] (not applicable to W56P IP DECT phones)		
	all-contacts-control = 0	Directory->Local Directory-> 
	import-export-contacts = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	Directory->Local Directory->Import Local Directory File 
	btnImportCSV = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	Directory->Local Directory-> 
	btnExportCSV = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	Directory->Local Directory-> 
	btnImportXML = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	Directory->Local Directory-> 
	btnExportXML = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	Directory->Local Directory-> 

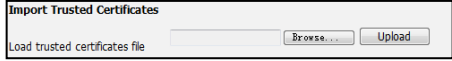

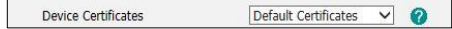
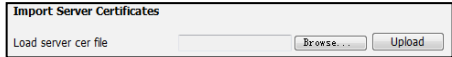
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[LocalPhoneBook] (not applicable to W56P IP DECT phones)	opt-contacts = 0	Directory->Local Directory-> 
[Contacts-Remote]	remote-phonebook-list = 1 (0 for SIP VP-T49G/CP860/W56P IP phones)	Directory->Remote Phone Book-> 
	SRemoteNameEnable = 1 (0 for SIP VP-T49G/CP860/W56P IP phones)	Directory->Remote Phone Book->Incoming/Outgoing Call Lookup
	SRemoteNameFlashTime = 1 (0 for SIP VP-T49G/CP860/W56P IP phones)	Directory->Remote Phone Book->Update Time Interval(Seconds)
[PhoneCallInfo] (not applicable to W56P IP DECT phones)	call-control = 0	Directory->Phone Call Info->Call Panel 
	dialed-list-title = 0 (only applicable to SIP VP-T49G/CP860 IP phones)	Directory->Phone Call Info->  Directory->Phone Call Info-> 
	dialed-list-content = 0 (only applicable to SIP VP-T49G/CP860 IP	Directory->Phone Call Info->Placed List 

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[PhoneCallInfo] (not applicable to W56P IP DECT phones)	phones)	
	dialed-list = 0 (not applicable to SIP VP-T49G/CP860 IP phones)	Directory->Phone Call Info-> 
	missed-list-title = 0 (only applicable to SIP VP-T49G/CP860 IP phones)	Directory->Phone Call Info-> Missed List ?
	missed-list-content = 0 (only applicable to SIP VP-T49G/CP860 IP phones)	Directory->Phone Call Info-> Missed List 
	missed-list = 0 (not applicable to SIP VP-T49G/CP860 IP phones)	Directory->Phone Call Info-> 
	received-list-title = 0 (only applicable to SIP VP-T49G/CP860 IP phones)	Directory->Phone Call Info-> Received List ?
	received-list-content = 0 (only applicable to SIP VP-T49G/CP860 IP phones)	Directory->Phone Call Info-> Received List 
	received-list = 0 (not applicable to SIP VP-T49G/CP860 IP phones)	Directory->Phone Call Info-> 
	forwarded-list-title = 0 (only applicable to SIP VP-T49G/CP860 IP phones)	Directory->Phone Call Info-> Forwarded List ?

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface																		
[PhoneCallInfo] (not applicable to W56P IP DECT phones)	phones)																			
	forwarded-list-content = 0 (only applicable to SIP VP-T49G/CP860 IP phones)	Directory->Phone Call Info->Forwarded List <table><tr><th>Index</th><th>Date</th><th>Time</th><th>Local Identity</th><th>Name</th><th>Number</th></tr><tr><td>1</td><td>Thu May 02</td><td>10:41</td><td>1006@10.2.1.199</td><td>Joy</td><td>1006@10.2.1.199</td></tr><tr><td>2</td><td>Thu May 02</td><td>10:41</td><td>1006@10.2.1.199</td><td>Joy</td><td>1006@10.2.1.199</td></tr></table>	Index	Date	Time	Local Identity	Name	Number	1	Thu May 02	10:41	1006@10.2.1.199	Joy	1006@10.2.1.199	2	Thu May 02	10:41	1006@10.2.1.199	Joy	1006@10.2.1.199
	Index	Date	Time	Local Identity	Name	Number														
1	Thu May 02	10:41	1006@10.2.1.199	Joy	1006@10.2.1.199															
2	Thu May 02	10:41	1006@10.2.1.199	Joy	1006@10.2.1.199															
forwarded-list = 0 (not applicable to SIP VP-T49G/CP860 IP phones)	Directory->Phone Call Info-> <div>Forwarded List</div> <table><tr><th>Index</th><th>Date</th><th>Time</th><th>Local Identity</th><th>Name</th><th>Number</th></tr><tr><td>1</td><td>Wed May 25</td><td>14:36</td><td>SIP Phone@127.0.0.1</td><td>10.2.20.18</td><td>10.2.20.18@10.2.20.18</td></tr></table>	Index	Date	Time	Local Identity	Name	Number	1	Wed May 25	14:36	SIP Phone@127.0.0.1	10.2.20.18	10.2.20.18@10.2.20.18							
Index	Date	Time	Local Identity	Name	Number															
1	Wed May 25	14:36	SIP Phone@127.0.0.1	10.2.20.18	10.2.20.18@10.2.20.18															
[LDAP] (not applicable to SIP-T19(P) E2 IP phones)	enable-LDAP = 0	Directory->LDAP->Enable LDAP																		
	LDAP-name-filter = 0	Directory->LDAP->LDAP Name Filter																		
	LDAP-number-filter = 0	Directory->LDAP->LDAP Number Filter																		
	LDAP-TLS-Mode = 0	Directory->LDAP->LDAP TLS Mode																		
	server-address = 0	Directory->LDAP->Server Address																		
	port = 0	Directory->LDAP->Port																		
	base = 0	Directory->LDAP->Base																		
	user-name = 0	Directory->LDAP->Username																		
	password = 0	Directory->LDAP->Password																		
	maxhits = 0	Directory->LDAP->Max Hits (1~32000)																		
	LDAP-name-attributes = 0	Directory->LDAP->LDAP Name Attributes																		
	LDAP-number-attributes = 0	Directory->LDAP->LDAP Number Attributes																		
	LDAP-display-name = 0	Directory->LDAP->LDAP Display Name																		
	protocol = 0	Directory->LDAP->Protocol																		
	LDAP-lookup-for-incoming-call = 0	Directory->LDAP->LDAP Lookup For Incoming Call																		
LDAP-lookup-for-callout = 0	Directory->LDAP-> LDAP Lookup For Callout																			
LDAP-sorting-results	Directory->LDAP->LDAP Sorting Results																			

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface																																																							
	= 0																																																								
[MulticastIP] (not applicable to W56P IP DECT phones)	Receive_Priority = 1 (0 for SIP VP-T49G/CP860 IP phones)	Directory->Multicast IP->Paging Barge																																																							
	PagePriorityActive = 1 (0 for SIP VP-T49G/CP860 IP phones)	Directory->Multicast IP->Paging Priority Active																																																							
	MulticastIPConfig = 1 (0 for SIP VP-T49G/CP860 IP phones)	Directory->Multicast IP-> <div><table><thead><tr><th>IP Address</th><th>Listening Address</th><th>Label</th><th>Channel</th><th>Priority</th></tr></thead><tbody><tr><td>1 IP Address</td><td></td><td></td><td>0 ▼</td><td>1</td></tr><tr><td>2 IP Address</td><td></td><td></td><td>0 ▼</td><td>2</td></tr><tr><td>3 IP Address</td><td></td><td></td><td>0 ▼</td><td>3</td></tr><tr><td>4 IP Address</td><td></td><td></td><td>0 ▼</td><td>4</td></tr><tr><td>5 IP Address</td><td></td><td></td><td>0 ▼</td><td>5</td></tr><tr><td>6 IP Address</td><td></td><td></td><td>0 ▼</td><td>6</td></tr><tr><td>7 IP Address</td><td></td><td></td><td>0 ▼</td><td>7</td></tr><tr><td>8 IP Address</td><td></td><td></td><td>0 ▼</td><td>8</td></tr><tr><td>9 IP Address</td><td></td><td></td><td>0 ▼</td><td>9</td></tr><tr><td>10 IP Address</td><td></td><td></td><td>0 ▼</td><td>10</td></tr></tbody></table></div>	IP Address	Listening Address	Label	Channel	Priority	1 IP Address			0 ▼	1	2 IP Address			0 ▼	2	3 IP Address			0 ▼	3	4 IP Address			0 ▼	4	5 IP Address			0 ▼	5	6 IP Address			0 ▼	6	7 IP Address			0 ▼	7	8 IP Address			0 ▼	8	9 IP Address			0 ▼	9	10 IP Address			0 ▼	10
	IP Address	Listening Address	Label	Channel	Priority																																																				
1 IP Address			0 ▼	1																																																					
2 IP Address			0 ▼	2																																																					
3 IP Address			0 ▼	3																																																					
4 IP Address			0 ▼	4																																																					
5 IP Address			0 ▼	5																																																					
6 IP Address			0 ▼	6																																																					
7 IP Address			0 ▼	7																																																					
8 IP Address			0 ▼	8																																																					
9 IP Address			0 ▼	9																																																					
10 IP Address			0 ▼	10																																																					
PagingList = 1 (0 for SIP VP-T49G/CP860 IP phones)	Directory->Multicast IP->Paging List <div><div>Paging List</div><table><thead><tr><th>Index</th><th>Paging Address</th><th>Label</th><th>Channel</th></tr></thead><tbody><tr><td>1</td><td></td><td></td><td>0 ▼</td></tr><tr><td>2</td><td></td><td></td><td>0 ▼</td></tr><tr><td>3</td><td></td><td></td><td>0 ▼</td></tr><tr><td>4</td><td></td><td></td><td>0 ▼</td></tr><tr><td>5</td><td></td><td></td><td>0 ▼</td></tr><tr><td>6</td><td></td><td></td><td>0 ▼</td></tr><tr><td>7</td><td></td><td></td><td>0 ▼</td></tr><tr><td>8</td><td></td><td></td><td>0 ▼</td></tr><tr><td>9</td><td></td><td></td><td>0 ▼</td></tr><tr><td>10</td><td></td><td></td><td>0 ▼</td></tr></tbody></table></div>	Index	Paging Address	Label	Channel	1			0 ▼	2			0 ▼	3			0 ▼	4			0 ▼	5			0 ▼	6			0 ▼	7			0 ▼	8			0 ▼	9			0 ▼	10			0 ▼												
Index	Paging Address	Label	Channel																																																						
1			0 ▼																																																						
2			0 ▼																																																						
3			0 ▼																																																						
4			0 ▼																																																						
5			0 ▼																																																						
6			0 ▼																																																						
7			0 ▼																																																						
8			0 ▼																																																						
9			0 ▼																																																						
10			0 ▼																																																						
[Contacts-Favorite]	contacts-group = 0 (not applicable to W56P/SIP VP-T49G IP phones)	Directory->Setting->Directory <div><div>Directory ?</div><div><div>Disabled</div><div>History Remote Phone Bool LDAP</div></div><div><div>Enabled</div><div>Local Directory</div></div></div>																																																							
	super-search = 0	Directory->Setting->Search Source List In Dialing																																																							

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Contacts-Favorite]		 <p>Directory->Setting->Recent Call In Dialing</p>
[Security]	password = 0	Security->Password (the whole page)
	trusted_cert = 2	Security->Trusted Certificates (the whole page)
	server_cert = 2	Security->Server Certificates (the whole page)
	base-pin = 0 (only applicable to W56P IP DECT phones)	Security->Base PIN (the whole page)
[Password]	set-password = 0 (only applicable to SIP VP-T49G IP phones)	<p>Security->Password-></p> 
[TrustCerts]	trust-certs-records = 2	<p>Security->Trusted Certificates-></p> 
	btn-delete-certs = 2	Security->Trusted Certificates-> 
	only-accept-trusted-certs = 2	Security->Trusted Certificates->Only Accept Trusted Certificates
	common-name-validation = 2	Security->Trusted Certificates->Common Name Validation
	ca-certs = 2	Security->Trusted Certificates->CA Certificates

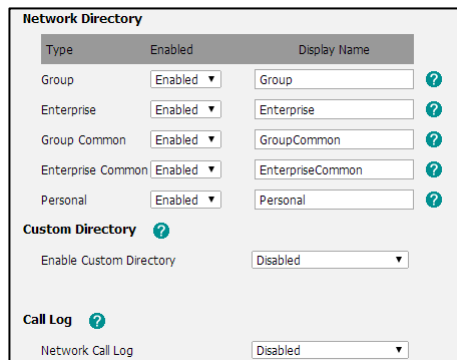
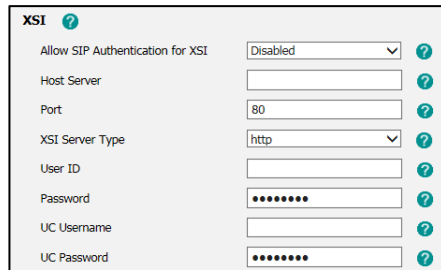
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[TrustCerts]	upload-trust-certs = 2	Security->Trusted Certificates->Import Trusted Certificates 
[ServerCerts]	server-certs-records = 2	Security->Server Certificates 
	server-certs-device-cert = 2	Security->Server Certificates->Device Certificates 
	server-certs-upload = 2	Security->Server Certificates->Import Server Certificates 
[BasePin] (only applicable to W56P IP DECT phones)	Base-unit-pin = 0	Security->Base PIN->Base Unit PIN
[HiddenSetting]	custom-factory-config = 2	Hidden->Custom Factory Config
	DND-Active = 2	Hidden->DND Active
	Forward-Active = 2	Hidden->Forward Active
	Broadsoft-Active = 2 (1 for SIP VP-T49G/CP860/W56P IP phones)	Hidden->Broadsoft Active
	Redirect-Active = 2 (1 for SIP VP-T49G/CP860/W56P IP phones)	Hidden->Redirect Active
	XSI-Active = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Hidden->XSI Active
	UC-Active = 2	Hidden->UC Active

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[HiddenSetting]	(1 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	
	remote_pcap_switch = 2 (only applicable to SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Hidden->Remote Pcap Hidden->Remote Pcap Port Hidden->Remote Pcap Password
	remote_pcap = 2 (only applicable to SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Hidden->Remote Pcap
	remote_pcap_port = 2 (only applicable to SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Hidden->Remote Pcap Port
	remote_pcap_password = 2 (only applicable to SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Hidden->Remote Pcap Password
	pushxml = 2 (not applicable to W56P IP DECT phones)	Hidden->PushXML Test

Configuration Parameters for BroadSoft UC-One Version

The following table lists configuration items in the WebItemsLevel.cfg file for configurations only integrated with BroadSoft UC-One firmware version on the web user interface.

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[General-Informat	EnableAutoFavorite = 0	Features->General Information->Enable

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
ion]	(only applicable to SIP VP-T49G/SIP-T48G/ T48S/T46G/T46S/T29G IP phones)	Auto Favorite
[Contacts] (only applicable to SIP VP-T49G/CP860/ W56P IP phones)	contacts-broadsoft = 0	Directory->Network Directory (the whole page)
[Contacts-Broadsoft] (only applicable to SIP VP-T49G/CP860/ W56P IP phones)	Directotries = 0	Directory->Network Directory->Network Directory Directory->Network Directory->Custom Directory Directory->Network Directory->Call Log 
		Directory->Network Directory->XSI 
	XSI = 0	
[Apps] (not applicable to SIP VP-T49G/CP860/ W56P IP phones)	broadsoft-XSI = 1	Applications->Broadsoft XSI (the whole page)
	broadsoft-XMPP = 1	Applications->Broadsoft XMPP (the whole page)
	XSI = 1	Applications->Broadsoft XSI->XSI Account

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface																		
[Broadsoft] (not applicable to SIP VP-T49G/CP860/ W56P IP phones)		<div>XSI Account Allow SIP Authentication for XSI <input type="text" value="Disabled"/> Host Server <input type="text"/> Port <input type="text" value="80"/> XSI Server Type <input type="text" value="http"/> User ID <input type="text"/> Password <input type="password" value="*****"/></div>																		
	Directotries = 1	<div>Applications->Broadsoft XSI->Network Directory Applications->Broadsoft XSI->Custom Directory <div>Network Directory <table><thead><tr><th>Type</th><th>Enabled</th><th>Display Name</th></tr></thead><tbody><tr><td>Group</td><td><input type="text" value="Enabled"/></td><td><input type="text" value="Group"/></td></tr><tr><td>Enterprise</td><td><input type="text" value="Enabled"/></td><td><input type="text" value="Enterprise"/></td></tr><tr><td>Group Common</td><td><input type="text" value="Enabled"/></td><td><input type="text" value="GroupCommon"/></td></tr><tr><td>Enterprise Common</td><td><input type="text" value="Enabled"/></td><td><input type="text" value="EnterpriseCommon"/></td></tr><tr><td>Personal</td><td><input type="text" value="Enabled"/></td><td><input type="text" value="Personal"/></td></tr></tbody></table> Custom Directory Enable Custom Directory <input type="text" value="Disabled"/></div></div>	Type	Enabled	Display Name	Group	<input type="text" value="Enabled"/>	<input type="text" value="Group"/>	Enterprise	<input type="text" value="Enabled"/>	<input type="text" value="Enterprise"/>	Group Common	<input type="text" value="Enabled"/>	<input type="text" value="GroupCommon"/>	Enterprise Common	<input type="text" value="Enabled"/>	<input type="text" value="EnterpriseCommon"/>	Personal	<input type="text" value="Enabled"/>	<input type="text" value="Personal"/>
	Type	Enabled	Display Name																	
	Group	<input type="text" value="Enabled"/>	<input type="text" value="Group"/>																	
	Enterprise	<input type="text" value="Enabled"/>	<input type="text" value="Enterprise"/>																	
Group Common	<input type="text" value="Enabled"/>	<input type="text" value="GroupCommon"/>																		
Enterprise Common	<input type="text" value="Enabled"/>	<input type="text" value="EnterpriseCommon"/>																		
Personal	<input type="text" value="Enabled"/>	<input type="text" value="Personal"/>																		
CallLog = 1	Applications->Broadsoft XSI->Call Log																			
XMPP-accout = 1	<div>Applications->Broadsoft XMPP->XMPP Account <div>XMPP Account XMPP UserName <input type="text" value="admin"/> XMPP Password <input type="password" value="*****"/></div></div>																			
XMPP-userame = 1	Applications->Broadsoft XMPP->XMPP UserName																			
XMPP-password = 1	Applications->Broadsoft XMPP->XMPP Password																			

Configuration Parameters of Phone User Interface

The following table lists configuration items in the WebItemsLevel.cfg file with associated configurations on the phone user interface of the SIP

VP-T49G/SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860 IP phones:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	status_list = 0	Menu->Status
	Status_IP = 0 (11 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G: Menu->Status->General->IPv4 SIP-T48G/T48S: Menu->Status->General->IPv4 IP SIP-T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Status->IPv4 (or IPv4 Address)
	Status_IPv6 = 0 (11 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G: Menu->Status->General->IPv6 SIP-T48G/T48S: Menu->Status->General->IPv6 IP SIP-T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Status->IPv6 (or IPv6 Address)
	Status_MAC = 0 (21 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Status->General->MAC Address SIP-T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Status->MAC Address
	Status_HW = 0 (01 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Status->Phone->Hardware SIP-T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Status->More->Phone->Hardware

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	Status_More = 0 (01 for CP860/W56P IP phones; not applicable to SIP VP-T49G/SIP-T48G/T48S IP phones)	Menu->Status->More
	network = 0	SIP VP-T49G/SIP-T48G/T48S: Menu->Status->Network SIP-T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Status->More->Network
	Status_More_Phone = 0	SIP VP-T49G/SIP-T48G/T48S: Menu->Status->Phone SIP-T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Status->More->Phone
	Status_More_Account = 0	SIP VP-T49G/SIP-T48G/T48S: Menu->Status->Accounts SIP-T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Status->More->Accounts (or Account)
	Status_More_RTP = 0 (02 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Status->RTP Status SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Status->More->RTP
	status_general= 0 (02 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T48G/	Menu->Status->General

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	T48S IP phones)	
	features = 0 (02 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Features
	callcontrol_forward = 1 (11 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Features->Call Forward
	always-forward = 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Features->Call Forward->Always Forward
	busy-forward = 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Features->Call Forward->Busy Forward
	NoAnswer-forward = 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Features->Call Forward->No Answer Forward
	call_waiting = 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Features->Call Waiting
	auto-Answer= 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Features->Auto Answer
	DSSKey = 0 (1 for SIP VP-T49G IP phones; not applicable to SIP-T19(P) E2/CP860/W56P IP phones)	Menu->Features->DSS Keys

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	key_as_send= 0 (12 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Features->General->Key As Send SIP-T46G/T46S/T29G: Menu->Features->Others->General->Key As Send SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Features->Key As Send
	hotline-number = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Features->Hot Line->Hotline Number SIP-T46G/T46S/T29G: Menu->Features->Others->Hot Line->Hotline Number SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Features->Hot Line->Hotline Number
	Features_Anonymous = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Anonymous SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Features->Anonymous Call
	Features_Diagnostics = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Menu->Features->Diagnostics
	Diagnostics_Network = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Menu->Features->Diagnostics->Network
	Diagnostics_Ping = 0	Menu->Features->Diagnostics->Network-

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	(not applicable to SIP VP-T49G/CP860/W56P IP phones)	> Ping
	Diagnostics_TraceRoute = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	Menu->Features->Diagnostics->Network->Trace Route
	Features_AutoRD = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Features->Auto Redial SIP-T46G/T46S/T29G: Menu->Features->Others->Auto Redial
	intercom = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	Menu->Features->Intercom
	call_completion = 0 (1 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Features->Call Completion SIP-T46G/T46S/T29G: Menu->Features->Others->Call Completion
	history_save= 2	SIP VP-T49G/SIP-T48G/T48S: Menu->Features->General->History Record SIP-T46G/T46S/T29G: Menu->Features->Others->General->History Record SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Features->History Setting

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	multypaginglist = 2 (10 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T42G/T42S/T41P/ T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Features->Paging List SIP-T46G/T46S/T29G: Menu->Features->Others->Paging List
	Main_Settings=0 (not applicable to SIP VP-T49G/SIP-T48G/ T48S/T46G/T46S/T29G IP phones)	Menu->Settings
	time_zone = 0	SIP VP-T49G/SIP-T48G/T48S: Menu->Basic->Time & Date->General->Time Zone SIP-T46G/T46S/T29G: Menu->Basic->Time & Date->General->SNTP Settings>Time Zone SIP-T42G/T42S/T41P/T41S/T40P/T27P/ T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Basic Settings->Time & Date->SNTP Settings->Time Zone
	Basic_Time_Manual = 0	SIP VP-T49G/SIP-T48G/T48S: Menu->Basic->Time & Date->General->Type (Manual Settings) SIP-T46G/T46S/T29G: Menu->Basic->Time & Date->General->Manual Settings SIP-T42G/T42S/T41P/T41S/T40P/T27P/ T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Basic Settings->Time & Date->Manual Settings
	display = 0 (10 for SIP	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	VP-T49G/CP860/ W56P IP phones)	Menu->Basic->Display SIP-T42G/T42S/T41P/T41S/T40P/T27P/ T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Basic Settings->Display
	sound = 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic->Sound SIP-T42G/T42S/T41P/T41S/T40P/T27P/ T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Basic Settings->Sound
	key_tone = 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic->Sound->Key Tone SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Basic Settings->Sound->Key Tone
	ring_type_setting = 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic->Sound->Ring Tones SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Basic Settings->Sound->Ring Tones
	blf_ring_setting = 0 (not applicable to SIP VP-T49G/CP860/W56P/ T19(P) E2 IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic->Sound->BLF Ring Type SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2: Menu->Settings->Basic Settings->Sound->BLF Ring Type
	unlock_pin = 0 (2 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic->Change PIN SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]		Menu->Settings->Basic Settings->Change PIN
	check_key_guard_lock = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic->Phone Lock SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Phone Lock
	bluetooth = 0 (1 for SIP VP-T49G IP phones; only applicable to VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Menu->Basic->Bluetooth
	wifi = 0 (2 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Menu->Basic->Wi-Fi
	account_label = 0 (02 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account X->Label SIP-T46G/T46S/T29G: Menu->Advanced->Accounts->Account X->Label SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Accounts->Account X->Label
	display_name = 0 (02 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account X->Display Name SIP-T46G/T46S/T29G: Menu->Advanced->Accounts->Account

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]		<p>X->Display Name</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:</p> <p>Menu->Settings->Advanced</p> <p>Settings->Accounts->Account X->Display Name</p>
	<p>register_name = 01</p> <p>(02 for SIP VP-T49G/CP860/W56P IP phones)</p>	<p>SIP VP-T49G/SIP-T48G/T48S:</p> <p>Menu->Advanced->Account->Account X->Register Name</p> <p>SIP-T46G/T46S/T29G:</p> <p>Menu->Advanced->Accounts->Account X->Register Name</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:</p> <p>Menu->Settings->Advanced</p> <p>Settings->Accounts->Account X->Register Name</p>
	<p>user_name = 01</p>	<p>SIP VP-T49G/SIP-T48G/T48S:</p> <p>Menu->Advanced->Account->Account X->User Name</p> <p>SIP-T46G/T46S/T29G:</p> <p>Menu->Advanced->Accounts->Account X->User Name</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:</p> <p>Menu->Settings->Advanced</p> <p>Settings->Accounts->Account X->User Name</p>
	<p>account_password = 01</p>	<p>SIP VP-T49G/SIP-T48G/T48S:</p> <p>Menu->Advanced->Account->Account X->Password</p> <p>SIP-T46G/T46S/T29G:</p> <p>Menu->Advanced->Accounts->Account X->Password</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:</p> <p>Menu->Settings->Advanced</p>

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]		Settings->Accounts->Account X->Password
	sip_server = 2 (01 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account X->SIP Server1/2 SIP-T46G/T46S/T29G: Menu->Advanced->Accounts->Account X->SIP Server1/2 SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Accounts->Account X->SIP Server1/2
	enabled-outbound-proxy-server = 2 (01 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account X->Outbound Status SIP-T46G/T46S/T29G: Menu->Advanced->Accounts->Account X->Outbound Status SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Accounts->Account X->Outbound Status
	outbound-proxy-server = 2 (01 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account X->Outbound Proxy1/2 SIP-T46G/T46S/T29G: Menu->Advanced->Accounts->Account X->Outbound Proxy1/2 SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Accounts->Account X->Outbound Proxy1/2
	STUN_server = 2 (02 for SIP	SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	VP-T49G/CP860 IP phones)	X->NAT Status SIP-T46G/T46S/T29G: Menu->Advanced->Accounts->Account X->NAT Status SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Accounts->Account X->NAT Status
	proxy-fallback-interval = 01 (only applicable to SIP VP-T49G IP phones)	Menu->Advanced->Account->Account X->Fallback Interval
	Adv_Network =0	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Network
	wan_port_title = 0 (02 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network->WAN Port SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Network->WAN Port
	VLAN-items = 2 (02 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network->VLAN SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Network->VLAN
	wanport = 0 (02 for SIP	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	VP-T49G/CP860/ W56P IP phones)	Menu->Advanced->Network->VLAN ->WAN Port SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Network->VLAN->WAN Port
	pcport = 2 (02 for SIP VP-T49G/W56P IP phones; not applicable to CP860 IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network->VLAN->PC Port SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Network->VLAN->PC Port
	dhcipvlan = 2 (02 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network->VLAN->DH CP VLAN SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Network->VLAN->DHCP VLAN
	web-server = 2 (02 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network->Webserver Type (Web Server) SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Network->Web Server
	8021x = 2 (02 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network->802.1x SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Network->802.1x

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	open-VPN = 2 (02 for SIP VP-T49G/CP860/ W56P IP phones; not applicable to SIP-T19(P) E2 IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network->VPN SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/CP860: Menu->Settings->Advanced Settings->Network->VPN
	open-lldp = 2 (02 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network->LLDP SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Network->LLDP
	network_cdp = 2 (02 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network->CDP SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Network->CDP
	network_nat = 2 (02 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network->NAT SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Network->NAT
	softkey Label = 0 (02 for CP860/W56P IP phones; not applicable to SIP VP-T49G/SIP-T48G/T48 S/T46G/T46S/T29G IP phones)	SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Softkey Label
	keyboard_lock = 02 (only applicable to SIP	SIP VP-T49G:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	VP-T49G/CP860 IP phones)	Menu->Advanced->Phone Lock CP860: Menu->Settings->Advanced Settings->Phone Lock
	Adv_Reboot = 0 (02 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Reboot SIP-T46G/T46S/T29G: Menu->Advanced->Reset&Reboot->Reboot SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Reboot
	Adv_ResetToFac = 2	SIP VP-T49G: Menu->Advanced->Reset to Factory SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Reset Config->Reset to factory SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Reset Config->Reset to factory CP860: Menu->Settings->Advanced Settings->Reset to factory settings
	Adv_ResetConfig = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Reset Config SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Reset Config
	ResetLocalConfig = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Reset Config->Reset local settings (only appear when the parameter "static.auto_provision.custom.protect" is set

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]		to 1.) SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Reset Config->Reset local settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)
	ResetNonStaticConfig = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Reset Config->Reset non-static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.) SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Reset Config->Reset non-static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)
	ResetStaticConfig = 2 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Reset Config->Reset static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.) SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Reset Config->Advanced Settings->Reset static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)
	ResetUserDataUserCfg = 0 (not applicable to SIP VP-T49G/CP860/	Menu->Advanced->Reset Config->Reset userdata & local config (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	W56P IP phones)	
	reset_default = 0 (only applicable to SIP VP-T49G/CP860 IP phones)	SIP VP-T49G: Menu->Advanced->Reset Config->Reset Local Settings (only appear when the parameter "auto_provision.custom.protect" is set to 1.) CP860: Menu->Settings->Advanced Settings->Reset Local Settings (only appear when the parameter "auto_provision.custom.protect" is set to 1.)
	password = 0	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Set Password (Change Password) SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Set Password (Change Password)
	Adv_AES = 02 (only applicable to SIP VP-T49G/CP860 IP phones)	SIP VP-T49G: Menu->Advanced->Set AES Key CP860: Menu->Settings->Advanced Settings->Set AES Key
	autoprovision = 2 (02 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Auto Provision SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Auto Provision
	international-forward = 2 (02 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced->FWD International SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]		Settings->FWD International
	SMS = 0 (12 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Message
	MSG_Voice = 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Message->Voice Mail
	viewvoicemail = 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Message->Voice Mail->View Voice Mail
	setvoicemail = 0 (1 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Message->Voice Mail->Set Voice Mail Code
	usermodeentry = 0	Menu->User Mode
	NAT_traversal = 2 (02 for SIP VP-T49G/CP860/ W56P IP phones; not applicable to SIP-T19(P) E2 IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account X->NAT Status SIP-T46G/T46S/T29G: Menu->Advanced->Accounts->Account X->NAT Status SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/CP860: Menu->Settings->Advanced Settings->Accounts->Account X->NAT Status
	contrast_ctrl = 0 (not applicable to SIP VP-T49G/SIP- T42G/T42S/T41P/T41S)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic->Display->Contrast Setting CP860/SIP-T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Display->Contrast

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	local_call_log_list = 0 (01 for SIP VP-T49G/CP860/ W56P IP phones)	Menu->Directory->Local Directory
	Adv_Account = 0 (2 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account SIP-T46G/T46S/T29G: Menu->Advanced->Accounts SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Accounts
	Basic_LANG = 0	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic->Language SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Basic Settings->Language
	Basic_Setting_BackLight = 0	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic->Display->Backlight SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Basic Settings->Display->Backlight CP860: Menu->Settings->Basic Settings->Display->Backlight Settings
	Basic_Time_Format = 0	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic->Time & Date->Time & Date Format SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Basic Settings->Time &

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]		Date->Time & Date Format
	Basic_Time_SNTP = 0	SIP VP-T49G/SIP-T48G/T48S: Menu->Basic->Time& Date->General->Type (SNTP Settings) SIP-T46G/T46S/T29G: Menu->Basic->Time & Date->General->SNTP Settings SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Basic Settings->Time & Date->SNTP Settings
	MSG_Text = 0	Menu->Message->Text Message
	Main_Contacts = 0	Menu->Directory
	SMS_Draftbox = 0	Menu->Message->Text Message ->Draftbox
	SMS_Inbox = 0	Menu->Message->Text Message ->Inbox
	SMS_NEW = 0	Menu->Message->Text Message ->New Message
	SMS_Outbox = 0	Menu->Message->Text Message ->Outbox
	SMS_Sentbox = 0	Menu->Message->Text Message-> Sentbox
	Set_Adv = 0	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Advanced SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings
	Set_Basic = 0	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]		Menu->Settings->Basic Settings
	blacklist_list = 0	Menu->Directory->Blacklist
	call_info = 0	Menu->History
	usb_record= 0 (only applicable to SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Menu->USB
	browse_usb_record= 0 (only applicable to SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Menu->USB->Browse Audio
	browse_usb_storage= 0 (only applicable to SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Menu->USB->Storage Space
	dhcptimezone = 0	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Basic->Time & Date->DHCP Time SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Basic Settings->Time & Date->DHCP Time
	line_active = 0 (2 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account X->Activation SIP-T46G/T46S/T29G: Menu->Advanced->Accounts->Account X->Activation SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Settings->Advanced Settings->Accounts->Account X->Activation CP860: Menu->Settings->Advanced Settings->Accounts->Account X->Account

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]		Status
	local_contact_list = 0	SIP VP-T49G/SIP-T48G/T48S: Menu->Directory->All Contacts SIP-T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P)E2/T19(P) E2/CP860: Menu->Directory->Local Directory
	remote_contact_list = 0	Menu->Directory->Remote Phone book
	status = 0	Menu->Status
	dnd = 0	Menu->Features->DND
	advanced_call_feature_default_account = 0 (2 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Features->Default Account SIP-T46G/T46S/T29G: Menu->Features->Others->Default Account
	advanced_call_feature_general = 0 (1 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Features->General SIP-T46G/T46S/T29G: Menu->Features->Others->General
	advanced_call_feature_list = 0 (1 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Menu->Features
	date_and_time_general = 0 (only applicable to SIP	Menu->Basic->Time &Date->General

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	
	reset_and_reboot_list = 0 (only applicable to SIP-T46G/T46S/T29G IP phones)	Menu->Advanced->Reset&Reboot
	display_wallpaper = 0 (1 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Menu->Basic->Display->Wallpaper
	display_dsskey_wallpaper = 0 (only applicable to SIP-T48G/T48S IP phones)	Menu->Basic->Display->DSSKey Wallpaper
	screensaver = 0 (only applicable to SIP-T48G/T48S/T46G/T46S/T29G IP phones)	Menu->Basic->Display->Screensaver
	camera_setting_interface = 00 (only applicable to SIP VP-T49G IP phones)	Menu->Basic->Camera Setting
	usb_interface = 00 (only applicable to SIP VP-T49G IP phones)	Menu->USB
	usb_browse_audio = 00 (only applicable to SIP VP-T49G IP phones)	Menu->USB->Browse Audio
	usb_browse_video = 00 (only applicable to SIP VP-T49G IP phones)	Menu->USB->Browse Video

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	usb_browse_photo = 00 (only applicable to SIP VP-T49G IP phones)	Menu->USB->Browse Photo
	usb_storage_property = 00 (only applicable to SIP VP-T49G IP phones)	Menu->USB->Storage Space
	hdmi = 00 (only applicable to SIP VP-T49G IP phones)	Menu->Basic->HDMI
	video_setting_interface = 00 (only applicable to SIP VP-T49G IP phones)	Menu->Basic->Video Setting
	usb-record = 0 (only applicable to CP860 IP phones)	Menu->USB Record
	browse_record_files = 0 (only applicable to CP860 IP phones)	Menu->USB Record->Playback Recording
	browse_usb_storage = 0 (only applicable to CP860 IP phones)	Menu->USB Record->Storage Media Properties

Configuration Parameters for BroadSoft UC-One Version

The following table lists configuration items in the WebItemsLevel.cfg file for configurations only integrated with BroadSoft UC-One firmware version on the phone user interface of the SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860 IP phones.

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	broadsoft_contact_list = 1 (0 for SIP VP-T49G/CP860/W56P IP phones)	Menu->Directory->Network Directory
	broadsoft_calllog_list = 0	Menu->History->Network CallLog
	CallControl = 1 (0 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Call Control
	callcontrol_anywhere = 1 (11 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Anywhere SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Call Control->Anywhere
	callcontrol_remoteoffice = 1 (11 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Remote Office SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Call Control->Remote Office
	callcontrol_dnd= 1 (11 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Do not Disturb

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]		SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Call Control->Do Not Disturb
	callcontrol_simultaneous ring = 1 (11 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Simultaneous Ring Personal SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Call Control->Simultaneous Ring Personal
	callcontrol_mobility = 1 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Mobility SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Mobility
	callcontrol_group_night_forward = 1 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Group Night Forward SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Group Night Forward
	callcontrol_callwaiting = 1 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Call Waiting SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Call Waiting
	callcontrol_forward_selective = 1 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Call Forward SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Call Forward
	callcontrol_executive = 1	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Executive

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	(not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Executive
	callcontrol_securityclassification = 1 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Security Classification SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Security Classification
	callcontrol_executive_assistant = 1 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Executive-Assistant SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Executive-Assistant
	callcontrol_hidenumber = 1 (11 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Hide Number SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Call Control->Hide Number
	callcontrol_anonymousrejection = 1 (11 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Anonymous Rejection SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Call Control->Anonymous Rejection
	callcontrol_initialacdstate = 1 (11 for SIP VP-T49G/CP860/W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Initial ACD State SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Call Control->Initial ACD State

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]		G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Call Control->Initial ACD State
	callcontrol_setacdstate =1 (11 for SIP VP-T49G/CP860/ W56P IP phones)	SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->ACD State SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Call Control->ACD State
	callcontrol_securityclassification = 0 (not applicable to SIP VP-T49G/CP860/W56P IP phones)	SIP-T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Security Classification SIP-T42G/T42S/T41P/T41S/T40P/T27P/T27 G/T23P/T23G/T21(P) E2/T19(P) E2/CP860: Menu->Call Control->Security Classification

Configuration Parameters of Handset User Interface

The following table lists configuration items in the WebItemsLevel.cfg file with associated configurations on the handset user interface of the W56P IP DECT phones:

Section Header	Parameters and Default Value	Configuration Items on the Handset User Interface
[GUI]	Menu_Status = 0	OK->Status
	Base = 0	OK->Status->Base
	Handset = 0	OK->Status->Handset
	LineStatus = 0	OK->Status->Line Status
	Menu_Intercom = 0	OK->Intercom
	Intercom_HSXS = 0	OK->Intercom->Handset X
	Intercom_ALLHS = 0	OK->Intercom->All HS
	Menu_VoiceMail = 0	OK->Voice Mail
	Play_Message = 0	OK->Voice Mail->Play Message
	Set_Voice_Mail = 0	OK->Voice Mail->Set Voice Mail
	Set_Key_1 = 0	OK->Voice Mail->Set Key 1
	Menu_CallFeatures = 0	OK->Call Features
	CallForward = 0	OK->Call Features->Call Forware
	AlwaysForward= 0	OK->Call Features->LineX->Always(Disable/Enable)
	BusyForward= 0	OK->Call Features->LineX->Busy(Disable/Enable)
	NoAnswerForward= 0	OK-> Call Features->LineX->No Answer(Disable/Enable)
	DND= 0	OK->Call Features->Do Not Disturb
	CallWaiting= 0	OK->Call Features->Call Waiting
	AnonymousRejection = 0	OK->Call Features->Anon.Call Rejection
	AnonymousCall = 0	OK->Call Features->Anonymous Call
	Menu_Directory = 0	OK->Directory
	Local_Contact_List= 0	OK->Directory->Local Directory
	Remote_Contact_List= 0	OK->Directory->Remote Dir

Section Header	Parameters and Default Value	Configuration Items on the Handset User Interface
[GUI]	Broadsoft_Contact_List= 0	OK->Directory->Network Directory
	LDAP_Contact_List= 0	OK->Directory->LDAP
	Menu_Settings = 0	OK->Settings
	DateTime = 0	OK->Settings->Date & Time
	Audio = 0	OK->Settings->Audio
	Advisory_Tones = 0	OK->Settings->Audio->Advisory Tones
	Ring_Tones = 0	OK->Settings->Audio->Ring Tones
	Volume = 0	OK->Settings->Audio->Ring Tones->Volume
	Melodies = 0	OK->Settings->Audio->Ring Tones->Melodies
	Display = 0	OK->Settings->Display
	Screen_Saver = 0	OK->Settings->Display->Screen Saver
	Wallpaper = 0	OK->Settings->Display->Wallpaper
	Display_Backlight = 0	OK->Settings->Display->Display Backlight
	Keypad_Light = 0	OK->Settings->Display->Keypad Light
	Time_Formate = 0	OK->Settings->Display->Time Format
	Date_Formate = 0	OK->Settings->Display->Date Format
	Input_Method = 0	OK->Settings->Display->Input Method
	Shortcut = 0	OK->Settings->Shortcut
	Soft_Left = 0	OK->Settings->Shortcut->History
	Soft_Right = 0	OK->Settings->Shortcut->Line Status
	Up = 0	OK->Settings->Shortcut->Intercom
	Down = 0	OK->Settings->Shortcut->Directory
	Left = 0	OK->Settings->Shortcut->Volume-
	Right = 0	OK->Settings->Shortcut->Volume+
	Language =0	OK->Settings->Language
	Registration = 0	OK->Settings->Registration
	Register_Handset = 0	OK->Settings->Registration->Register

Section Header	Parameters and Default Value	Configuration Items on the Handset User Interface
[GUI]		Handset
	De_reg_Handset = 0	OK->Settings->Registration->De-reg. Handset
	Select_Base = 0	OK->Settings->Registration->Select Base
	Telephony = 0	OK->Settings->Telephony
	Auto_Answer = 0	OK->Settings->Telephony->Auto Answer
	Auto_Intercom = 0	OK->Settings->Telephony->Auto Intercom
	Default_Line = 0	OK->Settings->Telephony->Default Line
	Incoming_Lines = 02	OK->Settings->Telephony->Incoming Lines
	Speed_Dial = 0	OK->Settings->Telephony->Speed Dial
	Blacklist = 0	OK->Settings->Telephony->Caller Blacklist
	SystemSettings= 0	OK->Settings->System Settings
	Network = 0	OK->Settings->System Settings->Network
	Handset_Reset = 0	OK->Settings->System Settings->Handset Reset
	Change_Base_PIN = 02	OK->Settings->System Settings->Change Base PIN
	Base_Reset_Local_Cfg = 02	OK->Settings->System Settings->Base Reset
	Base_Restart = 02	OK->Settings->System Settings->Base Restart
	Auto_Provision = 02	OK->Settings->System Settings->Auto Provision
	RPS = 02	OK->Settings->System Settings->RPS
	Eco_Mode_Plus = 02	OK->Settings->System Settings->Eco Mode+
	Eco_Mode = 0	OK->Settings->System Settings->Eco Mode
	Repeater_Mode = 02	OK->Settings->System

Section Header	Parameters and Default Value	Configuration Items on the Handset User Interface
[GUI]		Settings->Repeater Mode
	HandsetName= 0	OK->Settings->Handset Name
	UpgradeFirmware= 2	OK->Settings->Upgrade Firmware
	Menu_History = 0	OK->History
	All_Calls= 0	OK->History->All Calls
	Missed_Calls= 0	OK->History->Outgoing Calls
	Outgoing_Calls= 0	OK->History->Missed Calls
	Accepted_Calls= 0	OK->History->Accepted Calls
	Menu_Usermode = 0	OK->User Mode

Appendix-B : Sample Configuration Files

SIP VP-T49G IP Phones

The default configuration item settings in factory WebItemsLevel.cfg for SIP VP-T49G IP phones running firmware version 51.80.0.108 or later are:

```
[ Status-Menu ]
Status-Basic  = 0
Status-RTP    = 0
Status-TalkStats = 0

[ Status ]
version = 0
network = 0
IPv4 = 0
IPv6 = 0
NetworkCommon = 0
AccountStatus = 0
Ext = 0

[ RTP-Status ]
rtcp-status = 11

[ Talk-Stats ]
talk-stats = 0

[ Account ]
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 0
account-direct=0

[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
```

```
account_password = 2
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
```

```
transport-item = 2
backup-outbound-proxy-server = 01
NAT_traversal = 2
sip_server = 2
proxy-fallback-interval = 01
```

[Account-Basic]

```
switch-account = 0
proxy_require = 0
send_anonymous = 1
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
anonymous_rejection_enabled = 0
send_anonymous_rejection_code = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
misscall-log = 0
auto-answer = 0
ring-type = 0
```

[Account-Codec]

```
switch-account = 0
codecs-group = 0
```

[Account-Adv]

```
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
MWI-items = 2
voice_mail = 0
voice_mail_display = 2
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
```



```
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
Call-Pull-Feature-Access-Code = 2
dialog-info-call-pickup = 2
BLF-list-URI = 2
BLFListCode = 2
BLFListBargeInCode = 2
BLF-List-Retrieve-Code = 2
BLA-number = 2
BLA-subscription-period = 2
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
conference-type = 2
conference-uri = 2
ACD-subscrip-period = 2
Earlymedia = 2
SIPServerType = 2
Music-ServerURI = 2
Direct-Call-Pickup-Code = 2
Group-Call-Pickup-Code = 2
Distinctive-Ring-Tones = 2
UnregisterOnReboot = 2
Out-Dialog-BLF = 2
RTCP-Collector-Name = 2
RTCP-Collector-Address = 2
RTCP-Collector-Port = 2
Number-Of-Linekey = 1
subscribe-register = 2
```

[Network]

```
network-basic = 0
network-pcport = 0
network-advanced = 0
network-wifi = 0
shotlevel = 0
```

[Network-Basic]

```
ipaddress-mode = 2
ipv4config = 2
ipv6config = 2
```

```
wan-ppoe = 2

[ Network-PCPort ]
pcport-active = 0

[ Network-Advanced ]
LLDP-items = 2
CDP-items = 2
VLAN-items = 2
NAT-items = 2
port-link = 2
voice-QoS = 2
local-RTP-port = 2
web-server = 2
8021x = 2
span-to-pc-port = 2
reg-surge-prev = 2
ICMPv6_Status = 2
open-VPN = 2
reserve-port = 0

[Network-Wifi]
wifi-active = 2
wifi-list = 2
wifi-label = 2
wifi-ssid = 2
wifi-mode = 2
wifi-type = 2
wifi-psk = 2

wifi-edit = 2
wifi-status-detection-timeout = 0

[ DSSKey ]
memorykey = 0
linekey = 0
programmablekey = 0
extkey = 0

[ MemoryKey ]
memory-key = 0

[ LineKey ]
line-key = 0
```

Enable-Page-Tips = 0

Label-Length = 0

[ProgramKey]

programmable-key = 0

[ExtKey]

ext-key = 0

[Features]

features-forward = 0

features-general = 0

features-audio = 0

features-intercom = 0

features-transfer = 0

features-callpickup = 0

features-remote = 0

features-phonelock = 0

features-acd = 0

features-sms = 0

features-actionurl = 0

features-bluetooth = 0

features-powerled = 0

features-notifypop = 0

[Forward&DND]

head-forward = 0

forward-mode = 0

forward-account = 0

always-forward = 0

always-forward-enabled = 0

always-forward-target = 0

always-forward-OnCode = 0

always-forward-OffCode = 0

busy-forward = 0

busy-forward-enabled = 0

busy-forward-target = 0

busy-forward-OnCode = 0

busy-forward-OffCode = 0

NoAnswer-forward = 0

NoAnswer-forward-enabled = 0

NoAnswer-forward-ringtimes = 0

NoAnswer-forward-target = 0

NoAnswer-forward-OnCode = 0
NoAnswer-forward-OffCode = 0
DND = 0
DND-Emergency = 0
DND-Authorized-Numbers = 0
DND-mode = 01
DND-account = 01
DND-Status = 01
DND-OnCode = 01
DND-OffCode = 01

forward-emergency = 0
forward-authorized-numbers = 0

[General-Information]

call_waiting = 0
auto-redial = 0
auto_redial_interval = 0
auto_redial_times = 0
key_as_send = 0
reserve-pound = 2
hotline-number = 0
hotline-delay = 0
busytone_delay = 0
return-code-refuse = 0
return-code-DND = 0
call_completion = 0
feature-key-synchronisation = 0
TimeOut-for-DialNow = 0
RFC-2543-Hold = 2
use-outbound-in-dialog = 2
IsDeal-180 = 2
logon-wizard = 2
PswPrefix = 2
PswLength = 2
PswDial = 2
SaveCallHistory = 2
SuppressDTMFDisplay = 1
SuppressDTMFDisplayDelay = 1
play-local-DTMF-tone = 0
DTMFRepetition = 0
MulticastCodec = 0
PlayHoldTone = 0
PlayHoldToneDelay = 0

```
AllowMute = 0
DualHeadset = 1
AutoAnswerDelay = 0
HeadsetPrior = 0
DTMFReplaceTran = 0
TranSendDTMF = 1
SendPoundKey = 0
FwdInternational = 0
Diversion-History-Info = 1
allow-trans-exist-call = 0
ReLogOffTime = 2
call-number-filter = 0
Use_Logo = 0
upload_logo = 0
allow-IP-call = 0
IP-direct-auto-answer = 0
calllog-show-num = 0
voicemail-tone = 0
DHCP-hostname = 0
EnableAutoFavorite = 0
reboot-in-talking = 0
Hide-Feature-Access-Codes = 0
display-method-on-dialing = 2
calllog-show-num = 0
auto-linekeys = 1
sip-trust-control = 2
enable-auto-answer-tone = 0

[ Features-Audio ]
call-waiting-tone = 0
button-sound = 0
redial_tone = 0
send-sound = 0
headset-send-volume = 1
handset-send-volume = 1
handfree-send-volume = 1
Ringer_Dev = 0

[ Features-Intercom ]
allow-intercom = 0
intercom-mute = 0
intercom-tone = 0
intercom-barge = 0
```

```
[ Features-Transfer ]  
semi-attend-transfer = 0  
blind-tran-onhook = 0  
Semi-Attend-Trans-OnHook = 0  
transfer-on-conference-hang-up = 0  
TransferModeViaDsskey = 0
```

```
[ Features-Callpickup ]  
Call-Pickup = 0  
Call-Park = 0
```

```
[ Features-Remote ]  
pushxml-server-addr = 2  
XMLSIPNotify = 2  
XMLBlockInCalling = 1  
ActionURLLimitIP = 2
```

```
[ Features-Lock ]  
Lock_Enable = 2  
keyboard_lock = 2  
Phone_Unlock_PIN = 2  
Phone_lock_time_out = 2  
emergency_setting = 2
```

```
[ Features-ACD ]  
ACD-auto-available = 2  
ACD-auto-available-timer = 2
```

```
[ Features-SMS ]  
send-sms = 0
```

```
[ Features-ActionURL ]  
setup-complete = 2  
log-on = 2  
log-off = 2  
register-fail = 2  
off-hook = 2  
on-hook = 2  
incoming-call = 2  
outgoing-call = 2  
call-establish = 2  
Call-Terminated = 2  
DND-On = 2  
DND-Off = 2
```

Forward-On-Code = 2
Forward-Off-Code = 2
Busy-Forward-On = 2
Busy-Forward-Off = 2
No-Answer-Forward-On = 2
No-Answer-Forward-Off = 2
TransferCall = 2
Blind-transfer-call = 2
Attended-transfer-call = 2
Hold = 2
Unhold = 2
Mute = 2
Unmute = 2
Missed-call = 2
IPChange = 2
IdletoBusy = 2
BusytoIdle = 2
RejectIncomingCall = 2
AnswerNewInCall = 2
TransferFailed = 2
TransferFinished = 2
ForwardIncomingCall = 2
UCServer = 2
ReportIP = 2
AutopFinish = 2
OpenCallWait = 2
CloseCallWait = 2
Headset = 2
Handfree = 2
CancelCallOut = 2
RemoteBusy = 2
CallRemoteCanceled = 2

[Features-Bluetooth]

bluetooth-active = 0

[Features-PowerLED]

common-power-light-on = 0
ring-power-light-flash = 0
mail-power-light-flash = 0
mute-power-light-flash = 0
hold-power-light-flash = 0
talk-power-light-flash = 0

[Features-NotifyPop]

Display-Voice-Mail-Popup = 0
Display-Missed-Call-Popup = 0
Display-Forward-Call-Popup = 0
Display-Text-Message-Popup = 0

[Settings]

settings-preference = 0
settings-datetime = 0
settings-calldisplay = 0
settings-upgrade = 0
settings-autop = 0
settings-config = 0
settings-dialplan = 0
settings-voice = 0
settings-ring = 1
settings-tones = 0
settings-softkey = 2
settings-tr069 = 2
settings-voicemonitoring = 0
settings-sip = 1
settings-camera = 0
settings-video = 0
settings-powersaving = 0

[Settings-Preference]

web-language = 0
live-dialpad = 0
inter-digit-time = 0
UnusedBackLight = 0
backlight = 0
BacklightTime = 0
contrast_ctrl = 0
watchdog = 2
ring_type_setting = 0
Wallpaper = 0
screen-saver-wait-time = 0
screen-saver-type = 0

[Time&Date]

DHCP-Time = 0
time_zone = 0
NTP_priority = 0
prim_server = 0


```
sec_server = 0
update_interval = 0
daylight-time = 0
time_type = 0
daylight_date= 0
offset = 0
manual-time = 0
manual-time-settings = 0
time_format_setting = 0
date_format_setting = 0
location = 0

[ Settings-CallDisplay ]
Display-Contact-Photo = 0
Incoming-Call-Ringer-Animation = 0
Call-Display-Method = 0

[ Settings-Upgrade ]
version_info = 0
reset_to_factory = 1
reset_local_config = 0
reboot_device = 0
upgrade_firmware = 1

[ Settings-AutoProvision ]
pnp-active = 2
dhcp-active = 2
custom-option = 2
DHCP-Option-Value = 2
server-URL = 2
account = 2
password = 2
common-AES-key = 2
MAC-Oriented-AES-key = 2
zero_active = 2
wait_time = 2
poweron-active = 2
repeatedly-active = 2
repeat-interval = 2
weekly-active = 2
autop-time = 2
day-of-week = 2
btn-autop-now = 2
attempt-expired-time = 2
```

```
[ Settings-Config ]
opt-configfile = 1
opt-factory-configfile = 2
export-cfg-config-file = 2
import-cfg-config-file = 2
pcap_trace   = 1
syslog       = 1
SystemLogLevel = 2
ExportAllDiagnosticFiles = 2
```

```
[ Settings-DialPlan ]
replace-rule = 0
dial-now = 0
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0
```

```
[ Settings-Voice ]
echo-cancellation = 0
jitter-buffer = 0
```

```
[ Settings-Ring ]
personal-ring = 1
```

```
[ Settings-Tones ]
tone-items = 0
```

```
[ Softkey ]
Custom_SoftKey = 2
SoftKey_Type = 2
SoftKey_Select = 2
```

```
[ TR069 ]
head = 2
EnableTR069 = 2
ACSUsername = 2
ACSPassword = 2
ACSURL = 2
EnablePeriodicInform = 2
PeriodicInformInterval = 2
```

```
RequestUsername = 2
RequestPassword = 2

[ Settings-VoiceMonitoring ]
RTCP-Session-Report = 2
RTCP-Interval-Report = 2
RTCP-Interval-Period = 2
RTCP-Warning-Moslq = 2
RTCP-Critical-Moslq = 2
RTCP-Warning-Delay = 2
RTCP-Critical-Delay = 2
Display-VQReport-On-Web = 2
Display-VQReport-On-UI = 2
RTCP-Report-Options = 2

[ Settings-SIP ]
sip-session-timer = 2
local-SIP-port = 2
TLS-SIP-Port = 2

[ Settings-Camera ]
scene-mode = 2
manual-settings = 2
exposure = 2
status-bar-icon = 2

[ Settings-Video ]
video-active = 0
auto-start-video = 0
auto-answer-video-mute = 0
uplink-bandwidth = 2
downlink-bandwidth = 2

[ Settings-PowerSaving ]
office_hour = 2
office_Monday = 2
office_Tuesday = 2
office_Wednesday = 2
office_Thursday = 2
office_Friday = 2
office_Saturday = 2
office_Sunday = 2
idle_timeout = 2
office_timeout = 2
```

```
off_timeout = 2
user_input_ext_timeout = 2

[ Contacts ]
contacts-basic = 0
contacts-remote = 0
contacts-callinfo = 0
contacts-LDAP = 0
contacts-broadsoft = 0
contacts-multicastIP = 0
contacts-favorite = 0

[ LocalPhoneBook ]
contact-list = 0
all-contacts-control = 0
import-export-contacts = 1
btnImportCSV = 1
btnExportCSV = 1
btnImportXML = 1
btnExportXML = 1
opt-contacts = 0

[ Contacts-Remote ]
remote-phonebook-list = 0
SRemoteNameEnable = 0
SRemoteNameFlashTime = 0

[ PhoneCallInfo ]
call-control = 0
dialed-list-title = 0
dialed-list-content = 0
missed-list-title = 0
missed-list-content = 0
received-list-title = 0
received-list-content = 0
forwarded-list-title = 0
forwarded-list-content = 0

[ LDAP ]
enable-LDAP = 0
LDAP-name-filter = 0
LDAP-number-filter = 0
LDAP-TLS-Mode = 0
server-address = 0
```

```
port = 0
base = 0
user-name = 0
password = 0
maxhits = 0
LDAP-name-attributes = 0
LDAP-number-attributes = 0
LDAP-display-name = 0
protocol = 0
LDAP-lookup-for-incoming-call = 0
LDAP-lookup-for-callout = 0
LDAP-sorting-results = 0
```

[Contacts-Broadsoft]

```
Directotries = 0
XSI = 0
```

[MulticastIP]

```
Receive_Priority = 0
MulticastIPConfig = 0
PagePriorityActive = 0
PagingList = 0
```

[Contacts-Favorite]

```
contacts-group = 0
super-search = 0
```

[Security]

```
password = 0
trusted_cert = 2
server_cert = 2
```

[Password]

```
set-password = 0
```

[TrustCerts]

```
trust-certs-records = 2
btn-delete-certs = 2
only-accept-trusted-certs = 2
upload-trust-certs = 2
common-name-validation = 2
ca-certs = 2
```

[ServerCerts]

```
server-certs-records = 2
server-certs-upload = 2
server-certs-device-cert = 2

[ HiddenSetting ]
custom-factory-config = 2
DND-Active = 2
Forward-Active = 2
Broadsoft-Active = 1
Redirect-Active = 1
UC-Active = 1
pushxml = 2

[ GUI ]
status_list= 0
Status_IP = 11
Status_IPv6 = 11
Status_MAC = 21
Status_HW = 01
Status_More = 01
network = 0
Status_More_Phone = 0
Status_More_Account = 0
Status_More_RTP = 02
status_general = 02

features= 02
CallControl = 0
callcontrol_anywhere = 11
callcontrol_remoteoffice = 11
callcontrol_forward = 11
always-forward = 1
busy-forward = 1
NoAnswer-forward = 1
callcontrol_dnd= 11
callcontrol_hidenumber = 11
callcontrol_anonymousrejection = 11
callcontrol_simultaneousring = 11

call_waiting = 1
DSSKey = 1
key_as_send= 12
hotline-number = 1
Features_Anonymous = 1
```

```
Features_AutoRD = 1
intercom = 1
call_completion = 1
history_save = 2

multipaginglist = 10

Main_Settings = 0

time_zone = 0
Basic_Time_Manual = 0
display = 10
sound = 1
key_tone = 1
ring_type_setting = 1
unlock_pin = 2

account_label = 02
display_name = 02
register_name = 02
user_name = 01
account_password = 01
sip_server = 01
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
STUN_server = 02
auto-Answer = 1
Adv_Network = 0
wan_port_title = 02
VLAN-items = 02
wanport = 02
pcport = 02
dhcpvlan = 02
web-server = 02
8021x = 02
open-VPN = 02
open-lldp = 02
network_cdp = 02
network_nat = 02
softkey Label = 02
keyboard_lock = 02
Adv_Reboot = 02
Adv_ResetToFac = 2
password = 0
```

```
Adv_AES = 02
autoprovision = 02
international-forward = 02

SMS= 12
MSG_Voice = 1
viewvoicemail = 1
setvoicemail = 1
usermodeentry = 0
NAT_traversal = 02
contrast_ctrl = 0

callcontrol_initialacdstate = 11
callcontrol_setacdstate = 11

Main_Contacts = 0
local_contact_list = 0
remote_contact_list = 0
broadsoft_contact_list = 0
blacklist_list = 0

call_info= 0
local_call_log_list = 01

Adv_Account = 2
Basic_LANG = 0
Basic_Setting_BackLight = 0
Basic_Time_Format = 0
Basic_Time_SNTP = 0
MSG_Text = 0
SMS_Draftbox = 0
SMS_Inbox = 0
SMS_NEW = 0
SMS_Outbox = 0
SMS_Sentbox = 0
Set_Adv = 0
Set_Basic = 0
dhcptimezone = 0
line_active = 2
status = 0
dnd= 0
advanced_call_feature_default_account = 2
advanced_call_feature_general = 1
advanced_call_feature_list = 1
```



```

broadsoft_callog_list = 0
date_and_time_general = 0
phone_setting_list = 02
reset_and_reboot_list = 02
display_wallpaper = 1
reset_default = 0
bluetooth = 1
wifi = 2

camera_setting_interface = 00
usb_interface = 00
usb_browse_audio = 00
usb_browse_video = 00
usb_browse_photo = 00
usb_storage_property = 00
hdmi = 00
video_setting_interface = 00
proxy-fallback-interval = 01

```

SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2 IP Phones

The default configuration item settings in factory WebItemsLevel.cfg for T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2 IP phones running firmware version 81 or later are:

```

[ Status-Menu ]
Status-Basic  = 0
Status-RTP   = 0

[ Status ]
version = 0
network = 0
IPv4 = 0
IPv6 = 0
NetworkCommon = 0
AccountStatus = 0
Ext = 0
DeviceCertificate = 0

[ Account ]

```

```
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 2

[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 01
enabled-outbound-proxy-server = 2
outbound-proxy-server = 2
backup-outbound-proxy-server = 2
proxy-fallback-interval = 2
NAT_traversal = 2
sip_server = 2
sip_server2 = 2
outbound-proxy-server-port = 2
backup-outbound-proxy-server-port = 2

[ Account-Basic ]
switch-account = 0
proxy_require = 2
send_anonymous = 1
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
anonymous_rejection_enabled = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
misscall-log = 0
auto-answer = 0
ring-type = 0
send_anonymous_rejection_code = 0

[ Account-Codec ]
switch-account = 0
codecs-group = 0

[ Account-Adv ]
```

```
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
MWI-items = 2
voice_mail = 2
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
Call-Pull-Feature-Access-Code = 2
dialog-info-call-pickup = 2
BLF-list-URI = 2
BlfListCode = 2
BLFListBargeInCode = 2
BLF-List-Retrieve-Code = 2
BLA-number = 2
BLA-subscription-period = 2
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
conference-type = 2
conference-uri = 2
ACD-subscrip-period = 2
Earlymedia = 2
SIPServerType = 2
Music-ServerURI = 2
Direct-Call-Pickup-Code = 2
Group-Call-Pickup-Code = 2
Distinctive-Ring-Tones = 2
UnregisterOnReboot = 2
Out-Dialog-BLF = 2
RTCP-Collector-Name = 2
RTCP-Collector-Address = 2
RTCP-Collector-Port = 2
voice_mail_display = 2
```

```
subscribe-register = 2
udp-keep-alive-type = 2
udp-keep-alive-interval = 2
Number-Of-Linekey = 2
```

```
[ Network ]
```

```
network-basic = 0
network-pcport = 0
network-advanced = 2
network-nat = 2
network-wifi = 0
```

```
[ Network-Basic ]
```

```
ipaddress-mode = 0
ipv4config = 0
ipv6config = 0
```

```
[ Network-PCPort ]
```

```
pcport-active = 0
```

```
[ Network-Nat ]
```

```
manual = 2
manual-switch = 2
manual-ip = 2
ICE = 2
ICE-switch = 2
STUN = 2
STUN-switch = 2
STUN-server = 2
STUN-port = 2
TURN = 2
TURN-switch = 2
TURN-server = 2
TURN-port = 2
TURN-username = 2
TURN-password = 2
```

```
[ Network-Advanced ]
```

```
LLDP-items = 2
CDP-items = 2
VLAN-items = 2
port-link = 2
voice-QoS = 2
local-RTP-port = 2
```

```
web-server = 2
8021x = 2
span-to-pc-port = 2
reg-surge-prev = 2
ICMPv6_Status = 2
open-VPN = 2

[ Network-Wifi ]
wifi-active = 0
wifi-list = 0
wifi-label = 0
wifi-ssid = 0
wifi-mode = 0
wifi-type = 0
wifi-psk = 0

[ DSSKey ]
linekey = 0
programmablekey = 0
extkey = 0

[ LineKey ]
line-key = 0
Enable-Page-Tips = 0
Label-Length = 0

[ ProgramKey ]
programmable-key = 0

[ ExtKey ]
ext-key = 0

[ Features ]
features-forward = 0
features-general = 0
features-audio = 0
features-intercom = 0
features-transfer = 0
features-callpickup = 0
features-remote = 2
features-phonelock = 0
features-acd = 2
```

```
features-sms = 0
features-actionurl = 2
features-bluetooth = 0
features-powered = 0
features-notifypop = 0

[ Forward&DND ]
head-forward = 0
forward-mode = 0
forward-account = 0

always-forward = 0
always-forward-enabled = 0
always-forward-target = 0
always-forward-OnCode = 0
always-forward-OffCode = 0
busy-forward = 0
busy-forward-enabled = 0
busy-forward-target = 0
busy-forward-OnCode = 0
busy-forward-OffCode = 0
NoAnswer-forward = 0
NoAnswer-forward-enabled = 0
NoAnswer-forward-ringtimes = 0
NoAnswer-forward-target = 0
NoAnswer-forward-OnCode = 0
NoAnswer-forward-OffCode = 0
DND = 0
DND-Emergency = 0
DND-Authorized-Numbers = 0
DND-mode = 0
DND-account = 0
DND-Status = 0
DND-OnCode = 0
DND-OffCode = 0

forward-emergency = 0
forward-authorized-numbers = 0

[ General-Information ]
call_waiting = 0
auto-redial = 0
auto_redial_interval = 0
```

```
auto_redial_times = 0
key_as_send = 0
reserve-pound = 2
hotline-number = 0
hotline-delay = 0
busytone_delay = 0
return-code-refuse = 0
return-code-DND = 0
call_completion = 0
feature-key-synchronisation = 0
TimeOut-for-DialNow = 0
RFC-2543-Hold = 2
use-outbound-in-dialog = 2
IsDeal-180 = 2
logon-wizard = 2
PswPrefix = 0
PswLength = 0
PswDial = 0
SaveCallHistory = 2
SuppressDTMFDisplay = 1
SuppressDTMFDisplayDelay = 1
play-local-DTMF-tone = 0
DTMFRepetition = 0
MulticastCodec = 0
PlayHoldTone = 0
PlayHoldToneDelay = 0
AllowMute = 0
DualHeadset = 0
AutoAnswerDelay = 0
HeadsetPrior = 0
DTMFReplaceTran = 0
TranSendDTMF = 1
SendPoundKey = 0
FwdInternational = 0
Diversion-History-Info = 1
allow-trans-exist-call = 0
blf-led-mode = 0
ReLogOffTime = 2
call-number-filter = 0
Use_Logo = 0
upload_logo = 0
allow-IP-call = 0
IP-direct-auto-answer = 0
calllog-show-num = 0
```

```
voicemail-tone = 0
DHCP-hostname = 0
EnableAutoFavorite = 0
reboot-in-talking = 0
Hide-Feature-Access-Codes = 0
display-method-on-dialing = 2
callog-show-num = 0
auto-linekeys = 1
sip-trust-control = 2
enable-auto-answer-tone = 0

[ Features-Audio ]
call-waiting-tone = 0
button-sound = 0
redial_tone = 0
send-sound = 0
headset-send-volume = 1
handset-send-volume = 1
handfree-send-volume = 1
Ringer_Dev = 0

[ Features-Intercom ]
allow-intercom = 0
intercom-mute = 0
intercom-tone = 0
intercom-barge = 0

[ Features-Transfer ]
semi-attend-transfer = 0
Semi-Attend-Trans-OnHook = 0
blind-tran-onhook = 0
transfer-on-conference-hang-up = 0
TransferModeViaDsskey = 0

[ Features-Callpickup ]
Call-Pickup = 0
Call-Park = 0

[ Features-Remote ]
pushxml-server-addr = 2
XMLSIPNotify = 2
XMLBlockInCalling = 2
ActionURLLimitIP = 2
CSTAControl = 2
```


[Features-Lock]

Lock_Enable = 0

keyboard_lock = 0

Phone_Unlock_PIN = 0

Phone_lock_time_out = 0

emergency_setting = 0

[Features-ACD]

ACD-auto-available = 2

ACD-auto-available-timer = 2

[Features-ActionURL]

setup-complete = 2

log-on = 2

log-off = 2

register-fail = 2

off-hook = 2

on-hook = 2

incoming-call = 2

outgoing-call = 2

call-establish = 2

Call-Terminated = 2

DND-On = 2

DND-Off = 2

Forward-On-Code = 2

Forward-Off-Code = 2

Busy-Forward-On = 2

Busy-Forward-Off = 2

No-Answer-Forward-On = 2

No-Answer-Forward-Off = 2

TransferCall = 2

Blind-transfer-call = 2

Attended-transfer-call = 2

Hold = 2

Unhold = 2

Mute = 2

Unmute = 2

Missed-call = 2

IPChange = 2

IdletoBusy = 2

BusytoIdle = 2

RejectIncomingCall = 2

AnswerNewInCall = 2

TransferFailed = 2
TransferFinished = 2
ForwardIncomingCall = 2
UCServer = 2
ReportIP = 2
AutopFinish = 2
OpenCallWait = 2
CloseCallWait = 2
Headset = 2
Handfree = 2
CancelCallOut = 2
RemoteBusy = 2
CallRemoteCanceled = 2

[Features-Bluetooth]

bluetooth-active = 0

[Features-PowerLED]

common-power-light-on = 0
ring-power-light-flash = 0
mail-power-light-flash = 0
mute-power-light-flash = 0
hold-power-light-flash = 0
talk-power-light-flash = 0
misscall-power-light-flash = 0

[Features-NotifyPop]

Display-Voice-Mail-Popup = 0
Display-Missed-Call-Popup = 0
Display-Forward-Call-Popup = 0
Display-Text-Message-Popup = 0

[Settings]

settings-preference = 0
settings-datetime = 0
settings-calldisplay = 0
settings-upgrade = 0
settings-autop = 2
settings-config = 0
settings-dialplan = 2
settings-voice = 2
settings-ring = 2

```
settings-tones = 2
settings-softkey = 2
settings-tr069 = 2
settings-voicemonitoring = 2
settings-sip = 2
settings-powersaving = 0
```

[Settings-Preference]

```
web-language = 0
live-dialpad = 0
inter-digit-time = 0
transparency = 0
UnusedBackLight = 0
backlight = 0
BacklightTime = 0
contrast_ctrl = 0
watchdog = 2
ring_type_setting = 0
Wallpaper = 0
ScreenSaver = 0
ScreenSaverUpload = 0
```

[Settings-PowerSaving]

```
enable = 2
office_timeout = 0
off_timeout = 0
user_input_ext_timeout = 0
office_hour = 0
office_Monday = 0
office_Tuesday = 0
office_Wednesday = 0
office_Thursday = 0
office_Friday = 0
office_Saturday = 0
office_Sunday = 0
idle_timeout = 0
```

[Time&Date]

```
DHCP-Time = 0
time_zone = 0
NTP_priority = 0
prim_server = 0
sec_server = 0
```

```
update_interval = 0
daylight-time = 0
time_type = 0
daylight_date= 0
offset = 0
manual-time = 0
manual-time-settings = 0
time_format_setting = 0
date_format_setting = 0
location = 0

[ Settings-CallDisplay ]
Display-Contact-Photo = 0
Incoming-Call-Ringer-Animation = 0
Call-Display-Method = 0

[ Settings-Upgrade ]
version_info = 0
reset_to_factory = 2
reboot_device = 0
upgrade_firmware = 0
reset = 0
reset_local_settings = 0
reset_nonstatic_settings = 0
reset_static_settings = 2
reset_userdata = 0

[ Settings-AutoProvision ]
pnp-active = 2
dhcp-active = 2
custom-option = 2
DHCP-Option-Value = 2
server-URL = 2
account = 2
password = 2
common-AES-key = 2
MAC-Oriented-AES-key = 2
zero_active = 2
wait_time = 2
poweron-active = 2
repeatedly-active = 2
repeat-interval = 2
weekly-active = 2
autop-time = 2
```

```
day-of-week = 2
btn-autop-now = 2
attempt-expired-time = 2
weekly-upgrade-interval = 2
inactivity-time-expire = 2
flexible-switch = 2
flexible-interval = 2
flexible-autotime = 2
```

[Settings-Config]

```
opt-configfile = 0
opt-factory-configfile = 0
export-cfg-config-file = 0
import-cfg-config-file = 0
pcap_trace = 0
```

```
ExportAllDiagnosticFiles = 0
Local_Logging = 0
Local_Log_Switch = 0
Local_Log_Level = 0
Local_Log_Max_File_Size = 0
Local_Log_Export = 0
Syslog_Switch = 2
Syslog_Server = 2
Syslog_Transport_Type = 2
Syslog_Level = 2
Syslog_Facility = 2
Syslog_Prepend_Mac = 2
```

[Settings-DialPlan]

```
replace-rule = 0
dial-now = 0
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0
```

[Settings-Voice]

```
echo-cancellation = 2
jitter-buffer = 2

[ Settings-Ring ]
personal-ring = 2

[ Settings-Tones ]
tone-items = 2
tone-country = 2

[ Softkey ]
Custom_SoftKey = 2
SoftKey_Type = 2
SoftKey_Select = 2

[ TR069 ]
head = 2
EnableTR069 = 2
ACSUsername = 2
ACSPassword = 2
ACSURL = 2
EnablePeriodicInform = 2
PeriodicInformInterval = 2
RequestUsername = 2
RequestPassword = 2

[ Settings-VoiceMonitoring ]
RTCP-Session-Report = 2
RTCP-Interval-Report = 2
RTCP-Interval-Period = 2
RTCP-Warning-Moslq = 2
RTCP-Critical-Moslq = 2
RTCP-Warning-Delay = 2
RTCP-Critical-Delay = 2
Display-VQReport-On-Web = 2
Display-VQReport-On-UI = 2
RTCP-Report-Options = 2
Voice-RTCP-XR-REPORT = 2

[ Settings-SIP ]
sip-session-timer = 2
local-SIP-port = 2
TLS-SIP-Port = 2
```

[Contacts]

contacts-basic = 0

contacts-remote = 1

contacts-callinfo = 0

contacts-LDAP = 1

contacts-broadsoft = 0

contacts-multicastIP = 1

contacts-favorite = 0

[LocalPhoneBook]

contact-list = 0

all-contacts-control = 0

import-export-contacts = 0

btnImportCSV = 0

btnExportCSV = 0

btnImportXML = 0

btnExportXML = 0

opt-contacts = 0

[Contacts-Remote]

remote-phonebook-list = 1

SRemoteNameEnable = 1

SRemoteNameFlashTime = 1

[PhoneCallInfo]

call-control = 0

dialed-list = 0

missed-list = 0

received-list = 0

forwarded-list = 0

[LDAP]

enable-LDAP = 0

LDAP-name-filter = 0

LDAP-number-filter = 0

LDAP-TLS-Mode = 0

server-address = 0

port = 0

base = 0

user-name = 0

password = 0

maxhits = 0

```
LDAP-name-attributes = 0
LDAP-number-attributes = 0
LDAP-display-name = 0
protocol = 0
LDAP-lookup-for-incoming-call = 0
LDAP-lookup-for-callout = 0
LDAP-sorting-results = 0
```

[Apps]

```
broadsoft-XSI = 1
broadsoft-XMPP = 1
```

[Broadsoft]

```
XSI = 1
Directotries = 1
XMPP-accout = 1
XMPP-username = 1
XMPP-password = 1
CallLog = 1
```

[MulticastIP]

```
Receive_Priority = 1
MulticastIPConfig = 1
PagePriorityActive = 1
PagingList = 1
```

[Contacts-Favorite]

```
contacts-group = 0
super-search = 0
```

[Security]

```
password = 0
trusted_cert = 2
server_cert = 2
```

[TrustCerts]

```
trust-certs-records = 2
btn-delete-certs = 2
only-accept-trusted-certs = 2
upload-trust-certs = 2
common-name-validation = 2
ca-certs = 2
```


[ServerCerts]

server-certs-records = 2
server-certs-upload = 2
server-certs-device-cert = 2

[HiddenSetting]

custom-factory-config = 2
DND-Active = 2
Forward-Active = 2
Broadsoft-Active = 2
Redirect-Active = 2
UC-Active = 2
pushxml = 2
XSI-Active = 2
remote_pcap = 2
remote_pcap_switch = 2
remote_pcap_port = 2
remote_pcap_password = 2

[GUI]

status_list= 0
Status_IP = 0
Status_IPv6 = 0
Status_MAC = 0
Status_HW = 0
Status_More = 0
network = 0
Status_More_Phone = 0
Status_More_Account = 0
Status_More_RTP = 0
status_general = 0
softkey Label = 0
features= 0
CallControl = 1
callcontrol_anywhere = 1
callcontrol_remoteoffice = 1
callcontrol_forward = 1
always-forward = 0
busy-forward = 0
NoAnswer-forward = 0
callcontrol_dnd= 1
callcontrol_hidenummer = 1
callcontrol_anonymousrejection = 1
callcontrol_simultaneousing = 1

```
callcontrol_mobility =1
callcontrol_group_night_forward =1
callcontrol_callwaiting =1
callcontrol_forward_selective =1
callcontrol_executive =1
callcontrol_securityclassification =1
callcontrol_executive_assistant =1
call_waiting = 0
DSSKey = 0
key_as_send= 0
hotline-number = 0
Features_Anonymous = 0
Features_AutoRD = 0
intercom = 0
call_completion = 0
history_save= 2
multipaginglist = 2
Main_Settings= 0
time_zone = 0
Basic_Time_Manual = 0
display = 0
sound = 0
key_tone = 0
ring_type_setting = 0
unlock_pin= 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 01
sip_server = 2
enabled-outbound-proxy-server = 2
outbound-proxy-server = 2
STUN_server = 2
auto-Answer= 0

Adv_Network = 0
wan_port_title = 0
VLAN-items = 2
wanport = 0
pcport = 2
dhcplvlan = 2
web-server = 2
```

```
8021x = 2
open-VPN = 2
open-lldp = 2
network_cdp = 2
network_nat = 2
keyboard_lock = 0
Adv_Reboot = 0
Adv_ResetToFac = 2
password = 0
autoprovision = 2
international-forward = 2

SMS= 0
MSG_Voice = 0
viewvoicemail = 0
setvoicemail = 0
usermodeentry = 0
NAT_traversal = 2
contrast_ctrl = 0
broadsoft_contact_list = 1
callcontrol_initialacdstate = 1
callcontrol_setacdstate = 1
Main_Contacts = 0
local_contact_list = 0
remote_contact_list = 0
blacklist_list = 0
call_info= 0
local_call_log_list = 0
Adv_Account = 0
Basic_LANG = 0
Basic_Setting_BackLight = 0
Basic_Time_Format = 0
Basic_Time_SNTP = 0
MSG_Text = 0
SMS_Draftbox = 0
SMS_Inbox = 0
SMS_NEW = 0
SMS_Outbox = 0
SMS_Sentbox = 0
Set_Adv = 0
Set_Basic = 0
dhcptimezone = 0
line_active = 0
status = 0
```

```

dnd= 0
advanced_call_feature_default_account = 0
advanced_call_feature_general = 0
advanced_call_feature_list = 0
broadsoft_calllog_list = 0
date_and_time_general = 0
reset_and_reboot_list = 0
bluetooth = 0
display_wallpaper = 0
reset_default = 0
wifi = 0
Features_Diagnostics = 0
Diagnostics_Network = 0
Diagnostics_Ping = 0
Diagnostics_TraceRoute = 0
display_dsskey_wallpaper = 0
usb_record= 0
browse_usb_record= 0
browse_usb_storage= 0
Adv_ResetConfig = 0
ResetLocalConfig = 0
ResetNonStaticConfig = 0
ResetStaticConfig = 2

callcontrol_securityclassification = 0
ResetUserDataUserCfg = 0
check_key_guard_lock = 0
screensaver = 0
blf_ring_setting = 0

```

CP860 IP Phones

The default configuration item settings in factory WebItemsLevel.cfg for CP860 IP phones running firmware version 80 or later are:

```

[ Status-Menu ]
Status-Basic  = 0
Status-RTP   = 0

[ Status ]
version = 0
network = 0
IPv4 = 0
IPv6 = 0

```

```
NetworkCommon = 0
AccountStatus = 0
Ext = 0

[ Account ]
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 0

[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 2
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
transport-item = 2
backup-outbound-proxy-server = 01
proxy-fallback-interval = 01
NAT_traversal = 2
sip_server = 2

[ Account-Basic ]
switch-account = 0
proxy_require = 0
send_anonymous = 1
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
anonymous_rejection_enabled = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
misscall-log = 0
auto-answer = 0
ring-type = 0
send_anonymous_rejection_code = 0
auto-answer-mute = 0

[ Account-Codec ]
```

```
switch-account = 0
codecs-group = 0

[ Account-Adv ]
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
MWI-items = 2
voice_mail = 0
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
Call-Pull-Feature-Access-Code = 2
dialog-info-call-pickup = 2
BLF-list-URI = 2
BlfListCode = 2
BLFListBargeInCode = 2
BLF-List-Retrieve-Code = 2
BLA-number = 2
BLA-subscription-period = 2
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
conference-type = 2
conference-uri = 2
ACD-subscrip-period = 2
Earlymedia = 2
SIPServerType = 2
Music-ServerURI = 2
Direct-Call-Pickup-Code = 2
Group-Call-Pickup-Code = 2
Distinctive-Ring-Tones = 2
UnregisterOnReboot = 2
Out-Dialog-BLF = 2
```

```
RTCP-Collector-Name = 2
RTCP-Collector-Address = 2
RTCP-Collector-Port = 2
Number-Of-Linekey = 1
voice_mail_display = 2
subscribe-register = 2
```

[Network]

```
network-basic = 0
network-pcport = 0
network-advanced = 0
shotlevel = 0
```

[Network-Basic]

```
ipaddress-mode = 2
ipv4config = 2
ipv6config = 2
wan-ppoe = 2
```

[Network-PCPort]

```
pcport-active = 0
```

[Network-Advanced]

```
LLDP-items = 2
CDP-items = 2
VLAN-items = 2
NAT-items = 2
port-link = 2
voice-QoS = 2
local-RTP-port = 2
web-server = 2
8021x = 2
span-to-pc-port = 2
reg-surge-prev = 2
ICMPv6_Status = 2
open-VPN = 2
```

[DSSKey]

```
memorykey = 0
linekey = 0
programmablekey = 0
extkey = 0
```

[MemoryKey]

memory-key = 0

[LineKey]

line-key = 0

Enable-Page-Tips = 0

Label-Length = 0

[ProgramKey]

programmable-key = 0

[ExtKey]

ext-key = 0

[Features]

features-forward = 0

features-general = 0

features-audio = 0

features-intercom = 0

features-transfer = 0

features-callpickup = 0

features-remote = 0

features-phonelock = 0

features-acd = 0

features-sms = 0

features-actionurl = 0

features-powerled = 0

features-notifypop = 0

[Forward&DND]

head-forward = 0

forward-mode = 0

forward-account = 0

always-forward = 0

always-forward-enabled = 0

always-forward-target = 0

always-forward-OnCode = 0

always-forward-OffCode = 0

busy-forward = 0

busy-forward-enabled = 0

busy-forward-target = 0

busy-forward-OnCode = 0

busy-forward-OffCode = 0

NoAnswer-forward = 0

NoAnswer-forward-enabled = 0
NoAnswer-forward-ringtimes = 0
NoAnswer-forward-target = 0
NoAnswer-forward-OnCode = 0
NoAnswer-forward-OffCode = 0
DND = 0
DND-Emergency = 0
DND-Authorized-Numbers = 0
DND-mode = 01
DND-account = 01
DND-Status = 01
DND-OnCode = 01
DND-OffCode = 01

forward-emergency = 0
forward-authorized-numbers = 0

[General-Information]

call_waiting = 0
auto-redial = 0
auto_redial_interval = 0
auto_redial_times = 0
key_as_send = 0
reserve-pound = 2
hotline-number = 0
hotline-delay = 0
busytone_delay = 0
return-code-refuse = 0
return-code-DND = 0
call_completion = 0
feature-key-synchronisation = 0
TimeOut-for-DialNow = 0
RFC-2543-Hold = 2
use-outbound-in-dialog = 2
IsDeal-180 = 2
logon-wizard = 2
PswPrefix = 2
PswLength = 2
PswDial = 2
SaveCallHistory = 2
SuppressDTMFDisplay = 1
SuppressDTMFDisplayDelay = 1
play-local-DTMF-tone = 0
DTMFRepetition = 0

```
MulticastCodec = 0
PlayHoldTone = 0
PlayHoldToneDelay = 0
AllowMute = 0
DualHeadset = 1
AutoAnswerDelay = 0
HeadsetPrior = 0
DTMFReplaceTran = 0
TranSendDTMF = 1
SendPoundKey = 0
FwdInternational = 0
Diversion-History-Info = 1
allow-trans-exist-call = 0
ReLogOffTime = 2
call-number-filter = 0
Use_Logo = 0
upload_logo = 0
allow-IP-call = 0
IP-direct-auto-answer = 0
calllog-show-num = 0
voicemail-tone = 0
DHCP-hostname = 0
EnableAutoFavorite = 0
reboot-in-talking = 0
Hide-Feature-Access-Codes = 0
display-method-on-dialing = 2
calllog-show-num = 0
auto-linekeys = 1
sip-trust-control = 2
enable-auto-answer-tone = 0
```

[Features-Audio]

```
call-waiting-tone = 0
button-sound = 0
redial_tone = 0
send-sound = 0
headset-send-volume = 1
handset-send-volume = 1
handfree-send-volume = 1
Ringer_Dev = 0
```

[Features-Intercom]

```
allow-intercom = 0
intercom-mute = 0
```

```
intercom-tone = 0
intercom-barge = 0

[ Features-Transfer ]
semi-attend-transfer = 0
Semi-Attend-Trans-OnHook = 0
blind-tran-onhook = 0
transfer-on-conference-hang-up = 0
TransferModeViaDsskey = 0

[ Features-Callpickup ]
Call-Pickup = 0
Call-Park = 0

[ Features-Remote ]
pushxml-server-addr = 2
XMLSIPNotify = 2
XMLBlockInCalling = 1
ActionURLLimitIP = 2

[ Features-Lock ]
Lock_Enable = 2
keyboard_lock = 2
Phone_Unlock_PIN = 2
Phone_lock_time_out = 2
emergency_setting = 2

[ Features-ACD ]
ACD-auto-available = 2
ACD-auto-available-timer = 2

[ Features-ActionURL ]
setup-complete = 2
log-on = 2
log-off = 2
register-fail = 2
off-hook = 2
on-hook = 2
incoming-call = 2
outgoing-call = 2
call-establish = 2
Call-Terminated = 2
DND-On = 2
DND-Off = 2
```

Forward-On-Code = 2
Forward-Off-Code = 2
Busy-Forward-On = 2
Busy-Forward-Off = 2
No-Answer-Forward-On = 2
No-Answer-Forward-Off = 2
TransferCall = 2
Blind-transfer-call = 2
Attended-transfer-call = 2
Hold = 2
Unhold = 2
Mute = 2
Unmute = 2
Missed-call = 2
IPChange = 2
IdletoBusy = 2
BusytoIdle = 2
RejectIncomingCall = 2
AnswerNewInCall = 2
TransferFailed = 2
TransferFinished = 2
ForwardIncomingCall = 2
UCServer = 2
ReportIP = 2
AutopFinish = 2
OpenCallWait = 2
CloseCallWait = 2
Headset = 2
Handfree = 2
CancelCallOut = 2
RemoteBusy = 2

[Features-PowerLED]

common-power-light-on = 0
ring-power-light-flash = 0
mail-power-light-flash = 0
mute-power-light-flash = 0
hold-power-light-flash = 0
talk-power-light-flash = 0

[Features-NotifyPop]

Display-Voice-Mail-Popup = 0
Display-Missed-Call-Popup = 0
Display-Forward-Call-Popup = 0

Display-Text-Message-Popup = 0

[Settings]

settings-preference = 0

settings-datetime = 0

settings-calldisplay = 0

settings-upgrade = 0

settings-autop = 0

settings-config = 0

settings-dialplan = 0

settings-voice = 0

settings-ring = 1

settings-tones = 0

settings-softkey = 2

settings-tr069 = 2

settings-voicemonitoring = 0

settings-sip = 1

[Settings-Preference]

web-language = 0

live-dialpad = 0

inter-digit-time = 0

UnusedBackLight = 0

backlight = 0

BacklightTime = 0

contrast_ctrl = 0

watchdog = 2

ring_type_setting = 0

Wallpaper = 0

[Time&Date]

DHCP-Time = 0

time_zone = 0

NTP_priority = 0

prim_server = 0

sec_server = 0

update_interval = 0

daylight-time = 0

time_type = 0

daylight_date= 0

offset = 0

manual-time = 0

manual-time-settings = 0

time_format_setting = 0

```
date_format_setting = 0
location = 0

[ Settings-CallDisplay ]
Display-Contact-Photo = 0
Incoming-Call-Ringer-Animation = 0
Call-Display-Method = 0

[ Settings-Upgrade ]
version_info = 0
reset_to_factory = 1
reset = 2
reset_local_config = 0
reboot_device = 0
upgrade_firmware = 1

[ Settings-AutoProvision ]
pnp-active = 2
dhcp-active = 2
custom-option = 2
DHCP-Option-Value = 2
server-URL = 2
account = 2
password = 2
common-AES-key = 2
MAC-Oriented-AES-key = 2
zero_active = 2
wait_time = 2
poweron-active = 2
repeatedly-active = 2
repeat-interval = 2
weekly-active = 2
autop-time = 2
day-of-week = 2
btn-autop-now = 2
attempt-expired-time = 2

[ Settings-Config ]
opt-configfile = 1
opt-factory-configfile = 2
export-cfg-config-file = 2
import-cfg-config-file = 2
pcap_trace = 1
syslog = 1
```

```
SystemLogLevel = 2
ExportAllDiagnosticFiles = 2
```

```
[ Settings-DialPlan ]
```

```
replace-rule = 0
dial-now = 0
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0
```

```
[ Settings-Voice ]
```

```
echo-cancellation = 0
jitter-buffer = 0
```

```
[ Settings-Ring ]
```

```
personal-ring = 1
```

```
[ Settings-Tones ]
```

```
tone-items = 0
```

```
[ Softkey ]
```

```
Custom_SoftKey = 2
SoftKey_Type = 2
SoftKey_Select = 2
```

```
[ TR069 ]
```

```
head = 2
EnableTR069 = 2
ACSUsername = 2
ACSPassword = 2
ACSURL = 2
EnablePeriodicInform = 2
PeriodicInformInterval = 2
RequestUsername = 2
RequestPassword = 2
```

```
[ Settings-VoiceMonitoring ]
```

```
RTCP-Session-Report = 2
RTCP-Interval-Report = 2
RTCP-Interval-Period = 2
RTCP-Warning-Moslq = 2
```

```
RTCP-Critical-Moslq = 2
RTCP-Warning-Delay = 2
RTCP-Critical-Delay = 2
Display-VQReport-On-Web = 2
Display-VQReport-On-UI = 2
RTCP-Report-Options = 2
```

[Settings-SIP]

```
sip-session-timer = 2
local-SIP-port = 2
TLS-SIP-Port = 2
```

[Contacts]

```
contacts-basic = 0
contacts-remote = 0
contacts-callinfo = 0
contacts-LDAP = 0
contacts-broadsoft = 0
contacts-multicastIP = 0
contacts-favorite = 0
```

[LocalPhoneBook]

```
contact-list = 0
all-contacts-control = 0
import-export-contacts = 1
btnImportCSV = 1
btnExportCSV = 1
btnImportXML = 1
btnExportXML = 1
opt-contacts = 0
```

[Contacts-Remote]

```
remote-phonebook-list = 0
SRemoteNameEnable = 0
SRemoteNameFlashTime = 0
```

[PhoneCallInfo]

```
call-control = 0
dialed-list-title = 0
dialed-list-content = 0
missed-list-title = 0
missed-list-content = 0
received-list-title = 0
received-list-content = 0
```



```
forwarded-list-title = 0
forwarded-list-content = 0

[ LDAP ]
enable-LDAP = 0
LDAP-name-filter = 0
LDAP-number-filter = 0
LDAP-TLS-Mode = 0
server-address = 0
port = 0
base = 0
user-name = 0
password = 0
maxhits = 0
LDAP-name-attributes = 0
LDAP-number-attributes = 0
LDAP-display-name = 0
protocol = 0
LDAP-lookup-for-incoming-call = 0
LDAP-lookup-for-callout = 0
LDAP-sorting-results = 0

[ Contacts-Broadsoft ]
Directotries = 0
XSI = 0

[ MulticastIP ]
Receive_Priority = 0
MulticastIPConfig = 0
PagePriorityActive = 0
PagingList = 0

[ Contacts-Favorite ]
contacts-group = 0
super-search = 0

[ Security ]
password = 0
trusted_cert = 2
server_cert = 2

[ TrustCerts ]
trust-certs-records = 2
btn-delete-certs = 2
```

```
only-accept-trusted-certs = 2
upload-trust-certs = 2
common-name-validation = 2
ca-certs = 2

[ ServerCerts ]
server-certs-records = 2
server-certs-upload = 2
server-certs-device-cert = 2

[ HiddenSetting ]
custom-factory-config = 2
DND-Active = 2
Forward-Active = 2
Broadsoft-Active = 1
Redirect-Active = 1
UC-Active = 1
pushxml = 2

[ GUI ]
status_list= 0
Status_IP = 11
Status_IPv6 = 11
Status_MAC = 21
Status_HW = 01
Status_More = 01
network = 0
Status_More_Phone = 0
Status_More_Account = 0
Status_More_RTP = 02
status_general = 02

features= 02
CallControl = 0
callcontrol_anywhere = 11
callcontrol_remoteoffice = 11
callcontrol_forward = 11
always-forward = 1
busy-forward = 1
NoAnswer-forward = 1
callcontrol_dnd= 11
callcontrol_hidenummer = 11
callcontrol_anonymousrejection = 11
callcontrol_simultaneousring = 11
```

```
call_waiting = 1
DSSKey = 1
key_as_send= 12
hotline-number = 1
Features_Anonymous = 1
Features_AutoRD = 1
intercom = 1
call_completion = 1
history_save= 2

multipaginglist = 10

Main_Settings = 0

time_zone = 0
Basic_Time_Manual = 0
display = 10
sound = 1
key_tone = 1
ring_type_setting = 1
unlock_pin= 2

account_label = 02
display_name = 02
register_name = 02
user_name = 01
account_password = 01
sip_server = 01
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
STUN_server = 02
auto-Answer= 1
Adv_Network = 0
wan_port_title = 02
VLAN-items = 02
wanport = 02
pcport = 02
dhcpvlan = 02
web-server = 02
8021x = 02
open-VPN = 02
open-lldp = 02
network_cdp = 02
```

```
network_nat = 02
softkey_Label = 02
keyboard_lock = 02
Adv_Reboot = 02
Adv_ResetToFac = 2
password = 0
Adv_AES = 02
autoprovision = 02
international-forward = 02

SMS= 12
MSG_Voice = 1
viewvoicemail = 1
setvoicemail = 1
usermodeentry = 0
NAT_traversal = 02
contrast_ctrl = 0

broadsoft_contact_list = 0
callcontrol_initialacdstate = 11
callcontrol_setacdstate = 11

Main_Contacts = 0
local_contact_list = 0
remote_contact_list = 0
blacklist_list = 0

call_info= 0
local_call_log_list = 01

Adv_Account = 2
Basic_LANG = 0
Basic_Setting_BackLight = 0
Basic_Time_Format = 0
Basic_Time_SNTP = 0
MSG_Text = 0
SMS_Draftbox = 0
SMS_Inbox = 0
SMS_NEW = 0
SMS_Outbox = 0
SMS_Sentbox = 0
Set_Adv = 0
Set_Basic = 0
dhcptimezone = 0
```

```
line_active = 2
status = 0
dnd = 0
reset_default = 0
usb-record = 0
browserecordfiles = 0
browseusbstorage = 0
```

W56P IP DECT Phones

The default configuration item settings in factory WebItemsLevel.cfg for W56P IP DECT phones running firmware version 80 or later are:

```
[ Status-Menu ]
Status-Basic = 0
Status-RTP = 3
Status-VoIP = 0

[ Status ]
version = 0
network = 0
IPv4 = 0
NetworkCommon = 0

[ Status-VoIP ]
registered-handset = 0
registered-new-handset = 0
voip-status = 0
paging = 0

[ Account ]
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 0
account-assign = 0
account-handsetname = 0

[ Account-Register ]
```

```
switch-account = 0
account_status = 0
line_active = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 2
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
transport-item = 2
backup-outbound-proxy-server = 01
proxy-fallback-interval = 01
NAT_traversal = 2
sip_server = 2
```

[Account-Basic]

```
switch-account = 0
proxy_require = 0
send_anonymous = 1
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
anonymous_rejection_enabled = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
send_anonymous_rejection_code = 0
```

[Account-Codec]

```
switch-account = 0
codecs-group = 0
```

[Account-Adv]

```
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
```

```
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
MWI-items = 2
voice_mail = 0
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
conference-type = 2
conference-uri = 2
SIPServerType = 2
UnregisterOnReboot = 2
RTCP-Collector-Name = 3
RTCP-Collector-Address = 3
RTCP-Collector-Port = 3
subscribe-register = 2

[ Account-Assign ]
incoming-lines = 0
outgoing-lines = 0

[ Account-Handsetname ]
handsetname = 1

[ Network ]
network-basic = 0
network-advanced = 0
shotlevel = 0
```

[Network-Basic]

ipaddress-mode = 2

ipv4config = 2

wan-ppoe = 2

[Network-Advanced]

LLDP-items = 2

VLAN-items = 2

NAT-items = 2

voice-QoS = 2

local-RTP-port = 2

web-server = 2

8021x = 2

reg-surge-prev = 2

open-VPN = 2

[Features]

features-forward = 0

features-general = 0

features-audio = 0

features-transfer = 0

features-callpickup = 0

features-phonelock = 0

features-powerled = 0

[Forward&DND]

head-forward = 0

forward-mode = 0

forward-account = 0

always-forward = 0

always-forward-enabled = 0

always-forward-target = 0

always-forward-OnCode = 0

always-forward-OffCode = 0

busy-forward = 0

busy-forward-enabled = 0
busy-forward-target = 0
busy-forward-OnCode = 0
busy-forward-OffCode = 0
NoAnswer-forward = 0
NoAnswer-forward-enabled = 0
NoAnswer-forward-ringtimes = 0
NoAnswer-forward-target = 0
NoAnswer-forward-OnCode = 0
NoAnswer-forward-OffCode = 0
DND = 0
DND-mode = 01
DND-account = 01
DND-Status = 01
DND-OnCode = 01
DND-OffCode = 01

[General-Information]

call_waiting = 0
key_as_send = 0
reserve-pound = 2
busytone_delay = 0
return-code-refuse = 0
return-code-DND = 0
feature-key-synchronisation = 0
TimeOut-for-DialNow = 0
RFC-2543-Hold = 2
use-outbound-in-dialog = 2
IsDeal-180 = 2
SaveCallHistory = 2
SuppressDTMFDisplay = 1
SuppressDTMFDisplayDelay = 1
FwdInternational = 0
Diversion-History-Info = 1
ReLogOffTime = 2
call-number-filter = 0
allow-IP-call = 0

```
voicemail-tone = 0
DHCP-hostname = 0
reboot-in-talking = 0
display-method-on-dialing = 2
sip-trust-control = 2
end-call-onhook = 0
```

[Features-Audio]

```
call-waiting-tone = 0
```

[Features-Transfer]

```
semi-attend-transfer = 0
Semi-Attend-Trans-OnHook = 0
blind-tran-onhook = 0
```

[Features-Callpickup]

```
Call-Park = 0
```

[Features-Lock]

```
emergency_setting = 2
```

[Features-PowerLED]

```
common-power-light-on = 0
ring-power-light-flash = 0
mail-power-light-flash = 0
miss-call-light-flash = 0
```

[Settings]

```
settings-preference = 0
settings-datetime = 0
settings-calldisplay = 0
settings-upgrade = 0
settings-autop = 0
settings-config = 0
settings-dialplan = 0
settings-voice = 0
settings-tones = 0
```

```
settings-tr069 = 2
settings-voicemonitoring = 3
settings-sip = 1

[ Settings-Preference ]
web-language = 0
watchdog = 2

[ Time&Date ]
DHCP-Time = 0
time_zone = 0
NTP_priority = 0
prim_server = 0
sec_server = 0
update_interval = 0
daylight-time = 0
time_type = 0
daylight_date = 0
offset = 0
manual-time = 0
manual-time-settings = 0
time_format_setting = 0
date_format_setting = 0
location = 0

[ Settings-CallDisplay ]
Incoming-Call-Ringer-Animation = 0
Call-Display-Method = 0

[ Settings-Upgrade ]
version_info = 0
reset_to_factory = 1
reset_local_config = 0
reboot_device = 0
upgrade_firmware = 1
upgrade_handset_firmware = 1
```

[Settings-AutoProvision]

pnp-active = 2

dhcp-active = 2

custom-option = 2

DHCP-Option-Value = 2

server-URL = 2

account = 2

password = 2

common-AES-key = 2

MAC-Oriented-AES-key = 2

poweron-active = 2

repeatedly-active = 2

repeat-interval = 2

weekly-active = 2

autop-time = 2

day-of-week = 2

btn-autop-now = 2

attempt-expired-time = 2

[Settings-Config]

opt-configfile = 1

opt-factory-configfile = 2

export-cfg-config-file = 2

import-cfg-config-file = 2

pcap_trace = 1

syslog = 1

SystemLogLevel = 2

[Settings-DialPlan]

replace-rule = 0

dial-now = 0

area-code = 0

block-out = 0

replace-rule-control = 0

dial-now-control = 0

area-code-control = 0

block-out-control = 0

[Settings-Voice]

echo-cancellation = 0

jitter-buffer = 0

[Settings-Tones]

tone-items = 0

[TR069]

head = 2

EnableTR069 = 2

ACSUsername = 2

ACSPassword = 2

ACSURL = 2

EnablePeriodicInform = 2

PeriodicInformInterval = 2

RequestUsername = 2

RequestPassword = 2

[Settings-VoiceMonitoring]

RTCP-Session-Report = 2

RTCP-Interval-Report = 2

RTCP-Interval-Period = 2

RTCP-Warning-Moslq = 2

RTCP-Critical-Moslq = 2

RTCP-Warning-Delay = 2

RTCP-Critical-Delay = 2

Display-VQReport-On-Web = 2

Display-VQReport-On-UI = 2

RTCP-Report-Options = 2

[Settings-SIP]

sip-session-timer = 2

local-SIP-port = 2

TLS-SIP-Port = 2

[Contacts]

```
contacts-basic = 0
contacts-remote = 0
contacts-LDAP = 0
contacts-broadsoft = 0
contacts-favorite = 0

[ Contacts-Basic ]
download-contacts = 0
import-contacts = 0
export-contacts = 0

[ Contacts-Remote ]
remote-phonebook-list = 0
SRemoteNameEnable = 0
SRemoteNameFlashTime = 0

[ LDAP ]
enable-LDAP = 0
LDAP-name-filter = 0
LDAP-number-filter = 0
LDAP-TLS-Mode = 0
server-address = 0
port = 0
base = 0
user-name = 0
password = 0
maxhits = 0
LDAP-name-attributes = 0
LDAP-number-attributes = 0
LDAP-display-name = 0
protocol = 0
LDAP-lookup-for-incoming-call = 0
LDAP-lookup-for-callout = 0
LDAP-sorting-results = 0

[ Contacts-Broadsoft ]
Directotries = 0
```

XSI = 0

[Contacts-Favorite]

contacts-group = 0

super-search = 0

[Security]

password = 0

trusted_cert = 2

server_cert = 2

base-pin = 0

[BasePin]

base-unit-pin = 0

[TrustCerts]

trust-certs-records = 2

btn-delete-certs = 2

only-accept-trusted-certs = 2

upload-trust-certs = 2

common-name-validation = 2

ca-certs = 2

[ServerCerts]

server-certs-records = 2

server-certs-upload = 2

server-certs-device-cert = 2

[HiddenSetting]

custom-factory-config = 2

DND-Active = 2

Forward-Active = 2

Broadsoft-Active = 1

Redirect-Active = 1

[GUI]

Menu_Status = 0

Base = 0
Handset = 0
LineStatus = 0

Menu_Intercom = 0
Intercom_HSXS = 0
Intercom_ALLHS = 0

Menu_VoiceMail = 0
Play_Message = 0
Set_Voice_Mail = 0
Set_Key_1 = 0

Menu_CallFeatures = 0
CallForward = 0
AlwaysForward = 0
BusyForward = 0
NoAnswerForward = 0
DND = 0
CallWaiting = 0
AnonymousRejection = 0
AnonymousCall = 0

Menu_Directory = 0
Local_Contact_List = 0
Remote_Contact_List = 0
Broadsoft_Contact_List = 0
LDAP_Contact_List = 0

Menu_Settings = 0
DateTime = 0
Audio = 0
Advisory_Tones = 0
Ring_Tones = 0
Volume = 0
Melodies = 0

Display = 0
Screen_Saver = 0
Color_Schemes = 0
Wallpaper = 0
Display_Backlight = 0
Keypad_Light = 0
Notification_Light = 0
Time_Formate = 0
Date_Formate = 0
Input_Method = 0

Shortcut = 0
Soft_Left = 0
Soft_Right = 0
Up = 0
Down = 0
Left = 0
Right = 0

Language = 0

Registration = 0
De_reg_Hadndset = 0
Select_Base = 0

Telephony = 0
Auto_Answer = 0
Auto_Intercom = 0
Default_Line = 0
Incoming_Lines = 02
Speed_Dial = 0
Blacklist = 0

SystemSettings = 0
Network = 0
Logon_Wizard = 0
Handset_Reset = 0

Change_Base_PIN = 02
Base_Reset = 02
Base_Reset_Local_Cfg = 02
Base_Restart = 02
Auto_Provision = 02
RPS = 02
Eco_Mode_Plus = 02
Eco_Mode = 0
Repeater_Mode = 02
HandsetName = 0
UpgradeFirmware = 2

Menu_History = 0
All_Calls = 0
Missed_Calls = 0
Outgoing_Calls = 0
Accepted_Calls = 0

Menu_Usermode = 0

Customer Feedback

We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to DocsFeedback@yealink.com.