

# **Yealink Management Cloud Service for Enterprise Administrator Guide V3.5.0.0**

# Contents

<b>About This Guide.....</b>	<b>7</b>
Related Documentations.....	7
In This Guide.....	7
Summary of Changes.....	8
Changes for Release 35, Guide Version V3.5.0.0.....	8
Changes for Release 34, Guide Version V3.4.0.10.....	8
<b>Getting Started.....</b>	<b>8</b>
Port Requirements.....	9
Browser Requirements.....	9
Supported Device Models.....	9
Logging into the YMCS.....	10
Home Page.....	12
Trying Advanced Features.....	13
Running State Page.....	14
Logging out of YMCS.....	14
<b>Deploying the Devices.....</b>	<b>14</b>
Deploying SIP Devices.....	15
Overview of Device Deployment and Management.....	16
Configuring the Common.cfg File.....	16
Deploying Devices on the RPS Management Platform.....	17
Configuring the Server Address.....	18
Updating the Configuration When the Device Is Connected to the Device Management Platform for the First Time.....	18
Deploying USB Devices.....	18
Deploying the Room System.....	19
<b>Managing Devices.....</b>	<b>19</b>
Device Status.....	19
Managing SIP Devices.....	19
Adding Devices.....	20
Editing the Device Information.....	21
Importing Devices.....	21
Exporting the Device Information.....	22
Viewing the Information of SIP Device.....	22
Searching for Devices.....	23
Assigning Accounts to Devices.....	23
Setting the Site.....	24
Pushing Configuration Files to Devices.....	24
Pushing Firmware to Devices.....	25
Pushing Resource Files to Devices.....	26
Diagnosing Devices.....	27
Enabling/Disabling DND.....	27
Sending Messages to Devices.....	28
Rebooting Devices.....	29

Resetting the Devices to Factory.....	29
Deleting Devices.....	30
Managing USB Devices.....	30
Editing the Device Information.....	30
Exporting the Device Information.....	31
Viewing the USB Device.....	31
Searching for Devices.....	31
Setting the Site.....	32
Deleting Devices.....	32
Managing Room System.....	32
Editing the Device Information.....	33
View the Information of the Room System.....	33
Searching for Devices.....	34
Setting the Site.....	34
Rebooting Devices.....	35
Pushing Firmware to Devices.....	35
Deleting Devices.....	36
Managing Firmware.....	36
Adding Firmware.....	36
Searching for Firmware.....	36
Updating the Device Firmware.....	36
Editing the Firmware.....	37
Downloading the Firmware.....	37
Deleting Firmware.....	37
Managing Resources.....	37
Adding Resource Files.....	38
Search for Resources.....	38
Pushing Resource Files to Devices.....	38
Editing Resource Files.....	38
Downloading Backup Files.....	39
Deleting Resource Files.....	39
<b>Managing Sites.....</b>	<b>39</b>
Adding Sites.....	39
Importing Sites.....	40
Editing Sites.....	41
Searching for Sites.....	41
Deleting Sites.....	42
<b>Managing Accounts.....</b>	<b>42</b>
Adding Accounts.....	42
Importing Accounts.....	43
Editing the Account Information.....	43
Searching for Accounts.....	43
Exporting Accounts.....	43
Deleting Accounts.....	44
<b>Managing the Device Configuration.....</b>	<b>44</b>
Managing Model Configuration.....	44
Adding Configuration Templates.....	45
Setting Parameters.....	45
Pushing Configuration to Devices.....	48
Editing Configuration Templates.....	48

Downloading the Model File.....	49
Viewing Parameters.....	49
Deleting Templates.....	49
Managing the Site Configuration.....	49
Adding Site Configuration Templates.....	50
Setting Parameters.....	50
Pushing the Site Configuration to Devices.....	53
Editing the Site Configuration Template.....	53
Downloading the Site Configuration Template.....	54
Deleting Site Configuration Templates.....	54
Managing the Group Configuration.....	54
Adding Groups.....	54
Setting Parameters.....	55
Editing Groups.....	57
Updating the Group Device.....	57
Viewing Parameters.....	58
Downloading Configuration File.....	58
Deleting Groups.....	58
Managing the MAC Configuration.....	58
Uploading backup Files.....	59
Generating Configuration Files.....	59
Setting Parameters.....	59
Pushing Backup Files to Devices.....	60
Downloading Backup Files.....	61
Exporting Backup Files.....	61
Deleting Backup Files.....	61
Configuring Global Parameters.....	61
<b>Managing Orders.....</b>	<b>61</b>
Order Service.....	62
Viewing the Order Details.....	62
Checking the Reason for the Closed Order.....	62
Exporting Orders.....	62
Search for Orders.....	62
<b>Managing Tasks.....</b>	<b>63</b>
Adding Timer Tasks.....	63
Editing Timer Tasks.....	64
Pausing or Resuming Timer Tasks.....	65
Ending Timer Tasks.....	65
Searching for Timer Tasks.....	66
Viewing Timer Tasks.....	66
Viewing Executed Tasks.....	67
Searching for Executed Tasks.....	67
<b>Monitoring Devices.....</b>	<b>68</b>
Viewing Call Quality Statistics.....	68
Customizing the Indicators of Call Quality Detail.....	68
Viewing the Call Data.....	68
Managing Alarms.....	69
Adding Alarm Strategies.....	69
Editing Alarm Strategies.....	70
Deleting Alarm Strategies.....	70



Viewing Alarms.....	70
Deleting Alarms.....	70
<b>Diagnosing Devices.....</b>	<b>71</b>
Going to the Device Diagnostics Page.....	71
Exporting the Packets, Logs, and Configuration Files by One Click.....	73
Capturing Packets.....	74
Diagnosing the Network.....	74
Exporting Syslogs.....	75
Exporting Backup Files.....	75
Viewing the CPU and the Memory Status.....	75
Viewing Recordings.....	75
Capturing the Screenshot of the Device.....	76
Setting the Log Level.....	76
Setting the Device Logs.....	76
Setting the Module Log.....	76
Setting the Local Log.....	77
Setting the Syslog.....	77
Putting the Log Backups to a Specified Server.....	77
Enabling the Log Data Backup.....	78
Downloading the Backup Log.....	78
<b>Managing System.....</b>	<b>78</b>
Viewing Operation Logs.....	78
Obtaining the Accesskey.....	79
Authorizing/Un-authorizing the Management to the Channel.....	79
<b>Managing RPS.....</b>	<b>79</b>
Instruction for Old RPS Users.....	79
Managing Devices.....	79
Adding Devices.....	80
Importing Devices.....	80
Exporting Devices.....	80
Editing the Device Information.....	81
Migrating Devices to Another Server.....	81
Checking the Linking Status Between the Device and the Server.....	81
Deleting Devices.....	81
Synchronizing Devices.....	82
Managing Servers.....	82
Adding Servers.....	82
Editing the Server Information.....	82
Searching for Servers.....	83
Deleting Servers.....	83
Binding RPS Accounts.....	83
<b>Managing Administrator Accounts.....</b>	<b>84</b>
Changing the Login Password.....	84
Editing the Information of the Administrator Account.....	85
Viewing the Account Code.....	85
Managing Sub-Administrator Accounts.....	85
Adding/Editing/Deleting a Group.....	86
Adding/Editing/Deleting a Role.....	86

Assigning Roles to Sub-Administrator Accounts.....	87
Assigning the Function Permission.....	87
Assigning the Data Permission.....	87
Adding and Managing Sub-Administrator Accounts.....	88

## **Troubleshooting..... 88**

Forgetting the Login Password.....	89
The Phones Cannot Connect to YMCS for Enterprise.....	89
The Offline Device Reconnects to the YMCS for Enterprise.....	89

## **Appendix: Alarm Types..... 89**

## About This Guide

---

Yealink Management Cloud Service (YMCS), based on cloud architecture, possesses the RPS service, the centralized deployment, the management, the analysis, the alarm monitoring, the device diagnosis, the account registration, the order management, and other features. The management platform allows enterprise administrators to deploy and configure for Yealink devices used in an enterprise, to use the RPS feature to manage the devices.

This guide provides operations for enterprise administrators to use YMCS.

- [Related Documentations](#)
- [In This Guide](#)
- [Summary of Changes](#)

## Related Documentations

---

Except for this guide, we also provide the following document:

- Quick Start Guide introduces how to quickly deploy devices and update the configuration.
- Administrator Guide introduces how to manage devices via YMCS.
- Administrator Guide for RPS introduces how to add servers and manage devices via YMCS for RPS Enterprise.
- Administrator Guide for service provider introduces how to manage devices and diagnoses devices via YMCS.
- Distributor Guide introduces how the distributor manages enterprises and orders on YMCS.
- Reseller Guide introduces how the reseller manages enterprises on YMCS.
- ITSP User Guide introduces how the ITSP channel manages enterprises on YMCS for Channel.
- API documents introduces how to call the API of YMCS.

You can download the above documents from Yealink's official website or the web page of YMCS.

The address of Yealink's official website is as below: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

For more supports or services, contact Yealink reseller or go to Yealink Technical Support online: <http://support.yealink.com/>.

## In This Guide

---

Topics include:

- Chapter 1 [Getting Started](#)
- Chapter 2 [Deploying the Devices](#)
- Chapter 3 [Managing Devices](#)
- Chapter 4 [Managing Sites](#)
- Chapter 3 [Managing Accounts](#)
- Chapter 4 [Managing the Device Configuration](#)
- Chapter 5 [Managing Orders](#)
- Chapter 6 [Managing Tasks](#)
- Chapter 7 [Monitoring Devices](#)
- Chapter 8 [Diagnosing Devices](#)

Chapter 9 [Managing System](#)

Chapter 10 [Managing RPS](#)

Chapter 11 [Managing Administrator Accounts](#)

Chapter 12 [Troubleshooting](#)

Chapter 13 [Appendix: Alarm Types](#)

## Summary of Changes

---

- [Changes for Release 35, Guide Version V3.5.0.0](#)
- [Changes for Release 34, Guide Version V3.4.0.10](#)

### Changes for Release 35, Guide Version V3.5.0.0

Major updates have occurred to the following section:

- [Managing Tasks](#)

### Changes for Release 34, Guide Version V3.4.0.10

The following sections are new for this version:

- [Pushing Configuration Files to Devices](#)
- [Pushing Firmware to Devices](#)
- [Pushing Resource Files to Devices](#)
- [Diagnosing Devices](#)
- [Managing the Site Configuration](#)
- [Setting Parameters](#)
- [Exporting the Packets, Logs, and Configuration Files by One Click](#)
- [Viewing the Account Code](#)

Major updates have occurred to the following sections:

- [Logging into the YMCS](#)
- [Configuring the Common.cfg File](#)
- [Adding Sites](#)
- [Going to the Device Diagnostics Page](#)

## Getting Started

---

This chapter introduces the requirements of Yealink device management platform.

- [Port Requirements](#)
- [Browser Requirements](#)
- [Supported Device Models](#)
- [Logging into the YMCS](#)
- [Home Page](#)
- [Trying Advanced Features](#)
- [Running State Page](#)

- [Logging out of YMCS](#)

## Port Requirements

You need to open five ports: 443, 9989, 80, 8443, and 8445. We do not recommend that you modify these ports.

Port	Description
443	It is used for accessing the device management platform and reporting the device information to the platform via HTTPS.
9989	It is used for the phone to download the configuration files.
80	It is used for accessing the device management platform via HTTP.
8443	It is used for calling the API of YMCS for RPS Enterprise.
8445	It is used for calling the API of YMCS for Enterprise.

## Browser Requirements

YMCS supports the following browsers:

Browser	Version
Firefox	55 or later
Chrome	55 or later
Internet Explorer	11 or later
Safari	10 or later

## Supported Device Models

You can manage the following devices via the device management platform:

Device Types	Supported Device Models	Version Requirements
SIP IP Phones	SIP-T27P/T27G/ T29G/T41P/T41S/T42G/T42S/ T42U/T46G/ T46S/T48G/T48S/T52S/T54S	XX.83.0.30 or later (except for XX.84.0.10). XX represents the fixed number for each device model.
	SIP-T56A/T58	58.83.0.5 or later.


Device Types	Supported Device Models	Version Requirements
	SIP-T19(P)E2/T21(P)E2/T23P/T23G/T40P/T40G	XX.83.0.30 or later (XX.84.0.10 is not supported and XX.84.0.70 or later versions are not supported anymore). XX represents the fixed number for each device model.
	SIP-CP960	73.83.0.10 or later.
	SIP-CP920	78.84.0.15 or later.
	SIP-T53/T53W	95.84.0.10 or later.
	SIP-T54W	96.84.0.10 or later.
	SIP-T57W	97.84.0.30 or later.
	W60B	77.83.0.65 or later.
	VP59	91.283.0.10 or later.
Skype for Business HD IP phones	T41S/T42S/T46S/T48S	66.9.0.45 or later (except for 66.9.0.46).
	T58/T56A/T55A	55.9.0.6 or later.
	CP960	73.8.0.27 or later.
Teams phones (It is not available for managing the accounts and viewing the call quality)	CP960	73.15.0.20 or later.
	T56A/T58	58.15.0.20 or later.
	T55A	58.15.0.36 or later.
	VP59	91.15.0.16 or later.
Video Conferencing Systems	VC200/VC500/VC800/VC880	XX.32.10.25/XX.32.0.25 or later. XX represents the fixed number for each device model.
	PVT950/PVT980	1345.32.10.40 or later.
	VP59	91.332.0.10 or later.
Zoom phones	CP960	73.30.0.10 or later.
Room System	MVC500/MVC800/MVC300/CP960-UVC Zoom Rooms Kit/VP59 Zoom Rooms Kit	92.11.0.10 or later

## Logging into the YMCS

The superior channel creates the accounts of YMCS for Enterprise, and you can obtain the username and the password via the email.

### Procedure

1. Enter the address of YMCS (<https://dm.yealink.com/manager/login>) in the browser address box, and then press Enter.

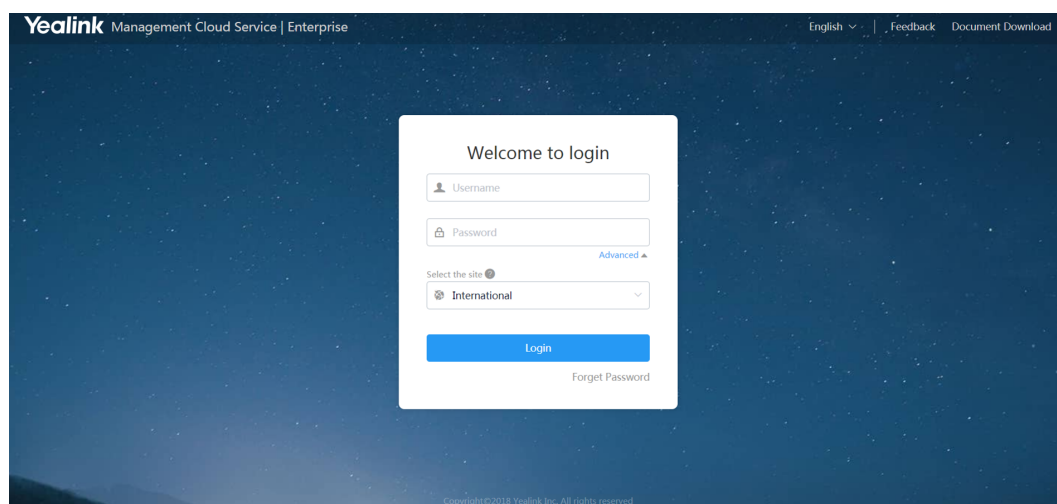

2. Select the desired language from the drop-down menu of **Language** in the top-right corner.
3. Enter your username and the password.
4. Click **Advanced** and select the desired site.
5. Click **Login**.
6. If you register the enterprise account and the channel account with the same email, select the desired account to log in.

#### Select the type you want to sign in ×

Account Type	Operation
Enterprise	Login
Channel	Login


7. If you log into the platform for the first time, the system will remind you to change the password, click **Change** to go to the homepage of the device management platform.



**Note:** If you enter the correct username and password, but you fail to log in. You can change the site and log in again.


## Home Page

After logging in, you can see the home page (take the home page after subscribing to the advanced package as an example) displayed as below:

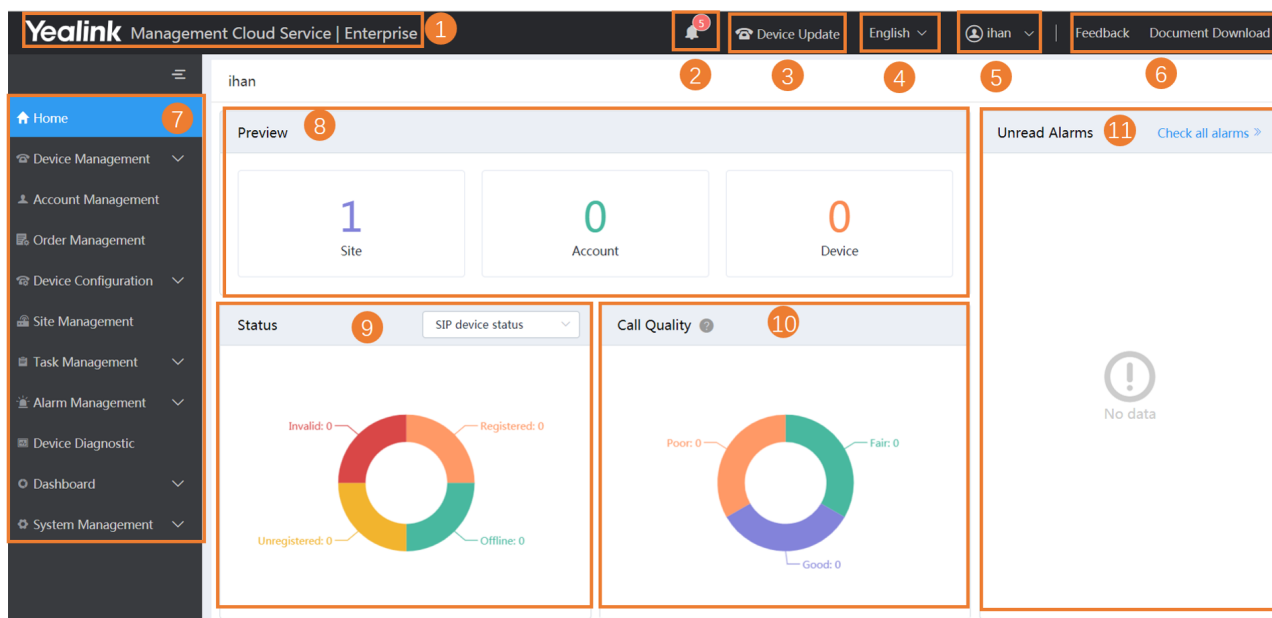

Number	Description
1	Go to the home page quickly when you are browsing other pages.
2	Display the number of unread alarms and the type of alarms.
3	Go to the Device List page quickly.
4	Change the display language.
5	Go to the page of setting the administrator account.
6	Go to the page of sending feedback or downloading a document.
7	Navigation pane.
8	<b>Data preview:</b> <ul style="list-style-type: none"> <li>Displays the number of sites, accounts and devices.</li> <li>Click the desired module to go to the corresponding module.</li> </ul>
9	<b>Device status:</b> <ul style="list-style-type: none"> <li>Select a device type.</li> <li>Displays the number of the unregistered, the registered, the invalid and the offline devices.</li> <li>Click the corresponding device status to go to the page that lists all the devices of this status.</li> </ul>




Number	Description
10	<p><b>Call quality:</b></p> <ul style="list-style-type: none"> <li>Displays the number of the good, the bad or the poor call quality.</li> <li>You can click the desired module to view the call statistics.</li> </ul> <p><b>Note:</b> It is not available for the basic package. You can <a href="#">Trying Advanced Features</a> or contact your distributor/reseller to subscribe to the advanced package if you need. You can view the details of the subscribed package on the page of <a href="#">Managing Orders</a> .</p>
11	<p><b>Unread Alarms:</b></p> <ul style="list-style-type: none"> <li>Click <b>Check all alarms</b> to go to the Alarm List page.</li> <li>Hover the mouse over the icon  to view the alarm details.</li> </ul> <p><b>Note:</b> It is not available for the basic package. You can <a href="#">Trying Advanced Features</a> or contact your distributor/reseller to subscribe to the advanced package if you need. You can view the details of the subscribed package on the page of <a href="#">Managing Orders</a> .</p>

## Trying Advanced Features

Call quality, device alarm and device diagnosis are advanced features, not supported by the basic package, if you want to use them, you can contact your superior channel to subscribe to the advanced package. You can also have a free three-month trial of the advanced features. Every user has only one opportunity for this free trial.

### Procedure


1. In the top-right corner, click **Try advanced features**.

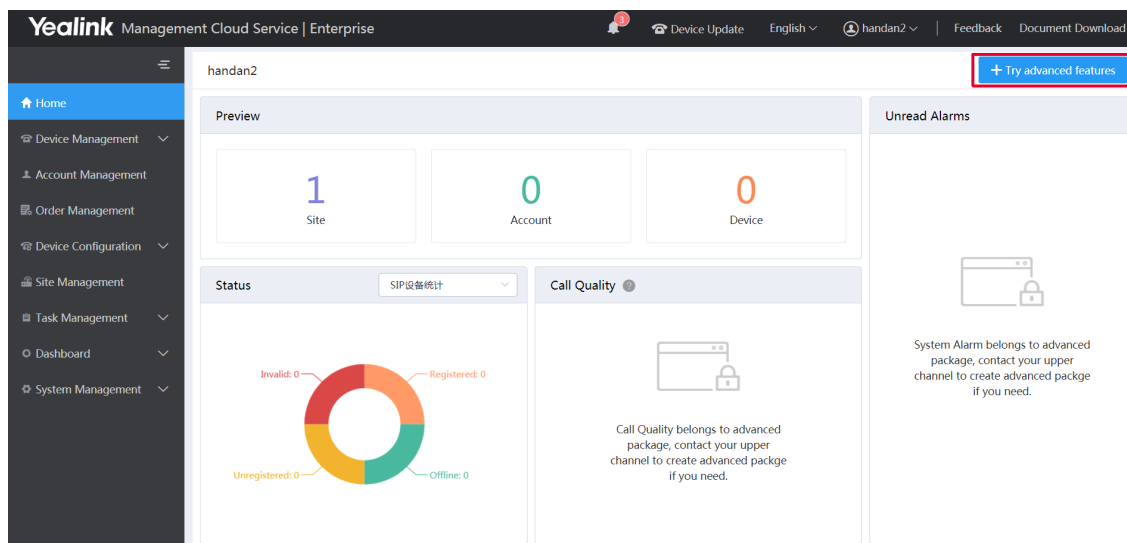

2. Click **OK** according to the prompts.

## Running State Page

Click **Dashboard > Running state** to go to the Running State page. You can view the number of accounts and devices, the device status, the statistics of the model and the firmware. It is displayed as below:

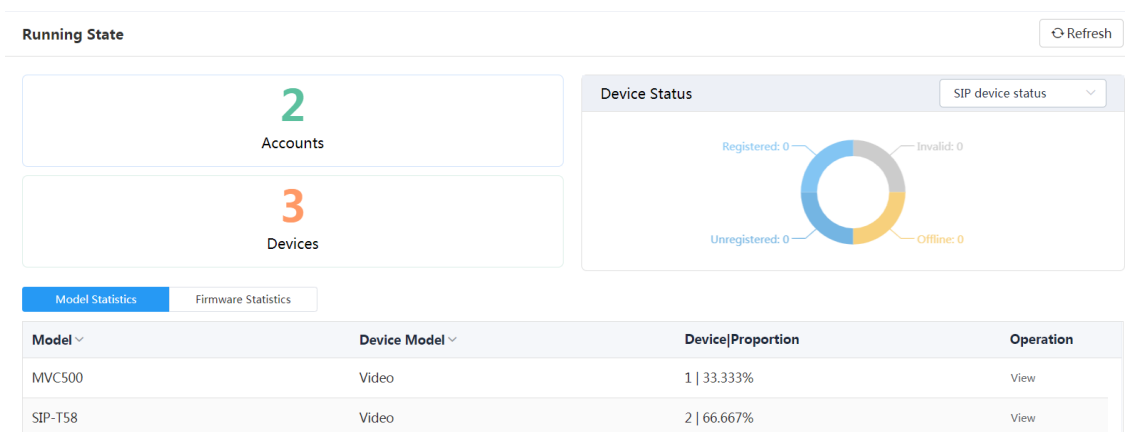

- Click **Accounts** to go to the Account Management page, then you can manage the account directly.
- Click **Devices** to go to the Device Management page, then you can manage devices directly.
- In the **Device Status** module, select the device type, click the corresponding status (offline, registered, invalid, and unregistered) to go to the Device List page, and then you can update the device status directly.
- Click **Model Statistics** to view all the device information, including the model and the proportion. Click **View** beside the desired device to go to the Device Management page, then you can view the device information or update this device.
- Click **Firmware Statistics** to view all the running firmware. Click **View** beside the desired firmware to go to the Device Management page, then you can view the device information or update this device.

## Logging out of YMCS

### Procedure

Hover your mouse on the account avatar in the top-right corner, and click **Exit**. You will log out of the current account and return to the Login page.

## Deploying the Devices

Before you manage the devices via the device management platform, you should deploy the devices to make them connected to the device management platform.

- [Deploying SIP Devices](#)
- [Deploying USB Devices](#)
- [Deploying the Room System](#)

## Deploying SIP Devices

---

The devices are redirected to the device management platform through the RPS feature by default, and will be automatically connected to the device management platform after powered on. If the automatic deployment fails, you need to manually deploy the devices.

### Before you begin



**Note:** Note that the device should support the device management platform. Otherwise, you should upgrade the device firmware first.

### Procedure

1. If there is a provisioning server you are using in your environment, configure the common cfg file (refer to [Configuring the Common.cfg File](#) ).
2. If there is no provisioning server, you need to configure the devices to obtain the provisioning server address in one of the following ways:
  - DHCP option 66, 43, 160 or 161.  
The DHCP option must meet the following format: <https://dm.yealink.com/dm.cfg>.
  - [Configuring the Server Address](#) , and deploy a single phone.
3. If you are an RPS user, you can use the RPS feature to deploy the devices on the device management platform.

### Results

After the device is connected to the device management platform, the device information will be displayed in the device list.



#### Note:


1. If the device is disconnected from the device management platform, you need to reboot it to reconnect it to the device management platform.
  2. After the device is automatically connected to the device management platform through RPS feature, the RPS feature is disabled automatically.
- [Overview of Device Deployment and Management](#)
  - [Configuring the Common.cfg File](#)
  - [Deploying Devices on the RPS Management Platform](#)
  - [Configuring the Server Address](#)
  - [Updating the Configuration When the Device Is Connected to the Device Management Platform for the First Time](#)

### Related concepts

[Supported Device Models](#)

## Overview of Device Deployment and Management

The processes of the device deployment and management are shown as below:

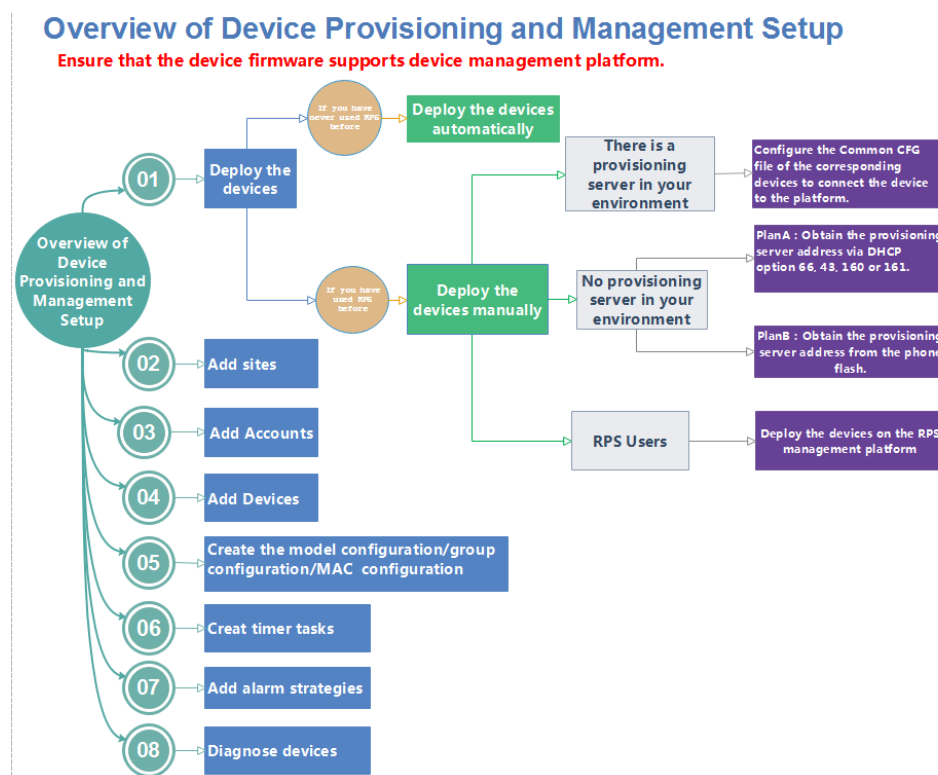

## Configuring the Common.cfg File

If the device does not support the device management platform, you need to upgrade the firmware to a supported one before you connect the device to the device management platform. For easy deployment, you can configure the parameters of upgrading the firmware and the access URL of the device management platform in the Common.cfg file.

### Procedure

1. Open the Common.cfg file of the corresponding device.
2. If your device does not support the device management platform, upgrade the firmware of the device. Place the target firmware on your provisioning server, and then specify the access URL of the firmware.

```

##### Configure the access URL of firmware #####
#####It configures the access URL of the firmware file.#####
###The default value is blank.It takes effect after a reboot.
static.firmware.url=http://192.168.1.20/66.9.0.45.rom
  
```

provisioning server address      target firmware

3. Configure the provisioning URL to connect the devices to the device management platform.

```
#####
##                               Autop URL                               ##
#####
static.auto_provision.server.url = https://dm.yealink.com/dm.cfg
static.auto_provision.server.username =
static.auto_provision.server.password =
```

↓  
The address of Yealink Device Management Cloud Service

4. Optional: Add the following configuration to your Common.cfg file, to make the device automatically connected to the corresponding site of the desired enterprise.

```
dm.enterprise_id = leynhkqe → The enterprise ID
dm.site_id = baylplwe → The site ID
```



#### Note:

- Only the specific firmware version supports this feature. For more information, contact Yealink technical support engineers.

The supported devices are as below: CP960 (73.84.0.21), T58V (58.84.0.26), VP59 (91.283.0.47), T4S/T5W (x.84.0.102), and W60B (77.83.0.72).

- The priority (the devices automatically connected to the site) in the descending order is site IP setting, and then the site setting in the Common.cfg file (see [Adding Sites](#) ).

5. Save the file.

## Results

After auto provisioning, the devices will be connected to the device management platform.

## Related concepts

[Supported Device Models](#)

## Deploying Devices on the RPS Management Platform

If you deploy the device on the RPS management platform for the first time, after the devices are powered on and connected to the network, the RPS management platform pushes the address of the device management platform (<https://dm.yealink.com/dm.cfg>) to the devices so that the devices can be connected to the platform.

## Procedure

1. Log into the RPS management platform.
2. On the **Server Management** page, add the server URL.
3. On the **Device Management** page, add or edit the device information.

After the device sends an RPS request, the device will be connected to the device management platform.



**Note:** You can use the RPS feature on the device management platform in the version 3.4.0.0 or later, for more information, refer to [Managing RPS](#) .

## Related tasks

[Logging into the YMCS](#)

[Adding Servers](#)

[Adding Devices](#)

[Importing Devices](#)

## Configuring the Server Address

Before deploying the device, if the DHCP server is not available, you need to configure the server address to make the device connected to the device management platform.

### Procedure

1. Log into the web user interface of the device.
2. Click **Settings** > **Auto Provision**.
3. Enter the provisioning server URL in the **Server URL** field.

The URL should be set as <https://dm.yealink.com/dm.cfg>.

4. Click **Auto Provision Now**.

The device will be connected to the device management platform successfully.

## Updating the Configuration When the Device Is Connected to the Device Management Platform for the First Time

The first time you connect the devices to the platform, the platform will automatically update the corresponding parameters of the devices, including the model configuration, the MAC configuration or the global parameters. The group configuration can only be updated manually. The priority of the configuration in ascending order is RPS, global, model, site, MAC.

If the following scenario occurs, the devices can automatically obtain the configuration:

- When you connect the device to the platform for the first time
- When you reset the device (for devices in version 84 or before, you need to enable **Synchronize to RPS**, and enable Redirection on the devices; for devices in version 84 or later, they can obtain the configuration automatically)

For the detailed device version, contact Yealink technical support.

### Related concepts

[Managing the MAC Configuration](#)

[Managing Model Configuration](#)

[Managing the Group Configuration](#)

### Related tasks

[Configuring Global Parameters](#)

## Deploying USB Devices

---

### Before you begin

Install USB Device Manager client on the PC that is connected to the USB device.

### About this task

For more information about the configuration of USB Device Manager client, refer to [USB Device Manager Client User Guide](#).

### Procedure

Open USB Device Manager client, go to **Config DM Server**, and complete the correspond configuration. The USB device will be connected to the device management platform automatically.

## Deploying the Room System

---

### About this task

For more information about deploying Room System, refer to [Yealink RoomConnect User Guide](#).

### Procedure

On your MTouch, open Yealink RoomConnect, go to **Remote Management**, and configure the related parameters.

The Room System will be connected to the device management platform automatically.

## Managing Devices

---

The number of devices that you can manage on the device management platform depends on the you purchased from the reseller or the distributor. You are not able to add new devices once the upper limit is reached. When some of your invalid orders cause some of the devices unable to manage, the device status will be invalid and you cannot manage it. If you still want to use this service, contact your superior channel.

- [Device Status](#)
- [Managing SIP Devices](#)
- [Managing USB Devices](#)
- [Managing Room System](#)
- [Managing Firmware](#)
- [Managing Resources](#)

### Device Status

---

Before managing devices, you can familiarize yourself with the device status.

- Device status of the SIP device
  - Registered: the device is online with an account registered in. You can use it and click it to view the account information.
  - Unregistered: the device is online without an account registered in.
  - Offline: the device is offline.
  - Invalid: the server license expires, or the number of the devices reported to the platform exceeds the number allowed in the license.
- Device status of the USB device and the Room System
  - Online: the application connected to the device is connected to YMCS.
  - Offline: the device is disconnected, or the application connected to the device is disconnected from YMCS.
  - Invalid: the server license expires, or the number of the devices reported to the platform exceeds the number allowed in the license.

### Managing SIP Devices

---

- [Adding Devices](#)

- [Editing the Device Information](#)
- [Importing Devices](#)
- [Exporting the Device Information](#)
- [Viewing the Information of SIP Device](#)
- [Searching for Devices](#)
- [Assigning Accounts to Devices](#)
- [Setting the Site](#)
- [Pushing Configuration Files to Devices](#)
- [Pushing Firmware to Devices](#)
- [Pushing Resource Files to Devices](#)
- [Diagnosing Devices](#)
- [Enabling/Disabling DND](#)
- [Sending Messages to Devices](#)
- [Rebooting Devices](#)
- [Resetting the Devices to Factory](#)
- [Deleting Devices](#)

## Adding Devices

### Procedure

1. Click **Device Management > SIP Device List > Add Device**.
2. Set and save the parameters.

Add Device

Device Name

T48S

\* Site

WULLLALA

\* Model

SIP-T48S

\* MAC

001565f32702

Machine ID

805ec0485b91

Bind Account  
(Maximum 16)

+ Add

Synchronize to RPS

Save

Cancel

3. Optional: On the right side of the **Bind Account** field, click **Add**, and select an account and the account type to assign the account to the device.
4. Optional: If you want to use the RPS feature on YMCS, enable **Synchronize to RPS**, and set the related parameters of RPS.

If you already have an RPS account, you can [Binding RPS Accounts](#) first, and enable **Synchronize to RPS**. After that, the device on YMCS will be synchronized with the devices on the RPS device management platform.




## Related tasks

[Adding Accounts](#)


## Editing the Device Information

You can edit the device name and the site, or re-assign an account to the device.

### Procedure

1. Click **Device Management > SIP Device List**.
2. Click  beside the desired device.
3. Edit the device information and save it.

Edit Device



MAC Address : 001000100702  
Device Model : SIP-T48S

Please edit :

Device Name

T48S-ZYD

\* Site

zhangzhou

Machine ID

? Please enter Machine ID

Bind Account  
(Maximum 16)

+ Add

Synchronize to RPS

? ☐

Save

Cancel

## Importing Devices

If you want to add devices quickly, you can import them in batch. You need to download the template, edit the devices information in the template and then import the template to the platform.

### About this task

Before deploying the device, note the following:

- If the device MAC address exists, the imported template will cover the previous account information, if you need to add new accounts, follow the note in the template.
- Only one account can be assigned to the SfB device, if there are multiple accounts, the first account is used by default.
- The number of accounts that can be linked to each device is different. If the number of accounts exceeds the limit, the exceeded accounts cannot be added by default.
- If a device with an account assigned to exists on the platform, and you import another device of the same model, the account information of the former device will be removed.
- If you enable **Synchronize to RPS**, make sure you enter the name of the server that you have already added.

## Procedure

Click **Device Management > SIP Device List > Import**.

Import

Tips: Please download the template and import the data as required

1 Download the template Download the template and edit the parameter in it.

2 Drag the file here or Click to upload

Note: The file format must be xls or xlsx(that is an Excel file), the maximum number of imported data can not exceed 5000

3 Upload Cancel

## Exporting the Device Information

You can export the basic information of all devices.

## Procedure

Click **Device Management > SIP Device List > Export**.


## Viewing the Information of SIP Device

You can view the information of SIP devices, including the MAC address, the model, the name, the IP, the firmware version, the status, the site and the report time.

## Procedure

1. Click **Device Management > SIP Device List**.

You can click **Refresh** in the top-right corner to obtain the latest device information,

2. Click  beside the desired device.

SIP Device List

+ Add Device Import Export Refresh

Device/MAC/Account Info/IP More

0 selected Delete Site Settings Update Configuration File Update Firmware Up

MAC	Model	Device Name	Public IP	Private...	Firmware
001565f307...	SIP-T48S	T48S-ZYD	10.81.4...	10.81.4...	66.84.254.1
805ec0484b...	SIP-T52S	T52S-ZYD	10.81.4...	10.81.4...	70.84.0.4
001565f78c...	W60B	6603	10.81.4...	10.81.4...	77.83.0.72

More device info

DeviceDetail:

- deviceInfo:
- network:
  - addressMode: 0
  - ipv4:
  - wifi:
  - vpn:
- bluetooth:
- usbDisk:
  - clientHost: 10.81.4.90

Operation

edit delete refresh



**Note:** The devices report their information in real time. Therefore, you cannot view the device information of the offline devices.

3. Optional: Click the status of the desired device under the **Status** tab and you can view the network information and the registered account information.

The screenshot shows the 'SIP Device List' interface. At the top, there are buttons for '+ Add Device', 'Import', 'Export', and 'Refresh'. Below these is a search bar labeled 'Device/MAC/Account Info/IP' and a 'More' dropdown. A toolbar contains buttons for 'Delete', 'Site Settings', 'Update Configuration File', 'Update Firmware', 'Update Resource File', 'Diagnostics', and a 'More' dropdown. The main content area is divided into two sections. The left section, titled 'Network Information', shows details for a device with IP 10.81.4.90, Subnet 255.255.254.0, and Report Time 2019/12/12 21:09:17. It also lists 'Registered Account: 1'. The right section is a table with columns: Status, Site, Report Time, and Operation. The first row shows 'Unregistered' status for 'zhangz...' at '2019/12/13 20:0...'. The second row shows 'Offline' status for 'zhangz...' at '2019/12/12 21:0...'. The third row shows 'Offline' status for 'Xi'an' at '2019/11/28 17:4...'. Below the network information, there is a table with columns: Acc..., Account Info, Account Type, Site, Account ..., and Operation. It shows one account with ID 1, Name 2572, Type SIP, Site zhangzhou, and Status Offline, with a 'Logout' button.



**Note:** This feature is not applicable to invalid devices.

## Related concepts

[Device Status](#)

## Searching for Devices

You can use the search bar or the filters to search for the desired devices.

### Procedure

Click **Device Management > SIP Device List**.

The screenshot shows the 'SIP Device List' interface with the search filters highlighted by an orange box. The search bar is labeled 'Device/MAC/Account Info/IP'. Below it, there are two dropdown menus: 'Site : Please select a site' and 'Account Status : Please select'. A 'Search' button is located to the right of the 'Account Status' dropdown. The main content area shows a table with columns: MAC, Model, Device Name, Public IP, Private..., Firmware Version, Status, Site, Report Time, and Operation. The first row shows a device with MAC 001565f307..., Model SIP-T48S, Device Name T48S-ZYD, Public IP 10.81.4..., Private IP 10.81.4..., Firmware Version 66.84.254.170, Status Unregistered, Site zhangz..., Report Time 2019/12/13 20:0..., and Operation icons. The second row shows a device with MAC 805ec0484b..., Model SIP-T52S, Device Name T52S-ZYD, Public IP 10.81.4..., Private IP 10.81.4..., Firmware Version 70.84.0.4, Status Offline, Site zhangz..., Report Time 2019/12/12 21:0..., and Operation icons. The third row shows a device with MAC 001565f78c..., Model W60B, Device Name 6603, Public IP 10.81.4..., Private IP 10.81.4..., Firmware Version 77.83.0.72, Status Offline, Site Xi'an, Report Time 2019/11/28 17:4..., and Operation icons.

The search results are displayed in the list.

## Assigning Accounts to Devices

You can assign accounts to the device and the platform will push the account information to the device.

### Procedure

Click **Device Management > SIP Device List**.

**Edit Device**

MAC Address : 805ec0484b91  
Device Model : SIP-T52S

**Please edit :**

Device Name: T52S-ZYD

\* Site: zhangzhou

Machine ID: Please enter Machine ID

Bind Account (Maximum 12):

1. + Add

2. Account 1 SIP 2572@ume.yealink.com

Synchronize to RPS: ☐

3. Save Cancel

The account information is sent to the device.

### Related tasks

[Adding Accounts](#)

## Setting the Site

When editing the device information, you can edit the site which the device belongs to. You can also put multiple devices to the same site.

### Procedure

Click **Device Management > SIP Device List**.

**SIP Device List**

+ Add Device Import Export Refresh

Device/MAC/Account Info/IP More

3 selected Delete Site Settings Update Configuration File Update Firmware Update Resource File Diagnostics More

MAC	Model	Device Name	Public IP	Private...	Firmware Version	Status	Site	Report Time	Operation
001565f307...	SIP-T48S	T48S-ZYD	10.81.4...	10.81.4...	66.84.254.170	Unregistered	zhangzhou	2019/12/13 20:0...	[Icons]
805ec0484b...	SIP-T52S	T52S-ZYD	10.81.4...	10.81.4...	66.84.254.170	Unregistered	zhangzhou	2019/12/12 21:0...	[Icons]
001565f78c...	W60B	66...	10.81.4...	10.81.4...	66.84.254.170	Unregistered	zhangzhou	2019/11/28 17:4...	[Icons]

**Site Settings**

\* Select site: zhangzhou

OK Cancel

## Pushing Configuration Files to Devices

You can push the configuration files to one or multiple devices.

### Before you begin

If there are no desired configuration files, you can refer to [Managing the Device Configuration](#) to add one first.


### About this task

- When the device is in a call, the configuration file will not be pushed until the call is finished.
- When the device is offline or invalid, the configuration file cannot be pushed.
- When the device is unregistered, online or registered, the configuration file will be pushed.

For more information about the device status, refer to [Device Status](#).

### Procedure

1. Click **Device Management > SIP Device List**.
2. Push the configuration file to the selected devices.

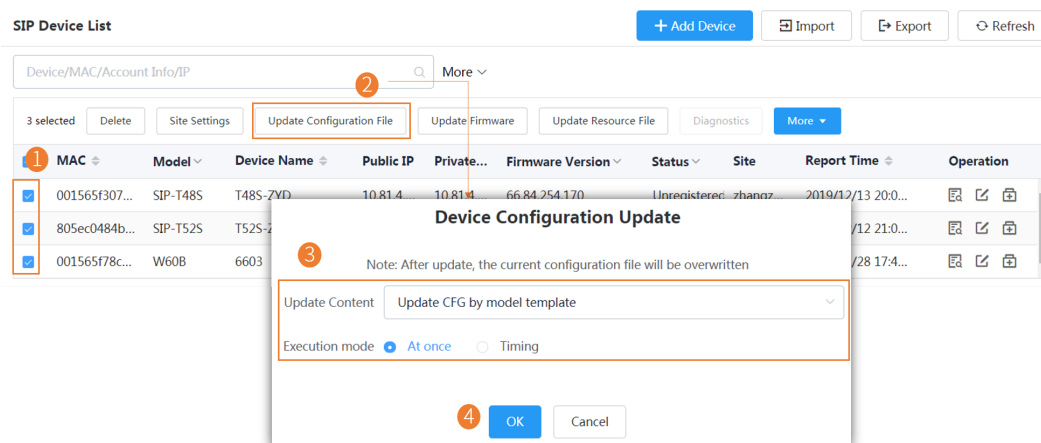

## Pushing Firmware to Devices

You can push the firmware to one or multiple devices.

### Before you begin

If there is no desired firmware, you need to [Adding Firmware](#).


### About this task

- When the device is in a call, the firmware will not be pushed until the call is finished.
- When the device is offline or invalid, the firmware cannot be pushed.
- When the device is unregistered, online or registered, the firmware will be pushed.

For more information about the device status, refer to [Device Status](#).

### Procedure

1. Click **Device Management > SIP Device List**.
2. Push the firmware to the selected devices.

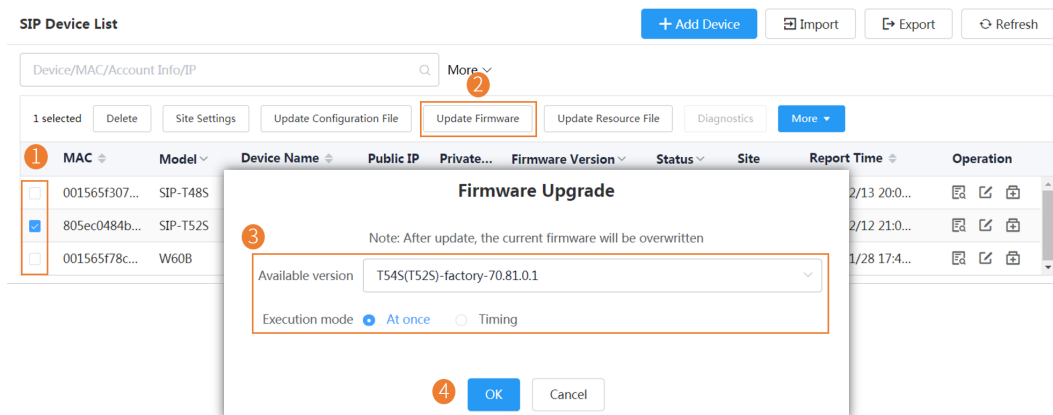

## Pushing Resource Files to Devices

You can push resource files to one or multiple devices.

### Before you begin

If there are no desired resource files, you need to [Adding Resource Files](#).


### About this task

- When the device is in a call, the resource file will not be pushed until the call is finished.
- When the device is offline or invalid, the resource file cannot be pushed.
- When the device is unregistered, online or registered, the resource file will be pushed.

For more information about the device status, refer to [Device Status](#).

### Procedure

1. Click **Device Management > SIP Device List**.
2. Push the resource file.

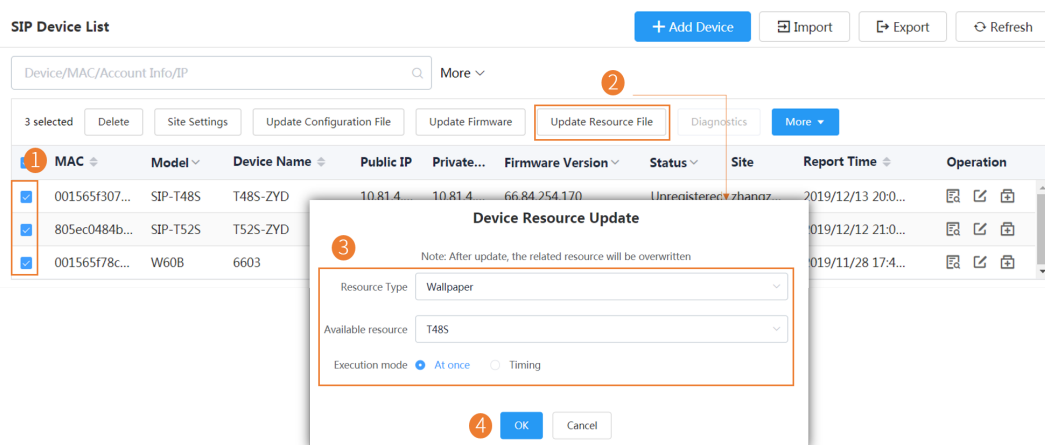

## Diagnosing Devices

You can diagnose one or multiple devices. You can diagnose up to 5 devices at the same time.

### About this task

This feature is not applicable to the offline and invalid devices. For more information about the device status, refer to [Device Status](#).

### Procedure

1. Click **Device Management > SIP Device List**.
2. Diagnose the device.

**SIP Device List** + Add Device Import Export Refresh

Device/MAC/Account Info/IP More ▾

1 selected Delete Site Settings Update Configuration File Update Firmware Update Resource File Diagnostics More ▾

	MAC	Model	Device Name	Public IP	Private...	Firmware Version	Status	Site	Report Time	Operation
<input checked="" type="checkbox"/>	001565f307...	SIP-T48S	T48S-ZYD	10.81.4...	10.81.4...	66.84.254.170	Unregistered	zhangz...	2019/12/13 20:0...	
<input type="checkbox"/>	805ec0484b...	SIP-T52S	T52S-ZYD	10.81.4...	10.81.4...	70.84.0.4	Offline ▾	zhangz...	2019/12/12 21:0...	
<input type="checkbox"/>	001565f78c...	W60B	6603	10.81.4...	10.81.4...	77.83.0.72	Offline ▾	Xi'an	2019/11/28 17:4...	

3. Select the desired diagnostic tool to diagnose the device.



**Note:** Select **One-click Export** to export the packets, logs, and configuration files. For more information, refer to [Exporting the Packets, Logs, and Configuration Files by One Click](#).

**Device Diagnostic**

Login Name : T48S-ZYD IP : 10.81.4.206  
 Device Type : Audio Device Model : SIP-T48S
 End Diagnostic Diagnostic Assistance

**Diagnostic Tools**

One-click Export
 Packetcapture
 Network Detection
 Export System Log
 Export Config File
 CPU Memory Status
 Recording File
 Screenshot

**Recent Logs (7days)** Log Level:6 Batch Download

<input type="checkbox"/>	File Name	Time	Size(KB)	Operation
No Data				


4. After diagnosing, click **End Diagnostic**.

## Enabling/Disabling DND

If your boss doesn't want to be disturbed during the break, you can enable DND for the boss's phone, and then cancel DND during office hours; if you need to make such settings every day, you can set it as a periodic task.

### Procedure

Click **Device Management > SIP Device List**.

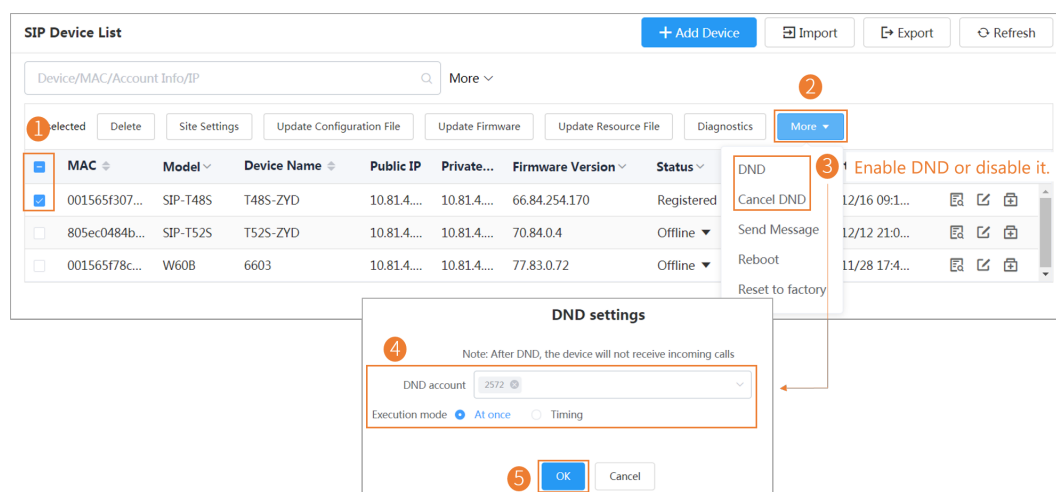


## Sending Messages to Devices

If you need to perform operations, for example, updating the firmware for the device, and want to notify the user in advance, you can send a message to the device through the platform. The device management platform supports sending messages to single or multiple devices.

### Procedure


Click **Device Management > SIP Device List**.

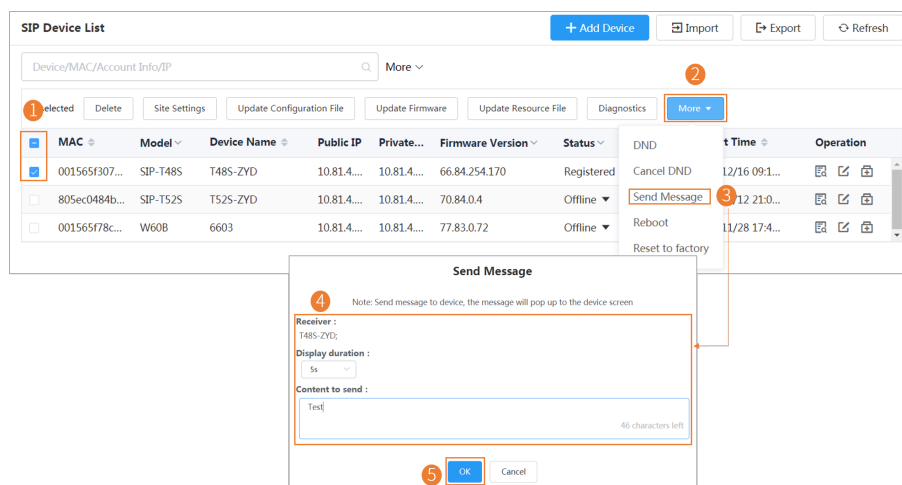

### Results

The message will pop up on the device screen. Take the T48S IP phone as an example:




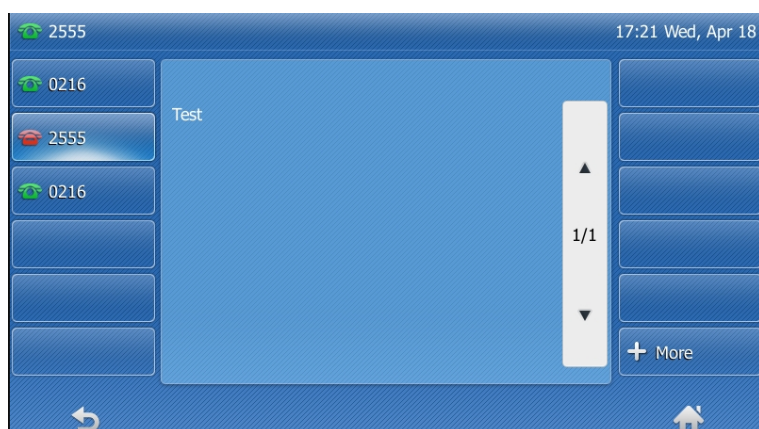

## Rebooting Devices

### Procedure

1. Click **Device Management > SIP Device List**.
2. Reboot the device.

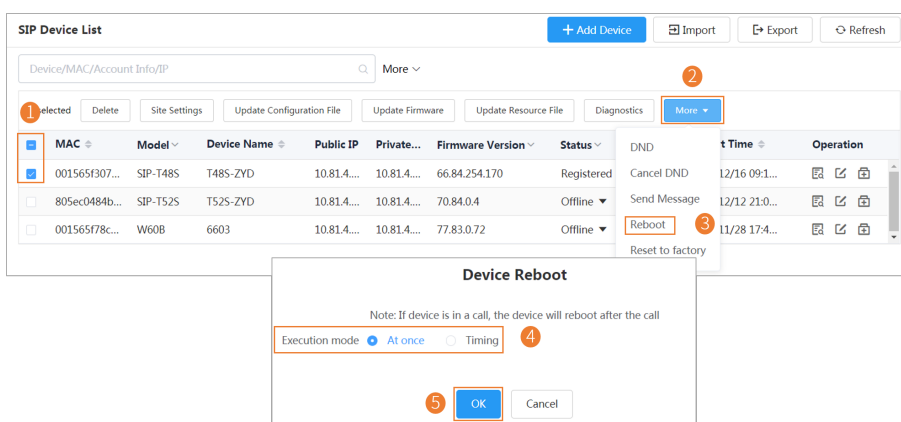


### Results

- If you select **At once**, the devices will be rebooted immediately.
- If you select **Timing**, the devices will be rebooted at the time you set.

## Resetting the Devices to Factory

### Procedure

Click **Device Management > SIP Device List**.

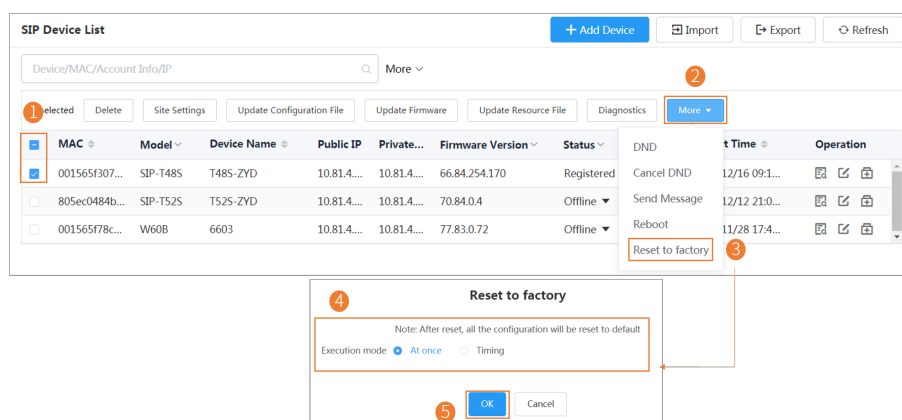


## Results

- If you select **At once**, the devices will be reset to factory immediately.
- If you select **Timing**, the devices will be reset to factory at the time you set.

## Deleting Devices

### Procedure

Click **Device Management > SIP Device List**.

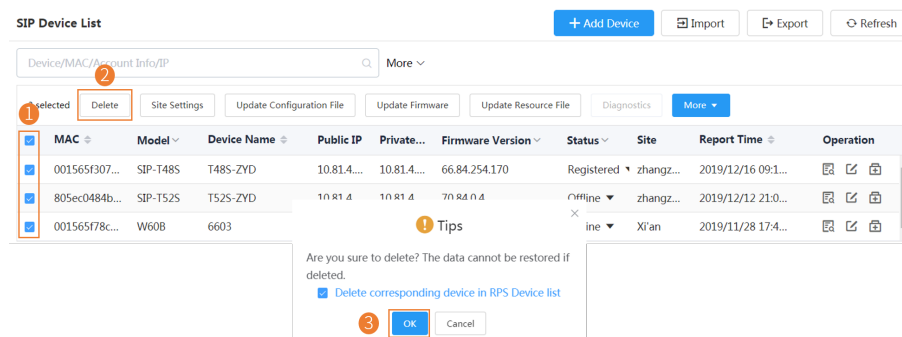

## Managing USB Devices


- [Editing the Device Information](#)
- [Exporting the Device Information](#)
- [Viewing the USB Device](#)
- [Searching for Devices](#)
- [Setting the Site](#)
- [Deleting Devices](#)

## Editing the Device Information


You can edit the device name and the site, or re-assign an account to the device.

### Procedure

1. Click **Device Management > USB Device List**.

- Click  beside the desired device.
- Edit the device information and save it.

Edit Device



Device ID : 880-XXXXXX-1271

Device Model : CP900

Please edit :

\* Device NameYL2648-A03971NB

\* SiteYealink

Save

Cancel

## Exporting the Device Information

You can export the basic information of all devices.

## Procedure

Click **Device Management** > **USB Device List** > **Import**.

## Viewing the USB Device

You can view the information of the USB device, including the model, the device ID, the device name, the IP, the firmware version, the status, the site and the report time.

## Procedure

Click **Device Management** > **USB Device List**.

You can click **Refresh** in the top-right corner to obtain the latest device information,

## Searching for Devices

You can use the search bar or the filters to search for the desired devices.

## Procedure

Click **Device Management > USB Device List**.

**USB Device List** Export Refresh

Device name/Host IP/ Device ID  More ^

Site :  Search

0 selected Delete Site Settings

Device ID	Model	Device Name	Host IP	Firmware Version	Status	Site	Report Time	Operation
8800819099...	CP900	YL2648-A03971NB	10.83.4.64	100.420.0.5	Offline	Yealink	2019/12/13 14:44:...	
8403619100...	BT50	YL2648-A03971NB	10.83.4.64	1.1.0.6	Offline	Yealink	2019/12/13 14:37:...	
5801219060...	CP700	YL2648-A03971NB	10.83.4.64	115.0.0.10	Offline	Yealink	2019/12/11 19:31:...	
5800818129...	CP900	YL2648-A03971NB	10.83.4.64	100.420.0.5	Offline	Yealink	2019/12/11 09:57:...	

The search results are displayed in the list.

## Setting the Site

When editing the device information, you can edit the site which the device belongs to. You can also put multiple devices to the same site.

### Procedure

Click **Device Management > USB Device List**.

**USB Device List** Export Refresh

Device name/Host IP/ Device ID  More ^

2 selected Delete Site Settings

Device ID	Model	Device Name	Host IP	Firmware Version	Status	Site	Report Time	Operation
8800819099...	CP900	YL2648-A03971NB	10.83.4.64	100.420.0.5	Offline	Yealink	2019/12/13 14:44:...	
8403619100...	BT50	YL2648-A03971NB	10.83.4.64	1.1.0.6	Offline	Yealink	2019/12/13 14:37:...	

**Site Settings**

Select site

OK Cancel

## Deleting Devices

### Procedure

Click **Device Management > USB Device List**.

**USB Device List** Export Refresh

Device name/Host IP/ Device ID  More ^

2 selected Delete Site Settings

Device ID	Model	Device Name	Host IP	Firmware Version	Status	Site	Report Time	Operation
8800819099...	CP900	YL2648-A03971NB	10.83.4.64	100.420.0.5	Offline	Yealink	2019/12/13 14:44:...	
8403619100...	BT50	YL2648-A03971NB	10.83.4.64	1.1.0.6	Offline	Yealink	2019/12/13 14:37:...	

**Tips**

Are you sure to delete? The data cannot be restored if deleted.

OK Cancel

## Managing Room System


- [Editing the Device Information](#)
- [View the Information of the Room System](#)
- [Searching for Devices](#)

- [Setting the Site](#)
- [Rebooting Devices](#)
- [Pushing Firmware to Devices](#)
- [Deleting Devices](#)


## Editing the Device Information

You can edit the device name and the site, or re-assign an account to the device.

### Procedure

1. Click **Device Management** > **Room System**.
2. Click  beside the desired device.
3. Edit the device information and save it.

Edit Device



MAC Address : 54[redacted]a8c

Device Model : MVC800

Please edit :

\* Meeting Room

\* Site

Save

Cancel

## View the Information of the Room System

You can view the information of the Room System, including the name, the MAC address, the model, the meeting room name, the IP, the operating system, the status, the site and the report time.

### Procedure

1. Click **Device Management** > **Room System**.  
You can click **Refresh** in the top-right corner to obtain the latest device information,
2. Optional: Click the blue font under the **Associated Device** tab and you can view the detailed information of the associated device of the room system.

**Room System** Refresh

MAC/IP/Meeting Room More

0 selected Delete Site Settings Reboot Update Firmware

MAC	Model	Meeting Room	IP	Connector Version	Status	Associa...	Site	Report Time	Operation
54b203055...	MVC800	zehuistest	10.82.2...	2.0.14.0	Online	11(4 offli...	Yealink	2019/12/16 09:1...	
1c697a004...	ZVC Zoom Room	zehuist7R	10.82.2...	2.0.14.0	Online	2(0 offli...	Yealink	2019/12/14 04:0...	

[Associated Device Detail](#) [Return](#)

Meeting Room : zehuistest IP : 10.82.2.15 Site : Yealink  
 Device Model : MVC800 MAC : 54b203055abc Operating System : Windows 10 Enterprise (19H2)

Sub-device list

0 selected Delete Reboot Reset to factory Update Firmware

Device ID	Model	Connection Mode	Device Type	Firmware Ver...	Hardware Ver...	Status	Report Time
UNC30	UNC30	USB	Video device	105.420.254.10	105.1.0.0.0.0	Offline	2019/12/13 17:48:54
CP900	CP900	USB	Audio device	100.420.0.5	100.0.7.0.0.0.0	Offline	2019/12/16 08:55:40
CP900	CP900	Dect	Audio device	---	---	Offline	2019/12/16 09:15:36
CP900	CP900	Dect	Audio device	---	---	Offline	2019/12/16 09:15:36
CP900	CP900	USB	Audio device	71.30.254.55	71.0.0.0.0.0	Online	2019/12/16 09:15:36
M500	M500	USB	Other	94.420.0.5	94.0.0.0.0.0	Online	2019/12/16 09:15:36
VCM34	VCM34	Ethernet	Audio device	92.0.0.33	---	Online	2019/12/16 09:15:36
VCM34	VCM34	Ethernet	Audio device	92.0.0.33	---	Online	2019/12/16 09:15:36
UNC30	UNC30	USB	Video device	92.420.0.35	92.0.0.0.0.1	Online	2019/12/16 09:15:36
M500	M500	USB	Other	1.0.1.2	---	Online	2019/12/16 09:15:36
CP900	CP900	Dect	Audio device	55.80.0.20	55.0.0.0	Online	2019/12/16 09:15:34

## Searching for Devices

You can use the search bar or the filters to search for the desired devices.

### Procedure

Click **Device Management > Room System**.

**Room System** Refresh

MAC/IP/Meeting Room More

Site : Please select a site Search

0 selected Delete Site Settings Reboot Update Firmware

MAC	Model	Meeting Room	IP	Connector Version	Status	Associa...	Site	Report Time	Operation
54b203055...	MVC800	zehuistest	10.82.2...	2.0.14.0	Online	11(4 offli...	Yealink	2019/12/16 09:1...	

The search results are displayed in the list.

## Setting the Site

When editing the device information, you can edit the site which the device belongs to. You can also put multiple devices to the same site.

### Procedure

Click **Device Management > Room System**.

**Room System** Refresh

MAC/IP/Meeting Room More

2 selected Delete Site Settings Reboot Update Firmware

MAC	Model	Meeting Room	IP	Connector Version	Status	Associa...	Site	Report Time	Operation
54b203055...	MVC800	zehuistest	10.82.2...	2.0.14.0	Online	11(4 offli...	Yealink	2019/12/16 09:1...	
1c697a004...	ZVC Zoom Room...	zehuist7R	10.82.2...	2.0.14.0	Online	2(0 offli...	Yealink	2019/12/14 04:0...	

**Site Settings**


\* Select site Yealink

OK Cancel

## Rebooting Devices

### Procedure

Click **Device Management > Room System**.

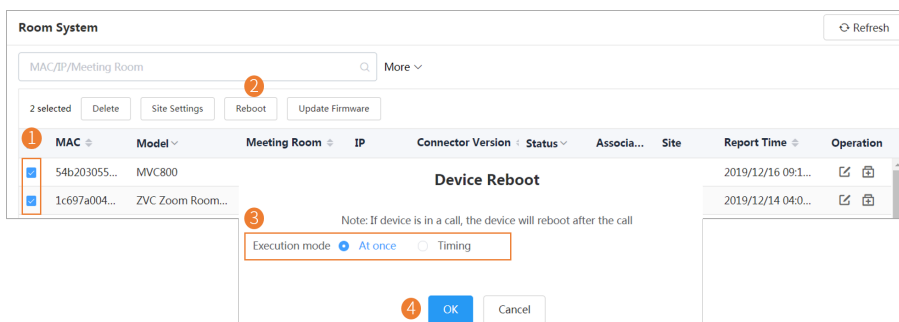

### Results

- If you select **At once**, the devices will be rebooted immediately.
- If you select **Timing**, the devices will be rebooted at the time you set.

## Pushing Firmware to Devices

### Before you begin

If there is no desired firmware, you need to [Adding Firmware](#).


### About this task

- When the device is in a call, the firmware will not be pushed until the call is finished.
- When the device is offline or invalid, the firmware cannot be pushed.
- When the device is unregistered, online or registered, the firmware will be pushed.

For more information about the device status, refer to [Device Status](#).

### Procedure


1. Click **Device Management > Room System**.
2. Push the firmware to the selected devices.

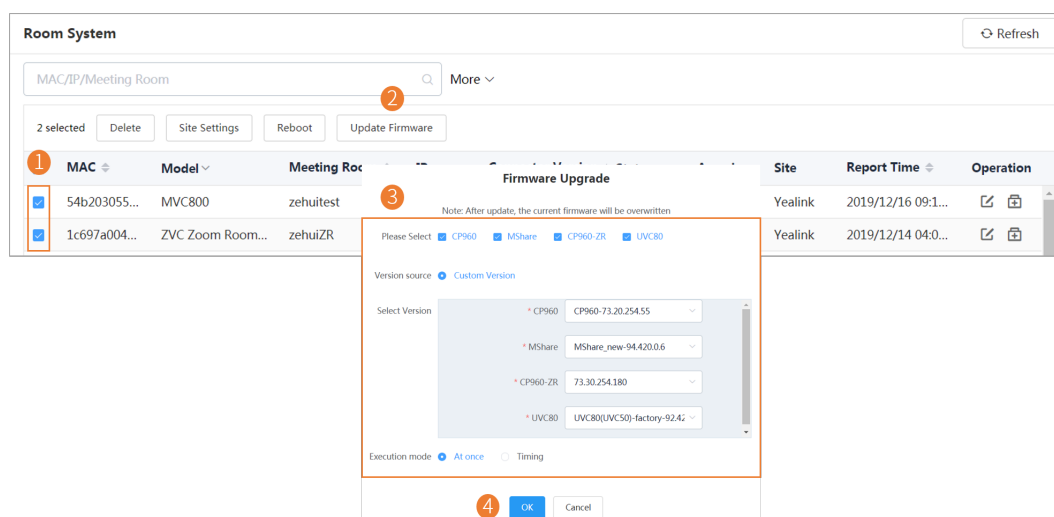

## Deleting Devices

### Procedure

Click **Device Management > Room System**.

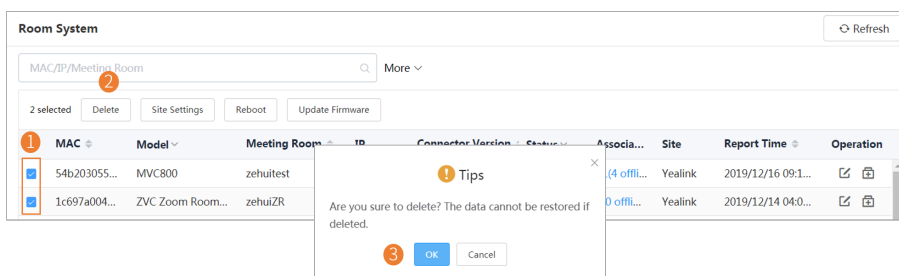

## Managing Firmware

You can manage all the device firmware via the device management platform.

- [Adding Firmware](#)
- [Searching for Firmware](#)
- [Updating the Device Firmware](#)
- [Editing the Firmware](#)
- [Downloading the Firmware](#)
- [Deleting Firmware](#)

## Adding Firmware

### Procedure

1. Click **Device Management > Firmware Management**.
2. In the top-right corner, click **Add Firmware**.
3. Configure the firmware information in the corresponding field and upload the firmware file.
4. Click **Save**.

## Searching for Firmware

### Procedure

1. Click **Device Management > Firmware Management**.
2. Enter the firmware name, the version or the description of the firmware in the search box.
3. Click **Search**.



## Updating the Device Firmware

When you need to update the device firmware, you can push the new firmware to the device. If it is not convenient for the device user to update the device during working time, you can set a timing task.

### Procedure

1. Click **Device Management > Firmware Management**.




2. Click  beside the desired firmware.
  3. Select the desired devices.
  4. Click **Push to Update**.
  5. Select a desired execution mode:
    - If you select **At once**, the firmware will be updated at once.
    - If you select **Timing**, configure the task name, the repeat type and the execution time, the firmware will be updated at a specific time.
  6. Click **OK**.
-  **Tip:** You can also select the desired device in the Device List, click **Update Firmware**, and select the corresponding firmware version to update. Note that the firmware must be applicable to all selected devices.

## Editing the Firmware


You can modify the firmware information, for example, the name and the version, or upload a new firmware to replace the old one.

### Procedure

1. Click **Device Management > Firmware Management**.
2. Click  beside the desired firmware.
3. Edit the corresponding information.
4. Click **Save**.

## Downloading the Firmware

### Procedure

1. Click **Device Management > Firmware Management**.
2. Click  beside the desired firmware.
3. The firmware will be downloaded to your computer.

## Deleting Firmware

### Procedure

1. Click **Device Management > Firmware Management**.
2. Select the desired firmware.
3. Click **Delete**.
4. Click **OK** according to the prompts.

## Managing Resources

---

You can add and edit resource files, push resource files to devices or download them to your local system.

- [Adding Resource Files](#)
- [Search for Resources](#)
- [Pushing Resource Files to Devices](#)

- [Editing Resource Files](#)
- [Downloading Backup Files](#)
- [Deleting Resource Files](#)

## Adding Resource Files

### Procedure

1. Click **Device Management > Resource Management**.
2. In the top-right corner, click **Add Resource**.
3. Configure the resource information in the corresponding field and click **Upload** to upload the resource file.
4. Click **Save**.


## Search for Resources

### Procedure

1. Click **Device Management > Resource Management**.
2. Enter the resource name, the file name or the description in the search box.
3. Click **Search**.

## Pushing Resource Files to Devices

### Procedure


1. Click **Device Management > Resource Management**.
2. Click  beside the desired resource.
3. Select the desired devices.
4. Click **Push to Update**.
5. Select a desired execution mode:
  - If you select **At once**, the resource will be updated at once.
  - If you select **Timing**, configure the task name, the repeat type and the execution time, the firmware will be updated at a specific time.
6. Click **OK**.



**Tip:** You can also select the desired devices in the Device List, click **Update Resource File**, and select the corresponding resource type to update. The resource file must be applicable to all the selected devices.


## Editing Resource Files

### Procedure

1. Click **Device Management > Resource Management**.
2. Click  beside the desired resource.
3. Edit the related information of the resource file in the corresponding field.
4. Click **Save**.

## Downloading Backup Files

### Procedure

1. Click **Device Management > Resource Management**.
2. Click  beside the desired resource.
3. The file will be downloaded to your computer.

## Deleting Resource Files

### Procedure

1. Click **Device Management > Resource Management**.
2. Select the desired resource.
3. Click **Delete**.
4. Click **OK** according to the prompts.

## Managing Sites

---

You can set sites according to your enterprise organization, and manage the devices in the same site.

The default site named after your company name is added when the system is initialized.

- [Adding Sites](#)
- [Importing Sites](#)
- [Editing Sites](#)
- [Searching for Sites](#)
- [Deleting Sites](#)

## Adding Sites

---

### Procedure

1. Click **Site Management**.
2. In the top-right corner, click **Add Site**.
3. Set and save the parameters.

### Add Site

1

\* Site Name

WUJI

\* Parent Site

WULLLALA

Description

Maximum 1024 characters.

Site IP ?

+ Add

Public IP	Private IP	Operation
10.152.123.56/9	10.12.12.49/12	

2

Save

Cancel



#### Note:

Setting site IP makes the devices automatically assigned to the corresponding site if the device IP addresses are in the site IP range.

The priority (the devices automatically connected to the site) in the descending order is site IP setting, the site setting in the Common.cfg file, the site setting in importing a batch of devices.

When a device is in the IP range of a sub-site and a superior site, the device goes to the sub-site with priority.

When site A configured with both the public and the private IP and the site B configured with only the public IP are at the same level, the device goes to site A with priority.

You can enter 0.0.0.0 in the **Public IP** field, which means all IP addresses are acceptable.

## Importing Sites

You can import a template to add multiple sites quickly. You need to download the template, edit the information in the template and then import the template to the device management platform.

### Procedure

1. Click **Site Management**.
2. In the top-right corner, click **Import**.
3. Click **Download the template**.
4. Edit the template and save it to your computer.  
Before editing the information, you need to read the note and then fill in the template as required.
5. Click **Click to upload** to import the file or drag the file to the specified field directly.

6. Click **Upload**.

# Editing Sites

## Procedure

1. Click **Site Management**.
2. Select a desired site in the Site Name list, and click **Edit**.

Site Management

Import

+ Add Site

Site Name/Description

Site Name

WULLALA

Xian

zhangzhou

DongNan

WUJI

1

\* Site Name

zhangzhou

\* Parent Site

WULLALA

Description

Site IP

Public IP	Private IP
0.0.0.0	--

Edit

Delete

3. Set and save the parameters.

Edit Site

\* Site Name

zhangzhou

\* Parent Site

WULLALA

Description

Maximum 1024 characters.

Site IP

+ Add

Public IP	Private IP	Operation
0.0.0.0/30	--	✎ ✕

Save

Cancel

# Searching for Sites

## Procedure

1. Click **Site Management**.

2. Enter the site name or the site description in the search box.
3. Press **Enter** to perform a search.  
The search result is displayed in the Site Name list.

## Deleting Sites

---

You can delete sites created on your own, but you cannot delete the default site named after your company name. If a site does not have any subordinate sites and the subordinate sites do not have devices, when you delete the site, its subordinate sites will be deleted too.

### About this task

The site cannot be deleted if there are devices under it.

### Procedure

1. Click **Site Management**.
2. Select a desired site in the Site Name list.
3. Click **Delete**.
4. Click **OK** according to the prompts.

## Managing Accounts

---

You can manage different products on the device management platform. Different products may use different types of login accounts, so we divide the accounts into the SFB account, the SIP account, the YMS account, the Cloud account and the H.323 account for better management.



**Note:** This feature is not applicable to the Room System and the Teams phone.

- [Adding Accounts](#)
- [Importing Accounts](#)
- [Editing the Account Information](#)
- [Searching for Accounts](#)
- [Exporting Accounts](#)
- [Deleting Accounts](#)

## Adding Accounts

---

### Procedure

1. Click **Account Management**.
2. In the top-right corner of the page, click **Add Account** > **Add SFB account/Add SIP account/Add YMS account/Add CLOUD account/Add H.323 account**.
3. Configure the account information.
4. Click **Save**.

## Importing Accounts

---

You can import the template to add multiple accounts quickly. You need to download the template, edit the information in the template and then import the template to the device management platform.


### Procedure

1. Click **Account Management**.
2. In the top-right corner, click **Import** > **Import SFB account/Import SIP account/Import YMS account/Import CLOUD account/Import H.323 account**.
3. Click **Download the template**.
4. Read the note, enter the corresponding information in the template and then save it to your computer.
5. Click **Click to upload** to import the file or drag the file to the specified field directly.
6. Click **Upload**.

## Editing the Account Information

---

### Procedure

1. Click **Account Management**.
2. Click  beside the desired account.
3. Edit the account information.
4. Click **Save**.

## Searching for Accounts

---

### Procedure

1. Click **Account Management**.
2. Enter the account information and click **Search**.  
The search result is displayed in the account list.

## Exporting Accounts

---

You can export the basic information of all accounts. The exported files are classified by different account types.

### Procedure

1. Click **Account Management**.
2. In the top-right corner, click **Export**.  
The files are automatically saved to the local system, then you can view the basic information of all accounts.


## Deleting Accounts

---

### Procedure

1. Click **Account Management**.
2. Select the desired accounts.
3. Click **Delete** and confirm the action.

If you select **Sign out the account from device when delete**, the account will be deleted from the device management platform and signed out from the device. If you select **Sign out the account from device when delete**, the account will only be deleted from the device management platform but not signed out from the device.

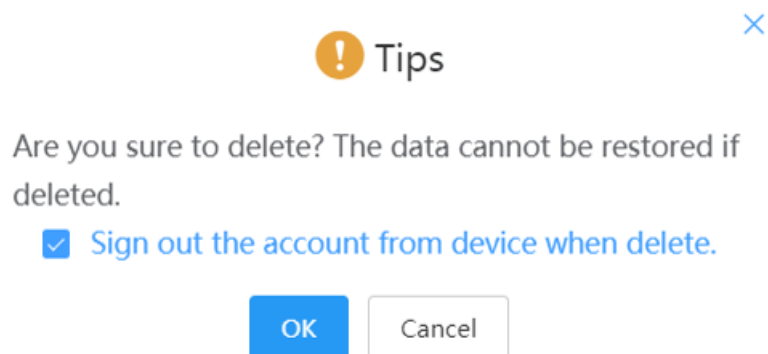

## Managing the Device Configuration

---

After logging into the device management platform, you can manage the device configuration. In some situations, the device can automatically obtain the corresponding RPS configuration, model configuration, MAC configuration, site configuration, or global parameters from the platform. The group configuration can only be updated manually. The priority of the configuration in ascending order is RPS, global, model, site, MAC.

If both the current site and the parent site have site configuration, the devices access both the configuration. The priority of the configuration in ascending order is the parent site, the current site.

- [Managing Model Configuration](#)
- [Managing the Site Configuration](#)
- [Managing the Group Configuration](#)
- [Managing the MAC Configuration](#)
- [Configuring Global Parameters](#)

## Managing Model Configuration

---

You can customize the configuration template according to the device model, that is, one template for one device model configuration. You can update the device configuration by setting the parameters in the template or editing the model configuration in the text.

- [Adding Configuration Templates](#)
- [Setting Parameters](#)
- [Pushing Configuration to Devices](#)



- [Editing Configuration Templates](#)
- [Downloading the Model File](#)
- [Viewing Parameters](#)
- [Deleting Templates](#)

## Adding Configuration Templates

You can add configuration templates to manage the corresponding device models.

### Procedure

1. Click **Device Configuration > Model Configuration**.
2. In the top-right corner, click **Add Template**.
3. Enter the template name, select the device model, and edit the description.
4. Click **Save**.

## Setting Parameters

You can choose one of the following methods to configure the parameters:

- Edit parameters in the text: you can edit any parameter supported by the device in the text.
- Edit parameters on the graphical editing page: you can edit the corresponding template parameters on the graphical editing page.
- [Setting Parameters in the Text](#)
- [Setting Parameters on the Graphical Editing Page](#)

### Setting Parameters in the Text

You can customize any parameters supported by the devices in the text and push the parameters to the device after editing.

### Procedure

1. Click **Device Configuration > Model Configuration**.
2. Click **\*\*\*** on the right side of the desired template, and select **Edit Parameters in text** from the drop-down menu.
3. Set and save the parameters.

Set Template Parameters | T48S 1 Edit the parameter on the Graphical editing page.

You can edit template parameters in text, the format is: key=value, every parameter must be in different line. Here are the examples:

```
static.lang.gui=Chinese_5
features.hotline_delay=8
linekey.1.line=1
phone_setting.phone_locklock_time_out=20
dm.enterprise_id=leynhkqe
linekey.1.type=15
phone_setting.phone_lockunlock_pin=1234
features.dnd.emergency_enable=1
lang.wui=Chinese_1
dm.site_id=bay1p1we
phone_setting.backgrounds=04.jpg
phone_setting.phone_lockenable=1
features.dnd_mode=0
features.key_tone=1
```

2 Save Cancel

4. On the pop-up window, select **Yes** to push the edited configuration immediately, or **No** to save the edited configuration.

✓ Set successfully!



Update the device configuration now?

Yes

No

5. Push the selected configuration.

Push to update the parameters

Please select a site

MAC/Device Name/Account Info

MAC	Device Name	Account Info
001565f30702	T48S-ZYD	2572

Selected : 1

MAC	Device Name	Account Info
001565f30702	T48S-ZYD	2572

Push to Update

Cancel

6. Select the desired execution mode.

Please select the execution mode



Note: After update, device configuration will be overwritten

Execution mode ☒ At once ☐ Timing

OK

Cancel



#### Note:

- If you select **At once**, the configuration will be pushed to the selected devices immediately.
- If you select **Timing**, the configuration will be pushed to the selected devices at the time you set.
- If the edited templates are involved, the timer tasks will be executed according to the last template that you edit and save.

## Setting Parameters on the Graphical Editing Page

You can edit the parameter supported in the template, and push the edited parameter to the device.

### Procedure

1. Click **Device Configuration** > **Model Configuration**.
2. Click beside the desired template.
3. Set and save the parameters.

Set Template Parameters | T48S Edit the parameter in the text.

**1**

Account Directory Dsskey Features Network Security **Settings**

Auto Provision ☒ Select All Reset

Call Display

Configuration

Power Saving **1**

**Preference** **2**

SIP

TR069

Time&Date

Tones **3**

Upgrade

Voice

Voice Monitoring

Preference

☒ Language Chinese\_T ☐ Live Dialpad Disabled ☐ Transparency 1

☐ Inter Digit Time(1~14s) 4 ☐ Inactive Level Low ☐ Active Level 8

☐ Backlight Time(seconds) Always On ☐ Watch Dog Enabled ☐ Ring Type Ring1.wav

☐ Ringtone URL ☒ Wallpaper 04.jpg ☐ Wallpaper URL

☐ Wallpaper with Dsskey Unfold Auto ☐ Screensaver Wait Time 6h ☐ Screensaver Display Clock Enabled

☐ Screensaver Type System ☐ XML Browser URL ☐ Upload Screensaver

**2** **Save** **Cancel**

**Tip:**

- You can select the edited configuration, and push it to the desired devices.
  - You can click **Reset** to reset the configuration on this page to the value before modification.
4. On the pop-up window, select **Yes** to push the edited configuration immediately, or **No** to save the edited configuration.

**Set successfully!**

Update the device configuration now?

**Yes****No**

5. Push the selected configuration.

Push to update the parameters

**1**

Please select a site

MAC/Device Name/Account Info

<input checked="" type="checkbox"/>	MAC	Device Name	Account Info
<input checked="" type="checkbox"/>	001565f30702	T48S-ZYD	2572

Selected : 1

MAC	Device Name	Account Info
001565f30702	T48S-ZYD	2572

**1** **Push to Update** **Cancel**

6. Select the desired execution mode.

×

### Please select the execution mode

Note: After update, device configuration will be overwritten

Execution mode ☒ **At once** ☐ Timing

OK
Cancel


**Note:**

- If you select **At once**, the configuration will be pushed to the selected devices immediately.
- If you select **Timing**, the configuration will be pushed to the selected devices at the time you set.
- If the edited templates are involved, the timer tasks will be executed according to the last template that you edit and save.

## Pushing Configuration to Devices

You can push the configuration to devices if you have updated the configuration in the text or in the template.

### Procedure

1. Click **Device Configuration > Model Configuration**.
2. Click  beside the desired template.
3. Select the desired devices.
4. Click **Push to Update**.
5. Select a desired execution mode:
  - If you select **At once**, the parameters will be updated at once.
  - If you select **Timing**, configure the task name, the repeat type and the execution time, the firmware will be updated at a specific time.
6. Click **OK**.



**Tip:** You can also select the desired devices in the Device List, click **Update Configuration File**, select **Update CFG by model template** to update.

## Editing Configuration Templates

You can edit the name and the description of the configuration templates, but you cannot edit the device model.


### Procedure

1. Click **Device Configuration > Model Configuration**.
2. Click **\*\*\*** beside the desired template.
3. Select **Edit Template** from the drop-down menu.
4. Edit the template information.
5. Click **Save**.

## Downloading the Model File

You can download the model file to your computer to view the updated configuration parameters of the corresponding model.


### Procedure

1. Click **Device Configuration** > **Model Configuration**.
2. Click  beside the desired template.
3. Select **Download config file** from the drop-down menu to download the configuration file to your local system.

## Viewing Parameters

You can view the configured parameter in the template but the parameters you customize in the text are not displayed in the template.

### Procedure

1. Click **Device Configuration** > **Model Configuration**.
2. Click  beside the desired template.

View Parameters <span>×</span>		
test(SIP-T415)		
Parameter	Catalog	Value
Server1 Transport Type	Account > Register > Account1	TCP
<div> <span>I know</span> <span>Edit</span> </div>		

You can click **Edit** to view the parameters in the template.

## Deleting Templates

### Procedure

1. Click **Device Configuration** > **Model Configuration**.
2. Select the desired templates.
3. Click **Delete**.
4. Click **OK**.

## Managing the Site Configuration

You can customize and manage the configuration according to the site that the devices belong to. Site configuration applies to all the offline devices in the site and its sub-sites.

- [Adding Site Configuration Templates](#)
- [Setting Parameters](#)
- [Pushing the Site Configuration to Devices](#)
- [Editing the Site Configuration Template](#)
- [Downloading the Site Configuration Template](#)

- [Deleting Site Configuration Templates](#)

## Adding Site Configuration Templates

### Procedure

1. Click **Device Configuration > Site Configuration > Add Template**.
2. Set and save the parameters.

Site Configuration

+ Add Template

Site Name/Description Search

0 selected Delete

Site Name	Description	Modification Time	Operation
DongNan	Please enter description, maximum 255	--	Save Cancel

## Setting Parameters

You can choose one of the following methods to configure the parameters:

- Edit parameters in the text: you can edit any parameter supported by the device in the text.
- Edit parameters on the graphical editing page: you can edit the corresponding template parameters on the graphical editing page.
- [Setting Parameters in the Text](#)
- [Setting Parameters on the Graphical Editing Page](#)

### Setting Parameters in the Text

You can customize any parameters supported by the devices in the text and push the parameters to the device after editing.

### Procedure

1. Click **Device Configuration > Site Configuration**.
2. Click **...** on the right side of the desired template, and select **Edit Parameters in text** from the drop-down menu.
3. Set and save the parameters.

Set Template Parameters | Edit the parameter on the Graphical editing page.

You can edit template parameters in text, the format is: key=value, every parameter must be in different line. Here are the examples:

```
static.lang.gui=Chinese_S
features.hotline_delay=8
phone_setting.calendar_reminder=1
```

Save Cancel

4. On the pop-up window, select **Yes** to push the edited configuration immediately, or **No** to save the edited configuration.

 Set successfully!



Update the device configuration now?

Yes

No

5. Select the desired execution mode.

Please select the execution mode



Note: After update, device configuration will be overwritten

Execution mode ☒ At once ☐ Timing

OK

Cancel




**Note:**

- If you select **At once**, the configuration will be pushed to all the devices in this site immediately.
- If you select **Timing**, the configuration will be pushed to all the devices in this site at the time you set.
- If the edited templates are involved, the timer tasks will be executed according to the last template that you edit and save.

## Setting Parameters on the Graphical Editing Page

You can edit the parameter supported in the template, and push the edited parameter to the device.

### Procedure

1. Click **Device Configuration** > **Site Configuration**.
2. Click  beside the desired template.
3. Set and save the parameters.


**Tip:**

- You can select the edited configuration, and push it to the desired devices.
  - You can click **Reset** to reset the configuration on this page to the value before modification.
4. On the pop-up window, select **Yes** to push the edited configuration immediately, or **No** to save the edited configuration.



Set successfully!



Update the device configuration now?

Yes

No

5. Select the desired execution mode.

Please select the execution mode



Note: After update, device configuration will be overwritten

Execution mode ☒ At once ☐ Timing

OK

Cancel


**Note:**

- If you select **At once**, the configuration will be pushed to all the devices in this site immediately.
- If you select **Timing**, the configuration will be pushed to all the devices in this site at the time you set.
- If the edited templates are involved, the timer tasks will be executed according to the last template that you edit and save.




## Pushing the Site Configuration to Devices

You can select the desired configuration and push it to all the devices in the corresponding site and the sub-sites.

### About this task

If the sub-sites have their configuration files, their configuration files will cover the configuration files of their parent sites.

### Procedure

1. Click **Device Configuration > Site Configuration**.
2. Click  beside the desired template.
3. Select a desired execution mode on the pop-up window.

Please select the execution mode

1

Tips : Push configuration to the devices under site and all of its subsites.

Execution mode
☐ At once
☒ Timing

Task Name

\* Repeat

\* Execution Time

2


### Results

- If you select **At once**, the configuration will be pushed to all the devices in this site immediately.
- If you select **Timing**, the configuration will be pushed to all the devices in this site at the time you set.

## Editing the Site Configuration Template

You can only edit the description of the site configuration template.

### Procedure

1. Click **Device Configuration > Site Configuration**.
2. Click  on the right side of the desired template, and select **Edit Template** from the drop-down menu.
3. Edit and save the description.

Site Configuration

+ Add Template

Site Name/Description

0 selected


<input type="checkbox"/> Site Name	Description	Modification Time	Operation
<input type="checkbox"/> WULLALA/zhangzhou	<input type="text" value="Please enter description, maximum 25"/>	2019/12/16 17:09:07	<input type="button" value="Save"/> <input type="button" value="Cancel"/>

## Downloading the Site Configuration Template

You can download the site configuration to your computer to view the updated or edited configuration.

### About this task

#### Procedure

1. Click **Device Configuration** > **Site Configuration**.
2. Click  on the right side of the desired template, and select **Download config file** from the drop-down menu.

## Deleting Site Configuration Templates

#### Procedure

1. Click **Device Configuration** > **Site Configuration**.
2. Select the desired templates.
3. Click **Delete**.
4. Click **OK**.



#### Note:

After you delete the template, the timer tasks involving this template will fail to execute.

## Managing the Group Configuration

---

You can customize the group configuration for different departments of your company (for example marketing department and product department). When you push the configuration, online (registered or unregistered) devices are updated in real time when they receive updates.

- [Adding Groups](#)
- [Setting Parameters](#)
- [Editing Groups](#)
- [Updating the Group Device](#)
- [Viewing Parameters](#)
- [Downloading Configuration File](#)
- [Deleting Groups](#)

### Adding Groups

You can add the name and description, select devices and customize the device setting for a group configuration.

#### Procedure

1. Click **Device Configuration** > **Group Configuration**.
2. In the top-right corner, click **Add**.
3. Enter the group name and the description.
4. Click **Next step** to go to the Group Device page.
5. Select the desired devices.
6. Click **Next step** to go to the Set Parameters page.
7. Configure the desired parameters.
8. Click **Save**.

You can also click **Save and update** to push the updated parameters to all the devices in this group.

## Setting Parameters


You can choose one of the following methods to configure the parameters:


- Edit parameters in the text: you can edit any parameter supported by the device in the text.
- Edit parameters on the graphical editing page: you can edit the corresponding template parameters on the graphical editing page.
- [Setting Parameters in the Text](#)
- [Setting Parameters on the Graphical Editing Page](#)

### Setting Parameters in the Text

You can customize any parameters supported by the devices in the text and push the parameters to the device after editing.

### Procedure

1. Click **Device Configuration** > **Group Configuration**.
2. Click  on the right side of the desired template, and select **Edit Parameters in text** from the drop-down menu.
3. Set and save the parameters.

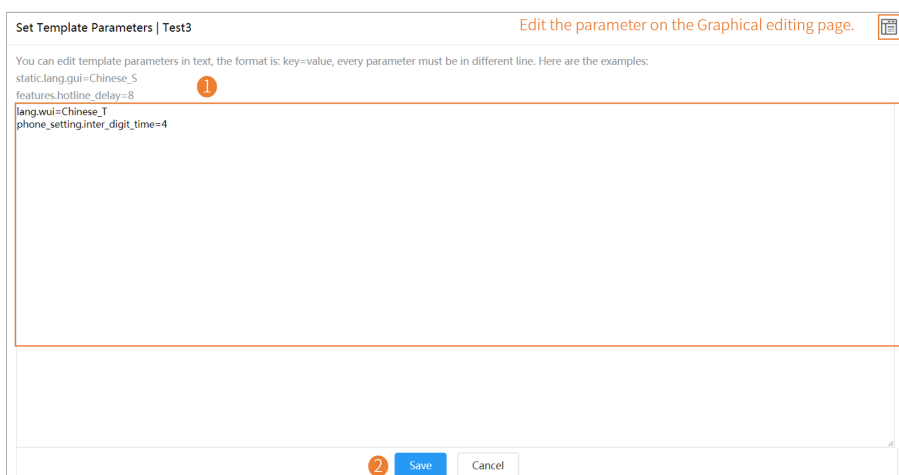

4. On the pop-up window, select **Yes** to push the edited configuration immediately, or **No** to save the edited configuration.

 **Set successfully!** 

Update the device configuration now?

Yes

No

5. Select the desired execution mode.

## Please select the execution mode



Note: After update, device configuration will be overwritten

Execution mode ☒ At once ☐ Timing

OK

Cancel


**Note:**


- If you select **At once**, the configuration will be pushed to all the devices in this group immediately.
- If you select **Timing**, the configuration will be pushed to all the devices in this group at the time you set.
- If the edited templates are involved, the timer tasks will be executed according to the last template that you edit and save.

**Setting Parameters on the Graphical Editing Page**

You can edit the parameter supported in the template, and push the edited parameter to the device.

**Procedure**

1. Click **Device Configuration > Group Configuration**.
2. Click  beside the desired template.
3. Set and save the parameters.

 
 
 
Set Template Parameters | Test3 1 Edit the parameter in the text. 

Account Directory Dsskey Features Network Security **Settings**

Auto Provision ☒ Select All ☐ Reset

Call Display


 
 
Configuration


 
 
Power Saving 1 ☐ Select Country  ☐ Dial  ☐ Secondary Dial 

Preference

SIP

TR069




Time&Date 1 ☒ Ring Back  ☐ Busy  ☐ Congestion 


**Tones 2** ☒ Call Waiting  ☐ Dial Recall  ☐ Info 

Upgrade

Voice

Voice Monitoring

☐ Stutter  ☐ Message  ☐ Auto Answer 

☐ Stutter Dial 

2

**Tip:**

- You can select the edited configuration, and push it to the desired devices.
  - You can click **Reset** to reset the configuration on this page to the value before modification.
4. On the pop-up window, select **Yes** to push the edited configuration immediately, or **No** to save the edited configuration.

**Set successfully!**

Update the device configuration now?

Yes

No

5. Select the desired execution mode.

**Please select the execution mode**

Note: After update, device configuration will be overwritten

Execution mode ☒ At once ☐ Timing

OK

Cancel

**Note:**

- If you select **At once**, the configuration will be pushed to all the devices in this group immediately.
- If you select **Timing**, the configuration will be pushed to all the devices in this group at the time you set.
- If the edited templates are involved, the timer tasks will be executed according to the last template that you edit and save.

## Editing Groups

You can edit the name and the description, reselect the devices and reset the device parameters for the group.

**Procedure**

1. Click **Device Configuration > Group Configuration**.
2. Click beside the desired group.
3. Select **Edit Group** from the drop-down menu.
4. Edit the corresponding information.
5. Click **Save**.

## Updating the Group Device

When you need to add or remove devices in your group, you can update the group device and choose to save the group configuration directly or push the parameters to all devices in your group immediately.

**Procedure**


1. Click **Device Configuration > Group Configuration**.
2. Click beside the desired group.
3. Select the desired devices.
4. Click **Save**.

You can click **Push to Update** to update the parameter configuration to all the devices in this group.

## Viewing Parameters

You can view the configured parameter in the template but the parameters you customize in the text are not displayed in the template.

### Procedure

1. Click **Device Configuration > Group Configuration**.
2. Click  beside the desired group.


View Parameters <span>×</span>		
1231		
Parameter	Catalog	Value
Server1 Retry Counts	Account > Register > Account1	4
<div> <span>I know</span> <span>Edit</span> </div>		

You can click **Edit** to edit the parameters.

## Downloading Configuration File

You can download the configuration file to your computer to view the updated configuration parameters of the corresponding group.

### Procedure

1. Click **Device Configuration > Group Configuration**.
2. Click  beside the desired group.
3. Select **Download config file** from the drop-down menu to download the configuration file to your local system.

## Deleting Groups

### Procedure

1. Click **Device Configuration > Group Configuration**.
2. Select the desired group.
3. Click **Delete**.
4. Click **OK** according to the prompts.

## Managing the MAC Configuration

You can upload, generate, download and export the configuration file, you can also push the backup files to devices.

- [Uploading backup Files](#)
- [Generating Configuration Files](#)
- [Setting Parameters](#)
- [Pushing Backup Files to Devices](#)
- [Downloading Backup Files](#)
- [Exporting Backup Files](#)

- [Deleting Backup Files](#)

## Uploading backup Files

You can update the configuration for one or more devices by uploading the configuration file.

### Procedure

1. Click **Device Configuration > MAC Configuration**.
2. In the top-right corner, click **Upload backup file**.
3. Click **Select the file**, then select the desired file from your computer.
4. Click **Confirm**.

## Generating Configuration Files

You can generate configuration files to back up the configuration on the device management platform directly.

### Procedure

1. Click **Device Configuration > MAC Configuration**.
2. In the top-right corner, click **Generate config file**.
3. Select the desired devices.
4. Click **Confirm**.

If the device has already generated a configuration file, click **Replace** to generate a new configuration file.

## Setting Parameters


You can choose one of the following methods to configure the parameters:

- Edit parameters in the text: you can edit any parameter supported by the device in the text.
- Edit parameters on the graphical editing page: you can edit the corresponding template parameters on the graphical editing page.
- [Setting Parameters in the Text](#)
- [Setting Parameters on the Graphical Editing Page](#)

### Setting Parameters in the Text

You can customize any parameters supported by the devices in the text.

### Procedure

1. Click **Device Configuration > MAC Configuration**.
2. Click  beside the desired template.
3. Set and save the parameters.

Set Template Parameters | 001565f30702 Edit the parameter on the Graphical editing page.

You can edit template parameters in text, the format is: key=value, every parameter must be in different line. Here are the examples:

```
static.lang.gui=Chinese_S
features.hotline_delay=8
local.time.time_zone=+8
{"sessionId":"U48aqZScajw7fuyafLulmXp2ITGExuPDv/vQRH6bbp1A8dkZmwTnCw9yg0W3M1qTEaTS41GWYyMSTl1ZsnAlgQeoYkxhMAC8viXl2GDacY=","ret":-1,"error":
{"errorCode":20302,"msg":"Generate config file failed.","fieldErrors":""}}
```


lang.wui=Chinese\_S  
phone\_setting.backgrounds=Default.jpg  
local\_time.dhcp\_time=0

2 Save Cancel

## Setting Parameters on the Graphical Editing Page

You can edit the parameter supported in the template.

### Procedure

1. Click **Device Configuration > MAC Configuration**.
2. Click  beside the desired template.
3. Set and save the parameters.

Set Template Parameters | 001565f30702 Edit the parameter in the text.

Account Directory Disky Features Network Security **Settings**

Auto Provision  
Call Display  
Configuration  
Power Saving  
Preference 2  
SIP  
TR069  
**Time&Date** 2  
Tones  
Upgrade  
Voice  
Voice Monitoring

**Time&Date**

☒ DHCP Time ? ☐ Manual Time ? ☒ Time Zone ?

Disabled ? Disabled ? +8 Australia(Perth), China(Beijing), ?

☐ Daylight Saving Time ? ☐ Location ? ☐ Fixed Type ?

☐ Disabled ☐ Enabled ? China(Beijing) ? DST by Date ?

☐ DST Start Time ? ☐ DST End Time ? ☐ Offset(minutes) ?

☐ NTP By DHCP Priority ? ☐ Primary Server ? ☐ Secondary Server ?

High ? cn.pool.ntp.org ? pool.ntp.org ?

☐ Update Interval (15-86400s) ? ☐ Time Format ? ☐ Date Format ?

1000 ? Hour 24 ? WWW MMM DD ?

2 Save Cancel




### Tip:

- You can select the edited configuration, and push it to the desired devices.
- You can click **Reset** to reset the configuration on this page to the value before modification.

## Pushing Backup Files to Devices

### Procedure


1. Click **Device Configuration > MAC Configuration**.
2. Click  beside the desired MAC address.



## Downloading Backup Files

You can download the backup files to your local system.

### Procedure

1. Click **Device Configuration > MAC Configuration**.
2. Click  beside the desired MAC address to download the backup to your local system.

## Exporting Backup Files

You can export the files of all devices.

### Procedure

1. Click **Device Configuration > MAC Configuration**.
2. In the top-right corner, click **Export**.

## Deleting Backup Files

### Procedure

1. Click **Device Configuration > MAC Configuration**.
2. Select the desired backup file.
3. Click **Delete**.
4. Click **OK** according to the prompts.

## Configuring Global Parameters

---

The global parameter applies to all devices connected to the device management platform.

### Procedure

1. Click **Device Configuration > Global Parameters**.
2. Configure the global parameters in the corresponding field.
3. Click **Save**.

You can also click **Save and update**, and click **OK** to update the global parameters to all devices.

## Managing Orders

---

After purchasing the service, you can view the service package and the order information. When the order is closed, cancelled or expired, you can view the notifications of your order status on the platform.

- [Order Service](#)
- [Viewing the Order Details](#)
- [Checking the Reason for the Closed Order](#)
- [Exporting Orders](#)
- [Search for Orders](#)

## Order Service

---

You can view the information of the basic package, including the amount of devices which can be managed and the details of all orders. All orders in service can be superimposed during the validity. If an order is about to expire, you need to purchase the service from your distributor or reseller to continue using the device management platform.

## Viewing the Order Details

---

The order details include the order ID, the order type, the order time, the quantity of the supported devices, the service duration (month), and the validity.

### Procedure


1. Click **Order Management**.
2. Click the desired order.

## Checking the Reason for the Closed Order

---

When an order is closed by Yealink, the device management platform will receive a notification through which you can check the specific reason.

### Procedure

1. In the top-right corner, click .
2. Click the corresponding notification.
3. You can check the reason in the Message Center.

## Exporting Orders

---

You can export the basic information of all orders.

### Procedure

1. Click **Order Management**.
2. In the top-right corner, click **Export**.

## Search for Orders

---

You can search for the order by entering the basic information or selecting the expiration time and order time.

### Procedure

1. Click **Order Management**.
2. Enter the order ID, the enterprise name, the distributor or reseller in the search box, press **Enter** to perform a search.

You can also click **More**, select the expiration time or the order time to perform the search.

## Managing Tasks

---

The Scheduled Task page displays the added timer tasks and allows you to add, view, or edit timer tasks on this page. The Executed Task page displays the executed tasks and allows you to view all the executed tasks, view the details of the failed execution, and retry the failed tasks.

<b>Execution mode</b>	<ul style="list-style-type: none"> <li>At once: the task is executed immediately.</li> <li>Timing: the task is executed at the time you set.</li> </ul>
<b>Tasks and Rules</b>	<ul style="list-style-type: none"> <li>Update resource file: you can only push one file of the same resource type at a time. Only the resource file supported by the selected device can be pushed.</li> <li>Upgrade firmware: if you select devices of different models, only the firmware applicable to all the devices can be pushed.</li> <li>Update config file:             <ul style="list-style-type: none"> <li>Update CFG by model template: the system will push the configuration of the corresponding model template to the selected device. If the corresponding model template does not exist, no push is performed.</li> <li>Update CFG by factory defaults: the system will push the system default configuration to the selected device.</li> </ul> </li> <li>DND/Cancel DND: DND is enabled or disabled for the registered accounts you select on the selected device.</li> <li>Push global parameters: the system will push the global parameter to the selected devices.</li> <li>Send message: the system will send messages to the selected devices.</li> <li>Reboot/Reset to factory: the system will reboot the selected devices or reset the selected devices to factory.</li> <li>Update site configuration: the system will push the site configuration you select to the selected devices.</li> <li>Update group configuration: the system will push the group configuration you select to the selected devices.</li> <li>Push MAC config: the system will push the MAC configuration you select to the selected devices.</li> </ul>

- [Adding Timer Tasks](#)
- [Editing Timer Tasks](#)
- [Pausing or Resuming Timer Tasks](#)
- [Ending Timer Tasks](#)
- [Searching for Timer Tasks](#)
- [Viewing Timer Tasks](#)
- [Viewing Executed Tasks](#)
- [Searching for Executed Tasks](#)

## Adding Timer Tasks

---

### Procedure

Click **Task Management > Scheduled Task > Add Timer Task**.

The screenshot shows a web interface for managing tasks. At the top, there are two dropdown menus: 'Please select a site' and 'All'. Below them is a search bar labeled 'MAC/Device Name/Account Info'. A table lists three devices with columns for MAC, Device Name, and Account Info. The first device is selected. To the right, a 'Selected Device : 1' panel shows the details of the selected device. Below the table is a form for configuring a task. The form includes fields for Task Name, Task, Repeat, Execution Time, and Time Zone. A 'Save' button and a 'Cancel' button are at the bottom.

1

MAC	Device Name	Account Info
<input checked="" type="checkbox"/> 001565f30702	T48S-ZYD	--
<input type="checkbox"/> 805ec04311fa	2746	2746
<input type="checkbox"/> 805ec0484b91	T52S-ZYD	--

2

\* Task Name: DND

\* Task: DND

\* Repeat: One-time Task

\* Execution Time: 2020-03-02 12:31:05

Time Zone: (UTC+01:00) Brussels, Copenhagen, Madrid, Paris ☒ DST

3 Save Cancel

Selected Device : 1

MAC	Device Name	Account Info
001565f30702	T48S-ZYD	--



**Tip:** If your country supports DST, you can enable or disable DST in the field of **Time Zone**.



**Note:**

- If you create multiple tasks for one device, those tasks are lined up to run in order of their configured execution time.
- If the device is offline, the task will not be executed. If the device is reconnected to the device management platform before the task expires, the task will be executed.

**Related tasks**

[Editing Timer Tasks](#)

[Pausing or Resuming Timer Tasks](#)

[Ending Timer Tasks](#)

[Viewing Timer Tasks](#)

[Viewing Executed Tasks](#)

## Editing Timer Tasks

You can edit the timer tasks in the status of pending or suspending, but you cannot edit the tasks in the status of executing or finished.

**Procedure**

1. Click **Task Management** > **Scheduled Task**.
2. Click beside the desired task.
3. Edit the parameter and save it.

The screenshot displays a task management interface. On the left, a table lists devices with columns 'MAC', 'Device Name', and 'Account Info'. The first device has MAC '001565f30702' and Device Name 'T48S-ZYD'. Below the table is a task configuration form with fields for 'Task Name' (DND), 'Task' (DND), 'Repeat' (One-time Task), 'Execution Time' (2020-03-02 12:31:05), and 'Time Zone' ((UTC+01:00) Brussels, Copenhagen, Madrid, Paris). A 'Save' button is at the bottom. On the right, a 'Selected Device : 1' panel shows the selected device's details.

MAC	Device Name	Account Info
001565f30702	T48S-ZYD	--
805ec04311fa	2746	2746
805ec0484b91	T52S-ZYD	--

Selected Device : 1

MAC	Device Name	Account Info
001565f30702	T48S-ZYD	--

Task Configuration:

- \* Task Name: DND
- \* Task: DND
- \* Repeat: One-time Task
- \* Execution Time: 2020-03-02 12:31:05
- Time Zone: (UTC+01:00) Brussels, Copenhagen, Madrid, Paris ☒ DST

Buttons: Save, Cancel



**Tip:** If your country supports DST, you can enable or disable DST in the field of **Time Zone**.

## Pausing or Resuming Timer Tasks

You can pause or resume the periodic timer tasks. After resumed, the task can still be executed according to the time.

### Procedure

1. Click **Task Management** > **Scheduled Task**.
2. Click / beside the desired task to pause/resume the task.

## Ending Timer Tasks

You can end timer tasks in the status of pending, executing or suspending. If you end the executing timer task, the task can still be executed until it is finished. If you end the periodic timer task, they will no longer be executed.

### Procedure

1. Click **Task Management** > **Scheduled Task**.
2. Click beside the desired task.



**Note:** if you end the timer task before the task execution time (for the periodic timer task, before the first execution time), the task would not be displayed in the page of Executed Task.

### Related tasks

[Viewing Timer Tasks](#)

[Viewing Executed Tasks](#)

## Searching for Timer Tasks

You can search for timer tasks by entering the task name or selecting the execution result.

### Procedure

Click **Task Management > Scheduled Task**.

Scheduled Task

+ Add Timer Task

Task Name

More ^

Last Execution Result :

All

Search

Task Name	Task	Repeat	Execution Time	Task Status	Operation
测试	Send Message	Daily	14:08:06(UTC+08:00)	Pending	
重启-1529	Reboot	One-time Task	2020/03/02 15:29:32(UT...	Finished	
配置更新-1526	Update Config File	One-time Task	2020/03/02 15:26:55(UT...	Finished	
发送消息-测试	Send Message	Daily	14:07:08(UTC+08:00)	Finished	
型号更新配置	Update Config File	One-time Task	2020/03/02 11:45:51(UT...	Finished	
站点配置更新	Update site Configuration	One-time Task	2020/03/02 12:01:34(UT...	Finished	

### Results

The search results are displayed in the timer task list.

## Viewing Timer Tasks

### Procedure

- Click **Task Management > Scheduled Task**.
- Click the desired task name or click beside the desired task name.

### Results

You will go to the page of Executed Task.

Executed Task

Start date to End date

789

Search

Execution Time	Execution Mode	Task Name	Task	Execution Status	Operation
2020/01/21 14:45:35 (UTC+...	Timing	789	Update site Configuration	✓ Execute successfully	



**Note:** For the pending task you end before their execution time, there is no data.

Executed Task

Start date to End date

提前取消发送消息


Search

Execution Time	Execution Mode	Task Name	Task	Execution Status	Operation
No data, add first					

## Viewing Executed Tasks

You can view the task details including the type, the time and the related device information. If the task is executed exceptionally, you can check the reason and retry this task.

### Procedure

1. Click **Task Management > Executed Task**.
2. Click  beside the desired task name.

✕

Execution Details

Task : Send message Execution Time : 2020/02/27 20:54:26 (UTC+08:00)

Failed: 2 / Total 2

<input type="checkbox"/>	MAC	Device Name	Model	Status	Status
<input type="checkbox"/>	Device has been de...	--	--	--	ⓘ Execute failed,T...
<input type="checkbox"/>	805ec0431ffa	2746	SIP-T54S	Unregistered ▼	ⓘ Execute failed,T...

Retry
Close

3. Optional: Select the device with failed execution result and click **Retry** to perform the task again.

## Searching for Executed Tasks

You can search for executed tasks by entering the task name or selecting the start time and the end time.

### Procedure

Click **Task Management > Executed Task**.

Executed Task					
<div> <div>Start date to End date</div> <div>Task Name</div> <div>Search</div> </div>					
Execution Time	Execution Mode	Task Name	Task	Execution Status	Operation
2020/03/02 09:28:46 (UTC+...)	At once	--	Update Config File	ⓘ Execute abnormally	ⓘ
2020/03/02 09:21:27 (UTC+...)	At once	--	Update Config File	ⓘ Execute abnormally	ⓘ
2020/03/02 09:14:44 (UTC+...)	At once	--	Send Message	ⓘ Execute abnormally	ⓘ
2020/03/02 09:14:21 (UTC+...)	At once	--	Upgrade Firmware	ⓘ Execute abnormally	ⓘ
2020/03/02 09:13:53 (UTC+...)	At once	--	Update Config File	✓ Execute successfully	ⓘ
2020/03/02 08:49:26 (UTC+...)	At once	--	Update Resource File	ⓘ Execute abnormally	ⓘ
2020/03/02 15:29:32 (UTC+...)	Timing	重启-1529	Reboot	✓ Execute successfully	ⓘ
2020/03/02 15:26:55 (UTC+...)	Timing	配置更新-1526	Update Config File	✓ Execute successfully	ⓘ
2020/03/02 06:26:20 (UTC+...)	At once	--	Send Message	✓ Execute successfully	ⓘ
2020/03/02 14:08:06 (UTC+...)	Timing	测试	Send Message	✓ Execute successfully	ⓘ
2020/03/02 12:01:34 (UTC+...)	Timing	站点配置更新	Update site Configuration	✓ Execute successfully	ⓘ

### Results

The search results are displayed in the executed task list.

# Monitoring Devices

You can view the call quality of the devices for QoE analysis and solve the problems by viewing the alarm.



**Note:** The call quality and the device alarm are advanced features, not supported by the basic package. If you want to use the advanced features, you can [Trying Advanced Features](#) or contact your distributor/reseller to subscribe to the advanced package. You can view the details of the subscribed package on the page of [Managing Orders](#).

- [Viewing Call Quality Statistics](#)
- [Managing Alarms](#)

## Viewing Call Quality Statistics

You can view the call quality and the session distribution on the Call statistics page. You can also view the details of the call quality, including the user information, the basic device information and the call-related information.



**Note:** Uploading the call statistics to the device management platform is not supported by the Teams phone, so you are not available to view the call quality of the Teams phone.

- [Customizing the Indicators of Call Quality Detail](#)
- [Viewing the Call Data](#)

## Customizing the Indicators of Call Quality Detail

The device name, the model, the firmware, the caller/callee, the call type and the quality are displayed by default in the Call Quality Detail module, and you can customize 6 indicators except for the MAC address.

### Procedure

1. Click **Dashboard > Call Statistics**.
2. Click **More indicators**.
3. Select the desired indicators.
4. Click **Submit**.

The selected indicators are shown in the list of call quality detail.


Call Quality Detail(2018/12/19~2018/12/19)							
Device/MAC/Account Information				More		More Indicators	
Device Name	MAC address	Model	Firmware	Caller/Callee	Call Type	Quality	Operation
2984	0015:65:c1:87:25	SIP-T48G	35.83.0.50	Callee	P2P	Poor	View

## Viewing the Call Data

### Procedure

1. Click **Dashboard > Call Statistics**.
2. Click **View** beside the desired call to go to the Call Data page.



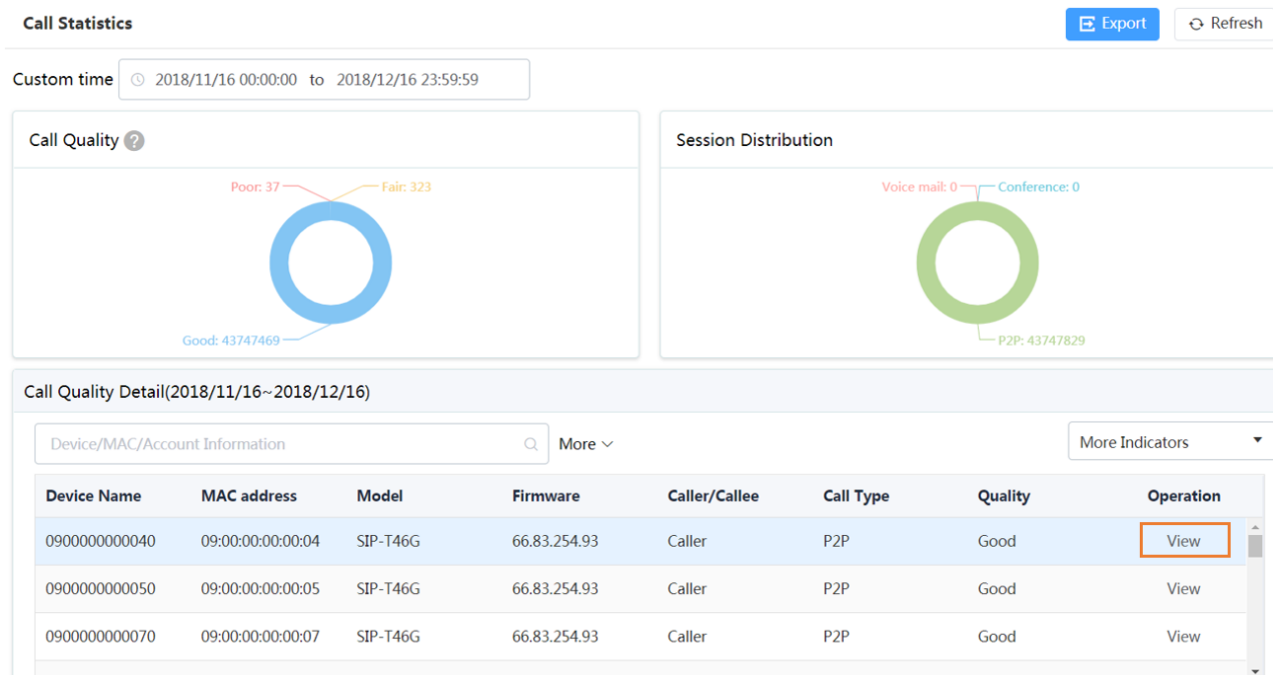


## Managing Alarms

When the devices are abnormal, they will send alarms to the platform so that you can detect and solve problems such as network or server problems in time. You can manage the alarm strategies and choose to view the alarm via email or on the management platform.

- [Adding Alarm Strategies](#)
- [Editing Alarm Strategies](#)
- [Deleting Alarm Strategies](#)
- [Viewing Alarms](#)
- [Deleting Alarms](#)

## Adding Alarm Strategies

### Procedure


1. Click **Alarm Management > Alarm Strategy**.
2. Click **Add Strategy**.
3. Enter the strategy name.
4. Select the desired alarm severity.
5. Click  to add the alarm receiver, and click **OK**.
6. Enable the alarm strategy.
7. Click **Save**.

### Related concepts

[Appendix: Alarm Types](#)


## Editing Alarm Strategies

### Procedure

1. Click **Alarm Management > Alarm Strategy**.
2. Click  beside the desired alarm.
3. Edit the related information of the alarm strategy.
4. Click **Save**.

## Deleting Alarm Strategies

### Procedure

1. Click **Alarm Management > Alarm Strategy**.
2. Click  beside the desired alarm strategy.
3. Click **OK** according to the prompts.


## Viewing Alarms

When a problem occurs to the device, for example the call failure or the registration failure, the problem will be reported to the server. You can quickly locate the problem by viewing the alarm details. If you have configured to receive the alarm by email, you can view the alarm in the email.

### Before you begin

The in-site alarm reminder is enabled, and the alarm recipient is the login account.

### Procedure

1. Click **Alarm Management > Alarm List**.
2. Click  beside the desired alarm.

You can view the alarm information, including the latest reporting time, the times and the detailed information.

### Related concepts

[Appendix: Alarm Types](#)

[Managing Alarms](#)

## Deleting Alarms

### Procedure

1. Click **Alarm Management > Alarm List**.
2. Select the desired alarm.
3. Click **Delete**.
4. Click **OK** according to the prompts.

## Diagnosing Devices

You can troubleshoot the device by using the log files and the captured packet and so on. Make sure that the device is connected to the device management platform before being diagnosed. You can diagnose up to 5 SIP devices at the same time. This feature is not applicable to USB devices and Room System devices.



**Note:** The device diagnosis is the advanced feature, not supported by the basic package. If you want to use the advanced features, you can [Trying Advanced Features](#) or contact your distributor/reseller to subscribe to the advanced package. You can view the details of the subscribed package on the page of [Managing Orders](#).

- [Going to the Device Diagnostics Page](#)
- [Exporting the Packets, Logs, and Configuration Files by One Click](#)
- [Capturing Packets](#)
- [Diagnosing the Network](#)
- [Exporting Syslogs](#)
- [Exporting Backup Files](#)
- [Viewing the CPU and the Memory Status](#)
- [Viewing Recordings](#)
- [Capturing the Screenshot of the Device](#)
- [Setting the Log Level](#)
- [Setting the Device Logs](#)

## Going to the Device Diagnostics Page


You can diagnose devices via the **Device List** page (**Device Management** > **SIP Device List/USB Device List/Room System**) and the **Device Diagnostic** page.

### 1. The Device List page

- Diagnosing a single device (taking the SIP device as an example)


The screenshot shows the 'SIP Device List' interface. At the top, there are buttons for '+ Add Device', 'Import', 'Export', and 'Refresh'. Below these is a search bar labeled 'Device/MAC/Account Info/IP' and a 'More' dropdown. A row of action buttons includes 'Delete', 'Site Settings', 'Update Configuration File', 'Update Firmware', 'Update Resource File', 'Diagnostics', and 'More'. The main table has columns: MAC, Model, Device Name, Public IP, Private IP, Firmware Version, Status, Site, Report Time, and Operation. The first row shows a device with MAC 001565f307..., Model SIP-T48S, Device Name T48S-ZYD, Public IP 10.81.6..., Private IP 10.81.6..., Firmware Version 66.84.254.170, Status Registered, Site zhangz..., and Report Time 2019/12/16 10:3... The Operation column for this row has icons for 'One-click Export', 'Packetcapture', 'Network Detection', 'Export System Log', 'Export Config File', 'CPU Memory Status', 'Recording File', and 'Screenshot'. A modal window titled 'Device Diagnostic' is open, showing details for the selected device: Login Name: T48S-ZYD, Device Type: Audio Device, IP: 10.81.6.35, and Model: SIP-T48S. It has an 'End Diagnostic' button and a 'Diagnostic Assistance' link. Below the modal, there is a 'Diagnostic Tools' section with icons for the same eight operations. At the bottom, there is a 'Recent Logs (7days)' section with a table header: File Name, Time, Size(KB), and Operation. The table currently shows 'No Data'.

- Diagnosing multiple devices (now this feature is only applicable to SIP devices. Up to 5 SIP devices can be diagnosed at the same time)

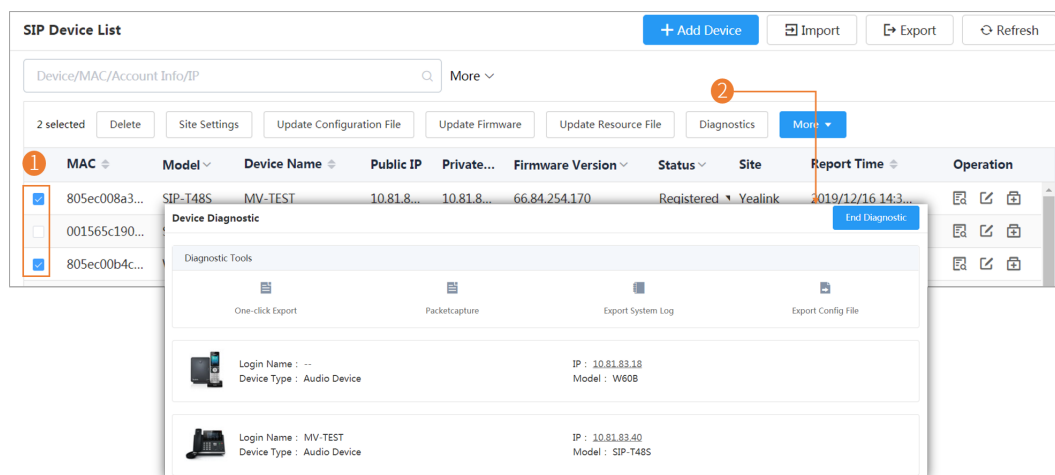


## 2. The Device Diagnostics Page

- Diagnosing a single device (taking the SIP device as an example)

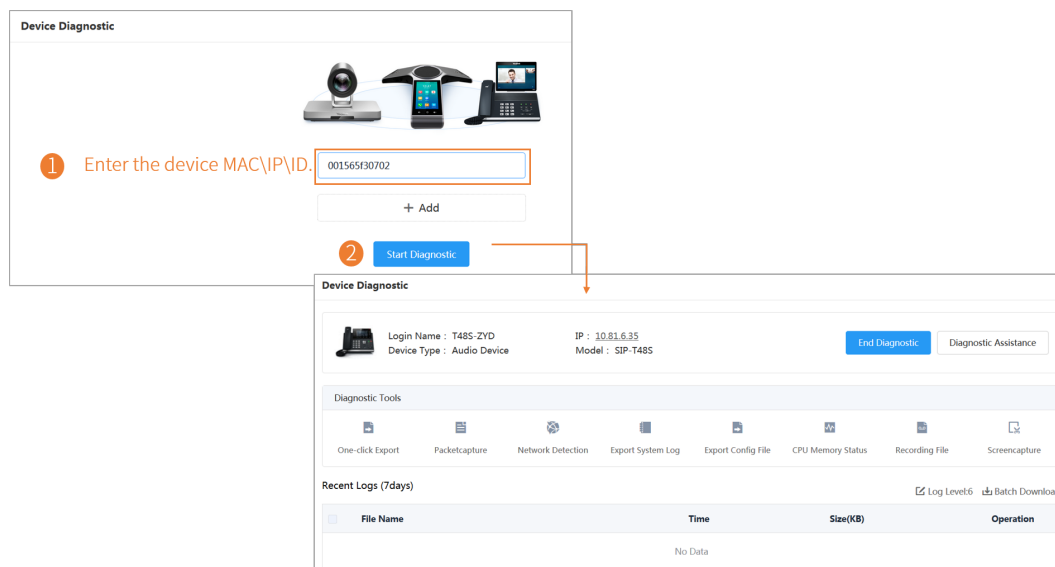

- Diagnosing multiple devices (now this feature is only applicable to SIP devices. Up to 5 SIP devices can be diagnosed at the same time)

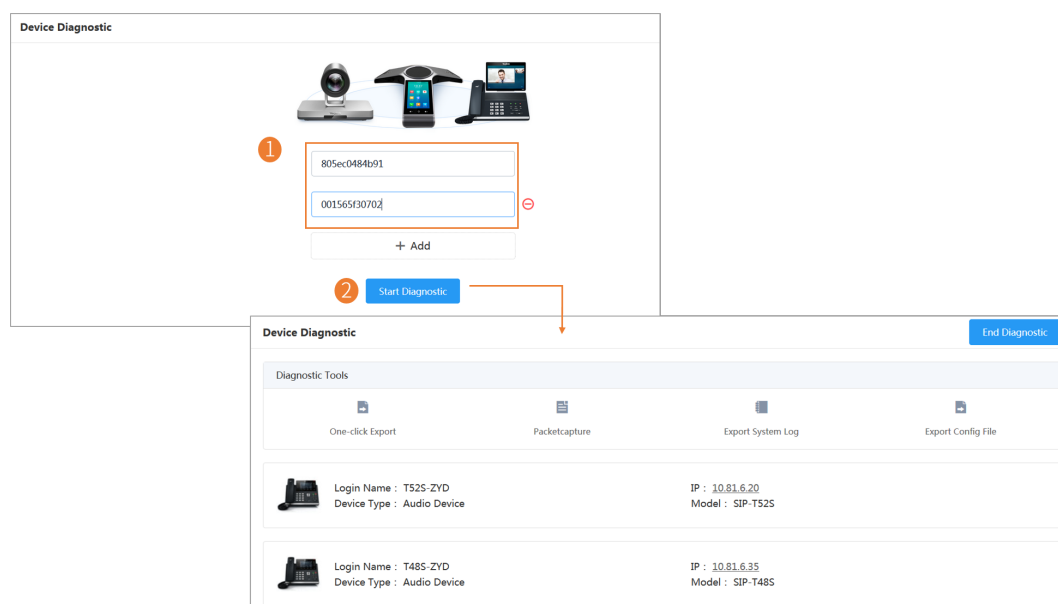

## Exporting the Packets, Logs, and Configuration Files by One Click

You can use the **One-click Export** feature to export the packets, logs, and configuration files of one or multiple devices at the same time.

### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **One-click Export**.
3. Set the parameters and click **Start Capture**. You can customize the time for packet capturing.

✕

### One-click Export

**Packetcapture**

\* Ethernet wan ▼

Type Custom ▼

String Please enter packetcapture string

**Configuration File**

\* File Type cfg ▼

\* Export All Settings ▼

Start Capture
Cancel

4. Click **End Capture** and the file is generated automatically.

## One-click Export



Diagnostics start. .

MAC-001565f30702 Export Config file Success ✓  
 MAC-001565f30702 Export Config file Success ✓  
 MAC-001565f30702 Export Log file Success ✓  
 MAC-001565f30702 Export Packetcapture file Success ✓  
 Diagnostics complete

Download

Cancel

5. Click **Download** to download the files to your local system.

## Capturing Packets

### Procedure

1. [Going to the Device Diagnostics Page](#) .
  2. Click **Packetcapture**.
  3. Select the desired Ethernet and type, and then enter the string.
  4. Click **Start** to begin capturing the signal traffic.
  5. Click **Finish** to stop capturing, and the file is generated automatically.
  6. Click **Download** to save the file to your computer.
- If it takes more than 1 hour to capture packets, the packet capturing will be automatically ended.

## Diagnosing the Network

Network diagnostics include: Ping (ICMP Echo) and Trace Route. **Ping (ICMP Echo)**: by sending a data packet to the remote party and requesting the party to return a data packet in the same size, this method can identify whether those two devices are connected. The diagnostic results include a brief summary of the received packets, as well as the minimum, the maximum, and the average round trip times of the packets. **Trace Route**: this method records the route from the local device to the remote device. If this test succeeds, you can view the network node and the time took from one node to the other, to check whether or not there is a network congestion.

### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **Network detection** in the **Diagnostic Tools** filed.
3. Select Ping (ICMP Echo) or Trace route.
4. Enter the IP address.

The IP address of the device management platform is default.

5. Select the desired value from the drop-down menu of Request times.
6. Click **OK** to start.

## Exporting Syslogs

---

You can export the current syslogs to diagnose the device. It is not available for offline devices.

### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **Export System Log** in the **Diagnostic Tools** filed.
3. Save the file to your local computer.

## Exporting Backup Files

---

You can export the cfg files or the bin files. For cfg files, you can choose to export static setting files, non-static setting files or all setting files. You cannot export configuration files of the offline devices.

### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **Export Config File** in the **Diagnostic Tools** filed.
3. Select the file type.  
If you select cfg, you can choose to export static settings, non-static settings or all settings.
4. Click **Export**, and then save the file to your local computer.

## Viewing the CPU and the Memory Status

---

The device will report its CPU and memory information to the device management platform at a regular time, so you can update the information and view the latest information. You can also view the memory information by copying it to Microsoft Word.

### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **CPU Memory Status** in the **Diagnostic Tools** filed.
3. Do one of the following:
  - Click **CPU** to view the CPU usage.
  - Click **Memory** to view the memory usage.


## Viewing Recordings

---

### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **Recording file**.

You can select the **Automatic upload recording file** checkbox to enable the automatic uploading, so that the recording file will be uploaded to the platform automatically.

You can also click  to download the recording.

## Capturing the Screenshot of the Device

---

### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **Screencapture**.

You can click **Re-acquire** to acquire the latest screenshot.

## Setting the Log Level

---

### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **Log Level**.
3. Enter the desired value.
4. Click **Confirm**.

## Setting the Device Logs

---

Note that this section is only available for the video conferencing system, version XX.32.0.35 or later (XX represents the fixed number of each device model). You can enable the Log Data Backup feature, and the device will send the system log to the device management platform. You can set the log level, view or download the current backup file. You can also set the module log, save the log to the local computer, export the log to the USB flash drive, upload the log to a log server, or put the log backup to a specified server.

- [Setting the Module Log](#)
- [Setting the Local Log](#)
- [Setting the Syslog](#)
- [Putting the Log Backups to a Specified Server](#)
- [Enabling the Log Data Backup](#)
- [Downloading the Backup Log](#)

### Setting the Module Log

You can set the type of the module log and the log level for the device. The module log includes all, the driver, the system, the service, the connectivity, the audio & video, the protocol, the deploy, the web, the app and the talk.

#### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **Log Settings**.
3. In the **Module Log** field, select the log type and the level.
4. Click **Save**.



## Setting the Local Log

You can enable the Local Log feature, configure the local log level and the maximum size of the log file, and enable the USB Auto Exporting Syslog feature to export the local log to the USB flash drive connected to the device.

### Before you begin



**Note:** The module log level is smaller than the local log level. For example, if you set the log level of the hardware driver as 6 and the local log level as 3, the exported log level of the hardware driver is 3.

### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **Log Settings**.
3. In the **Local Log** field, enable **Local Log**.
4. Enable **USB Auto Exporting Syslog**.
5. Select the local log level and the log file size.
6. Click **Save**.

## Setting the Syslog

You can upload the log generated by the device to a log server.

### Before you begin



**Note:** The module log level is smaller than the syslog level. For example, if you set the log level of the hardware driver as 6 and the syslog level as 3, the exported log level of the hardware driver is 3.

### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **Log Settings**.
3. In the **Syslog** field, enable **Syslog**.
4. Configure the syslog server and the port.
5. Select the syslog transport type and the syslog level.
6. Select the syslog facility, which is the application module that generates the log.
7. Enable **Syslog Prepend MAC**, and configure the MAC address come in the uploaded log file.
8. Click **Save**.

## Putting the Log Backups to a Specified Server

You can make backups for the device log and put the backups to a specified server.

### Procedure

1. [Going to the Device Diagnostics Page](#) .
2. Click **Log Settings**.
3. In the **Other Log Settings** field, enable **Log File Backup**.
4. Enter the address, the user name and the password of the specified server.
5. Select the desired HTTP method and the POST mode.
6. Click **Save**.

## Enabling the Log Data Backup

After you enable this feature, the device management platform will make a log backup every day, and only save the log generated in the past 7 days.


### Procedure

1. [Going to the Device Diagnostics Page](#).
2. Click **Log Settings**.
3. In the **Other Log Settings** field, enable **Log Data Backup**.
4. Click **Save**.

## Downloading the Backup Log

If you enable the Log Data Backup feature, you can download the log saved by the device management platform.

### Procedure

1. [Going to the Device Diagnostics Page](#).
2. On the right side of the corresponding log, click  to download it to your computer.  
You can select multiple logs, and click **Batch Download**.

### Related tasks

[Enabling the Log Data Backup](#)

# Managing System

- [Viewing Operation Logs](#)
- [Obtaining the Accesskey](#)
- [Authorizing/Un-authorizing the Management to the Channel](#)

## Viewing Operation Logs

Operation logs record the operation performed by anyone (for example, the administrator or the authorized superior) on the device management platform. You can view the operation log.

### Procedure

Click **System Management > Log Management > Operation Log**.

Log Management

Set or filter the parameters to view the desired log.

Start date

to

End date

User Name/IP

Search

User name	Operation Type   Path	Operation Object	IP	Operation Time	Results
zhengydy@yealink.com	Login   Login	zhengydy@yealink.com	10.82.24.14	2019/12/10 19:47:31	Operate successfully
zhengydy@yealink.com	Login   Login	zhengydy@yealink.com	10.82.24.14	2019/12/07 17:15:18	Operate successfully
zhengydy@yealink.com	Login   Login	zhengydy@yealink.com	10.82.24.14	2019/12/11 14:01:54	Operate successfully

## Obtaining the Accesskey

---

The device management platform allows the third parties to call the API to integrate with their own system. Before calling the API, you need apply for the AccessKey. For more information, refer to [API for Yealink Management Cloud Service Platform](#).

### Procedure

1. Click **System Management** > **AccessKey**.
2. If you want to call the interface of the alarm and the device diagnosis, enter the callback address.
3. Click **Acquire**, and then AccessKey ID and the AccessKey Secret will be generated by automatically.

## Authorizing/Un-authorizing the Management to the Channel

---

You can authorize your reseller or distributor to manage the device management platform for you, so that they can log into the platform as the enterprise administrator.

### Procedure

1. Click **System Management** > **Authorized Channels**.
2. Authorizing: enter the email of the channel, click **Authorize immediately**. Click **Confirm to authorize** according to the prompts.
3. Authorizing: click **Cancel authorization**.  
The channel has no permission to access the platform.

## Managing RPS

---

- [Instruction for Old RPS Users](#)
- [Managing Devices](#)
- [Managing Servers](#)
- [Binding RPS Accounts](#)

## Instruction for Old RPS Users

---

For users who already have the RPS accounts, you can do the following two steps to migrate the data on the RPS device management platform to YMCS. After that, you can manage the device and use the RPS features on YMCS.

1. [Binding RPS Accounts](#)
2. [Synchronizing Devices](#)

## Managing Devices

---

- [Adding Devices](#)
- [Importing Devices](#)
- [Exporting Devices](#)

- [Editing the Device Information](#)
- [Migrating Devices to Another Server](#)
- [Checking the Linking Status Between the Device and the Server](#)
- [Deleting Devices](#)
- [Synchronizing Devices](#)

## Adding Devices

When adding a device, if you select an added server and enter a unique server URL which is different from the URL of the added server, the RPS management platform performs the redirection according to the unique URL you entered. Otherwise, the platform performs the redirection according to the URL of the added server.

### Before you begin

[Binding RPS Accounts](#)

### Procedure

1. Click **RPS Management** > **RPS Device**.
2. In the top-right corner, click **Add**.
3. Enter the corresponding information.
4. Click **Save**.

If it prompts that other enterprises use the MAC address you entered, check your MAC address or file an appeal to Yealink if necessary.

## Importing Devices

If you want to add devices quickly, you can import them in batch. You need to download the template, edit the devices information in the template and then import the template to the platform.

### Before you begin

[Binding RPS Accounts](#)

### Procedure

1. Click **RPS Management** > **RPS Device**.
2. In the top-right corner, click **Import**.
3. Click **Download the template**.
4. Edit the device information.
5. Select a desired server and upload the template.
6. Click **Upload**.

## Exporting Devices

You can export a batch of the device information to check the device backup information, or whether the device is sold and so on. If the device is linked to a server, it means the device is sold, otherwise it is not.


### Procedure

1. Click **RPS Management** > **RPS Device**.
2. In the top-right corner, click **Export**. The file will be saved in your local system.

## Editing the Device Information

You can edit the device information, for example, the server or the unique server URL.

### Procedure

1. Click **RPS Management > RPS Device**.
2. Click  beside the desired account.
3. Edit the device information.
4. Click **Save**.

## Migrating Devices to Another Server

You can migrate a single device or multiple devices to another server at once.

### Procedure

1. Click **RPS Management > RPS Device**.
2. Select the checkboxes of the desired devices.
3. Click **Migrate**.
4. Select the targeted server.
5. Click **Save**.

## Checking the Linking Status Between the Device and the Server

### About this task

You can check the device linking status, which contains the following:

- Bound: the device MAC address belongs to your enterprise and is linked to the server successfully.
- Unbound: the device MAC address belongs to your enterprise but is not linked to the server.
- The device MAC address belongs to other enterprises.
- The query fails: the device does not exist or cannot be found on the device management platform.

### Procedure

1. Click **RPS Management > RPS Device**.
2. In the top-right corner, click **Check Device**.
3. Enter the device MAC address.
4. Click **Check**.

It shows the device linking status.

If it prompts that other enterprises use the MAC address you entered, check your MAC address or file an appeal to Yealink if necessary.

## Deleting Devices

### Procedure

1. Click **RPS Management > RPS Device**.
2. Select the desired devices.
3. Click **Delete**.
4. Click **OK** according to the prompts.

## Synchronizing Devices

If you want to use the feature of [Managing Devices](#), you can synchronize the devices on the page of RPS Device with the page of SIP Device.

**Do one of the following:**

- Click **RPS Management** > **RPS Device**, and click **Device Sync**.

### Device Sync

Select the devices in the current RPS list which will be synchronized to SIP device list

Binding Date :  to

Confirm

Cancel

- Click **RPS Management** > **RPS Device**, select the corresponding devices, and click **Sync**.

3 selected

Migrate

Delete

Sync


<input checked="" type="checkbox"/>	MAC	Server Name	IP	Binding Date	Last Report Time	Aynchronized	Operation
<input checked="" type="checkbox"/>	123456789098	njj	--	2019/09/16 16:31:50	--	Yes	
<input checked="" type="checkbox"/>	001565b09d86	--	--	2019/09/16 15:20:08	--	No	
<input checked="" type="checkbox"/>	805ec0484b91	--	--	2019/09/18 16:39:03	--	No	

## Managing Servers

- [Adding Servers](#)
- [Editing the Server Information](#)
- [Searching for Servers](#)
- [Deleting Servers](#)

### Adding Servers


#### Procedure

- Click **RPS Management** > **Server Management**.
- In the top-right corner, click **Add Server**.
- Enter the server name, the URL and the server authentication information (the username and the password).
- If the device needs to verify the server and requires a custom certificate, upload the trusted certificate.
- If the server needs to verify the device and requires a custom certificate, upload the server certificate.
- If the server requires the device to upload its custom certificate, enable **Custom Certificates**.  
 **Note:** It is disabled by default and the device will send the default certificate to the server for verification.
- Click **Save**.

### Editing the Server Information

#### Procedure

- Click **RPS Management** > **Server Management**.

2. Click  beside the desired server.
3. Edit the server information.
4. Click **Save**.

## Searching for Servers

You can search for the server directly by entering the server name or the URL.

### Procedure

1. Click **RPS Management > Server Management**.
2. Enter the server name or the URL in the search box.
3. Click **Search**.

The search results are displayed in the server list.

## Deleting Servers

### Procedure

1. Click **RPS Management > Server Management**.
2. Select the check boxes of the desired servers and click **Delete**.
3. Click **OK** according to the prompts.

## Binding RPS Accounts

---

If you bind an RPS account, you can see the devices, which are on the RPS device management platform, and manage those devices through YMCS.

### Before you begin

- You already have an RPS account.
- After you bind an RPS account, the existing RPS data of your account will be deleted. Therefore, we recommend that you export the data to make a backup.

### Procedure

1. Click **RPS Management > RPS Setting**.
2. Click **Binding**.
3. If your account does not have any existing data, click **Confirm**. If your account does have, you can make a backup first, and click **Confirm**; otherwise, the data will be deleted.



Tips



After binding, the RPS data will be synchronized with the old account. The added RPS data of the current account will be cleared. It is recommended to export the data in the current SIP Device list/RPS device list/Server list for backup first.

Confirm

Cancel

4. Enter the username and the password of the existing RPS account and click **Confirm**.

### Binding RPS account

\* Username

\* Password

Confirm

Cancel

### Results

If you succeed in binding an RPS account, click **View device**, and you can view the synchronized devices.



**Note:** If you unbind the RPS account, the data on the pages of RPS Device and RPS Server will be removed.

## Managing Administrator Accounts

---

This chapter allows the administrator to view, add, edit sub-administrator accounts, and manage role privileges. The administrator also can edit his account information. By default, the administrator has all privileges and can assign different role privileges for sub-administrator accounts.

- [Changing the Login Password](#)
- [Editing the Information of the Administrator Account](#)
- [Viewing the Account Code](#)
- [Managing Sub-Administrator Accounts](#)

### Changing the Login Password

---

To ensure the account security, we recommended that you change the password regularly.

#### Procedure

1. Hover your mouse over the account avatar in the top-right corner of the page, and then click **Account Settings**.
2. Click **Edit** beside the password.



3. Enter the current password and enter the new password twice.
4. Click **Confirm**.

## Editing the Information of the Administrator Account

You can edit the information, for example the contact, the phone number and the country, so that the superior distributor or reseller can contact you. The administrator mailbox is used to receive the alarm and the account information. If you need to change your registered email, contact your distributor or reseller.

### Procedure

1. Hover your mouse over the account avatar in the top-right corner of the page, and then click **Account Settings**.
2. Edit the administrator account in the corresponding field.
3. Click **Save**.

## Viewing the Account Code

The account code is the enterprise ID and the site ID. You can put the account code into the Common.cfg file and push the file to the device, to make the device automatically connected to the corresponding site under the desired enterprise. For more information, refer to [Configuring the Common.cfg File](#).

### Procedure

1. Hover your mouse over the account avatar in the top-right corner of the page, and then click **Account Settings**.
2. Click **Account Code**.

Account Settings
Account code

Enterprise ID

Enterprise Name	Enterprise ID	
WULLLALA	leynhkqe	<a href="#">Copy</a>

SiteID

Site Name	Site ID	
WULLLALA	i9k1r3xe	<a href="#">Copy</a>
WULLLALA/DongNan	4huotnxe	<a href="#">Copy</a>

## Managing Sub-Administrator Accounts

You can add sub-administrator accounts, and assign different data permissions or function permissions to different sub-administrator accounts.

- [Adding/Editing/Deleting a Group](#)
- [Adding/Editing/Deleting a Role](#)
- [Assigning Roles to Sub-Administrator Accounts](#)
- [Assigning the Function Permission](#)
- [Assigning the Data Permission](#)
- [Adding and Managing Sub-Administrator Accounts](#)

## Adding/Editing/Deleting a Group

You can manage the roles by the group.


### About this task

You cannot edit or delete the default group.

### Procedure

1. Click **System Management > Role Management**.
2. In the top-right corner, click **Add Group**.
3. Enter the group name.
4. Click **OK**.

After adding the group, click the edit icon or the delete icon on the right side to edit or delete the group.

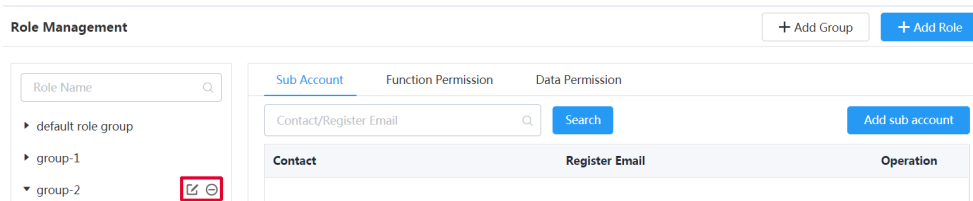

## Adding/Editing/Deleting a Role

You can customize roles first, configure the corresponding function permission for the roles, and then assign roles to the sub-administrator accounts.

### About this task

The default roles are as below, you cannot edit or delete them.


**Table 1: Default role**

Name	Department	Function and data permission
Super manager	Default role group	All function and data permission
Empty manager	Default role group	Only the login permission

### Procedure

1. Click **System Management > Role Management**.
2. In the top-right corner, click **Add Role**.
3. Specify the role name.
4. Select a desired group.
5. Click **OK**.

After adding the role, click the edit icon or the delete icon on the right side to edit or delete the role.

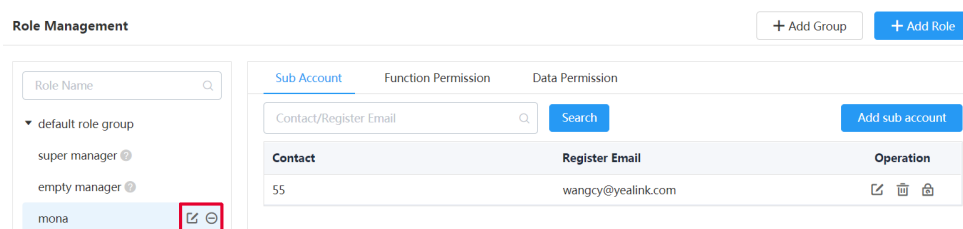

## Assigning Roles to Sub-Administrator Accounts

After adding the roles, you can add sub-administrator accounts for them. You can also assign roles to sub-administrator accounts when adding the sub-administrator accounts (for more information, see [Adding and Managing Sub-Administrator Accounts](#) ).

### Before you begin

You have added roles.

### Procedure

1. Go to Role Management, select the corresponding role, and click **Add sub account**.
2. Configure the phone number and the email.
3. Click **Confirm**.

### Related tasks

[Adding/Editing/Deleting a Role](#)

## Assigning the Function Permission


If you want to allow non-managers to use the sub-administrator account, for example, checking the call quality of the phone and diagnosing the devices, but you do not want them to add or delete devices, you can assign the limited function permission to them.

### Before you begin

You have added roles.

### Procedure

1. Go to Role Management, select the corresponding role, and click **Function Permission**.
2. If you only want to grant the Readonly permission, select the check boxes of **Readonly** on the right side of the corresponding functions; if you want to grant the operation permission, select the check boxes of the corresponding operations.

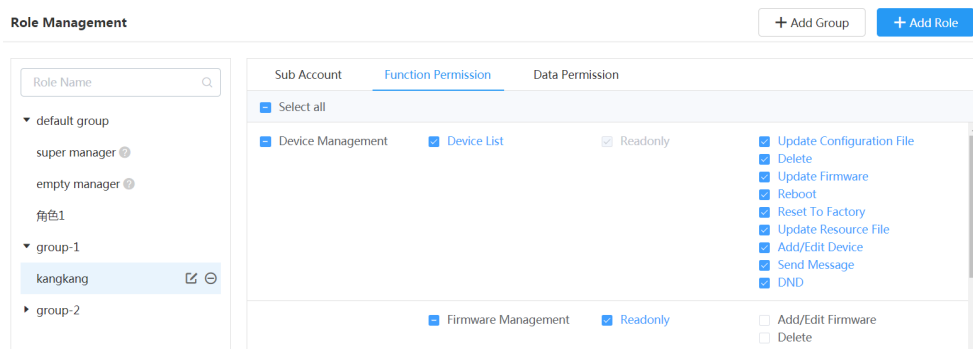

### Related tasks

[Adding/Editing/Deleting a Role](#)

## Assigning the Data Permission

If you want to manage the device of your own site or of a certain amount of sites, you can assign the data permission.

### Before you begin

You have added roles.

## Procedure

1. Go to Role Management, select the corresponding role, and click **Data Permission**.
2. Select the check box of the site you want to manage.

## Related tasks

[Adding/Editing/Deleting a Role](#)

## Adding and Managing Sub-Administrator Accounts

### Before you begin

You have added roles.

## Procedure

1. Click **System Settings > Sub Account Management**.
2. In the top-right corner, click **Add**.
3. Configure the phone number, the username, and the email.
4. Select a desired role from the drop-down menu of **Role**.
5. Click **Confirm**.

If you enable SMTP mailbox (refer to [Configuring the SMTP Mailbox](#)), the account information will be sent to the mailbox of the sub-administrator automatically.

After adding the sub-administrator account, you can change the role, reset the password or do other operations.

## Related tasks

[Adding/Editing/Deleting a Role](#)

# Troubleshooting

This chapter provides you with general information for troubleshooting some common problems while using the Yealink device management platform. Upon encountering a case not listed in this section, contact your Yealink reseller or technical support engineer for further support.

- [Forgetting the Login Password](#)
- [The Phones Cannot Connect to YMCS for Enterprise](#)

- [The Offline Device Reconnects to the YMCS for Enterprise](#)

## Forgetting the Login Password

---

If you forget the password, you can reset it via email.

### Procedure

1. On the Login page of the device management platform, click **Forget Password**.
2. Enter your email and the captcha in the corresponding field.
3. Click **OK**.
4. Click **OK** according to the prompts.
5. After you receive the email for resetting the password, click the resetting link in 10 minutes to reset the password.

## The Phones Cannot Connect to YMCS for Enterprise

---

- Make sure the firmware version of the device supports YMCS. If the firmware version does not support, refer to [Supported Device Models](#) to upgrade the firmware first.
- Make sure you connect to the address <https://dm.yealink.com/dm.cfg>.

## The Offline Device Reconnects to the YMCS for Enterprise

---

Reasons that the device is offline:

- The device is disconnected from the network.
- The device is powered off.
- The device is reset to the factory and disconnected from the platform.

Reconnect the device to the device management platform for enterprise:

- If the device has been reported to the device management platform, the device will be automatically connected to the device management platform after being powered on or connected to the network.
- If the device has not been reported to the device management platform, you need to deploy the device first. For more information on how to deploy the devices, refer to [Deploying SIP Devices](#).

## Appendix: Alarm Types

---

Alarm type	Severity
Poor call quality	Critical
Register failure	Critical
Upgrade firmware failure	Critical
Update configuration failure	Critical
Application crash	Critical
Application no response	Critical

Alarm type	Severity
Kernel panic	Critical
Offline	Critical
System license is about to expire	Critical
Device capacity of license is insufficient	Critical
Subset Offline	Critical
Low power	Critical
Power off or Disconnect	Critical
Visual voicemail retrieve failure	Minor
Hold failure	Minor
Resume failure	Minor
Play visual voicemail failure	Minor
RTP violate	Minor
RTP address change	Minor
RTP dead	Minor
SRTP failure	Minor
RTP SSRC change	Minor
Calendar synchronization failure	Minor
Call log retrieve failure	Minor
Outlook contact retrieve failure	Minor
Call failed	Minor
Bluetooth paired failed	Major
BToE pairing failure	Major
Exchange discovery failure	Major
Exit program	Major
DNS server discovery failure	Major
Time synchronization failure	Major
Meet now failure	Major
Online	Major