

## User Access Level of Web/Phone/Handset User Interface

---

### Overview

User access level feature is used to achieve different access levels for different authorized users. It is useful for protecting the IP phone from unauthorized configuration, and popularly used for the Hosted PBX solution. The following describes how to customize the access permission for configurations on the web user interface and phone/handset user interface.

This guide applies to the following Yealink IP phones:

- SIP-T58V/A, SIP-T56A, SIP VP-T49G, CP860, CP960 and W56P IP phones running firmware version 80 or later
- SIP-T54S, SIP-T52S, SIP-T48G/S, SIP-T46G/S, SIP-T42G/S, SIP-T41P/S, SIP-T40P/G, SIP-T29G, SIP-T27P/G, SIP-T23P/G, SIP-T21(P) E2, SIP-T19(P) E2, CP920, W60 and W52P IP phones running firmware version 81 or later

### Scenario

For a Hosted PBX solution, IP phones are provided to customers for free but required a minimum consumption monthly. All PBX services associated features on the deployed IP phones are preconfigured to avoid customers from using other Hosted PBX's service, and the Hosted PBX system administrator can restrict the user access permission using user access level feature. For example, the Hosted PBX system administrator restricts the write permission of the account associated configurations. This means customers can only read these configurations on both web user interface and phone/handset user interface.

### Introduction

Yealink IP phones support access levels of admin, var and user. The following describes the detailed information of each access level:

- **Admin:** The administrator access level. With this access level, all configurations on both web user interface and phone/handset user interface can be read and written. The authentication identity for this access level is **admin**. And the default password is **admin**.
- **Var:** The value-added reseller access level. Generally, with this access level, most configurations on the web user interface and phone/handset user interface can be read and written. The authentication identity for this access level is **var**. And the default password is **var**.

- **User:** The end user access level. Generally, only a few configurations are allowed to be written and read for access user. The authentication identity for this access level is **user**. And the default password is **user**.

## Specification

Access permissions of all configuration items available on Yealink IP phones' web user interface and phone/handset user interface can be defined in a fixed WebItemsLevel.cfg file. Each configuration item in the file is formatted as:

**ItemName = X<sub>1</sub>X<sub>2</sub>**

The valid values of X<sub>1</sub>, X<sub>2</sub> include 0, 1, 2 and 3.

X<sub>1</sub> is used for specifying the access level. The access levels: 2 = admin, 1 = var, 0 = user, 3 = none.

X<sub>2</sub> is used for defining the access permission. 2 means the configuration item is read-only for X<sub>1</sub> and higher access levels, the highest is always writable. 1 means the configuration item is read-only for X<sub>1</sub> access level, and writable for higher access levels. 0 means the configuration item is writable for X<sub>1</sub> and higher access levels. 3 means the configuration item is read-only for X<sub>1</sub> and higher access levels.

The following table lists the possible values of X<sub>1</sub>X<sub>2</sub> and the configuration results with different access levels:

(W: writable; R: read-only; N: hidden)

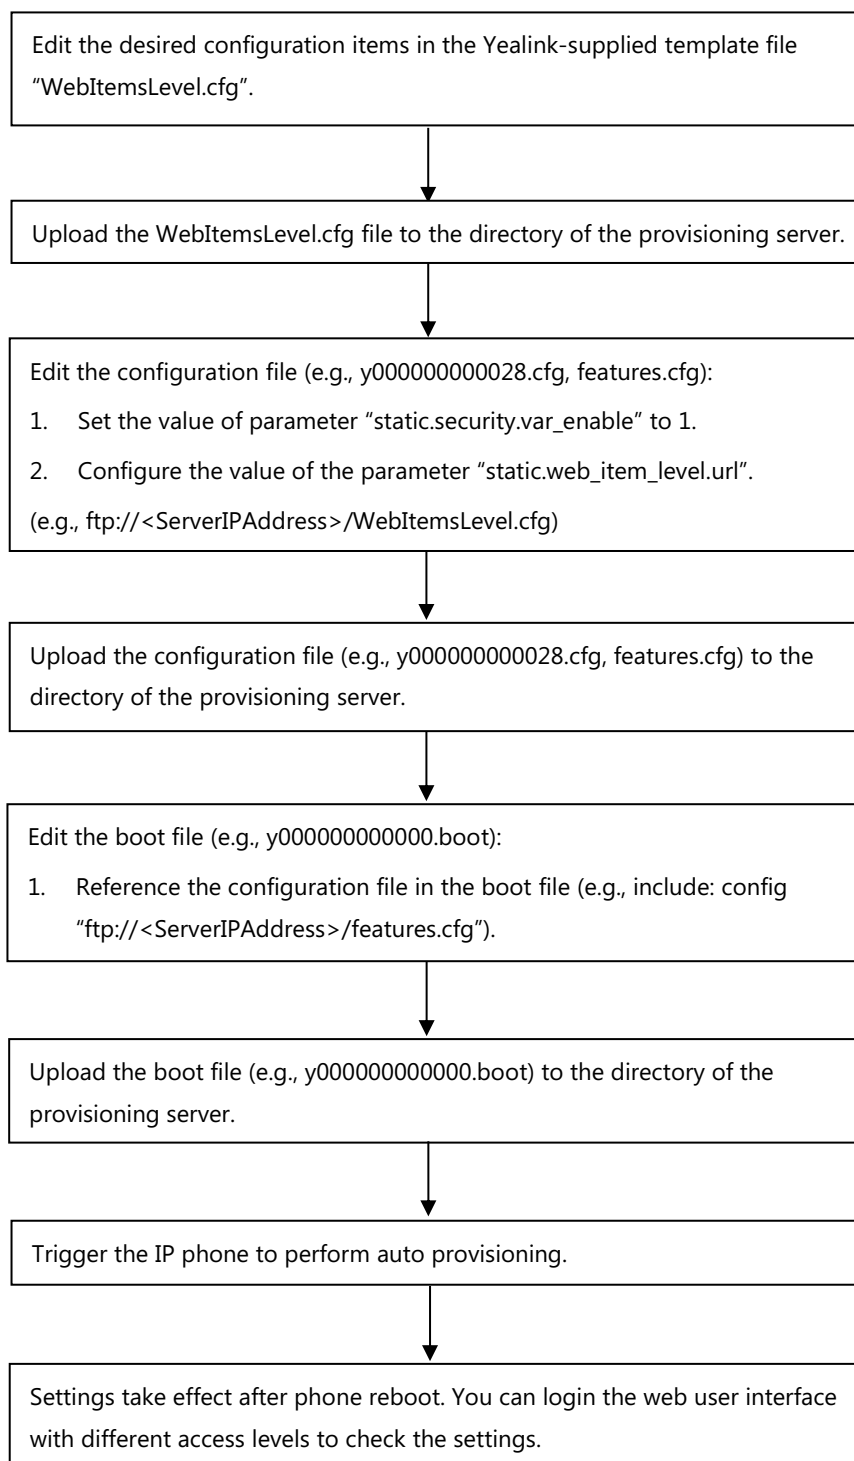
Results Values of X <sub>1</sub> X <sub>2</sub>	admin (2)	var (1)	user (0)
0	WR	WR	WR
1	WR	WR	N
2	WR	N	N
3	N	N	N
00	WR	WR	WR
01	WR	WR	R
02	WR	R	R
03	R	R	R
10	WR	WR	N
11	WR	R	N
12	WR	R	N
13	R	R	N
20	WR	N	N

<b>Results</b> <b>Values of <math>X_1X_2</math></b>	<b>admin (2)</b>	<b>var (1)</b>	<b>user (0)</b>
21	WR	N	N
22	WR	N	N
23	R	N	N
30/31/32/33	N	N	N

## Application

This section will introduce procedures to configure access permission of the web user interface in detail. The flow chart of configuring user access level is shown as below:

**Note:** The boot file is only applicable to the IP phones running new firmware version (new auto provisioning mechanism). The parameter varies from firmware version to firmware version (refer to [Configuring Yealink IP Phones](#)).



## Customizing WebItemsLevel.cfg

You can ask Yealink Field Application Engineer for the template file "WebItemsLevel.cfg", or you can download it online:

<http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

We recommend you only edit the desired configuration items in the supplied "WebItemsLevel.cfg" file, and keep other configuration items constant.

WebItemsLevel.cfg downloaded via auto provisioning will override that in the phone flash. Access level of any configuration item missed (including configuration value left blank) in the downloaded WebItemsLevel.cfg file will be changed to user by default.

## Web User Interface

The following shows configuration segments for the web user interface in the WebItemsLevel.cfg file for reference:

**Sample 1:** Configuration items in the WebItemsLevel.cfg for navigation bar settings of the Features page:

```
[ Features ]
features-forward = 0
features-general = 0
features-audio = 0
features-intercom = 0
features-transfer = 1
features-callpickup = 0
features-remote = 2
features-phonelock = 0
features-acd = 0
features-sms = 2
features-actionurl = 1
features-bluetooth = 0
features-powered = 2
features-notifypop = 0
```

According to the above configuration of access level, when logging in the web user interface with user access level, the web user interface displays as below:

The screenshot displays the Yealink T46G web user interface. The top navigation bar includes tabs for Status, Account, Network, DSSKey, Features, Settings, Directory, and Security. The 'Features' tab is selected, and the 'Forward&DND' sub-tab is highlighted in the left sidebar. The main configuration area is divided into two sections: 'Forward' and 'DND'. The 'Forward' section includes settings for Forward Emergency, Forward Authorized Numbers, Mode (Phone/Custom), Account, Always Forward, Busy Forward, and No Answer Forward. The 'DND' section includes settings for DND Emergency, DND Authorized Numbers, Mode, Account, DND Status, DND On Code, and DND Off Code. A 'NOTE' section on the right provides additional information about Call Forward and DND modes. The interface includes a 'Log Out' button in the top right corner and 'Confirm' and 'Cancel' buttons at the bottom.

**Forward&DND**

- General Information
- Audio
- Intercom
- Call Pickup
- Phone Lock
- ACD
- Bluetooth
- Notification Popups

**Forward**

Forward Emergency: Disabled

Forward Authorized Numbers:

Mode: ☒ Phone ☐ Custom

Account: 1011

**Always Forward**

On: ☐ Off: ☒

Target:

On Code:

Off Code:

**Busy Forward**

On: ☐ Off: ☒

Target:

On Code:

Off Code:

**No Answer Forward**

After Ring Time(0~120s): 12

Target:

On Code:

Off Code:

**DND**

DND Emergency: Disabled

DND Authorized Numbers:

Mode: ☒ Phone ☐ Custom

Account: 1011

DND Status: ☐ On ☒ Off

DND On Code:

DND Off Code:

**NOTE**

**Call Forward**  
It allows users to redirect an incoming call to a third party.

**Call Forward Mode**  
**Phone:** Call forward feature is effective for the IP phone.  
**Custom:** Call forward feature can be configured for each or all accounts.

**Do Not Disturb (DND)**  
It allows IP phones to ignore incoming calls.

**DND Mode**  
**Phone:** DND feature is effective for the IP phone.  
**Custom:** DND feature can be configured for each or all accounts.

You can click here to get more guides.

Confirm Cancel

When logging in the web user interface with var access level, the web user interface displays as below:

The screenshot displays the Yealink T46G web user interface. The top navigation bar includes tabs for Status, Account, Network, DSSKey, Features, Settings, Directory, and Security. The left sidebar lists various configuration options, with 'Forward&DND' highlighted by a red box. The main content area is divided into two sections: 'Forward' and 'DND'. The 'Forward' section includes settings for Forward Emergency, Forward Authorized Numbers, Mode (Phone/Custom), Account, Always Forward, Busy Forward, and No Answer Forward. The 'DND' section includes settings for DND Emergency, DND Authorized Numbers, Mode, Account, DND Status, DND On Code, and DND Off Code. The right sidebar contains a 'NOTE' section with information about Call Forward and DND modes.

**Forward**

Forward Emergency: Disabled

Forward Authorized Numbers:

**Mode**

Account: 1011

**Always Forward**

Target:

On Code:

Off Code:

**Busy Forward**

Target:

On Code:

Off Code:

**No Answer Forward**

After Ring Time(0~120s): 12

Target:

On Code:

Off Code:

**DND**

DND Emergency: Disabled

DND Authorized Numbers:

**Mode**

Account: 1011

DND Status:

DND On Code:

DND Off Code:

**NOTE**

**Call Forward**  
It allows users to redirect an incoming call to a third party.

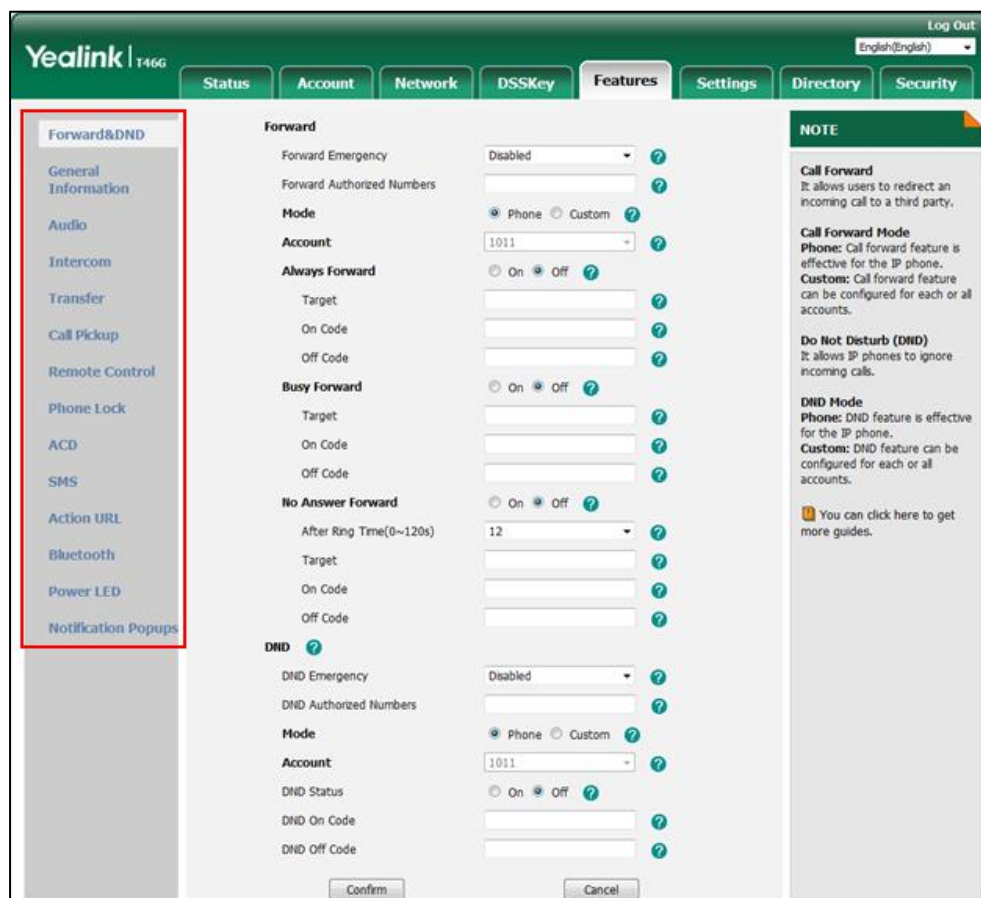
**Call Forward Mode**  
**Phone:** Call forward feature is effective for the IP phone.  
**Custom:** Call forward feature can be configured for each or all accounts.

**Do Not Disturb (DND)**  
It allows IP phones to ignore incoming calls.

**DND Mode**  
**Phone:** DND feature is effective for the IP phone.  
**Custom:** DND feature can be configured for each or all accounts.

You can click here to get more guides.

When logging in the web user interface with admin access level, the web user interface displays as below:



**Note:** Configuration items for navigation bar are not writable on both web user interface and phone/handset user interface. So, configuration items for navigation bar can be configured only using the format "ItemName = X".

If the access permission of the first navigation configuration item for each main page is restricted, the access to the main web page will be denied.

The following table lists the first navigation configuration items for each main page:

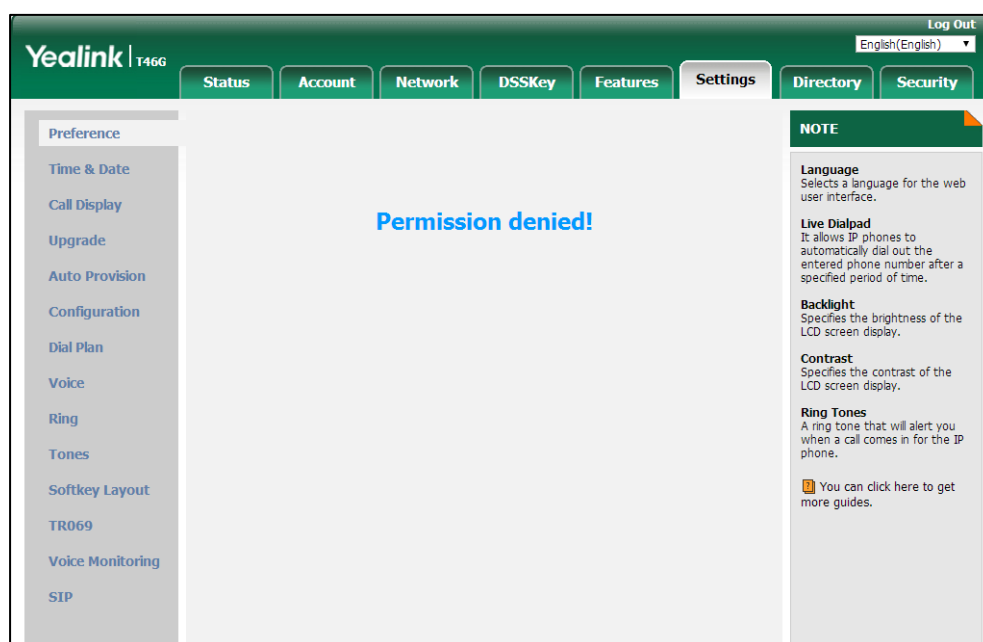
Main Page	First Navigation Item	Configuration Item
Account	Register	account-register
Network	Basic	network-basic
DSSKey/Dsskey (not applicable to W52P/W56P/W60)	Line Key 1-6 (for CP960), Line Key 1-10 (for SIP-T58V/T58A/T56A), Line Key 1-11 (for SIP VP-T49G/SIP-T48G/T48S), Line Key 1-9 (for SIP-T54S/T46G/T46S/T29G), Line Key 1-7 (for	linekey



Main Page	First Navigation Item	Configuration Item
	SIP-T52S/T27P/T27G), Line Key 1-5 (for SIP-T42G/T42S/T41P/T41S), Line Key (for SIP-T40P/T40G/T23P/T23G), Line Key (for SIP-T21(P) E2), Programmable key (for SIP-T19(P) E2/CP860/CP920)	
Features	Forward&DND	features-forward
Settings	Preference	settings-preference
Directory	Local Directory	contacts-basic
Security	Password	password

For example, set the value of the configuration item “settings-preference” to be 1.

When logging into with user access level, the access to the Settings web page will be denied.



**Sample2:** Configuration items in the WebItemsLevel.cfg for the Register settings of Account page:

```
[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 11
display_name = 01
register_name = 03
user_name = 01
```

```

account_password = 12
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
backup-outbound-proxy-server = 01
NAT_traversal = 12
sip_server = 2
sip_server2 = 2
outbound-proxy-server-port = 2
backup-outbound-proxy-server-port = 2

```

According to the above configuration of access level, when logging in the web user interface with user access level, the web user interface displays as below:

The screenshot shows the Yealink T46G web user interface. The top navigation bar includes tabs for Status, Account, Network, DSSKey, Features, Settings, Directory, and Security. The 'Account' tab is selected, and the 'Account 1' dropdown is visible. The main content area displays the configuration for Account 1, including fields for Register Status, Line Active, Display Name, Register Name, User Name, Enable Outbound Proxy Server, Outbound Proxy Server 1, Outbound Proxy Server 2, and Proxy Fallback Interval. A 'NOTE' section on the right provides additional information about Account Registration, Server Redundancy, and NAT Traversal.

When logging in the web user interface with var access level, the web user interface displays as below:

The screenshot shows the Yealink T46G web user interface. The top navigation bar includes tabs for Status, Account, Network, DSSKey, Features, Settings, Directory, and Security. The 'Account' tab is selected, and the 'Account 1' dropdown is visible. The main content area displays the configuration for Account 1, including fields for Register Status, Line Active, Label, Display Name, Register Name, User Name, Password, Enable Outbound Proxy Server, Outbound Proxy Server 1, Outbound Proxy Server 2, Proxy Fallback Interval, and NAT. A 'NOTE' section on the right provides additional information about Account Registration, Server Redundancy, and NAT Traversal.

When logging in the web user interface with admin access level, the web user interface displays as below:

The screenshot shows the Yealink T466 web interface. The 'Account' tab is selected, displaying configuration options for 'Account 1'. The left sidebar has links for Register, Basic, Codec, and Advanced. The main area contains fields for account registration details, including SIP servers and proxy settings. A 'NOTE' section on the right explains account registration, server redundancy, and NAT traversal techniques.

For more information on parameters of the WebItemsLevel.cfg file, refer to [Appendix-A: Configuration Parameters](#).

## Phone/Handset User Interface

### For W52P/W56P/W60 DECT IP phones

The following shows configuration segments for the handset user interface in the WebItemsLevel.cfg file for reference:

If you set the access permission of the high level, it will have an impact on that of the low level. In the following examples, the Settings menu has a higher level than other submenus.

**Example:** Configuration items in the WebItemsLevel.cfg for Telephony submenu settings:

```
[ GUI ]
Auto_Answer = 01
Auto_Intercom = 02
Default_Line = 03
Incoming_Lines = 02
Speed_Dial = 0
Blacklist = 1
```

According to the above configuration of access level:

For user access level, the Blacklist submenu is hidden. The Auto Answer, Auto Intercom, Default Line and Incoming Lines submenus are read-only. Only the Speed Dial submenu is writable.

For var access level, the Auto Intercom, Default Line and Incoming Lines submenus are read-only. The Auto Answer, Speed Dial and Blacklist submenus are writable.

For admin access level, only the Default Line submenu is read-only, the others are writable.

For more information on parameters of the WebItemsLevel.cfg file, refer to [Appendix-A: Configuration Parameters](#).

## For other IP phones

**The following shows configuration segments for the phone user interface in the WebItemsLevel.cfg file for reference:**

If you set the access permission of the high level, it will have an impact on that of the low level. In the following examples, the call forward menu has a higher level than always forward/busy forward/no answer forward submenu.

**Example1:** Configuration items in the WebItemsLevel.cfg for call forward menu and its submenu settings:

```
[ GUI ]
callcontrol_forward = 02
always-forward = 10
busy-forward = 00
NoAnswer-forward = 00
```

**Note:** The configuration of busy forward is the same as the one of the no answer forward, so the following figures take busy forward as an example.

According to the above configuration of access level, when logging in to the phone user interface with user access level, the access permission of each submenu is displayed as below:

Always forward submenu is hidden for user access level:



Busy forward/no answer forward submenu is read-only for user access level:

The screenshot shows a configuration window titled "Busy Forward". It contains four numbered items: "1. Busy Forward:" with a blue bar and the word "Disabled" in red, followed by left and right arrow icons; "2. Forward to:" with a text input field; "3. On Code:" with a text input field; and "4. Off Code:" with a text input field. At the bottom, there is a "Back" button and three empty button slots.

When logging in to the phone user interface with var access level, the access permission of each submenu is displayed as below:

Always forward submenu is read-only for var access level:

The screenshot shows a configuration window titled "Always Forward". It contains four numbered items: "1. Always Forward:" with a blue bar and the word "Disabled" in red, followed by left and right arrow icons; "2. Forward to:" with a text input field; "3. On Code:" with a text input field; and "4. Off Code:" with a text input field. At the bottom, there is a "Back" button and three empty button slots.

Busy forward/no answer forward submenu is read-only for var access level:

The screenshot shows a configuration window titled "Busy Forward". It contains four numbered items: "1. Busy Forward:" with a blue bar and the word "Disabled" in red, followed by left and right arrow icons; "2. Forward to:" with a text input field; "3. On Code:" with a text input field; and "4. Off Code:" with a text input field. At the bottom, there is a "Back" button and three empty button slots.

When logging in to the phone user interface with admin access level, the phone user interface displays as below:

Always forward submenu is writable for admin access level:

The screenshot shows a configuration window titled "Always Forward". It contains four numbered fields: "1. Always Forward:" with a dropdown menu set to "Disabled", "2. Forward to:", "3. On Code:", and "4. Off Code:". At the bottom, there are four buttons: "Back", an empty button, "Switch", and "Save".

Busy forward/no answer forward submenu is writable for admin access level:

The screenshot shows a configuration window titled "Busy Forward". It contains four numbered fields: "1. Busy Forward:" with a dropdown menu set to "Disabled", "2. Forward to:", "3. On Code:", and "4. Off Code:". At the bottom, there are four buttons: "Back", an empty button, "Switch", and "Save".

**Example2:** Configuration items in the WebItemsLevel.cfg for call forward menu and its submenu settings:

```
[ GUI ]
callcontrol_forward = 00
always-forward = 01
busy-forward = 02
NoAnswer-forward = 00
```

According to the above configuration of access level, when logging in to the phone user interface with user access level, the access permission of each submenu is displayed as below:

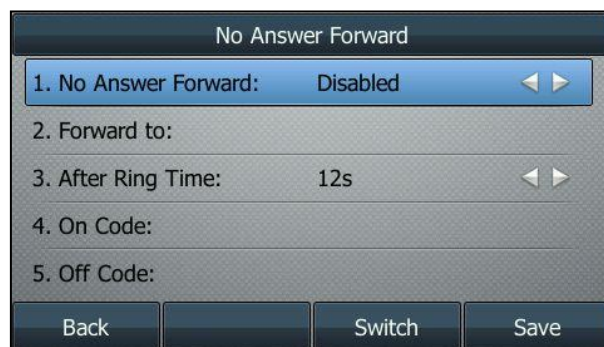
Always forward submenu is read-only for user access level:

The screenshot shows a configuration window titled "Always Forward". It contains four numbered fields: "1. Always Forward:" with a dropdown menu set to "Disabled", "2. Forward to:", "3. On Code:", and "4. Off Code:". At the bottom, there are four buttons: "Back", an empty button, an empty button, and an empty button.

Busy forward submenu is read-only for user access level:



No answer forward submenu is writable for user access level:



When logging in to the phone user interface with var access level, the access permission of each submenu is displayed as below:

Always forward submenu is writable for var access level:





Busy forward submenu is read-only for var access level:



Busy Forward

1. Busy Forward: Disabled

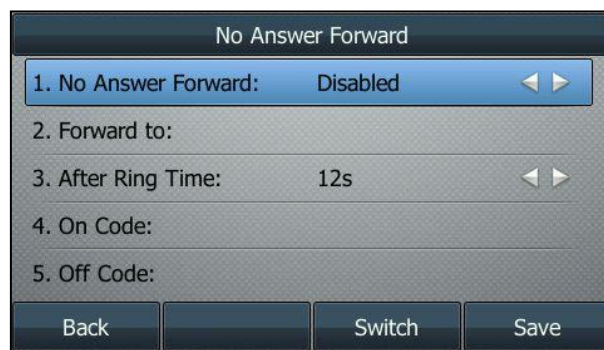
2. Forward to:

3. On Code:

4. Off Code:

Back

No answer forward submenu is writable for var access level:



No Answer Forward

1. No Answer Forward: Disabled

2. Forward to:

3. After Ring Time: 12s

4. On Code:

5. Off Code:

Back Switch Save

When logging in to the phone user interface with admin access level, the phone user interface displays as below:

Always forward submenu is writable for admin access level:



Always Forward

1. Always Forward: Disabled

2. Forward to:

3. On Code:

4. Off Code:

Back Switch Save



Busy forward submenu is writable for admin access level:

No answer forward submenu is writable for admin access level:

## Configuring Yealink IP Phones

User access level feature is disabled for all IP phones in neutral firmware version by default. Before using this feature, you need to enable it through auto provisioning introduced as following. User access level feature is configurable only via configuration files.

### For SIP VP-T49G IP phone:

**To configure user access level feature for Yealink IP phones:**

1. Edit the following parameters in the configuration file (e.g., y0000000000051.cfg).

Parameters	Permitted Values	Default
<b>security.var_enable</b>	<b>0 or 1</b>	<b>0</b>
<b>Description:</b> This parameter is used to enable or disable the login of the web/phone user interface with different access levels. <b>0-Disabled</b>		

Parameters	Permitted Values	Default
<b>1-Enabled</b> <b>Note:</b> It takes effect after reboot. <b>Web User Interface:</b> None <b>Phone User Interface:</b> None		
<b>security.default_access_level</b>	<b>0, 1 or 2</b>	<b>0</b>
<b>Description:</b> This parameter is used to configure the default access level to access the phone user interface. <b>0-user</b> <b>1-var</b> <b>2-admin</b> <b>Note:</b> It works only if the value of the parameter "security.var_enable" is set to 1 (Enabled). It takes effect after reboot. <b>Web User Interface:</b> None <b>Phone User Interface:</b> None		
<b>web_item_level.url</b>	<b>FTP, TFTP, HTTP or HTTPS download URL</b>	<b>Blank</b>
<b>Description:</b> This parameter is used to configure the access URL of the WebItemsLevel.cfg file. <b>Note:</b> It takes effect after reboot. <b>Web User Interface:</b> None <b>Phone User Interface:</b> None		

The parameter settings in the configuration file for reference are shown as below:

security.var\_enable = 1

web\_item\_level.url = ftp://192.168.1.100/WebItemsLevel.cfg

security.default\_access\_level = 1

2. Upload the configuration file to the directory of the provisioning server.

3. Configure the access URL of the provisioning server for the IP phone.
4. Trigger the IP phone to perform auto provisioning.

For more information on auto provisioning Yealink IP phones, refer to [Yealink SIP-T2 Series\\_T19\(P\) E2\\_T4\\_Series\\_CP\\_Series\\_W56P\\_IP\\_Phones\\_Auto\\_Provisioning\\_Guide](#).

## For other IP phones:

### To configure user access level feature for Yealink IP phones:

1. Edit the following parameters in the configuration file (e.g., features.cfg).

Parameters	Permitted Values	Default
<b>static.security.var_enable</b>	<b>0 or 1</b>	<b>0</b>
<b>Description:</b> This parameter is used to enable or disable the login of the web/phone/handset user interface with different access levels. <b>0</b> -Disabled <b>1</b> -Enabled <b>Note:</b> It takes effect after reboot. <b>Web User Interface:</b> None <b>Phone User Interface:</b> None		
<b>static.security.default_access_level</b>	<b>0, 1 or 2</b>	<b>0</b>
<b>Description:</b> This parameter is used to configure the default access level to access the phone/handset user interface. <b>0</b> -user <b>1</b> -var <b>2</b> -admin <b>Note:</b> It works only if the value of the parameter "static.security.var_enable" is set to 1 (Enabled). It takes effect after reboot. <b>Web User Interface:</b> None <b>Phone/Handset User Interface:</b> None		

Parameters	Permitted Values	Default
<b>static.web_item_level.url</b>	<b>FTP, TFTP, HTTP or HTTPS download URL</b>	<b>Blank</b>
<p><b>Description:</b> This parameter is used to configure the access URL of the WebItemsLevel.cfg file.</p> <p><b>Note:</b> It takes effect after reboot.</p> <p><b>Web User Interface:</b> None</p> <p><b>Phone/Handset User Interface:</b> None</p>		

The parameter settings in the configuration file for reference are shown as below:

```
static.security.var_enable = 1
```

```
static.web_item_level.url = ftp://192.168.1.100/WebItemsLevel.cfg
```

```
static.security.default_access_level = 1
```

- Upload the configuration file to the directory of the provisioning server.
- Reference the configuration file in the boot file (e.g., y0000000000000000.boot).  
include:config "ftp://192.168.1.100/features.cfg"
- Upload the boot file to the directory of the provisioning server.
- Configure the access URL of the provisioning server for the IP phone.
- Trigger the IP phone to perform auto provisioning.

The boot file is only applicable to IP phones running new firmware version (new auto provisioning mechanism). For more information on auto provisioning Yealink IP phones, refer to the latest Auto Provisioning Guide for your phone on [Yealink Technical Support](#).

## Logging the Web/Phone/Handset User Interface with Different Access Levels

When the user access level is enabled, you can login the web/phone/handset user interface with different access levels.

### To login the web user interface with different access levels:

- Press the **OK/√** key when the phone is idle to obtain the IP address.  
For W56P, press the **OK->Status->Base** to obtain the IP address.
- Enter the IP address (e.g., http://192.168.0.10 or 192.168.0.10) in the address bar of web browser on your PC and then press the **Enter** key.
- Enter the user name (admin/var/user) and password (admin/var/user) in the login page.

4. Click **Confirm/Login** to login.

When logging in with different access levels, you can see different permissions of web user interface.

**To login the phone user interface with different access levels:**

1. Press **Menu->UserMode**.
2. Press ◀ or ▶, or the **Switch** soft key to select the desired access level in the **User Type** field.
3. Enter the password in the **Password** field.



4. Press the **Save** soft key to accept the change.

You can see different permissions of phone user interface when logging in with different access levels.

**To login the handset user interface with different access levels:**




1. Press **OK->User Mode**.
2. Press ◀ or ▶ to select the desired access level in the **User Type** field.
3. Enter the password in the **Password** field.
4. Press the **Save** soft key to accept the change.

You can see different permissions of handset user interface when logging in with different access levels.

## Appendix-A : Configuration Parameters

### Configuration Parameters of Web User Interface

The following table lists configuration items in the WebItemsLevel.cfg file with associated configurations on the web user interface (take SIP-T46G IP phones as an example for reference):



Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Status-Menu ]	Status-Basic = 0	Status->Status (the whole page)
	Status-RTP = 0	Status->RTP Status (the whole page)
	Status-VoIP = 0 (only applicable to W52P/W56P/W60 DECT IP phones)	Status->Handset&VoIP
	Status-TalkStats = 0 (only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Status->Talk Statistics (the whole page)
[ Status ]	version = 0	Status->Version 
	DeviceCertificate = 0 (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Status->Device Certificate 
	network = 0	Status->Network 
	IPv4 = 0	Status->IPv4

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface																															
[ Status ]		<div>IPv4 ?<table><tr><td>WAN Port Type</td><td>DHCP</td></tr><tr><td>WAN IP Address</td><td>10.3.6.205</td></tr><tr><td>Subnet Mask</td><td>255.255.255.0</td></tr><tr><td>Gateway</td><td>10.3.6.254</td></tr><tr><td>Primary DNS</td><td>192.168.1.167</td></tr><tr><td>Secondary DNS</td><td>192.168.1.166</td></tr></table></div>	WAN Port Type	DHCP	WAN IP Address	10.3.6.205	Subnet Mask	255.255.255.0	Gateway	10.3.6.254	Primary DNS	192.168.1.167	Secondary DNS	192.168.1.166																			
	WAN Port Type	DHCP																															
	WAN IP Address	10.3.6.205																															
	Subnet Mask	255.255.255.0																															
Gateway	10.3.6.254																																
Primary DNS	192.168.1.167																																
Secondary DNS	192.168.1.166																																
IPv6 = 0	Status->IPv6 <div>IPv6 ?<table><tr><td>WAN Port Type</td><td>DHCP</td></tr><tr><td>WAN IP Address</td><td>2006:1:1:1:215:65ff:fe45:6e47/64</td></tr><tr><td>Gateway</td><td>2006:1:1:1::/64</td></tr><tr><td>Primary DNS</td><td>::</td></tr><tr><td>Secondary DNS</td><td>::</td></tr></table></div>	WAN Port Type	DHCP	WAN IP Address	2006:1:1:1:215:65ff:fe45:6e47/64	Gateway	2006:1:1:1::/64	Primary DNS	::	Secondary DNS	::																						
WAN Port Type	DHCP																																
WAN IP Address	2006:1:1:1:215:65ff:fe45:6e47/64																																
Gateway	2006:1:1:1::/64																																
Primary DNS	::																																
Secondary DNS	::																																
NetworkCommon = 0	Status->Network Common For SIP VP-T49G/CP960/W52P/W56P/W60 IP phones: <div>Network Common ?<table><tr><td>MAC Address</td><td>0015654146DD</td></tr><tr><td>WAN Prot Status</td><td>100Mbps Full Duplex</td></tr><tr><td>PC Port Status</td><td>Link Down</td></tr><tr><td>Device Type</td><td>Router</td></tr><tr><td>Uptime</td><td>0 days 21:35</td></tr></table></div> For SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40G/T40P/T29G/T27G/T27P/T23G/T23P/T21(P) E2/T19(P) E2 phones: <div>Network Common ?<table><tr><td>MAC Address</td><td>00156588B197</td></tr><tr><td>Wi-Fi MAC</td><td>N/A</td></tr><tr><td>Bluetooth MAC</td><td>00:15:65:8B:B1:98</td></tr><tr><td>WAN Port Status</td><td>100Mbps Full Duplex</td></tr><tr><td>PC Port Status</td><td>Link Down</td></tr><tr><td>Device Type</td><td>Bridge</td></tr><tr><td>Uptime</td><td>0 days 02:49</td></tr></table></div> For SIP-T58V/T58A/T56A IP phones: <div>Network Common ?<table><tr><td>MAC Address</td><td>00:15:65:C1:93:6B</td></tr><tr><td>Wi-Fi MAC</td><td>44:2C:05:AA:73:A2</td></tr><tr><td>Link Status</td><td>Connected</td></tr><tr><td>Device Type</td><td>Bridge</td></tr></table></div>	MAC Address	0015654146DD	WAN Prot Status	100Mbps Full Duplex	PC Port Status	Link Down	Device Type	Router	Uptime	0 days 21:35	MAC Address	00156588B197	Wi-Fi MAC	N/A	Bluetooth MAC	00:15:65:8B:B1:98	WAN Port Status	100Mbps Full Duplex	PC Port Status	Link Down	Device Type	Bridge	Uptime	0 days 02:49	MAC Address	00:15:65:C1:93:6B	Wi-Fi MAC	44:2C:05:AA:73:A2	Link Status	Connected	Device Type	Bridge
MAC Address	0015654146DD																																
WAN Prot Status	100Mbps Full Duplex																																
PC Port Status	Link Down																																
Device Type	Router																																
Uptime	0 days 21:35																																
MAC Address	00156588B197																																
Wi-Fi MAC	N/A																																
Bluetooth MAC	00:15:65:8B:B1:98																																
WAN Port Status	100Mbps Full Duplex																																
PC Port Status	Link Down																																
Device Type	Bridge																																
Uptime	0 days 02:49																																
MAC Address	00:15:65:C1:93:6B																																
Wi-Fi MAC	44:2C:05:AA:73:A2																																
Link Status	Connected																																
Device Type	Bridge																																
AccountStatus = 0	Status->Account Status																																

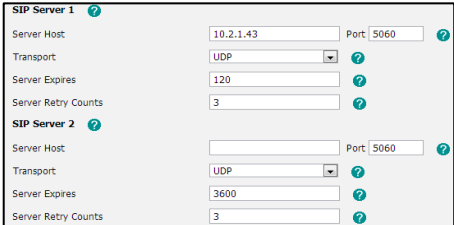
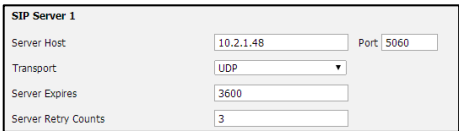

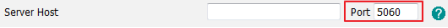
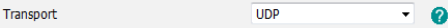
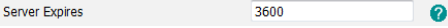
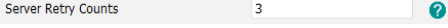
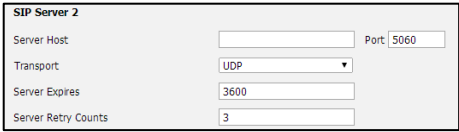
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface																																								
[ Status ]	(not applicable to W52P/W56P/W60 DECT IP phones)	<div><div>Account Status ?</div><table><tr><td>Account1</td><td>1010@10.2.1.199 : Registered</td></tr><tr><td>Account2</td><td>Disabled</td></tr><tr><td>Account3</td><td>Disabled</td></tr><tr><td>Account4</td><td>Disabled</td></tr><tr><td>Account5</td><td>Disabled</td></tr><tr><td>Account6</td><td>Disabled</td></tr></table></div>	Account1	1010@10.2.1.199 : Registered	Account2	Disabled	Account3	Disabled	Account4	Disabled	Account5	Disabled	Account6	Disabled																												
	Account1	1010@10.2.1.199 : Registered																																								
Account2	Disabled																																									
Account3	Disabled																																									
Account4	Disabled																																									
Account5	Disabled																																									
Account6	Disabled																																									
	Ext = 0  (only applicable to SIP-T58V/T58A/T56 A/T54S/T52S/T48G/ T48S/T46G/T46S/T2 9G/T27P/T27G IP phones)	<div>Status-&gt;Ext</div> <div>For SIP-T29G and SIP-T27P/G:</div> <div><div>Ext ?</div><table><tr><td>EXP20</td><td>1</td><td>Hardware Version</td><td>32.1.0.0</td></tr><tr><td>EXP20</td><td>1</td><td>Firmware Version</td><td>9.16.0.0</td></tr></table></div> <div>For SIP-T48G/S and SIP-T46G/S:</div> <div><div>Ext ?</div><table><tr><td>EXP40</td><td>1</td><td>Hardware Version</td><td>66.0.0.0</td></tr><tr><td>EXP40</td><td>1</td><td>Firmware Version</td><td>6.16.0.0</td></tr></table></div> <div>For SIP-T58V/T58A/T56A/T54S/T52S:</div> <div><div>Ext ?</div><table><tr><td>EXP50</td><td>1</td><td>Hardware Version</td><td>75.0.0.0.0.0.5.0</td></tr><tr><td>EXP50</td><td>1</td><td>Firmware Version</td><td>1.0.0.8</td></tr></table></div>	EXP20	1	Hardware Version	32.1.0.0	EXP20	1	Firmware Version	9.16.0.0	EXP40	1	Hardware Version	66.0.0.0	EXP40	1	Firmware Version	6.16.0.0	EXP50	1	Hardware Version	75.0.0.0.0.0.5.0	EXP50	1	Firmware Version	1.0.0.8																
EXP20	1	Hardware Version	32.1.0.0																																							
EXP20	1	Firmware Version	9.16.0.0																																							
EXP40	1	Hardware Version	66.0.0.0																																							
EXP40	1	Firmware Version	6.16.0.0																																							
EXP50	1	Hardware Version	75.0.0.0.0.0.5.0																																							
EXP50	1	Firmware Version	1.0.0.8																																							
[ Status-VoIP ]  (only applicable to W56P DECT IP phones)	registered-handset = 0	Status->Registered Handsets																																								
	registered-new-han dset = 0	Status->Register New Handsets																																								
	voip-status = 0	Status->Paging Status																																								
	Paging = 0	Status->VoIP Status																																								
[ RTP-Status ]  (only applicable to SIP-T58V/T58A/T5 6A/SIP VP-T49G/CP960 IP phones)	rtcp-status = 11  (12 for CP960 IP phones)	<div>Status-&gt;RTP Status</div> <div><table><tr><td>Start Time</td><td>2015-10-10 12:58:03</td><td>Stop Time</td><td>2015-10-10 13:07:03</td></tr><tr><td>Local user</td><td>1010</td><td>Remote user</td><td>1020</td></tr><tr><td>Local IP</td><td>10.10.20.31</td><td>Remote IP</td><td>10.10.20.37</td></tr><tr><td>Local Port</td><td>50000</td><td>Remote Port</td><td>11786</td></tr><tr><td>Local codec</td><td>G722</td><td>Remote codec</td><td>G722</td></tr><tr><td>Jitter</td><td>479</td><td>JitterBufferMax</td><td>0</td></tr><tr><td>Packets Lost</td><td>16777215</td><td>NetworkPacketLossRate</td><td>0.000000</td></tr><tr><td>MOS-LQ</td><td>0.000000</td><td>MOS-CQ</td><td>0.000000</td></tr><tr><td>RoundTripDelay</td><td>0</td><td>EndSystemDelay</td><td>0</td></tr><tr><td>SymmOneWayDelay</td><td>0</td><td>InterarrivalJitter</td><td>0</td></tr></table><div>Refresh</div></div>	Start Time	2015-10-10 12:58:03	Stop Time	2015-10-10 13:07:03	Local user	1010	Remote user	1020	Local IP	10.10.20.31	Remote IP	10.10.20.37	Local Port	50000	Remote Port	11786	Local codec	G722	Remote codec	G722	Jitter	479	JitterBufferMax	0	Packets Lost	16777215	NetworkPacketLossRate	0.000000	MOS-LQ	0.000000	MOS-CQ	0.000000	RoundTripDelay	0	EndSystemDelay	0	SymmOneWayDelay	0	InterarrivalJitter	0
Start Time	2015-10-10 12:58:03	Stop Time	2015-10-10 13:07:03																																							
Local user	1010	Remote user	1020																																							
Local IP	10.10.20.31	Remote IP	10.10.20.37																																							
Local Port	50000	Remote Port	11786																																							
Local codec	G722	Remote codec	G722																																							
Jitter	479	JitterBufferMax	0																																							
Packets Lost	16777215	NetworkPacketLossRate	0.000000																																							
MOS-LQ	0.000000	MOS-CQ	0.000000																																							
RoundTripDelay	0	EndSystemDelay	0																																							
SymmOneWayDelay	0	InterarrivalJitter	0																																							
[ Talk-Stats ]  (only applicable to	talk-stats = 0  (12 for CP960 IP	Status->Talk Statistics																																								



Section Header	ItemName and Default Value	Configuration Items on the Web User Interface																							
SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	phones)	<div>Switch Talk: <div>Lily</div></div> <table><tr><th>Type</th><th>Parameter</th><th>Recv(62 kb/s)</th><th>Send(62 kb/s)</th></tr><tr><td rowspan="6">Audio</td><td>Codec</td><td>G722</td><td>G722</td></tr><tr><td>Bandwidth</td><td>62 kb/s</td><td>62 kb/s</td></tr><tr><td>Sample Rate</td><td>15 k</td><td>15 k</td></tr><tr><td>Jitter</td><td>120 ms</td><td>3 ms</td></tr><tr><td>Total Packets Lost</td><td>0</td><td>0</td></tr><tr><td>Packets Lost Rate</td><td>0%</td><td>0%</td></tr></table>	Type	Parameter	Recv(62 kb/s)	Send(62 kb/s)	Audio	Codec	G722	G722	Bandwidth	62 kb/s	62 kb/s	Sample Rate	15 k	15 k	Jitter	120 ms	3 ms	Total Packets Lost	0	0	Packets Lost Rate	0%	0%
Type	Parameter	Recv(62 kb/s)	Send(62 kb/s)																						
Audio	Codec	G722	G722																						
	Bandwidth	62 kb/s	62 kb/s																						
	Sample Rate	15 k	15 k																						
	Jitter	120 ms	3 ms																						
	Total Packets Lost	0	0																						
	Packets Lost Rate	0%	0%																						
[ Account ]	account-register = 0	Account->Register (the whole page)																							
	account-basic = 0	Account->Basic (the whole page)																							
	account-codec = 0	Account->Codec (the whole page)																							
	account-adv = 2 (0 for SIP VP-T49G W52P/W56P/W60 IP phones)	Account->Advanced (the whole page)																							
	account-assign = 0 (only applicable to W52P/W56P/W60 DECT IP phones)	Account->Number Assignment (the whole page)																							
	account-handsetname = 0 (only applicable to W52P/W56P/W60 DECT IP phones)	Account->Handset Name (the whole page)																							
	account-direct = 0 (only applicable to SIP VP-T49G IP phones)	Account->SIP IP Call (the whole page)																							
[ Account-Register ]	switch-account = 0 (not applicable to SIP-T19(P) E2/CP860/CP920 IP phones)	Account->Register->Account																							
	account_status = 0	Account->Register->Register Status																							
	line_active = 0	Account->Register->Line Active																							
	account_label = 0	Account->Register->Label																							
	display_name = 0	Account->Register->Display Name																							

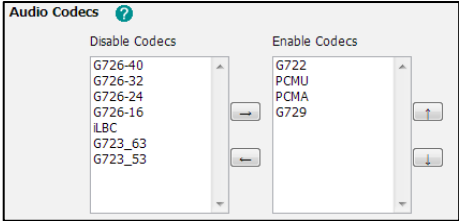
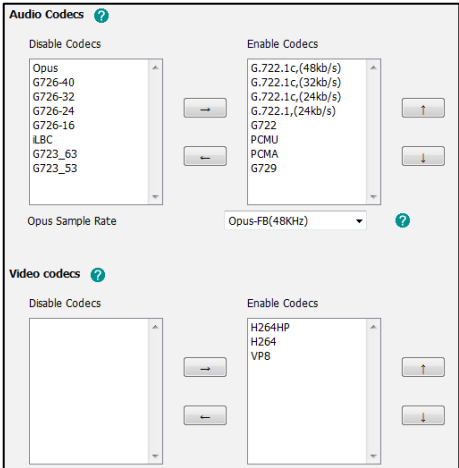
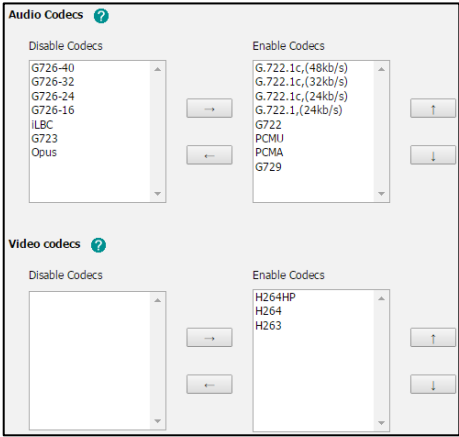
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Account-Register ]	register_name = 01	Account->Register->Register Name
	user_name = 01	Account->Register->User Name
	account_password = 01 (2 for SIP VP-T49G/W52P/W56P/W60/T58V/T58A/T56A IP phones)	Account->Register->Password
	enabled-outbound-proxy-server = 2 (01 for SIP VP-T49G/W52P/W56P/W60/T58V/T58A/T56A IP phones)	Account->Register->Enable Outbound Proxy Server
	outbound-proxy-server = 2 (01 for SIP VP-T49G/W52P/W56P/W60 IP phones; 0 for SIP-T58V/T58A/T56A IP phones)	Account->Register->Outbound Proxy Server 1 Account->Register->Outbound Proxy Server 1->Port 
	outbound-proxy-server-port = 2 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960/W52P/W56P IP phones)	Account->Register->Outbound Proxy Server 1->Port
	backup-outbound-proxy-server = 2 (01 for SIP VP-T49G/W52P/W56P/W60 IP phones; 0 for SIP-T58V/T58A/T56A IP phones)	Account->Register->Outbound Proxy Server 2 Account->Register->Outbound Proxy Server 2->Port 
	backup-outbound-p	Account->Register->Outbound Proxy Server

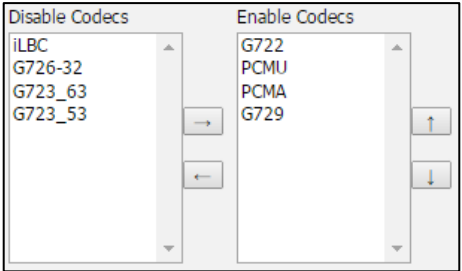
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Account-Register ]	roxy-server-addr = 2 (01 for SIP VP-T49G W52P/W56P/W60 IP phones; 0 for SIP-T58V/T58A/T56 A IP phones)	2
	backup-outbound-proxy-server-port = 2 (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960/W52P/W56P IP phones)	Account->Register->Outbound Proxy Server 2->Port
	proxy-fallback-interval = 2 (01 for SIP VP-T49G/W52P/W56P/W60 IP phones; 0 for SIP-T58V/T58A/T56 A IP phones)	Account->Register->Proxy Fallback Interval
	transport-item = 2 (only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP860/CP920/CP960/W52P/W56P/W60 IP phones)	Account->Register->Transport
	NAT_traversal = 2	SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920/W52P/W56P/W60: Account->Register->NAT SIP VP-T49G: Account->Register->NAT Account->SIP IP Call->NAT

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Account-Register ]	<p>sip_server = 2</p>	<p>SIP-T58V/T58A/T56A/SIP VP-T49G/CP960: Account-&gt;Register-&gt;SIP Server 1/2</p>  <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920/W52P/W56P/W60: Account-&gt;Register-&gt;SIP Server 1</p> 
	sip_server_host_add r =0	Account->Register->SIP Server 1-> 
	sip_server_host_port =0	Account->Register->SIP Server 1-> 
	sip_server_transport =0	Account->Register->SIP Server 1-> 
	sip_server_expires =0	Account->Register->SIP Server 1-> 
	sip_server_retrycounts =0	Account->Register->SIP Server 1-> 
	<p>sip_server2 = 2 (0 for W52P/W56P/W60 IP phones; not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)</p>	<p>Account-&gt;Register-&gt;SIP Server 2</p> 

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Account-Register ]	sip_server2_host_address = 0	Account->Register->SIP Server 2-> Server Host <input type="text"/> Port 5060 ?
	sip_server2_host_port = 0	Account->Register->SIP Server 2-> Server Host <input type="text"/> Port 5060 ?
	sip_server2_transport = 0	Account->Register->SIP Server 2-> Transport <input type="text"/> UDP ?
	sip_server2_expires = 0	Account->Register->SIP Server 2-> Server Expires <input type="text"/> 3600 ?
	sip_server2_retrycounts = 0	Account->Register->SIP Server 2-> Server Retry Counts <input type="text"/> 3 ?
[ Account-Basic ]	switch-account = 0 (not applicable to SIP-T19(P) E2/CP860/CP920 IP phones)	Account->Basic->Account
	proxy_require = 2 (0 for SIP VP-T49G/W52P/W56P/W60/T58V/T58A/T56A IP phones)	Account->Basic->Proxy Require
	send_anonymous = 1	Account->Basic->Local Anonymous
	anonymous_rejection_enabled = 0	Account->Basic->Local Anonymous Rejection
	anonymous_call_enabled = 0 (for neutral firmware version only)	Account->Basic->Send Anonymous Code
	anonymous_call_On Code = 1 (for neutral firmware version only)	Account->Basic->Send Anonymous Code->On Code
	anonymous_call_Off Code = 1 (for neutral firmware version only)	Account->Basic->Send Anonymous Code->Off Code

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Account-Basic ]	version only)	
	send_anonymous_rejection_code = 0 (for neutral firmware version only)	Account->Basic->Send Anonymous Rejection Code
	anonymous_rejection_OnCode = 1 (for neutral firmware version only)	Account->Basic->Send Anonymous Rejection Code->On Code
	anonymous_rejection_OffCode = 1 (for neutral firmware version only)	Account->Basic->Send Anonymous Rejection Code->Off Code
	misscall-log = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Account->Basic->Missed Call Log
	auto-answer = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Account->Basic->Auto Answer
	auto-answer-mute = 0 (only applicable to CP860, CP920 and CP960 IP phones)	Account->Basic->Auto Answer Mute
	ring-type = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Account->Basic->Ring Type
[ Account-Codec ]	switch-account = 0 (not applicable to SIP-T19(P) E2/CP860/CP920 IP phones)	Account->Codec->Account

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Account-Codec ]	codecs-group = 0	<p>Account-&gt;Codec-&gt;Audio Codecs</p> <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:</p>  <p>SIP-T58V/T58A/T56A/CP960:</p>  <p>SIP VP-T49G:</p>  <p>W52P/W56P/W60:</p>

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
		
[ Account-Adv ]	switch-account = 0 (not applicable to SIP-T19(P) E2/CP860/CP920 IP phones)	Account->Advanced->Account
	UDP_keep-alive = 2	Account->Advanced->Keep Alive Type Account->Advanced->Keep Alive Interval(Seconds)
	udp-keep-alive-type = 2 (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960/W52P/W56P/W60 IP phones)	Account->Advanced->Keep Alive Type
	udp-keep-alive-interval = 2 (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960/W52P/W56P/W60 IP phones)	Account->Advanced->Keep Alive Interval(Seconds)
	rport = 2	Account->Advanced->RPort
	subscribe-period = 2	Account->Advanced->Subscribe Period(Seconds)
	DTMF_items = 2	SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/ T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40 G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)



Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Account-Adv ]		E2/CP860/CP920/CP960/W52P/W56P/W60: Account->Advanced->DTMF Type Account->Advanced->DTMF Info Type Account->Advanced->DTMF Payload Type(96~127) SIP VP-T49G: Account->Advanced->DTMF Type Account->Advanced->DTMF Info Type Account->Advanced->DTMF Payload Type(96~127) Account->SIP IP Call->DTMF Type Account->SIP IP Call->DTMF Info Type Account->SIP IP Call->DTMF Payload Type(96~127)
	reliable_retransmission = 2	Account->Advanced->Retransmission
	subscribe-register = 2	Account->Advanced->Subscribe Register
	MWI-items = 2	Account->Advanced->Subscribe for MWI Account->Advanced->MWI Subscription Period(Seconds) Account->Advanced->Subscribe MWI To Voice Mail
	voice_mail = 2 (0 for SIP VP-T49G/W52P/W56P/W60/T58V/T58A/T56A IP phones)	Account->Advanced->Voice Mail
	voice_mail_display = 2 (0 for W60 DECT IP phone; not applicable to W52P/W56P DECT IP phones)	Account->Advanced->Voice Mail Display
	caller-ID-header = 2	Account->Advanced->Caller ID Source

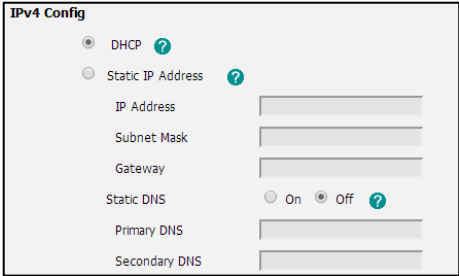
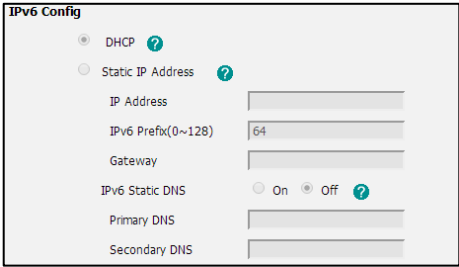


Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Account-Adv ]	use-session-timer = 2	Account->Advanced->Session Timer
	session-timer = 2	Account->Advanced->Session Expires(30~7200s)
	session-refresher = 2	Account->Advanced->Session Refresher
	user-equal-phone = 2	Account->Advanced->Send user=phone
	voice-encryption = 2	SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920/CP960/W52P/W56P/W60: Account->Advanced->RTP Encryption(SRTP) SIP VP-T49G: Account->Advanced->RTP Encryption(SRTP) Account->SIP IP Call->RTP Encryption(SRTP)
	pstime-item = 2	Account->Advanced->PTime(ms)
	BLF-list-URI = 2 (not applicable to SIP-T19(P) E2/CP860/CP920/W52P/W56P/W60 IP phones)	Account->Advanced->BLF List URI
	BlfListCode = 2 (not applicable to SIP-T19(P) E2/CP920/CP860/W52P/W56P/W60 IP phones)	Account->Advanced->BLF List Pickup Code
	BLFListBargeInCode = 2 (not applicable to SIP-T19(P) E2/CP920/CP860/W52P/W56P/W60 IP phones)	Account->Advanced->BLF List Barge In Code
	BLF-List-Retrieve-Co	Account->Advanced->BLF List Retrieve Call

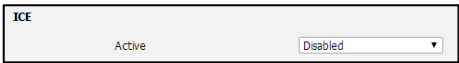
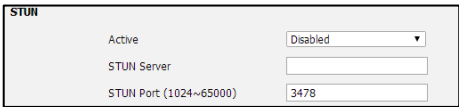
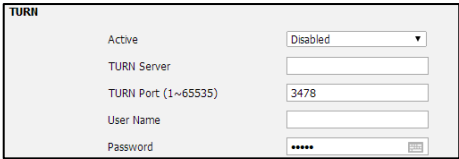
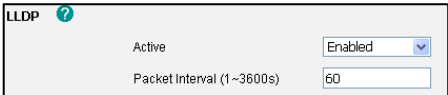

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Account-Adv ]	de = 2 (not applicable to SIP-T19(P) E2/CP920 CP860/W52P/W56P /W60 IP phones)	Parked Code
	share-line = 2	Account->Advanced->Shared Line
	Call-Pull-Feature-Access-Code = 2 (not applicable to SIP-T19(P) E2/W52P/W56P/W60 DECT IP phones)	Account->Advanced->Call Pull Feature Access Code (only appear when the parameter "account.X.shared_line" is set to 1)
	dialog-info-call-pickup = 2 (not applicable to SIP-T19(P) E2/CP860/CP920/W52P /W56P/W60 IP phones)	Account->Advanced->Dialog Info Call Pickup
	BLA-number = 2 (not applicable to W52P/W56P/W60/S IP VP-T49G/SIP-T58V/T58A/T56A IP phones)	Account->Advanced->BLA Number
	BLA-subscription-period = 2 (not applicable to W52P/W56P/W60/S IP VP-T49G/SIP-T58V/T58A/T56A IP phones)	Account->Advanced->BLA Subscription Period
	SIP-send-MAC = 2	Account->Advanced->SIP Send MAC
	SIP-send-line = 2	Account->Advanced->SIP Send Line
	SIP-Reg-retry-timer	Account->Advanced->SIP Registration Retry

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Account-Adv ]	= 2	Timer(0~1800s)
	conference-type = 2	Account->Advanced->Conference Type
	conference-uri = 2	Account->Advanced->Conference URI
	ACD-subscrip-period = 2 (not applicable to CP960/W52P/W56P/W60 IP phones)	Account->Advanced->ACD Subscribe Period(120~3600s)
	Earlymedia = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Account->Advanced->Early Media
	SIPServerType = 2	Account->Advanced->SIP Server Type
	Music-ServerURI = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Account->Advanced->Music Server URI
	Direct-Call-Pickup-Code = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Account->Advanced->Directed Call Pickup Code
	Group-Call-Pickup-Code = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Account->Advanced->Group Call Pickup Code
	Distinctive-Ring-Tones = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Account->Advanced->Distinctive Ring Tones
	UnregisterOnReboot = 2	Account->Advanced->Unregister When Reboot
	Out-Dialog-BLF = 2 (not applicable to	Account->Advanced->Out Dialog BLF

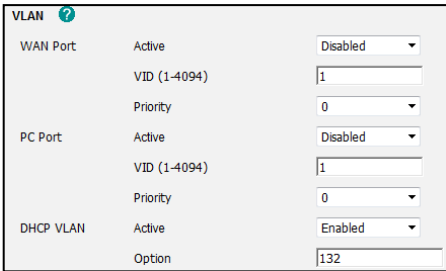

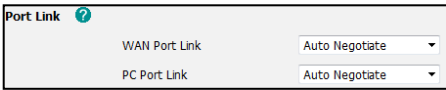

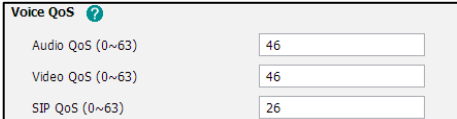

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Account-Adv ]	SIP-T19(P) E2/CP920 CP860/W52P/W56P /W60 IP phones)	
	RTCP-Collector-Name = 2	Account->Advanced->VQ RTCP-XR Collector Name
	RTCP-Collector-Address = 2	Account->Advanced->VQ RTCP-XR Collector Address
	RTCP-Collector-Port = 2	Account->Advanced->VQ RTCP-XR Collector Port
	Number-Of-Linekey = 2 (1 for SIP VP-T49G IP phone; not applicable to SIP-T19(P) E2/W52P/W56P/W60 IP phones)	Account->Advanced->Number of line key (only appear when the parameter "features.auto_linekeys.enable" is set to 1)
	SimultaneousOutgoingNum = 11 (only applicable to W60 DECT IP phones)	Account->Advanced->Number of simultaneous outgoing calls
	number_of_simultaneous_outgoing_calls = 2 (only applicable to W52P/W56P DECT IP phones)	Account->Advanced->Number of simultaneous outgoing calls
[ Account-Assign ] (only applicable to W52P/W56P/W60 DECT IP phones)	incoming-lines = 0	Account->Number Assignment->Incoming lines
	outgoing-lines = 0	Account->Number Assignment->Outgoing lines
[ Account-Handsetname ] (only applicable to W52P/W56P/W60	Handsetname = 1	Account->Handset Name

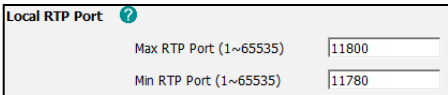
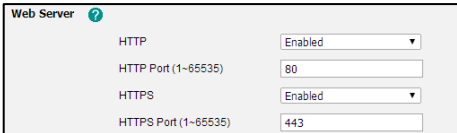

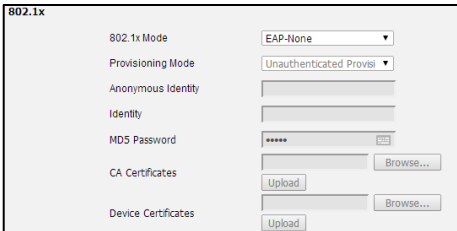

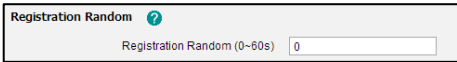

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
DECT IP phones)		
[ Network ]	network-basic = 0	Network->Basic (the whole page)
	network-pcport = 0 (not applicable to CP860/CP920/CP960/W52P/W56P/W60 IP phones)	Network->PC Port (the whole page)
	network-nat = 2 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	Network->NAT (the whole page)
	network-advanced = 2 (0 for SIP VP-T49G/W52P/W56P/W60 IP phones)	Network->Advanced (the whole page)
	network-wifi = 0 (only applicable to SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP920 IP phones)	Network->Wi-Fi (the whole page)
	network-diagnosis = 0 (only applicable to IP phones running firmware 83 or later)	Network->Diagnostics (the whole page)
	shotlevel = 2 (only applicable to SIP-T58V/T58A/T56A IP phones)	
	ipaddress-mode = 0	Network->Basic->Internet

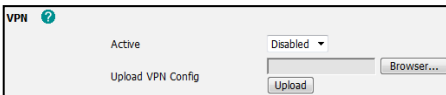
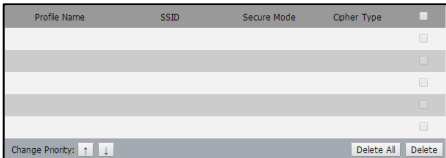
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Network-Basic ]	(2 for SIP VP-T49G/W52P/W56P/W60 IP phones)	Port->Mode(IPv4/IPv6)
	ipv4config = 0 (2 for SIP VP-T49G/W52P/W56P/W60 IP phones)	Network->Basic->IPv4 Config 
	ipv6config = 0 (2 for SIP VP-T49G/W52P/W56P/W60 IP phones)	Network->Basic->IPv6 Config 
	wan-ppoe = 2 (0 for SIP-T58V/T58A/T56A; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	Network->Basic->PPPoE Network->Basic->PPPoE->User Name Network->Basic->PPPoE->Password
[ Network-PCPort ]	pcport-active = 0 (not applicable to CP860/CP920/CP960/W52P/W56P/W60 IP phones)	Network->PC Port->PC Port Active 
[ Network-Nat ] (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	manual = 2	Network->NAT->Nat Manual 
	manual-switch = 2	Network->NAT->Nat Manual->Active
	manual-ip = 2	Network->NAT->Nat Manual->IP Address

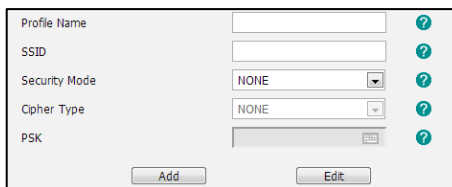
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Network-Nat ] (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	ICE = 2	Network->NAT->ICE 
	ICE-switch = 2	Network->NAT->ICE->Active
	STUN = 2	Network->NAT->STUN 
	STUN-switch = 2	Network->NAT->STUN->Active
	STUN-server = 2	Network->NAT->STUN->STUN Server
	STUN-port = 2	Network->NAT->STUN->STUN Port (1024~65000)
	TURN = 2	Network->NAT->TURN 
	TURN-switch = 2	Network->NAT->TURN->Active
	TURN-server = 2	Network->NAT->TURN->TURN Server
	TURN-port = 2	Network->NAT->TURN->TURN Port (1~65535)
	TURN-username = 2	Network->NAT->TURN->User Name
	TURN-password = 2	Network->NAT->TURN->Password
[ Network-Advanced ]	LLDP-items = 2	Network->Advanced->LLDP 
	CDP-items = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Network->Advanced->CDP 
	VLAN-items = 2	Network->Advanced->VLAN

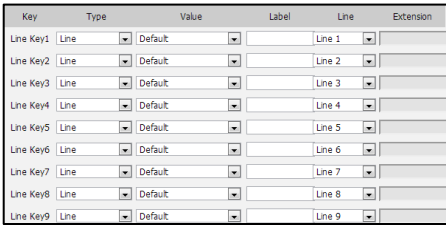


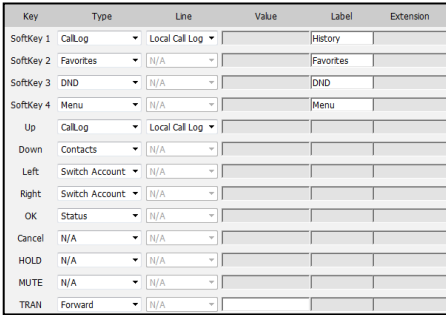
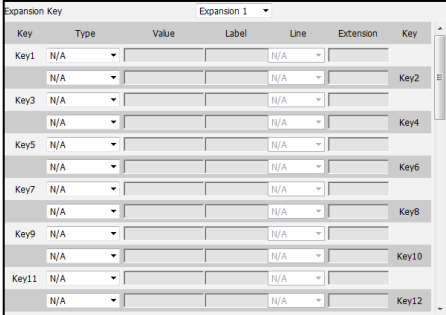
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Network-Advanced ]		
	NAT-items = 2 (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP860/CP920/CP960 IP phones)	Network->Advanced->NAT 
	port-link = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Network->Advanced->Port Link 
	voice-QoS = 2	Network->Advanced->Voice QoS W52P/W56P/CP860/CP920/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2:  SIP-T58V/T58A/T56A/SIP VP-T49G: 
	reserve-port = 0 (2 for CP960 IP phones; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	Network->Advanced->Reserved Port 

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Network-Advanced ]	local-RTP-port = 2 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G IP phones)	Network->Advanced->Local RTP Port 
	web-server = 2	Network->Advanced->Web Server 
	8021x = 2	Network->Advanced->802.1x SIP-T58V/T58A/T56A/SIP VP-T49G/CP960:  SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920/W52P/W56P/W60: 
	span-to-pc-port = 2 (not applicable to CP860/CP920/CP960/W52P/W56P/W60 IP phones)	Network->Advanced->Span to PC 
	reg-surge-prev = 2	Network->Advanced->Registration Random 
	ICMPv6_Status = 2 (only applicable to SIP-T58V/T58A/T56A/SIP)	Network->Advanced->ICMPv6 Status 


Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Network-Advanced ]	VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones)	
	open-VPN = 2	Network->Advanced->VPN 
[ Network-Wifi ]	wifi-active = 0 (2 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP920 IP phones)	Network->Wi-Fi->Wi-Fi Active
	wifi-list = 0 (2 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP920 IP phones)	Network->Wi-Fi 
	wifi-label = 0 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP920 IP phones)	Network->Wi-Fi->Profile Name
	wifi-ssid = 0 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP920 IP phones)	Network->Wi-Fi->SSID

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Network-Wifi ]	phones)	
	wifi-mode = 0 (only applicable to SIP-T54S/T52S/T48 G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP920 IP phones)	Network->Wi-Fi->Security Mode
	wifi-type = 0 (only applicable to SIP-T54S/T52S/T48 G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP920 IP phones)	Network->Wi-Fi->Cipher Type
	wifi-user-name = 0 (only applicable to SIP-T54S/T52S/T48 G/T48S/T46G/T46S/T42S/T41S/T29G/T27G IP phones)	Network->Wi-Fi->User Name
	wifi-psk = 0 (only applicable to SIP-T54S/T52S/T48 G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP920 IP phones)	Network->Wi-Fi->PSK
	wifi-edit = 2 (only applicable to SIP VP-T49G IP phones)	Network->Wi-Fi-> 
	wifi-status-detection-timeout = 0 (only applicable to SIP VP-T49G IP phones)	Network->Wi-Fi->Time-Out For Wi-Fi Status Detection

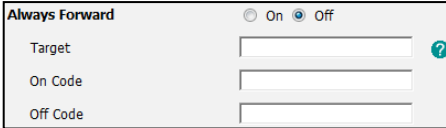

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
	phones)	
[ DSSKey ] (not applicable to W52P/W56P/W60 DECT IP phones)	linekey = 0 (not applicable to SIP-T19(P) E2/CP860/CP920 IP phones)	Dsskey->Line Key (the whole page(s) for all the line keys)
	programmablekey = 0 (not applicable to CP960 IP phones)	Dsskey->Programmable Key (the whole page)
	extkey = 0 (only applicable to SIP-T58V/T58A/T56 A/T54S/T52S/T48G/T48S/T46G/T46S/T29G/T27P/T27G IP phones)	Dsskey->Ext Key (the whole page)
[ LineKey ] (not applicable to SIP-T19(P) E2/CP860/CP920/W52P/W56P/W60 IP phones)	line-key = 0	Dsskey->Line Key (for all the line keys on each page)  
	Enable-Page-Tips = 0 (only applicable to SIP-T58V/T58A/T56 A/T54S/T52S/T46G/T46S/T29G/T42G/T42S/T41P/T41S/T27P/T27G/CP960 IP phones)	Dsskey->Line Key->Enable Page Tips
	Label-Length = 0 (only applicable to SIP VP-T49G/SIP-T54S/	Dsskey->Line Key->Label Length

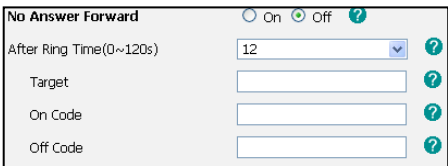
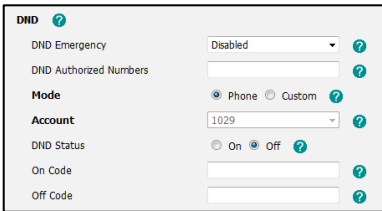
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
	T48G/T48S/T46G/T46S/T29G IP phones)	
	Label-Length-Short en = 0 (only applicable to SIP-T52S IP phones)	Dsskey->Line Key->Linekey length in short
[ ProgramKey ] (not applicable to CP960/W52P/W56P/W60 DECT IP phones)	programmable-key = 0	Dsskey->Programmable Key 
[ ExtKey ] (only applicable to SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T29G/T27P/T27G IP phones)	ext-key = 0	Dsskey->Ext Key 
[ Features ]	features-forward = 0	Features->Forward&DND (the whole page)
	features-general = 0	Features->General Information (the whole page)
	features-audio = 0	Features->Audio (the whole page)
	features-intercom = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->Intercom (the whole page)
	features-transfer = 0	Features->Transfer (the whole page)
	features-callpickup = 0	Features->Pick up & Park (Call Pickup) (the whole page)

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Features ]	features-remote = 2 (0 for SIP VP-T49G IP phones; not applicable to W52P/W56P/W60 DECT IP phones)	Features->Remote Control (the whole page)
	features-phonelock = 0	Features->Phone Lock (the whole page)
	features-acd = 0 (0 for SIP VP-T49G IP phones; not applicable to CP960/W52P/W56P/W60 IP phones)	Features->ACD (the whole page)
	features-sms = 0 (not applicable to SIP-T58V/T58A/T56A/CP960/W52P/W56P/W60 IP phones)	Features->SMS (the whole page)
	features-actionurl = 2 (0 for SIP VP-T49G IP phones; not applicable to W52P/W56P/W60 DECT IP phones)	Features->Action URL (the whole page)
	features-bluetooth = 0 (only applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP920 IP phones)	Features->Bluetooth (the whole page)
	features-powered = 0	Features->Power LED (the whole page)

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Features ]	(not applicable to CP860/CP920 IP phones)	
	features-notifypop = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->Notification Popups (the whole page)
	features-doorphone = 0 (only applicable to SIP-T58V/T58A/T56 A IP phones)	Features->Door Phone (the whole page)
[ Forward&DND ]	head-forward = 0	Features->Forward&DND-> Forward 
	forward-emergency = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->Forward&DND->Forward ->Forward Emergency
	forward-authorized-numbers = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->Forward&DND->Forward ->Forward Authorized Numbers
	forward-mode = 0 (not applicable to SIP-T19(P) E2/CP860/CP920/CP960/W52P/W56P/W60 IP phones)	Features->Forward&DND->Forward ->Mode
	forward-account = 01 (0 for W52P, W56P and W60 IP phones; not applicable to SIP-T19(P) E2/CP860/CP920 IP)	Features->Forward&DND->Forward ->Account



Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Forward&DND ]	phones)	
	always-forward = 0	Features->Forward&DND->Always Forward 
	always-forward-enabled = 0	Features->Forward&DND->Forward->Always Forward->On/Off
	always-forward-target = 0	Features->Forward&DND->Forward->Always Forward->Target
	always-forward-On Code = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->Always Forward->On Code
	always-forward-Off Code = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->Always Forward->Off Code
	busy-forward = 0	Features->Forward&DND->Busy Forward 
	busy-forward-enabled = 0	Features->Forward&DND->Forward->Busy Forward->On/Off
	busy-forward-target = 0	Features->Forward&DND->Forward->Busy Forward->Target
	busy-forward-On Code = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->Busy Forward->On Code
	busy-forward-Off Code = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->Busy Forward->Off Code
	NoAnswer-forward	Features->Forward&DND->No Answer

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Forward&DND ]	= 0	Forward 
	NoAnswer-forward-enabled = 0	Features->Forward&DND->Forward->No Answer Forward->On/Off
	NoAnswer-forward-ringtimes = 0	Features->Forward&DND->Forward->No Answer Forward->After Ring Time (0~120s)
	NoAnswer-forward-target = 0	Features->Forward&DND->Forward->No Answer Forward->Target
	NoAnswer-forward-OnCode = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->No Answer Forward->On Code
	NoAnswer-forward-OffCode = 0 (for neutral firmware version only)	Features->Forward&DND->Forward->No Answer Forward->Off Code
	DND = 0	Features->Forward&DND->DND 
	DND-Emergency = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->Forward&DND->DND->DND Emergency
	DND-Authorized-Numbers = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->Forward&DND->DND->DND Authorized Numbers

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Forward&DND ]	DND-mode = 0 (01 for SIP VP-T49G/T58V/T58A/T56A IP phones; not applicable to SIP-T19(P) E2/CP860/CP920/CP960 IP phones)	Features->Forward&DND->DND->Mode
	DND-account = 0 (01 for SIP VP-T49G/W52P/W56P/W60/T58V/T58A/T56A IP phones; not applicable to SIP-T19(P) E2/CP860/CP920 IP phones)	Features->Forward&DND->DND->Account
	DND-Status = 0 (01 for SIP VP-T49G/W52P/W56P/W60/T58V/T58A/T56A IP phones)	Features->Forward&DND->DND->DND Status
	DND-OnCode = 0 (01 for SIP VP-T49G/W52P/W56P/W60/T58V/T58A/T56A IP phones; for neutral firmware version only)	Features->Forward&DND->DND->On Code
	DND-OffCode = 0 (01 for SIP VP-T49G/W52P/W56P/W60/T58V/T58A/T56A IP phones; for neutral firmware version only)	Features->Forward&DND->DND->Off Code
[ General-Informat	call_waiting = 0	Features->General Information->Call Waiting

General-Information ]

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ General-Information ]	0	Code When DND
	call_completion = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->Call Completion
	TimeOut-for-DialNow = 0	Features->General Information->Time Out for Dial Now Rule
	RFC-2543-Hold = 2	Features->General Information->RFC 2543 Hold
	use-outbound-in-dialog = 2	Features->General Information->Use Outbound Proxy In Dialog
	IsDeal-180 = 2	Features->General Information->180 Ring Workaround
	logon-wizard = 2 (not applicable to CP860/CP920/W52P/W56P/W60 IP phones)	Features->General Information->Logon Wizard
	PswPrefix = 0 (2 for SIP VP-T49G/T58V/T58A/T56A IP phones; not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->PswPrefix
	PswLength = 0 (2 for SIP VP-T49G/T58V/T58A/T56A IP phones; not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->PswLength
	PswDial = 0 (2 for SIP VP-T49G/T58V/T58A/T56A IP phones; not applicable to	Features->General Information->PswDial

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ General-Information ]	W52P/W56P/W60 DECT IP phones)	
	SaveCallHistory = 2	Features->General Information->Save Call Log
	SuppressDTMFDisplay = 1	Features->General Information->Suppress DTMF Display
	SuppressDTMFDisplayDelay = 1	Features->General Information->Suppress DTMF Display Delay
	play-local-DTMF-tone = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->Play Local DTMF Tone
	DTMFRepetition = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->DTMF Repetition
	MulticastCodec = 0 (1 for W60 DECT IP phones; not applicable to SIP-T19(P) E2 IP phones)	Features->General Information->Multicast Codec
	PlayHoldTone = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->Play Hold Tone
	PlayHoldToneDelay = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->Play Hold Tone Delay
	PlayHoldToneInterval = 0 (only applicable to IP phones running	Features->General Information->Hold Tone Interval(second)

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ General-Information ]	firmware 82 or later)	
	PlayHeldTone = 0 (only applicable to IP phones running firmware 82 or later)	Features->General Information->Play Held Tone
	PlayHeldToneDelay = 0 (only applicable to IP phones running firmware 82 or later)	Features->General Information->Play Held Tone Delay
	PlayHeldToneInterval = 0 (only applicable to IP phones running firmware 82 or later)	Features->General Information->Held Tone Interval(second)
	AllowMute = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->Allow Mute
	DualHeadset = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones; not applicable to CP860/CP920/CP960/W52P/W56P/W60 IP phones)	Features->General Information->Dual Headset
	AutoAnswerDelay = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->Auto Answer Delay(1~4s)
	enable-auto-answer-tone = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->Enable Auto Answer Tone

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ General-Information ]	HeadsetPrior = 0 (not applicable to CP860/CP920/CP960/W52P/W56P/W60 IP phones)	Features->General Information->Headset Prior
	DTMFReplaceTran = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->DTMF Replace Tran
	TranSendDTMF = 1 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->Tran Send DTMF
	SendPoundKey = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->Send Pound Key
	FwdInternational = 0	Features->General Information->Fwd International
	Diversion-History-Info = 1	Features->General Information->Diversion/History-Info
	allow-trans-exist-call = 0 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960/W52P/W56P/W60 IP phones)	Features->General Information->Allow Trans Exist Call
	blf-led-mode = 0 (not applicable to SIP VP-T49G/SIP-T19(P)E2/CP860/CP920/CP	Features->General Information->BLF LED Mode

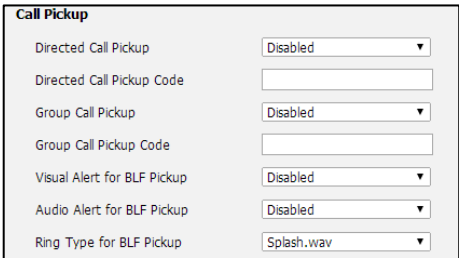
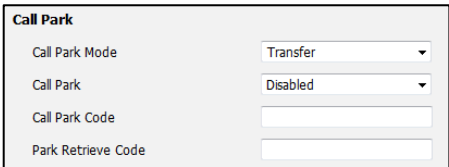


Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ General-Information ]	960/W52P/W56P/W60 IP phones)	
	ReLogOffTime = 2	Features->General Information->Auto Logout Time(1~1000min)
	call-number-filter = 0	Features->General Information->Call Number Filter
	Use_Logo = 0 (not applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G/CP960/W52P/W56P/W60 IP phones)	Features->General Information->Use Logo
	upload_logo = 0 (not applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G/CP960/W52P/W56P/W60 IP phones)	Features->General Information->Upload Logo
	sip-trust-control = 2	Features->General Information->Accept SIP Trust Server Only
	allow-IP-call = 0	SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920/W52P/W56P/W60: Features->General Information->Allow IP Call SIP VP-T49G: Account->SIP IP Call->Allow IP Call
	IP-direct-auto-answer = 0	SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40

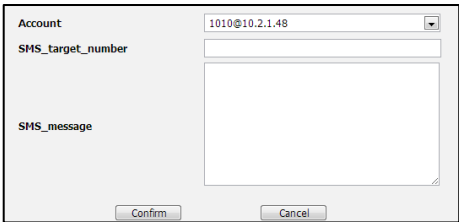
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ General-Information ]	(not applicable to W52P/W56P/W60 DECT IP phones)	G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Features->General Information->IP Direct Auto Answer SIP VP-T49G: Account->SIP IP Call->IP Direct Auto Answer
	calllog-show-num = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->Call List Show Number
	voicemail-tone = 0	Features->General Information->Voice Mail Tone
	DHCP-hostname = 0	Features->General Information->DHCP Hostname
	reboot-in-talking = 0	Features->General Information->Reboot In Talking
	Hide-Feature-Access-Codes = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->Hide Feature Access Codes
	display-method-on-dialing = 2	Features->General Information->Display Method on Dialing
	cloud-active = 0 (only applicable to CP860/CP920 IP phones)	Features->General Information->Cloud Enable
	auto-linekeys = 1 (not applicable to SIP-T19(P) E2/CP860/CP920/W52P/W56P/W60 IP phones)	Features->General Information->Auto Linekeys
	auto-blif-list = 2 (not applicable to	Features->General Information->Auto

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ General-Information ]	SIP-T19(P) E2/CP920/CP860/W52P/W56P/W60 IP phones)	
	end-call-onhook = 0 (only applicable to W52P/W56P/W60 DECT IP phones)	Features->General Information->End Call On Hook
	number-of-active-handsets = 0 (only applicable for W60 DECT IP phones)	Features->General Information->Max Number of Registered Handset
[ Features-Audio]	call-waiting-tone = 0	Features->Audio->Call Waiting Tone
	button-sound = 0 (not applicable to W52P/W56P/W60/IP phones)	Features->Audio->Key Tone
	send-sound = 0 (not applicable to W52P/W56P/W60 IP phones)	Features->Audio->Send Tone
	redial_tone = 0 (not applicable to W52P/W56P/W60 IP phones)	Features->Audio->Redial Tone
	headset-send-volume = 1 (not applicable to CP860/CP920/CP960/W52P/W56P/W60 IP phones)	Features->Audio->Headset Send Volume (-50~50)
	handset-send-volume = 1 (not applicable to	Features->Audio->Handset Send Volume (-50~50)

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Features-Audio]	CP860/CP920/CP960/W52P/W56P/W60 IP phones)	
	handfree-send-volume = 1 (not applicable to W52P/W56P/W60/IP phones)	Features->Audio->Handfree Send Volume (-50~50)
	Ringer_Dev = 0 (not applicable to CP860/CP920 IP phones)	Features->Audio->Ringer Device for Headset
	touch-tone= 2	Features->Audio->Touch Tone
[ Features-Intercom ] (not applicable to W52P/W56P/W60 DECT IP phones)	allow-intercom = 0	T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Features->Intercom->Allow Intercom SIP-T58V/T58A/T56A/SIP VP-T49G: Features->Intercom->Accept Intercom
	intercom-mute = 0	Features->Intercom->Intercom Mute
	intercom-tone = 0	Features->Intercom->Intercom Tone
	intercom-barge = 0	Features->Intercom->Intercom Barge
	push-to-talk-mode = 0 (only applicable to IP phones running firmware 82 or later)	Features->Intercom->Push To Talk Mode
[ Features-Transfer ]	semi-attend-transfer = 0	Features->Transfer->Semi-Attended Transfer
	blind-transfer-onhook = 0	Features->Transfer->Blind Transfer On Hook
	Semi-Attend-Transfer-OnHook = 0	Features->Transfer->Attended Transfer On Hook
	transfer-on-conference-hang-up = 0 (not applicable to	Features->Transfer->Transfer on Conference Hang up

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Features-Transfer ]	W52P/W56P/W60 DECT IP phones)	
	TransferModeViaDsskey = 0 (not applicable to SIP-T19(P) E2/CP860/CP920/W52P/W56P/W60 IP phones)	Features->Transfer->Transfer Mode Via Dsskey
[ Features-Callpickup ]	Call-Pickup = 0 (not applicable to W52P/W56P/W60 IP phones)	Features->Pick up & Park (Call Pickup)->Call Pickup 
	Call-Park = 0 (not applicable to SIP VP-T49G IP phones)	Features->Pick up & Park (Call Pickup)->Call Park 
[ Features-Remote ] (not applicable to W52P/W56P/W60 DECT IP phones)	pushxml-server-address = 2 (not applicable to CP960 IP phones)	Features->Remote Control->Push XML Server IP Address
	pushxml-user-name = 2 (only applicable to IP phones running firmware 83 or later)	Features->Remote Control->User Name
	pushxml-password = 2 (only applicable to IP phones running	Features->Remote Control->Password

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Features-Remote ] (not applicable to W52P/W56P/W60 DECT IP phones)	firmware 83 or later)	
	XMLSIPNotify = 2 (not applicable to CP960 IP phones)	Features->Remote Control->SIP Notify
	XMLBlockInCalling = 2 (1 for SIP VP-T49G/CP860/CP920 IP phones, not applicable to CP960 IP phones)	Features->Remote Control->Block XML in Calling
	ActionURLLimitIP = 2	Features->Remote Control->Action URI Allow IP List
	CSTAControl = 2 (not applicable to SIP VP-T49G/CP860/CP920 IP phones)	Features->Remote Control->CSTA Control
[ Features-Lock ] (not applicable to W52P/W56P/W60 DECT IP phones)	Lock_Enable = 0 (2 for SIP VP-T49G/T58V/T58A/T56A IP phones)	Features->Phone Lock->Phone Lock Enable
	keyboard_lock = 0 (not applicable to SIP-T58V/T58A/T56A/T48G/T48S IP phones)	Features->Phone Lock->Phone Lock Type
	Phone_Unlock_PIN = 0 (2 for SIP VP-T49G IP phones)	Features->Phone Lock->Phone Unlock PIN(0~15 Digit)
	Phone_lock_time_out = 0 (2 for SIP VP-T49G IP phones)	Features->Phone Lock->Phone Lock Time Out(0~3600s)
	emergency_setting	Features->Phone Lock->Emergency


Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
	= 0 (2 for SIP VP-T49G/W52P/W56P/W60 IP phones)	
[ Features-ACD ] (not applicable to CP960/W52P/W56P/W60 IP phones)	ACD-auto-available = 2	Features->ACD->ACD->ACD Auto Available
	ACD-auto-available-timer = 2	Features->ACD->ACD->ACD Auto Available Timer(0~120s)
[ Features-SMS ] (only applicable to SIP VP-T49G IP phones)	send-sms = 0	Features->SMS-> 
[ Features-ActionURL ] (not applicable to W52P/W56P/W60 DECT IP phones)	setup-complete = 2	Features->Action URL->Setup Completed
	log-on = 2	Features->Action URL->Registered
	log-off = 2	Features->Action URL->Unregistered
	register-fail = 2	Features->Action URL->Register Failed
	off-hook = 2	Features->Action URL->Off Hook
	on-hook = 2	Features->Action URL->On Hook
	incoming-call = 2	Features->Action URL->Incoming Call
	outgoing-call = 2	Features->Action URL->Outgoing Call
	call-establish = 2	Features->Action URL->Established
	Call-Terminated = 2	Features->Action URL->Terminated
	DND-On = 2	Features->Action URL->Open DND
	DND-Off = 2	Features->Action URL->Close DND
	Forward-On-Code = 2	Features->Action URL->Open Always Forward
	Forward-Off-Code = 2	Features->Action URL->Close Always Forward

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Features-ActionURL ] (not applicable to W52P/W56P/W60 DECT IP phones)	Busy-Forward-On = 2	Features->Action URL->Open Busy Forward
	Busy-Forward-Off = 2	Features->Action URL->Close Busy Forward
	No-Answer-Forward-On = 2	Features->Action URL->Open NoAnswer Forward
	No-Answer-Forward-Off = 2	Features->Action URL->Close NoAnswer Forward
	TransferCall = 2	Features->Action URL->Transfer Call
	Blind-transfer-call = 2	Features->Action URL->Blind Transfer
	Attended-transfer-call = 2	Features->Action URL->Attended Transfer
	Hold = 2	Features->Action URL->Hold
	Unhold = 2	Features->Action URL->UnHold
	Mute = 2	Features->Action URL->Mute
	Unmute = 2	Features->Action URL->UnMute
	Missed-call = 2	Features->Action URL->Missed Call
	IPChange = 2	Features->Action URL->IP Changed
	IdletoBusy = 2	Features->Action URL->Idle To Busy
	BusytoIdle = 2	Features->Action URL->Busy To Idle
	RejectIncomingCall = 2	Features->Action URL->Reject Incoming Call
	AnswerNewInCall = 2	Features->Action URL->Answer New-In Call
	TransferFailed = 2	Features->Action URL->Transfer Failed
	TransferFinished = 2	Features->Action URL->Transfer Finished
	ForwardIncomingCall = 2	Features->Action URL->Forward Incoming Call
	UCServer = 2	Features->Action URL->UCServer (only appear when the parameter "action_url.is_ume" is set to 1)

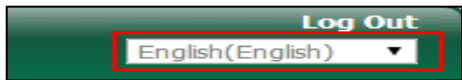


Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Features-ActionURL ] (not applicable to W52P/W56P/W60 DECT IP phones)	ReportIP = 2	Features->Action URL->Report IP (only appear when the parameter "action_url.is_ume" is set to 1)
	AutopFinish = 2	Features->Action URL->Autop Finish
	OpenCallWait = 2	Features->Action URL->Open Call Waiting
	CloseCallWait = 2	Features->Action URL->Close Call Waiting
	Headset = 2 (not applicable to CP860/CP920/CP960 IP phones)	Features->Action URL->Headset
	Handfree = 2 (not applicable to CP860/CP920 IP phones)	Features->Action URL->Handfree
	CancelCallOut = 2	Features->Action URL->Cancel Call Out
	RemoteBusy = 2	Features->Action URL->Remote Busy
	CallRemoteCanceled = 2	Features->Action URL->Call Remote Canceled
	PeripheralInformation = 2 (only applicable to IP phones running firmware 83 or later)	Features->Action URL->Peripheral Information
[ Features-Bluetooth ]	bluetooth-active = 0 (only applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP960/CP920 IP phones)	Features->Bluetooth->Bluetooth Active
	common-power-light-on = 0	Features->Power LED->Common Power Light On
	ring-power-light-fla	Features->Power LED->Ringing Power Light

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Features-PowerLED ] (not applicable to CP860/CP920/CP960 IP phones)	sh = 0	Flash
	mail-power-light-flash = 0	Features->Power LED->Voice/Text Mail Power Light Flash
	miss-call-light-flash = 0 (only applicable to W52P/W56P DECT IP phones)	Features->Power LED->Miss Call Power Light Flash
	mute-power-light-flash = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->Power LED->Mute Power Light Flash
	hold-power-light-flash = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->Power LED->Hold/Held Power Light Flash
	talk-power-light-flash = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Features->Power LED->Talk/Dial Power Light On
	misscall-power-light-flash = 0 (not applicable to SIP VP-T49G/CP860/CP920/W52P/W56P IP phones)	Features->Power LED->MissCall Power Light Flash
[ Features-NotifyPop ] (not applicable to W52P/W56P/W60 DECT IP phones)	Display-Voice-Mail-Popup = 0	Features->Notification Popups->Display Voice Mail Popup
	Display-Missed-Call-Popup = 0	Features->Notification Popups->Display Missed Call Popup
	Display-Forward-Call-Popup = 0	Features->Notification Popups->Display Forward Call Popup


Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
	Display-Text-Mess age-Popup = 0  (not applicable to SIP-T58V/T58A/T56 A/CP960/CP920 IP phones)	Features->Notification Popups->Display Text Message Popup
[ Features-Doorph one ]  (only applicable to SIP-T58V/T58A/T5 6A IP phones)	switch_list = 0	Features->Door Phone->Door Phone List
	device_model = 0	Features->Door Phone->Device Type
	display_name = 0	Features->Door Phone->Display Name
	phone_number = 0	Features->Door Phone->Phone Number
	unlock_pin = 0	Features->Door Phone->Unlock PIN
	full_screen = 0	Features->Door Phone->Full Screen
	send_audio = 0	Features->Door Phone->Send Audio
	send_video = 0 (not applicable to SIP-T56A IP phones)	Features->Door Phone->Send Video
	video_stream_httpur l = 0	Features->Door Phone->IP CAM
	autovideoview_enab le = 0	Features->Door Phone->Auto View In Call
	video_preview_enab le = 0	Features->Door Phone->Video Preview
	auto_preview_enabl e = 0	Features->Door Phone->Auto Preview
	authentication = 0	Features->Door Phone->Authentication 
	auth_username = 0	Features->Door Phone->Authentication->User Name
	auth_password = 0	Features->Door Phone->Authentication->Password
	settings-preference = 0	Settings->Preference (the whole page)

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings ]	settings-datetime = 0	Settings->Time & Date (the whole page)
	settings-caldisplay = 0	Settings->Call Display (the whole page)
	settings-upgrade = 0	Settings->Upgrade (the whole page)
	settings-autop = 2 (0 for SIP VP-T49G/ W52P/W56P/W60 IP phones)	Settings->Auto Provision (the whole page)
	settings-config = 0	Settings->Configuration (the whole page)
	settings-dialplan = 2 (0 for SIP VP-T49G/ W52P/W56P/W60 IP phones)	Settings->Dial Plan (the whole page)
	settings-voice = 2 (0 for SIP VP-T49G/ W52P/W56P/W60 IP phones)	Settings->Voice (the whole page)
	settings-ring = 2 (1 for SIP VP-T49G IP phones; not applicable to W52P/W56P/W60 DECT IP phones)	Settings->Ring (the whole page)
	settings-tones = 2 (0 for SIP VP-T49G/ W52P/W56P/W60 IP phones)	Settings->Tones (the whole page)
	settings-softkey = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Settings->Softkey Layout (the whole page)
	settings-tr069 = 2	Settings->TR069 (the whole page)

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings ]	(0 for W60 DECT IP phones)	
	settings-voicemonitoring = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Settings->Voice Monitoring (the whole page)
	settings-sip = 2 (0 for SIP VP-T49G/W60 and 1 for W52P/W56P IP phones)	Settings->SIP (the whole page)
	settings-powersaving = 0 (only applicable to SIP-T19(2) E2 IP phones)	Settings->Power Saving (the whole page)
	settings-camera = 0 (only applicable to SIP VP-T49G IP phones)	Settings->Camera (the whole page)
	settings-video = 0 (only applicable to SIP-T58V/T58A/SIP VP-T49G IP phones)	Settings->Video (the whole page)
[ Settings-Preference ]	web-language = 0	<p>SIP-T58V/T58A/T56A/SIP VP-T49G: Settings-&gt;Preference-&gt;Language</p> <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/W52P/W56P/W60:</p> 
	live-dialpad = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Settings->Preference->Live Dialpad



Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Preference ]	inter-digit-time = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Settings->Preference->Inter Digit Time(1~14s)
	transparency = 0 (only applicable to SIP-T48G/T48S/T54S/T52S IP phones)	Settings->Preference->Transparency
	UnusedBackLight = 0 (only applicable to SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Settings->Preference->Backlight Inactive Level (Unused BackLight)
	backlight = 0 (only applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G/T27P/T27G/CP960 IP phones)	Settings->Preference->Backlight Active Level (Active Backlight Level)
	BacklightTime = 0 (not applicable to SIP-T19(P) E2 and W52P/W56P/W60 IP phones)	Settings->Preference->Backlight Time(seconds)
	contrast_ctrl = 0 (only applicable to SIP-T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920/CP960 IP phones)	Settings->Preference->Contrast
	watchdog = 2	Settings->Preference->Watch Dog


Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Preference ]	ring_type_setting = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Settings->Preference->Ring Type Settings->Preference->Upload Ringtone
	Wallpaper = 0 (only applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G/CP960 IP phones)	SIP-T58V/T58A/T56A/SIP VP-T49G: Settings->Preference->Wallpaper Settings->Preference->Upload Wallpaper SIP-T48G/T48S: Settings->Preference->Wallpaper Settings->Preference->Upload Wallpaper(480*272) Settings->Preference->Wallpaper with DSSkey unfold T54S/T52S/T46G/T46S/T29G: Settings->Preference->Wallpaper Settings->Preference->Upload Wallpaper(480*272)(Upload Wallpaper(320*240))
	ExpWallpaper = 0 (only applicable to SIP-T58V/T58A/T56A/T54S/T52S IP phones)	Settings->Preference->Wallpaper for Expansion Modules
	screen-saver-wait-time = 0 (only applicable to SIP VP-T49G IP phones)	Settings->Preference->Screensaver Wait Time
	screen-saver-type = 0 (only applicable to SIP VP-T49G IP phones)	Settings->Preference->Screensaver Type Settings->Preference->Screensaver
	ScreenSaver = 0 (only applicable to SIP-T54S/T52S/T48S)	Settings->Preference->


Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Preference ]	G/T48S/T46G/T46S/T29G IP phones)	
	ScreenSaverWaitTime = 0 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Settings->Preference->Screensaver Wait Time
	ScreenSaverDisplayClock = 0 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Settings->Preference->Screensaver Display Clock
	ScreenSaverType = 0 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Settings->Preference->Screensaver Type
	ScreenSaverList = 0 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Settings->Preference->Screensaver
	ScreenSaverUpload = 0 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Settings->Preference->Upload Screensaver (only appear when the parameter "screensaver.type" is set to 1.)
	ScreenSaverXmlBrowserUrl = 0 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Settings->Preference->XML Browser URL




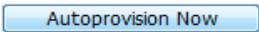

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Time&Date ]	DHCP-Time = 0	Settings->Time & Date->DHCP Time
	manual-time = 0	Settings->Time & Date->Manual Time
	time_zone = 0	Settings->Time & Date->Time Zone
	daylight-time = 0	Settings->Time & Date->Daylight Saving Time
	location = 0	Settings->Time & Date->Location
	time_type = 0	Settings->Time & Date->Fixed Type
	daylight_date = 0	Settings->Time & Date->Start Date Settings->Time & Date->End Date
	offset = 0	Settings->Time & Date->Offset(minutes)
	NTP_priority = 0	Settings->Time & Date->NTP by DHCP Priority
	prim_server = 0	SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920/W52P/W56P/W60: Settings->Time & Date->Primary Server SIP-T58V/T58A/T56A/SIP VP-T49G: Settings->Time & Date->Primary NTP Server
	sec_server = 0	SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920/W52P/W56P/W60: Settings->Time & Date->Secondary Server SIP-T58V/T58A/T56A/SIP VP-T49G: Settings->Time & Date->Secondary NTP Server
	update_interval = 0	SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/W52P/W56P/W60/CP860/CP920: Settings->Time & Date->Update Interval (15~86400s) SIP-T58V/T58A/T56A/SIP VP-T49G: Settings->Time &

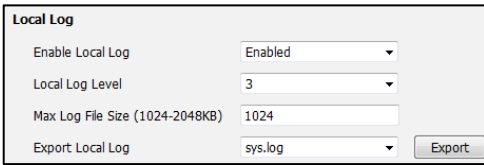
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Time&Date ]		Date->Synchronism(15~86400s)
	manual-time-setting gs = 0	Settings->Time & Date->Manual Time 
	time_format_setting = 0	Settings->Time & Date->Time Format
	date_format_setting = 0	Settings->Time & Date->Date Format
[ Settings-CallDisplay ]	Display-Contact-Photo = 0 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Settings->Call Display->Display Contact Photo
	Incoming-Call-Ringer-Animation = 0	Settings->Call Display->Display Called Party Information
	Call-Display-Method = 0	Settings->Call Display->Call Information Display Method
[ Settings-Upgrade ]	version_info = 0	Settings->Upgrade->Version 
	reset_to_factory = 2 (1 for SIP VP-T49G/W52P/W56P/W60 IP phones)	SIP-T58V/T58A/T56A/SIP VP-T49G: Settings->Upgrade->Reset to Factory Setting SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920/W52P/W56P/W60: Settings->Upgrade->Reset to factory
	reset_builtin_sdcard = 2 (only applicable to SIP-T58V/T58A/T56A IP phones)	Settings->Upgrade->Reset built-in SD card

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Upgrade ]	reset = 0 (2 for SIP VP-T49G/W60 IP phones)	Settings->Upgrade->Reset (Reset to Factory Setting)
	reset_local_settings = 0 (not applicable to SIP VP-T49G IP phones)	Settings->Upgrade->Reset local settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)
	reset_nonstatic_settings = 0 (not applicable to SIP VP-T49G IP phones)	Settings->Upgrade->Reset non-static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)
	reset_static_settings = 2 (not applicable to SIP VP-T49G IP phones)	Settings->Upgrade->Reset static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)
	reset_userdata = 0 (not applicable to SIP VP-T49G IP phones)	Settings->Upgrade->Reset userdata & local config (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)
	reset_local_config = 0 (only applicable to SIP VP-T49G/CP860/CP920 IP phones)	Settings->Upgrade->Reset Local Configuration (only appear when the parameter "auto_provision.custom.protect" is set to 1.)
	reboot_device = 0	Settings->Upgrade->Reboot
	upgrade_firmware = 0 (1 for SIP VP-T49G/W52P/W56P/W60 IP phones)	SIP-T58V/T58A/T56A/SIP VP-T49G: Settings->Upgrade->Upgrade  SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Upgrade ]		G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920/W52P/W56P/W60: Settings->Upgrade->Select And Upgrade Firmware 
	upgrade_handset_firmware = 1 (only applicable to W52P/W56P/W60 DECT IP phones)	Settings->Upgrade->Select and Upgrade Handset Firmware
[ Settings-AutoProvision ]	pnp-active = 2	Settings->Auto Provision->PNP Active
	dhcp-active = 2	Settings->Auto Provision->DHCP Active
	custom-option = 2	For IP phones running firmware 82 or prior: Settings->Auto Provision->Custom Option(128~254) For IP phones running firmware 83 or later: Settings->Auto Provision->IPv4 Custom Option
	DHCP-Option-Value = 2	For IP phones running firmware 82 or prior: Settings->Auto Provision->DHCP Option Value For IP phones running firmware 83 or later: Settings->Auto Provision->IPv4 DHCP Option Value
	custom-option-ipv6 = 0 (only applicable to IP phones running firmware 83 or later)	Settings->Auto Provision->IPv6 Custom Option
	server-URL = 2	Settings->Auto Provision->Server URL
	account = 2	Settings->Auto Provision->User Name
	password = 2	Settings->Auto Provision->Password
	attempt-expired-time = 2	Settings->Auto Provision->Attempt Expired Time(s)

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-AutoProvision ]	common-AES-key = 2	Settings->Auto Provision->Common AES Key
	MAC-Oriented-AES-key = 2	Settings->Auto Provision->MAC-Oriented AES Key
	zero_active = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Settings->Auto Provision->Zero Active
	wait_time = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Settings->Auto Provision->Wait Time(1~100s)
	poweron-active = 2	Settings->Auto Provision->Power On
	repeatedly-active = 2	Settings->Auto Provision->Repeatedly
	repeat-interval = 2	Settings->Auto Provision->Interval(Minutes)
	weekly-active = 2	Settings->Auto Provision->Weekly
	weekly-upgrade-interval = 2 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP860/CP920/CP960 IP phones)	Settings->Auto Provision->Weekly Upgrade Interval(0~12week)
	inactivity-time-expire = 2 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP860/CP920/CP960 IP phones)	Settings->Auto Provision->Inactivity Time Expire(0~120min)
	autop-time = 2	Settings->Auto Provision->Time
	day-of-week = 2	Settings->Auto Provision->Day of Week

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-AutoProvision ]		
	flexible-switch = 2 (not applicable to SIP VP-T49G IP phones)	Settings->Auto Provision->Flexible Auto Provision
	flexible-interval = 2 (not applicable to SIP VP-T49G IP phones)	Settings->Auto Provision->Flexible Interval Days
	flexible-autoptime = 2 (not applicable to SIP VP-T49G IP phones)	Settings->Auto Provision->Flexible Time
	btn-autop-now = 2	Settings->Auto Provision-> 
[ Settings-Config ]	opt-configfile = 0 (1 for SIP VP-T49G IP phones)	Settings->Configuration->Export Import Configuration (Export or Import Configuration) 
	opt-factory-configfile = 0 (2 for SIP VP-T49G IP phones)	Settings->Configuration->Import Factory Configuration (for SIP VP-T49G: only appear when the parameter "features.custom_factory_config.enable" is set to 1; for other IP phones: only appear when the parameter "static.features.custom_factory_config.enable" is set to 1)
	export-cfg-config-file = 0 (2 for SIP VP-T49G IP phones)	Settings->Configuration->Export CFG Configuration File



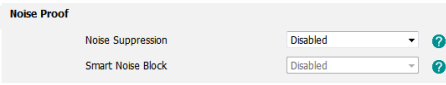
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Config ]	IP phones)	
	import-cfg-config-file = 0 (2 for SIP VP-T49G IP phones)	Settings->Configuration->Import CFG Configuration File
	pcap_trace = 0 (1 for SIP VP-T49G IP phones)	Settings->Configuration->Pcap Feature Settings->Configuration->Packet Capture Count (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) Settings->Configuration->Packet Capture Clip Bytes (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) Settings->Configuration->Pcap Filter Type (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) Settings->Configuration->Packet Filter String (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)
	syslog = 1 (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->Export System Log
	SystemLogLevel = 2 (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->System Log Level
	Local_Logging = 0 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->Local Log 

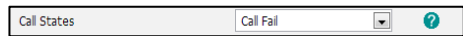
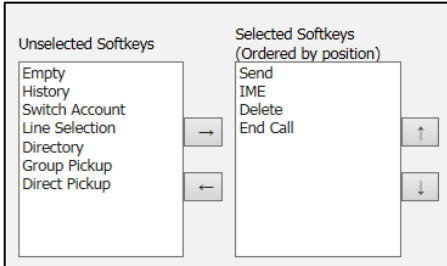
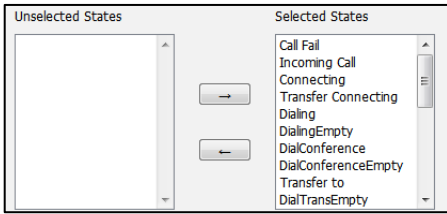
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Config ]	Local_Log_Switch = 0  (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->Local Log->Enable Local Log
	Local_Log_Level = 0  (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->Local Log->Local Log Level
	Local_Log_Max_File_Size = 0  (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	For T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T29G/T27P/T27G/CP860/CP920 :  Settings->Configuration->Local Logging->Max Log File Size (1024-2048KB)  For SIP-T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2:  Settings->Configuration->Local Logging->Max Log File Size (256-1024KB)
	Local_Log_Export = 0  (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->Local Log->Export Local Log
	Syslog_Switch = 2  (0 for W60 DECT IP phones; not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->Syslog->Enable Syslog



Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Config ]	Syslog_Server = 2 (0 for W60 DECT IP phones; not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->Syslog->Syslog Server Settings->Configuration->Syslog->Syslog Server->Port
	Syslog_Transport_Type = 2 (0 for W60 DECT IP phones; not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->Syslog->Syslog Transport Type
	Syslog_Level = 2 (0 for W60 DECT IP phones; not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->Syslog->Syslog Level
	Syslog_Facility = 2 (0 for W60 DECT IP phones; not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->Syslog->Syslog Facility
	Syslog_Prepended_Mac = 2 (0 for W60 DECT IP phones; not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Settings->Configuration->Syslog->Syslog Prepend MAC

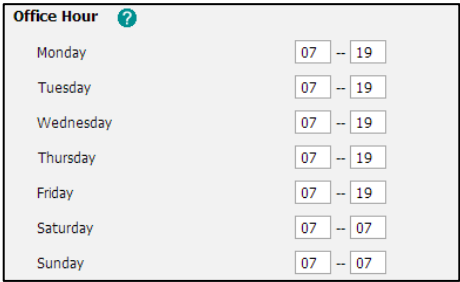
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Config ]	A/SIP VP-T49G/CP960 IP phones)	
	ExportAllDiagnostic Files = 2 (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP860/CP920/CP960 IP phones)	Settings->Configuration->Export All Diagnostic Files
[ Settings-DialPlan ]	replace-rule = 0	Settings->Dial Plan->Replace Rule (the whole page)
	dial-now = 0	Settings->Dial Plan->Dial Now (the whole page)
	area-code = 0	Settings->Dial Plan->Area Code (the whole page)
	block-out = 0	Settings->Dial Plan->Block Out (the whole page)
	replace-rule-control = 0	Settings->Dial Plan->Replace Rule->Prefix Settings->Dial Plan->Replace Rule->Replace Settings->Dial Plan->Replace Rule->Account (not applicable to SIP-T19(P) E2/CP860/CP920 IP phones)
	dial-now-control = 0	Settings->Dial Plan->Dial Now->Rule Settings->Dial Plan->Dial Now->Account (not applicable to SIP-T19(P) E2/CP860/CP920 IP phones)
	area-code-control = 0	Settings->Dial Plan->Area Code->Code Settings->Dial Plan->Area Code->Min Length (1-15) Settings->Dial Plan->Area Code->Max Length (1-15) Settings->Dial Plan->Area Code->Account (not applicable to SIP-T19(P) E2/CP860/CP920 IP phones)

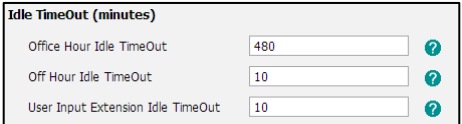
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
	block-out-control = 0	Settings->Dial Plan->Block Out->BlockOut NumberX(X=1,2,...,10) Settings->Dial Plan->Block Out->Account (not applicable to SIP-T19(P) E2/CP860/CP920 IP phones)
[ Settings-Voice ]	echo-cancellation = 2 (0 for SIP VP-T49G/W52P/W56P/W60 IP phones)	Settings->Voice->Echo Cancellation 
	jitter-buffer = 2 (0 for SIP VP-T49G/W52P/W56P/W60 IP phones)	Settings->Voice->JITTER BUFFER 
	noise-proof = 2 (only applicable for SIP-T58V/T58A/T56A/CP920/CP960 IP phones)	Settings->Voice->Noise Proof 
[ Settings-Ring ] (not applicable to W52P/W56P/W60 DECT IP phones)	personal-ring = 2 (1 for SIP VP-T49G IP phones)	Settings->Ring->Internal Ringer Text Settings->Ring->Internal Ringer File
[ Settings-Tones ]	tone-items = 2 (0 for SIP VP-T49G/W52P/W56P/W60 IP phones)	Settings->Tones->Select Country Settings->Tones->Dial Settings->Tones->Secondary Dial (not applicable to SIP VP-T49G/W56P/W52P/W60 IP phones) Settings->Tones->Ring Back Settings->Tones->Busy Settings->Tones->Congestion (not applicable to W56P/W52P/W60 DECT IP phones) Settings->Tones->Call Waiting Settings->Tones->Dial Recall (not applicable to W56P/W52P/W60 DECT IP phones)

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Tones ]		<p>Settings-&gt;Tones-&gt;Info (not applicable to W56P/W52P/W60 DECT IP phones)</p> <p>Settings-&gt;Tones-&gt;Stutter (not applicable to W56P/W52P/W60 DECT IP phones)</p> <p>Settings-&gt;Tones-&gt;Message (not applicable to SIP-T58V/T58A/T56A/W56P/W52P/W60 IP phones)</p> <p>Settings-&gt;Tones-&gt;Auto Answer (not applicable to W52P/W56P/W60 DECT IP phones)</p>
	tone-country = 2 (not applicable to SIP VP-T49G/CP860/CP 920 IP phones)	Settings->Tones->Select Country
[ Softkey ] (not applicable to W52P/W56P/W60 DECT IP phones)	Custom_SoftKey = 2	Settings->Softkey Layout->Custom Softkey
	SoftKey_Type = 2	Settings->Softkey Layout->Call States 
	SoftKey_Select = 2	Settings->Softkey Layout-> 
	Custom_SoftKey_List=2 (only applicable to IP phones running firmware 83 or later)	Settings->Softkey Layout-> 
[ TR069 ]	head = 2	Settings->TR069-> <b>TR069</b> ?
	EnableTR069 = 2	Settings->TR069->Enable TR069
	ACSUsername = 2	Settings->TR069->ACS Username

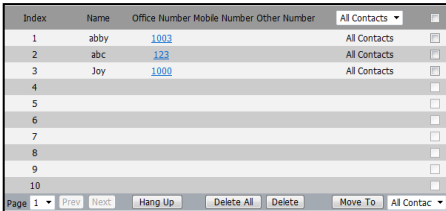
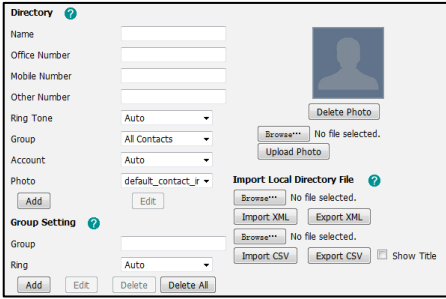
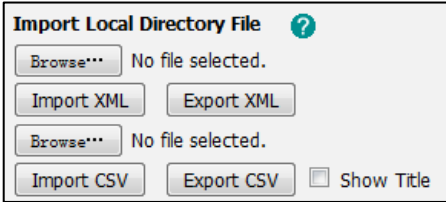


Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ TR069 ]	ACSPassword = 2	Settings->TR069->ACS Password
	ACSURL = 2	Settings->TR069->ACS URL
	EnablePeriodicInform = 2	Settings->TR069->Enable Periodic Inform
	PeriodicInformInterval = 2	Settings->TR069->Periodic Inform Interval (seconds)
	RequestUsername = 2	Settings->TR069->Connection Request Username
	RequestPassword = 2	Settings->TR069->Connection Request Password
[ Settings-VoiceMonitoring ]	RTCP-Session-Report = 2	Settings->Voice Monitoring->VQ RTCP-XR Session Report
	RTCP-Interval-Report = 2	Settings->Voice Monitoring->VQ RTCP-XR Interval Report
	RTCP-Interval-Period = 2	Settings->Voice Monitoring->Period for Interval Report
	RTCP-Warning-Moslq = 2	Settings->Voice Monitoring->Warning threshold for Moslq
	RTCP-Critical-Moslq = 2	Settings->Voice Monitoring->Critical threshold for Moslq
	RTCP-Warning-Delay = 2	Settings->Voice Monitoring->Warning threshold for Delay
	RTCP-Critical-Delay = 2	Settings->Voice Monitoring->Critical threshold for Delay
	Display-VQReport-On-Web = 2	Settings->Voice Monitoring->Display Report options on Web
	Display-VQReport-On-UI = 2	Settings->Voice Monitoring->Display Report options on phone
	Voice-RTCP-XR-Report = 2  (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP860/CP960 IP phones)	Settings->Voice Monitoring->Voice RTCP-XR Report

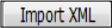
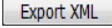
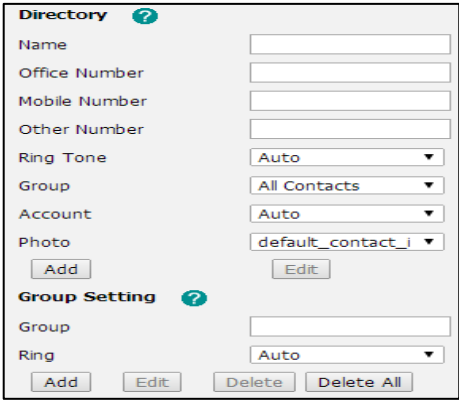
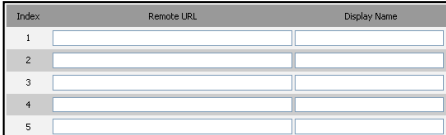
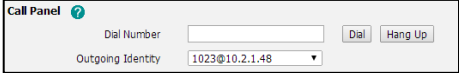
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
	RTCP-Report-Options = 2	Settings->Voice Monitoring->Report Options on Phone 
[ Settings-SIP ]	sip-session-timer = 2	Settings->SIP->SIP Session Timer T1 (0.5~10s) Settings->SIP->SIP Session Timer T2 (2~40s) Settings->SIP->SIP Session Timer T4 (2.5~60s)
	local-SIP-port = 2	Settings->SIP->Local SIP Port
	TLS-SIP-Port = 2	Settings->SIP->TLS SIP Port
[ Settings-Camera ] (only applicable to SIP VP-T49G IP phones)	scene-mode = 2	Settings->Camera->Scene Mode 
	manual-settings = 2	Settings->Camera->Manual Settings (only appear when the parameter "camera.scene_mode" is set to 0) 
	exposure = 2	Settings->Camera->Exposure 
	status-bar-icon = 2	Settings->Camera->Camera Icon on Status Bar
	video-active = 0	Settings->Video->Video Active

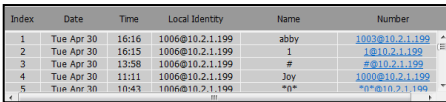
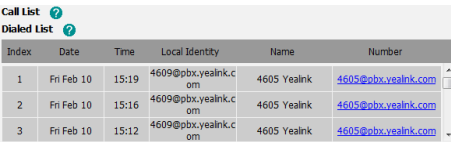
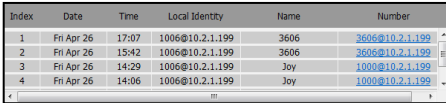
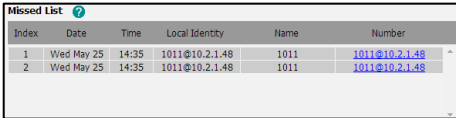
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Video ] (only applicable to SIP-T58V/T58A/SIP VP-T49G IP phones)	auto-start-video = 0 (not applicable to SIP-T58V/T58A IP phones)	Settings->Video->Auto Start Video
	auto-answer-video-mute = 0 (not applicable to SIP-T58V/T58A IP phones)	Settings->Video->Auto Answer Video Mute
	uplink-bandwidth = 2 (not applicable to SIP-T58V/T58A IP phones)	Settings->Video->Uplink Bandwidth
	downlink-bandwidth = 2 (not applicable to SIP-T58V/T58A IP phones)	Settings->Video->Downlink Bandwidth
[ Settings-Power Saving ] (not applicable to SIP-T19(P) E2 IP phones)	enable = 0 (not applicable to SIP VP-T49G/CP960 IP phones)	Settings->Power Saving->Power Saving
	office_hour = 0 (2 for SIP VP-T49G IP phones)	Settings->Power Saving->Office Hour 
	office_Monday = 0	Settings->Power Saving->Monday
	office_Tuesday = 0	Settings->Power Saving->Tuesday
	office_Wednesday = 0	Settings->Power Saving->Wednesday
	office_Thursday = 0	Settings->Power Saving->Thursday

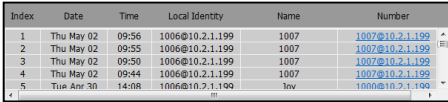
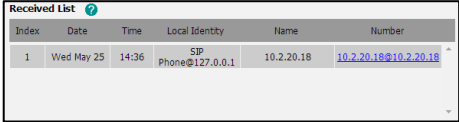
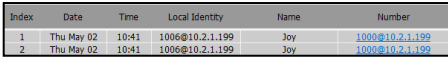
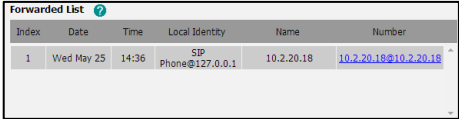
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ Settings-Power Saving ] (not applicable to SIP-T19(P) E2 IP phones)	office_Friday = 0	Settings->Power Saving->Friday
	office_Saturday = 0	Settings->Power Saving->Saturday
	office_Sunday = 0	Settings->Power Saving->Sunday
	idle_timeout = 0	Settings->Power Saving->Idle TimeOut (minutes) 
	office_timeout = 0	Settings->Power Saving->Office Hour Idle TimeOut
	off_timeout = 0	Settings->Power Saving->Off Hour Idle TimeOut
	user_input_ext_timeout = 0	Settings->Power Saving->User Input Extension Idle TimeOut
[ Contacts ]	contacts-basic = 0	Directory->Local Directory (the whole page)
	contacts-remote = 1 (0 for SIP VP-T49G/W52P/W56P/W60/T58V/T58A/T56A IP phones)	Directory->Remote Phone Book (the whole page)
	contacts-callinfo = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Directory->Phone Call Info (the whole page)
	contacts-LDAP = 1 (0 for SIP VP-T49G W52P/W56P/W60 IP phones; not applicable to SIP-T19(P) E2 IP phones)	Directory->LDAP (the whole page)
	contacts-multicastIP = 1	Directory->Multicast IP (the whole page)



Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
	(0 for SIP VP-T49G/W60 IP phones)	
	contacts-favorite = 0	Directory->Setting (the whole page)
[ Contacts-Basic ] (only applicable to W52P/W56P/W60 DECT IP phones)	download-contacts = 0	Directory->Local Directory->File Template Download
	importcontacts = 0	Directory->Local Directory->Import Contacts
	export-contacts = 0	Directory->Local Directory->Export Contacts
[ LocalPhoneBook ] (not applicable to W56P DECT IP phones)	contact-list = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Directory->Local Directory 
	all-contacts-control = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Directory->Local Directory 
	import-export-contacts = 0 (1 for SIP VP-T49G IP phones)	Directory->Local Directory->Import Local Directory File 
	btnImportCSV = 0 (1 for SIP VP-T49G IP phones)	Directory->Local Directory-> 
	btnExportCSV = 0 (1 for SIP VP-T49G IP phones)	Directory->Local Directory-> 

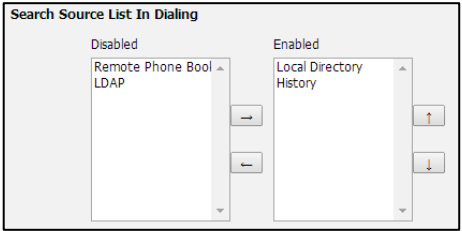
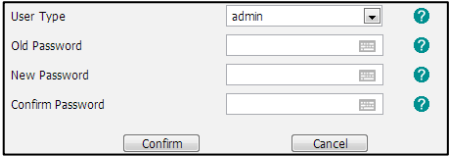
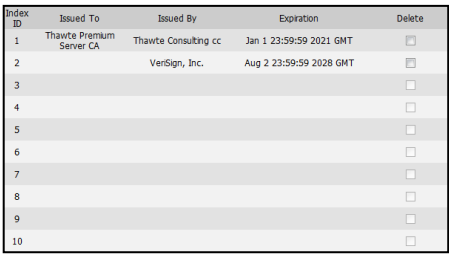
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ LocalPhoneBook ] (not applicable to W56P DECT IP phones)	IP phones)	
	btnImportXML = 0 (1 for SIP VP-T49G IP phones)	Directory->Local Directory-> 
	btnExportXML = 0 (1 for SIP VP-T49G IP phones)	Directory->Local Directory-> 
	opt-contacts = 0 (not applicable to W52P/W56P/W60 DECT IP phones)	Directory->Local Directory-> 
[ Contacts-Remote ]	remote-phonebook-list = 1 (0 for SIP VP-T49G/W52P/W56P/W60 IP phones)	Directory->Remote Phone Book-> 
	SRemoteNameEnable = 1 (0 for SIP VP-T49G/W52P/W56P/W60 IP phones)	Directory->Remote Phone Book->Incoming/Outgoing Call Lookup
	SRemoteNameFlashTime = 1 (0 for SIP VP-T49G/W52P/W56P/W60 IP phones)	Directory->Remote Phone Book->Update Time Interval(Seconds)
	call-control = 0	Directory->Phone Call Info->Call Panel 


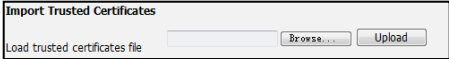
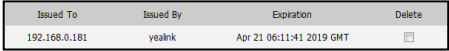


Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ PhoneCallInfo ] (not applicable to W52P/W56P/W60 DECT IP phones)	dialed-list-title = 0 (only applicable to SIP-T58V/T58A/T56 AVP-T49G IP phones)	Directory->Phone Call Info-> <b>Call Log</b> ?  Directory->Phone Call Info-> <b>Placed List</b> ?
	dialed-list-content = 0 (only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones)	Directory->Phone Call Info->Placed List  
	dialed-list = 0 (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Directory->Phone Call Info->  
	missed-list-title = 0 (only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones)	Directory->Phone Call Info-> <b>Missed List</b> ?
	missed-list-content = 0 (only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones)	Directory->Phone Call Info->Missed List  
	missed-list = 0 (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Directory->Phone Call Info->  
	received-list-title = 0 (only applicable to SIP-T58V/T58A/T56	Directory->Phone Call Info-> <b>Received List</b> ?

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ PhoneCallInfo ] (not applicable to W52P/W56P DECT IP phones)	A/SIP VP-T49G IP phones)	
	received-list-content = 0 (only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones)	Directory->Phone Call Info->Received List 
	received-list = 0 (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Directory->Phone Call Info-> 
	forwarded-list-title = 0 (only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones)	Directory->Phone Call Info-> <b>Forwarded List</b> ?
	forwarded-list-content = 0 (only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones)	Directory->Phone Call Info->Forwarded List 
	forwarded-list = 0 (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)	Directory->Phone Call Info-> 
[ LDAP ] (not applicable to SIP-T19(P) E2 IP phones)	enable-LDAP = 0	Directory->LDAP->Enable LDAP
	LDAP-label = 0 (only applicable to SIP-T58V/T58A/T56 A IP phones)	Directory->LDAP->LDAP Label

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ LDAP ] (not applicable to SIP-T19(P) E2 IP phones)	LDAP-customize_label=0  (only applicable to SIP-T54S/T52S/T48S/T48G/T46S/T46G/T42S/T42G/T41S/T41P/T40P/T40G/T29G/T27P/T27G/T23P (E)2)	
	LDAP-name-filter = 0	Directory->LDAP->LDAP Name Filter
	LDAP-number-filter = 0	Directory->LDAP->LDAP Number Filter
	LDAP-TLS-Mode = 0	Directory->LDAP->LDAP TLS Mode
	server-address = 0	Directory->LDAP->Server Address
	port = 0	Directory->LDAP->Port
	base = 0	Directory->LDAP->Base
	user-name = 0	Directory->LDAP->Username
	password = 0	Directory->LDAP->Password
	maxhits = 0	Directory->LDAP->Max Hits (1~32000)
	LDAP-name-attributes = 0	Directory->LDAP->LDAP Name Attributes
	LDAP-number-attributes = 0	Directory->LDAP->LDAP Number Attributes
	LDAP-display-name = 0	Directory->LDAP->LDAP Display Name
	protocol = 0	Directory->LDAP->Protocol
	LDAP-lookup-for-incoming-call = 0	Directory->LDAP->LDAP Lookup For Incoming Call
	LDAP-lookup-for-callout = 0	Directory->LDAP->LDAP Lookup For Callout
	LDAP-sorting-results = 0	Directory->LDAP->LDAP Sorting Results
	Receive_Priority = 1	Directory->Multicast IP->Paging Barge

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface																																																							
[ MulticastIP ]  (not applicable to W56P DECT IP phones)	(0 for SIP VP-T49G/W60 IP phones)																																																								
	Ignore_DND =2  (not applicable to SIP-T58V/T58A/T56 A/SIP-T49G/CP960/ W52P/W56P/W60 IP phones)	Directory-> Multicast IP->Ignore DND																																																							
	PagePriorityActive = 1  (0 for SIP VP-T49G/W60 IP phones)	Directory-> Multicast IP->Paging Priority Active																																																							
	MulticastIPConfig = 1  (0 for SIP VP-T49G/W60 IP phones)	Directory-> Multicast IP-> <div><table><thead><tr><th>IP Address</th><th>Listening Address</th><th>Label</th><th>Channel</th><th>Priority</th></tr></thead><tbody><tr><td>1 IP Address</td><td></td><td></td><td>0 ▼</td><td>1</td></tr><tr><td>2 IP Address</td><td></td><td></td><td>0 ▼</td><td>2</td></tr><tr><td>3 IP Address</td><td></td><td></td><td>0 ▼</td><td>3</td></tr><tr><td>4 IP Address</td><td></td><td></td><td>0 ▼</td><td>4</td></tr><tr><td>5 IP Address</td><td></td><td></td><td>0 ▼</td><td>5</td></tr><tr><td>6 IP Address</td><td></td><td></td><td>0 ▼</td><td>6</td></tr><tr><td>7 IP Address</td><td></td><td></td><td>0 ▼</td><td>7</td></tr><tr><td>8 IP Address</td><td></td><td></td><td>0 ▼</td><td>8</td></tr><tr><td>9 IP Address</td><td></td><td></td><td>0 ▼</td><td>9</td></tr><tr><td>10 IP Address</td><td></td><td></td><td>0 ▼</td><td>10</td></tr></tbody></table></div>	IP Address	Listening Address	Label	Channel	Priority	1 IP Address			0 ▼	1	2 IP Address			0 ▼	2	3 IP Address			0 ▼	3	4 IP Address			0 ▼	4	5 IP Address			0 ▼	5	6 IP Address			0 ▼	6	7 IP Address			0 ▼	7	8 IP Address			0 ▼	8	9 IP Address			0 ▼	9	10 IP Address			0 ▼	10
	IP Address	Listening Address	Label	Channel	Priority																																																				
1 IP Address			0 ▼	1																																																					
2 IP Address			0 ▼	2																																																					
3 IP Address			0 ▼	3																																																					
4 IP Address			0 ▼	4																																																					
5 IP Address			0 ▼	5																																																					
6 IP Address			0 ▼	6																																																					
7 IP Address			0 ▼	7																																																					
8 IP Address			0 ▼	8																																																					
9 IP Address			0 ▼	9																																																					
10 IP Address			0 ▼	10																																																					
PagingList = 1  (0 for SIP VP-T49G/W60 IP phones)	Directory-> Multicast IP->Paging List <div><div>Paging List</div><table><thead><tr><th>Index</th><th>Paging Address</th><th>Label</th><th>Channel</th></tr></thead><tbody><tr><td>1</td><td></td><td></td><td>0 ▼</td></tr><tr><td>2</td><td></td><td></td><td>0 ▼</td></tr><tr><td>3</td><td></td><td></td><td>0 ▼</td></tr><tr><td>4</td><td></td><td></td><td>0 ▼</td></tr><tr><td>5</td><td></td><td></td><td>0 ▼</td></tr><tr><td>6</td><td></td><td></td><td>0 ▼</td></tr><tr><td>7</td><td></td><td></td><td>0 ▼</td></tr><tr><td>8</td><td></td><td></td><td>0 ▼</td></tr><tr><td>9</td><td></td><td></td><td>0 ▼</td></tr><tr><td>10</td><td></td><td></td><td>0 ▼</td></tr></tbody></table></div>	Index	Paging Address	Label	Channel	1			0 ▼	2			0 ▼	3			0 ▼	4			0 ▼	5			0 ▼	6			0 ▼	7			0 ▼	8			0 ▼	9			0 ▼	10			0 ▼												
Index	Paging Address	Label	Channel																																																						
1			0 ▼																																																						
2			0 ▼																																																						
3			0 ▼																																																						
4			0 ▼																																																						
5			0 ▼																																																						
6			0 ▼																																																						
7			0 ▼																																																						
8			0 ▼																																																						
9			0 ▼																																																						
10			0 ▼																																																						
[ Contacts-Favorite ]	contacts-group = 0  (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/W52P/W56P/W60 IP phones)	Directory->Setting->Directory <div><div>Directory</div><div><div>Disabled</div><div>History Remote Phone Bool LDAP</div></div><div><div>Enabled</div><div>Local Directory</div></div></div>																																																							
	super-search = 0	Directory->Setting->Search Source List In																																																							

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
		<p>Dialing</p>  <p>Directory-&gt;Setting-&gt;Recent Call In Dialing</p>
[ Security ]	password = 0	Security->Password (the whole page)
	trusted_cert = 2 (0 for W60 DECT IP phones)	Security->Trusted Certificates (the whole page)
	server_cert = 2 (0 for W60 DECT IP phones)	Security->Server Certificates (the whole page)
	license = 2 (only applicable to the IP phone running firmward 82 or later)	Security->License (only appear when the parameter "features.custom_version_info" has been configured)
	base-pin = 0 (only applicable to W52P/W56P/W60 DECT IP phones)	Security->Base PIN (the whole page)
[ Password ] (only applicable to SIP VP-T49G IP phones)	set-password = 0	<p>Security-&gt;Password-&gt;</p> 
[ TrustCerts ]	trust-certs-records = 2	<p>Security-&gt;Trusted Certificates-&gt;</p> 

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ TrustCerts ]	btn-delete-certs = 2	Security->Trusted Certificates-> 
	only-accept-trusted-certs = 2	Security->Trusted Certificates->Only Accept Trusted Certificates
	common-name-validation = 2	Security->Trusted Certificates->Common Name Validation
	ca-certs = 2	Security->Trusted Certificates->CA Certificates
	upload-trust-certs = 2	Security->Trusted Certificates->Import Trusted Certificates 
[ ServerCerts ]	server-certs-records = 2	Security->Server Certificates 
	server-certs-device-cert = 2	Security->Server Certificates->Device Certificates 
	server-certs-upload = 2	Security->Server Certificates->Import Server Certificates 
[ BasePin ] (only applicable to W56P DECT IP phones)	Base-unit-pin = 0	Security->Base PIN->Base Unit PIN
[ HiddenSetting ]	custom-factory-config = 2	Hidden->Custom Factory Config
	DND-Active = 2	Hidden->DND Active
	Forward-Active = 2	Hidden->Forward Active
	Broadsoft-Active = 2 (1 for SIP VP-T49G/W52P/W56P/W60 IP phones)	Hidden->Broadsoft Active
	Redirect-Active = 2	Hidden->Redirect Active

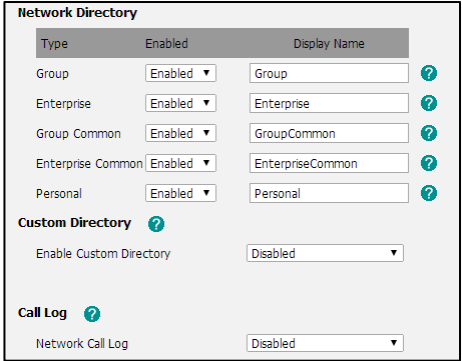
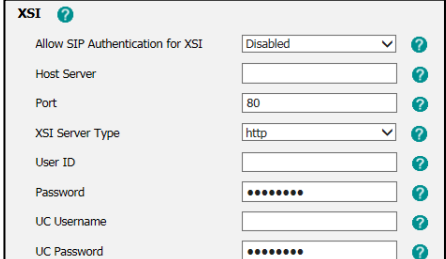


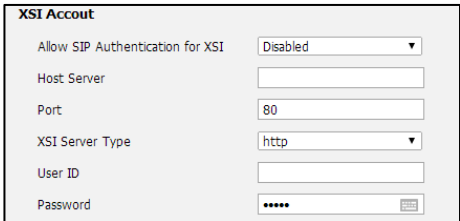
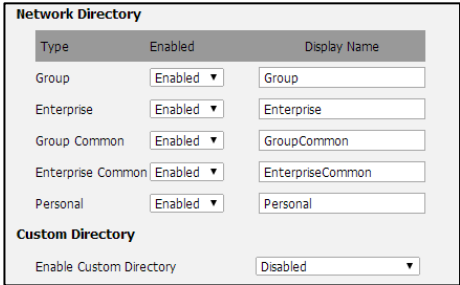
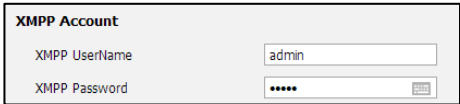
Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ HiddenSetting ]	(1 for SIP VP-T49G/W52P/W56P/W60 IP phones)	
	XSI-Active = 2 (1 for W52P/W56P/W60 IP phones; not applicable to SIP VP-T49G/CP960 IP phones)	Hidden->XSI Active
	UC-Active = 2 (1 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Hidden->UC Active
	remote_pcap_switch = 2 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Hidden->Remote Pcap Hidden->Remote Pcap Port Hidden->Remote Pcap Password
	remote_pcap = 2 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Hidden->Remote Pcap
	remote_pcap_port = 2 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Hidden->Remote Pcap Port
	remote_pcap_password = 2	Hidden->Remote Pcap Password

Section Header	ItemName and Default Value	Configuration Items on the Web User Interface
[ HiddenSetting ]	(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	
	Metaswitch-Active = 2 (only applicable to IP phones running firmware 83 or later)	Hidden->Metaswitch Active
	Metaswitch-Login-Mode = 2 (only applicable to IP phones running firmware 83 or later)	Hidden->Metaswitch Login Mode
	pushxml = 2 (not applicable to W52P/W56P/W60 DECT IP phones)	Hidden->PushXML Test

## Configuration Parameters for BroadSoft UC-One Version

The following table lists configuration items in the WebItemsLevel.cfg file for configurations only integrated with BroadSoft UC-One firmware version on the web user interface.

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[ General-Information ]	EnableAutoFavorite = 0 (only applicable to SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones)	Features->General Information->Enable Auto Favorite
[ Contacts ] (only applicable to SIP VP-T49G/CP960 IP phones)	contacts-broadsoft = 0	Directory->Network Directory (the whole page)
[ Contacts-Broadsoft ] (only applicable to SIP VP-T49G/CP960 IP phones)	Directotries = 0 (1 for CP960 IP phones)	Directory->Network Directory->Network Directory Directory->Network Directory->Custom Directory Directory->Network Directory->Call Log 
	XSI = 0 (1 for CP960 IP phones)	Directory->Network Directory->XSI 

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[ Apps ] (not applicable to SIP VP-T49G/CP960 IP phones)	broadsoft-XSI = 1	Applications->Broadsoft XSI (the whole page)
	broadsoft-XMPP = 1 (only applicable to SIP-T58V/T58A/T56A/T54S/T52S/T48G/T46G/T29G)	Applications->Broadsoft XMPP (the whole page)
[ Broadsoft ] (not applicable to SIP VP-T49G/CP960 IP phones)	XSI = 1	Applications->Broadsoft XSI->XSI Account 
	Directotries = 1	Applications->Broadsoft XSI->Network Directory Applications->Broadsoft XSI->Custom Directory 
	CallLog = 1 (0 for W60 DECT IP phones)	Applications->Broadsoft XSI->Call Log
	XMPP-accout = 1 (only applicable to SIP-T58V/T58A/T56A/T54S/T52S/T48S/T48G/T46S/T46G/T29G)	Applications->Broadsoft XMPP->XMPP Account 
	XMPP-userame = 1 (only applicable to SIP-T58V/T58A/T56A/T54S/T52S/T48S/T48G/T	Applications->Broadsoft XMPP->XMPP UserName

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	46S/T46G/T29G)	
	XMPP-password = 1 (only applicable to SIP-T58V/T58A/T56A/T54S/T52S/T48S/T48G/T46S/T46G/T29G)	Applications->Broadsoft XMPP->XMPP Password

## Configuration Parameters of Phone User Interface

The following table lists configuration items in the WebItemsLevel.cfg file with associated configurations on the phone user interface of the SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920 IP phones:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	status_list = 0	SIP-T58V/T58A/T56A/CP960: Settings->Status SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Status
	Status_IP = 0 (11 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Status->General->IPv4 SIP VP-T49G: Menu->Status->General->IPv4 SIP-T48G/T48S: Menu->Status->General->IPv4 SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Status->IPv4
	Status_IPv6 = 0 (11 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Status->General->IPv6 SIP VP-T49G:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	6A IP phones)	Menu->Status->General->IPv6 SIP-T48G/T48S: Menu->Status->General->IPv6 SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G//T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Status->IPv6
	Status_MAC = 0 (21 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Status->General->MAC SIP VP-T49G/SIP-T48G/T48S: Menu->Status->General->MAC SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G//T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Status->MAC
	Status_WIFI_MAC = 0 (only applicable to the IP phones running firmware V82 or later)	SIP-T48G/T48S: Menu->Status->General->Wi-Fi MAC SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G//T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Status->Wi-Fi MAC
	Status_CFG_VER = 0 (only applicable to the IP phones running firmward V82 or later)	Menu->CFG Version
	Status_HW = 0	SIP-T58V/T58A/T56A/CP960: Settings->Status->Phone->Hardware SIP VP-T49G/SIP-T48G/T48S: Menu->Status->Phone->Hardware SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Status->More->Phone->Hardware
	Status_More = 0 (not applicable to SIP-T58V/T58A/T56A/SI	Menu->Status->More

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	P VP-T49G/SIP-T48G/T48S/CP960 IP phones)	
	network = 0	SIP-T58V/T58A/T56A/CP960: Settings->Status->Network SIP VP-T49G/SIP-T48G/T48S: Menu->Status->Network SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Status->More->Network
	Status_More_Phone = 0	SIP-T58V/T58A/T56A/CP960: Settings->Status->Phone SIP VP-T49G/SIP-T48G/T48S: Menu->Status->Phone SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Status->More->Phone
	Status_More_Account = 0	SIP-T58V/T58A/T56A/CP960: Settings->Status->Accounts SIP VP-T49G/SIP-T48G/T48S: Menu->Status->Accounts SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Status->More->Accounts (or Account)
	Status_More_RTP = 0	SIP-T58V/T58A/T56A/CP960: Settings->Status->RTP Status SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G: Menu->Status->RTP Status SIP-T54S/T52S/T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Menu->Status->More->RTP
	status_general= 0 (02 for SIP VP-T49G IP phones; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T48G/T48S IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Status->General SIP VP-T49G/SIP-T48G/T48S: Menu->Status->General
	features = 0 (02 for SIP VP-T49G IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features
	callcontrol_forward = 1 (11 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Call Forward SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Call Forward
	always-forward = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Call Forward->Always Forward SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Call Forward->Always Forward
	busy-forward = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Call Forward->Busy Forward



Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	6A IP phones)	SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Call Forward->Busy Forward
	NoAnswer-forward = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Call Forward->No Answer Forward SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Call Forward->No Answer Forward
	call_waiting = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Call Waiting SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Call Waiting
	auto-Answer= 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Auto Answer SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Auto Answer
	DSSKey = 0 (1 for SIP VP-T49G IP phones; not applicable to SIP-T19(P) E2/CP860/CP920 IP)	SIP-T58V/T58A/T56A/CP960: Settings->Features->DSS Keys SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	phones)	9G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Features->DSS Keys
	key_as_send= 0 (12 for SIP VP-T49G/T58V/T58A/T5 6A IP phones; not applicable to CP960 IP phones)	SIP-T58V/T58A/T56A: Settings->Features->Key as Send SIP VP-T49G/SIP-T48G/T48S: Menu->Features->General->Key As Send SIP-T54S/T52S/T46G/T46S/T29G: Menu->Features->Others->General->Key As Send SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Key As Send
	hotline-number = 0 (1 for SIP VP-T49G/T58V/T58A/T5 6A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Hot Line SIP VP-T49G/SIP-T48G/T48S: Menu->Features->Hot Line->Hotline Number SIP-T54S/T52S/T46G/T46S/T29G: Menu->Features->Others->Hot Line->Hotline Number SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Hot Line->Hotline Number
	Features_Anonymous = 0 (1 for SIP VP-T49G/T58V/T58A/T5 6A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Anonymous SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Features->Anonymous SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Menu->Features->Anonymous Call
	Features_Diagnostics = 0 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	Menu->Features->Diagnostics
	Diagnostics_Network = 0 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	Menu->Features->Diagnostics->Network
	Diagnostics_Ping = 0 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	Menu->Features->Diagnostics->Network->Ping
	Diagnostics_TraceRoute = 0 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	Menu->Features->Diagnostics->Network->Trace Route
	Features_AutoRD = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Auto Redial SIP VP-T49G/SIP-T48G/T48S/T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Auto Redial SIP-T54S/T52S/T46G/T46S/T29G: Menu->Features->Others->Auto Redial
	intercom = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Intercom SIP VP-T49G/SIP-T54S/T52S/T48G/T46G/T46S/

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		T48S/T42G/T42S/T41P/T41S/T40P/T40G/T29GT27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Intercom
	call_completion = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Call Completion SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Call Completion SIP-T46G/T46S/T29G: Menu->Features->Others->Call Completion
	history_save= 2	SIP-T58V/T58A/T56A/CP960: Settings->Features->History Record SIP VP-T49G/SIP-T48G/T48S: Menu->Features->General->History Record SIP-T54S/T52S/T46G/T46S/T29G: Menu->Features->Others->General->History Record SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->History Setting
	multipaginglist = 2 (10 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Paging List SIP VP-T49G/SIP-T48G/T48S/T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->Paging List SIP-T54S/T52S/T46G/T46S/T29G: Menu->Features->Others->Paging List
	Main_Settings = 0	Menu->Settings

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	
	time_zone = 0	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Time & Date->General->Time Zone SIP VP-T49G/SIP-T48G/T48S: Menu->Basic->Time & Date->General->Time Zone SIP-T54S/T52S/T46G/T46S/T29G: Menu->Basic->Time & Date->General->SNTP Settings>Time Zone SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Basic Settings->Time & Date->SNTP Settings->Time Zone
	Basic_Time_Manual = 0 (not applicable to SIP VP-T49G/T48S/T48G IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Time & Date->General->Type: Manual Settings SIP VP-T49G/SIP-T48G/T48S: Menu->Basic->Time & Date->General->Type: Manual Settings SIP-T54S/T52S/T46G/T46S/T29G: Menu->Basic->Time & Date->General->Manual Settings SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Basic Settings->Time & Date->Manual Settings
	display = 0 (10 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Display SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		T46S/T29G: Menu->Basic->Display SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Basic Settings->Display
	sound = 0 (1 for SIP VP-T49G/T58V/T58A/T5 6A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Sound SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Basic->Sound SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Basic Settings->Sound
	key_tone = 0 (1 for SIP VP-T49G/T58V/T58A/T5 6A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Sound->Key Tone SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Basic->Sound->Key Tone SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Basic Settings->Sound->Key Tone
	ring_type_setting = 0 (1 for SIP VP-T49G/T58V/T58A/T5 6A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Sound->Ring Tones SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Basic->Sound->Ring Tones SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Basic

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Settings->Sound->Ring Tones
	blf_ring_setting = 0 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/T19(P)E2/CP860/CP920/CP960 IP phones)	SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Sound->BLF Ring Type SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2: Menu->Settings->Basic Settings->Sound->BLF Ring Type
	unlock_pin = 0 (2 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Change PIN SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Change PIN SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Basic Settings->Change PIN
	check_key_guard_lock = 0 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Phone Lock SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Phone Lock
	basicsetting_update_configuration = 0 (only applicable to IP phones running firmware 83 or later)	SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Update Configuration SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Update Configuration
	Country = 0 (only applicable to CP860/CP920 IP phones)	Menu->Settings->Basic Settings->Country

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	bluetooth = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones; only applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP96 0 IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Bluetooth SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Bluetooth SIP-T42S/T41S/T27G: Menu->Settings->Basic Settings->Bluetooth
	wifi = 0 (1 for SIP VP-T49G IP phones; only applicable to SIP-T58V/T58A/T56A/T54S/52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP96 0 IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Wi-Fi SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Wi-Fi SIP-T42S/T41S/T27G: Menu->Settings->Basic Settings->Wi-Fi
	account_label = 0 (02 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Accounts->Account X->Label SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account X->Label SIP-T54S/T52S/T46G/T46S/T29G: Menu->Advanced->Accounts->Account X->Label SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Accounts->Account X->Label
	display_name = 0 (02 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Accounts->Account X->Display Name



Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	6A IP phones)	<p>SIP VP-T49G/SIP-T48G/T48S: Menu-&gt;Advanced-&gt;Account-&gt;Account X-&gt;Display Name</p> <p>SIP-T54S/T52S/T46G/T46S/T29G: Menu-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Display Name</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu-&gt;Settings-&gt;Advanced Settings-&gt;Accounts-&gt;Account X-&gt;Display Name</p>
	<p>register_name = 01 (02 for SIP VP-T49G/T58V/T58A/T56A/CP960) 6A IP phones)</p>	<p>SIP-T58V/T58A/T56A/CP960: Settings-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Register Name</p> <p>SIP VP-T49G/SIP-T48G/T48S: Menu-&gt;Advanced-&gt;Account-&gt;Account X-&gt;Register Name</p> <p>SIP-T54S/T52S/T46G/T46S/T29G: Menu-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Register Name</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu-&gt;Settings-&gt;Advanced Settings-&gt;Accounts-&gt;Account X-&gt;Register Name</p>
	user_name = 01	<p>SIP-T58V/T58A/T56A/CP960: Settings-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;User Name</p> <p>SIP VP-T49G/SIP-T48G/T48S: Menu-&gt;Advanced-&gt;Account-&gt;Account X-&gt;User Name</p> <p>SIP-T54S/T52S/T46G/T46S/T29G: Menu-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;User Name</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27</p>

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Accounts->Account X->User Name
	account_password = 01	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Accounts->Account X->Password SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account X->Password SIP-T54S/T52S/T46G/T46S/T29G: Menu->Advanced->Accounts->Account X->Password SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Accounts->Account X->Password
	sip_server = 2 (01 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Accounts->Account X->SIP Server1/2 SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account X->SIP Server1/2 SIP-T54S/T52S/T46G/T46S/T29G: Menu->Advanced->Accounts->Account X->SIP Server1/2 SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Accounts->Account X->SIP Server1/2
	enabled-outbound-proxy-server = 2	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Accounts->Account

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	(01 for SIP VP-T49G/T58V/T58A/T56A IP phones)	<p>X-&gt;Outbound Status</p> <p>SIP VP-T49G/SIP-T48G/T48S:</p> <p>Menu-&gt;Advanced-&gt;Account-&gt;Account</p> <p>X-&gt;Outbound Status</p> <p>SIP-T54S/T52S/T46G/T46S/T29G:</p> <p>Menu-&gt;Advanced-&gt;Accounts-&gt;Account</p> <p>X-&gt;Outbound Status</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)</p> <p>E2/CP860/CP920:</p> <p>Menu-&gt;Settings-&gt;Advanced</p> <p>Settings-&gt;Accounts-&gt;Account</p> <p>X-&gt;Outbound Status</p>
	outbound-proxy-server = 2 (01 for SIP VP-T49G/T58V/T58A/T56A IP phones)	<p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Advanced-&gt;Accounts-&gt;Account</p> <p>X-&gt;Outbound Proxy1/2</p> <p>SIP VP-T49G/SIP-T48G/T48S:</p> <p>Menu-&gt;Advanced-&gt;Account-&gt;Account</p> <p>X-&gt;Outbound Proxy1/2</p> <p>SIP-T54S/T52S/T46G/T46S/T29G:</p> <p>Menu-&gt;Advanced-&gt;Accounts-&gt;Account</p> <p>X-&gt;Outbound Proxy1/2</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)</p> <p>E2/CP860/CP920:</p> <p>Menu-&gt;Settings-&gt;Advanced</p> <p>Settings-&gt;Accounts-&gt;Account</p> <p>X-&gt;Outbound Proxy1/2</p>
	STUN_server = 2 (02 for SIP VP-T49G/T58V/T58A/T56A IP phones)	<p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Advanced-&gt;Accounts-&gt;Account</p> <p>X-&gt;NAT Status</p> <p>SIP VP-T49G/SIP-T48G/T48S:</p> <p>Menu-&gt;Advanced-&gt;Account-&gt;Account</p> <p>X-&gt;NAT Status: STUN</p> <p>SIP-T54S/T52S/T46G/T46S/T29G:</p> <p>Menu-&gt;Advanced-&gt;Accounts-&gt;Account</p> <p>X-&gt;NAT Status</p>

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:  Menu->Settings->Advanced Settings->Accounts->Account X->NAT Status
	proxy-fallback-interval = 01  (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G IP phones)	SIP-T58V/T58A/T56A:  Settings->Advanced->Accounts->Account X->Proxy Fallback Interval  CP960:  Settings->Advanced->Accounts->Account X->Fallback Interval  SIP VP-T49G:  Menu->Advanced->Account->Account X->Fallback Interval
	Adv_Network =0	SIP-T58V/T58A/T56A/CP960:  Settings->Advanced->Network  SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:  Menu->Advanced->Network  SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:  Menu->Settings->Advanced Settings->Network
	wan_port_title = 0  (02 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960:  Settings->Advanced->Network->WAN Port  SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:  Menu->Advanced->Network->WAN Port  SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:  Menu->Settings->Advanced

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Settings->Network->WAN Port
	VLAN-items = 2 (02 for SIP VP-T49G/T58V/T58A/T5 6A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Network->VLAN SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Advanced->Network->VLAN SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Network->VLAN
	wanport = 0 (02 for SIP VP-T49G/T58V/T58A/T5 6A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Network->VLAN-> WAN Port SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Advanced->Network->VLAN ->WAN Port SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Network->VLAN->WAN Port
	pcport = 2 (02 for SIP VP-T49G/T58V/T58A/T5 6A IP phones; not applicable to CP960 IP phones)	SIP-T58V/T58A/T56A: Settings->Advanced->Network->VLAN->P C Port SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Advanced->Network->VLAN->PC Port SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Settings->Network->VLAN->PC Port
	dhcplvlan = 2 (02 for SIP VP-T49G/T58V/T58A/T5 6A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Network->VLAN->D HCP VLAN SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Advanced->Network->VLAN->DH CP VLAN SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Network->VLAN->DHCP VLAN
	web-server = 2 (02 for SIP VP-T49G/T58V/T58A/T5 6A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Network->Webserve r Type SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Advanced->Network->Webserver Type (Web Server) SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Network->Web Server
	8021x = 2 (02 for SIP VP-T49G/T58V/T58A/T5 6A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Network->802.1x SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Advanced->Network->802.1x SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Settings->Network->802.1x
	open-VPN = 2 (02 for SIP VP-T49G/T58V/T58A/T5 6A IP phones; not applicable to SIP-T19(P) E2 IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Network->VPN SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Advanced->Network->VPN SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Network->VPN
	open-lldp = 2 (02 for SIP VP-T49G/T58V/T58A/T5 6A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Network->LLDP SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Advanced->Network->LLDP SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Network->LLDP
	network_cdp = 2 (02 for SIP VP-T49G IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Network->CDP SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/ T46S/T29G: Menu->Advanced->Network->CDP SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Network->CDP
	network_nat = 2 (02 for SIP VP-T49G IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Network->NAT SIP

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Network->NAT SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Network->NAT
	softkey Label = 0 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones)	SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Softkey Label
	keyboard_lock = 02 (0 for CP960/T54S/T52S/T48S/T48G/T46S/T46G/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2 IP phones; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960/T54S/T52S/T48S/T48G/T46S/T46G/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2 IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Phone Lock SIP VP-T49G: Menu->Advanced->Phone Lock T54S/T52S/T48S/T48G/T46S/T46G/T29G: Menu->Basic->Phone Lock->Lock Type T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Phone Lock->Lock Type
	Adv_Reboot = 0 (02 for SIP VP-T49G IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Reboot SIP VP-T49G: Menu->Advanced->Reboot SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29




Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		<p>G:</p> <p>Menu-&gt;Settings-&gt;Basic-&gt;Reboot</p> <p>CP860/CP920:</p> <p>Menu-&gt;Settings-&gt;Advanced</p> <p>Settings-&gt;Reboot</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu-&gt;Settings-&gt;Basic Settings-&gt;Reboot</p>
	Adv_ResetToFac = 2	<p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Advanced-&gt;Reset Config-&gt;Reset to Factory Settings</p> <p>SIP VP-T49G:</p> <p>Menu-&gt;Advanced-&gt;Reset to Factory</p> <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29 G:</p> <p>Menu-&gt;Advanced-&gt;Reset Config-&gt;Reset to Factory Settings</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:</p> <p>Menu-&gt;Settings-&gt;Advanced</p> <p>Settings-&gt;Reset Config-&gt;Reset to Factory Settings</p>
	Adv_ResetConfig = 0 (not applicable to SIP VP-T49G IP phones)	<p>SIP-T58V/T58A/T56A:</p> <p>Settings-&gt;Advanced-&gt;Reset Config</p> <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29 G:</p> <p>Menu-&gt;Advanced-&gt;Reset Config</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:</p> <p>Menu-&gt;Settings-&gt;Advanced</p> <p>Settings-&gt;Reset Config</p>
	ResetLocalConfig = 0 (not applicable to SIP VP-T49G IP phones)	<p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Advanced-&gt;Reset Config-&gt;Reset local settings (only appear when the parameter</p>

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		<p>"static.auto_provision.custom.protect" is set to 1.)</p> <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29 G:</p> <p>Menu-&gt;Advanced-&gt;Reset Config-&gt;Reset local settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:</p> <p>Menu-&gt;Settings-&gt;Advanced Settings-&gt;Reset Config-&gt;Reset local settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p>
	ResetNonStaticConfig = 0 (not applicable to SIP VP-T49G IP phones)	<p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Advanced-&gt;Reset Config-&gt;Reset non-static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29 G:</p> <p>Menu-&gt;Advanced-&gt;Reset Config-&gt;Reset non-static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:</p> <p>Menu-&gt;Settings-&gt;Advanced Settings-&gt;Reset Config-&gt;Reset non-static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p>
	ResetStaticConfig = 2	SIP-T58V/T58A/T56A/CP960:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	(not applicable to SIP VP-T49G IP phones)	<p>Settings-&gt;Advanced-&gt;Reset Config-&gt;Reset static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29 G:</p> <p>Menu-&gt;Advanced-&gt;Reset Config-&gt;Reset static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:</p> <p>Menu-&gt;Settings-&gt;Reset Config-&gt;Advanced Settings-&gt;Reset static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p>
	ResetUserDataUserCfg = 0 (not applicable to SIP VP-T49G IP phones)	<p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Advanced-&gt;Reset Config-&gt;Reset userdata &amp; local config (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> <p>Menu-&gt;Advanced-&gt;Reset Config-&gt;Reset userdata &amp; local config (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p>
	ResetInternalSD = 0 (only application to SIP-T58V/T58A/T56A IP phones)	<p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Advanced-&gt;Reset Config-&gt;Reset built-in SD card</p>
	reset_default = 0 (only applicable to SIP VP-T49G IP phones)	<p>SIP VP-T49G:</p> <p>Menu-&gt;Advanced-&gt;Reset Local Config-&gt;Reset Local Config (only appear when the parameter</p>

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		"auto_provision.custom.protect" is set to 1.)
	password = 0	SIP-T58V/T58A/T56A: Settings->Advanced->Set Password SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Set Password (Change Password) SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Set Password (Change Password)
	Adv_AES = 02 (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Set AES Key SIP VP-T49G: Menu->Advanced->Set AES Key CP860/CP920: Menu->Settings->Advanced Settings->Set AES Key
	autoprovision = 2 (02 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Auto Provision SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Advanced->Auto Provision SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Auto Provision
	international-forward = 2 (02 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->FWD International SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Menu->Advanced->FWD International SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->FWD International
	SMS= 0 (12 for SIP VP-T49G IP phones, not applicable to SIP-T58V/T58A/T56A/CP960 IP phones)	Menu->Message
	MSG_Voice = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Message SIP VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Message->Voice Mail
	viewvoicemail = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Message->Voice Mail->View Voice Mail SIP VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Message->Voice Mail->View Voice Mail
	setvoicemail = 0 (1 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Message->Voice Mail->Set Voice Mail SIP VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Message->Voice Mail->Set Voice


Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Mail Code
	usermodeentry = 0	SIP-T58V/T58A/T56A: User Mode SIP VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->User Mode
	NAT_traversal = 2 (02 for SIP VP-T49G/T58V/T58A/T56A IP phones; not applicable to SIP-T19(P) E2 IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Accounts->Account X->NAT Status SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account->Account X->NAT Status SIP-T54S/T52S/T46G/T46S/T29G: Menu->Advanced->Accounts->Account X->NAT Status SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Accounts->Account X->NAT Status
	contrast_ctrl = 0 (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T42G/T42S/T41P/T41S/CP960)	SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Display->Contrast CP860/CP920/SIP-T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Display->Contrast
	local_call_log_list = 0 (01 for SIP VP-T49G IP phones)	CP960: History->All Local Calls SIP-T58V/T58A/T56A:  ->All Local Calls SIP VP-T49G: Menu->History->All Local Calls

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		SIP-T48G/S: Menu->History->Local Call Log SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->History->All Calls Menu->History->Missed Calls Menu->History->Placed Calls Menu->History->Received Calls Menu->History->Forwarded Calls
	metaswitch_callog_list = 0 (only applicable to IP phones running firmware 83 or later)	Menu->Metaswitch CallLog
	Adv_Account = 0 (2 for SIP VP-T49G/T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Advanced->Accounts SIP VP-T49G/SIP-T48G/T48S: Menu->Advanced->Account SIP-T54S/T52S/T46G/T46S/T29G: Menu->Advanced->Accounts SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings->Accounts
	Basic_LANG = 0	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Language & Input->Language Settings->Basic->Language & Input->Current Input SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Language SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)


Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		E2/CP860/CP920: Menu->Settings->Basic Settings->Language
	Basic_Setting_BackLight = 0 (1 for SIP-T58V/T58A/T56A IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Display->Backlight SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Display->Backlight SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Basic Settings->Display->Backlight CP860/CP920: Menu->Settings->Basic Settings->Display->Backlight Settings
	Basic_Time_Format = 0	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Time & Date->Time & Date Format SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Time & Date->Time & Date Format SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Basic Settings->Time & Date->Time & Date Format
	Basic_Time_SNTP = 0	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Time & Date->General->Type (SNTP Settings) SIP VP-T49G/SIP-T48G/T48S: Menu->Basic->Time& Date->General->Type (SNTP Settings) SIP-T54S/T52S/T46G/T46S/T29G:




Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Menu->Basic->Time & Date->General->SNTP Settings  SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:  Menu->Settings->Basic Settings->Time & Date->SNTP Settings
	MSG_Text = 0 (not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)	Menu->Message->Text Message
	Main_Contacts = 0 (not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)	SIP VP-T49G/T54S/T52S/T48G/T48S/T46G/T46 S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/ T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Directory
	SMS_Draftbox = 0 (not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)	Menu->Message->Text Message ->Draftbox
	SMS_Inbox = 0 (not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)	Menu->Message->Text Message ->Inbox
	SMS_NEW = 0 (not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)	Menu->Message->Text Message ->New Message
	SMS_Outbox = 0 (not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)	Menu->Message->Text Message ->Outbox
	SMS_Sentbox = 0 (not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)	Menu->Message->Text Message-> Sentbox

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	Set_Adv = 0	SIP-T58V/T58A/T56A/CP960: Settings->Advanced SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Advanced SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Advanced Settings
	Set_Basic = 0	SIP-T58V/T58A/T56A/CP960: Settings->Basic SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Settings->Basic Settings
	blacklist_list = 0	CP960: Directory->Blacklist SIP-T58V/T58A/T56A:  -> Blacklist SIP VP-T49G/SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Directory->Blacklist
	gab_contact_list = 0 (only applicable to IP phones running firmware 83 or later)	Menu->Directory->Global Address Book
	pab_contact_list = 0 (only applicable to IP	Menu->Directory->Personal Address Book

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	phones running firmware 83 or later)	
	metaswitch_contact_list = 0  (only applicable to IP phones running firmware 83 or later)	Menu->Directory->Network Contacts
	call_info = 0  (not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)	SIP VP-T49G/T54S/T52S/T48G/T48S/T46G/T46 S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/ T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->History
	USBIdleRecordEnable = 0  (only applicable to CP860/CP920 IP phones)	Menu->USB Record->Idle Record
	usb_record= 0  (only applicable to SIP-T54S/T52S/T48G/ T48S/T46G/T46S/T42S/ T41S/T29G/T27G IP phones)	Menu->USB
	browse_usb_record= 0  (only applicable to SIP-T54S/T52S/T48G/T4 8S/T46G/T46S/T42S/T4 1S/T29G/T27G IP phones)	Menu->USB (Record)->Browse Audio
	browse_usb_storage= 0  (only applicable to SIP-T54S/T52S/T48G/T4 8S/T46G/T46S/T42S/T4 1S/T29G/T27G IP phones)	Menu->USB (Record)->Storage Space
	dhcptimezone = 0	SIP-T58V/T58A/T56A/CP960:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		<p>Settings-&gt;Basic-&gt;Time &amp; Date-&gt;DHCP Time</p> <p>SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:</p> <p>Menu-&gt;Basic-&gt;Time &amp; Date-&gt;DHCP Time</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:</p> <p>Menu-&gt;Settings-&gt;Basic Settings-&gt;Time &amp; Date-&gt;DHCP Time</p>
	<p>line_active = 0 (2 for SIP VP-T49G/T58V/T58A/T56A 6A IP phones)</p>	<p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Activation</p> <p>SIP VP-T49G/SIP-T48G/T48S:</p> <p>Menu-&gt;Advanced-&gt;Account-&gt;Account X-&gt;Activation</p> <p>SIP-T54S/T52S/T46G/T46S/T29G:</p> <p>Menu-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Activation</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:</p> <p>Menu-&gt;Settings-&gt;Advanced Settings-&gt;Accounts-&gt;Account X -&gt;Activation</p> <p>CP860/CP920:</p> <p>Menu-&gt;Settings-&gt;Advanced Settings-&gt;Accounts-&gt;Account X -&gt;Account Line</p>
	<p>local_contact_list = 0</p>	<p>CP960:</p> <p>Directory-&gt;Local Directory</p> <p>SIP-T58V/T58A/T56A:</p> <p> -&gt;Local Directory</p> <p>SIP VP-T49G/SIP-T48G/T48S:</p> <p>Menu-&gt;Directory-&gt;All Contacts</p> <p>SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41</p>

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Directory->Local Directory
	remote_contact_list = 0	CP960: Directory->Remote Phone Book SIP-T58V/T58A/T56A:  ->Remote Phone Book SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G /T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Directory->Remote Phone book
	status = 0	SIP-T58V/T58A/T56A/CP960: Settings->Status SIP VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Status
	dnd = 0 (02 for SIP VP-T49G/T58V/T58A /T56A IP phone)	SIP-T58V/T58A/T56A/CP960: Settings->Features->DND SIP VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Features->DND
	advanced_call_feature_default_account =0 (2 for SIP VP-T49G IP phones; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52	SIP-T58V/T58A/T56A/CP960: Settings->Features->Default Account SIP VP-T49G/SIP-T48G/T48S: Menu->Features->Default Account SIP-T54S/T52S/T46G/T46S/T29G: Menu->Features->Others->Default Account

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones)	
	advanced_call_feature_general = 0 (1 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	SIP VP-T49G/SIP-T48G/T48S: Menu->Features->General SIP-T54S/T52S/T46G/T46S/T29G: Menu->Features->Others->General
	advanced_call_feature_list = 0 (1 for SIP VP-T49G IP phones; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Features
	date_and_time_general = 0 (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Time &Date->General SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Time &Date->General
	display_wallpaper = 0 (1 for SIP VP-T49G IP phones; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Basic->Display->Wallpaper SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Display->Wallpaper


Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	display_dsskey_wallpaper = 0 (only applicable to SIP-T48G/T48S IP phones)	Menu->Basic->Display->DSSKey Wallpaper
	screensaver = 0 (only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)	Menu->Basic->Display->Screensaver
	camera_setting_interface = 00 (only applicable to SIP VP-T49G IP phones)	Menu->Basic->Camera Setting
	usb_interface = 00 (only applicable to SIP VP-T49G IP phones)	Menu->USB
	usb_browse_audio = 00 (only applicable to SIP VP-T49G IP phones)	Menu->USB->Browse Audio
	usb_browse_video = 00 (only applicable to SIP VP-T49G IP phones)	Menu->USB->Browse Video
	usb_browse_photo = 00 (only applicable to SIP VP-T49G IP phones)	Menu->USB->Browse Photo
	usb_storage_property = 00 (only applicable to SIP VP-T49G IP phones)	Menu->USB->Storage Space
	hdmi = 00 (only applicable to SIP VP-T49G IP phones)	Menu->Basic->HDMI
	video_setting_interface = 00 (only applicable to SIP	Menu->Basic->Video Setting

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	VP-T49G IP phones)	
	Usb_record = 0 (only applicable to CP860/CP920 IP phones)	Menu->USB Record
	Browse_usb_record = 0 (only applicable to CP860/CP920 IP phones)	Menu->USB Record->Browse Audio
	Browse_usb_storge = 0 (only applicable to CP860/CP920 IP phones)	Menu->USB Record->Browse Space
	app_account = 0 (only applicable to SIP-T58V/T58A/T56A IP phones)	Settings->Basic->APP Accounts


## Configuration Parameters for BroadSoft UC-One Version

The following table lists configuration items in the WebItemsLevel.cfg file for configurations only integrated with BroadSoft UC-One firmware version on the phone user interface of the SIP-T58V/T58A/T56A/SIP

VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920 IP phones.

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	broadsoft_contact_list = 0	CP960: Directory->Network Directory SIP-T58V/T58A/T56A:  ->Network Directory SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:



Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Menu->Directory->Network Directory
	broadsoft_calllog_list = 0	CP960: History->Network CallLog SIP-T58V:  ->Network CallLog SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40GT29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->History->Network CallLog
	CallControl = 1 (0 for SIP VP-T49G IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Call Control SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Call Control
	callcontrol_anywhere = 1 (11 for SIP VP-T49G IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Call Control->Anywhere SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Anywhere SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Call Control->Anywhere
	callcontrol_remoteoffice = 1 (11 for SIP VP-T49G IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Call Control->Remote Office SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		<p>T46S/T29G:</p> <p>Menu-&gt;Features-&gt;Call Control-&gt;Remote Office</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)</p> <p>E2/CP860/CP920:</p> <p>Menu-&gt;Call Control-&gt;Remote Office</p>
	<p>callcontrol_dnd= 1</p> <p>(11 for SIP VP-T49GIP phones)</p>	<p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Features-&gt;Call Control-&gt;Do not Disturb</p> <p>SIP</p> <p>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:</p> <p>Menu-&gt;Features-&gt;Call Control-&gt;Do not Disturb</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)</p> <p>E2/CP860/CP920:</p> <p>Menu-&gt;Call Control-&gt;Do Not Disturb</p>
	<p>callcontrol_simultaneous ring = 1</p> <p>(11 for SIP VP-T49G IP phones)</p>	<p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Features-&gt;Call Control-&gt;Simultaneous Ring Personal</p> <p>SIP</p> <p>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:</p> <p>Menu-&gt;Features-&gt;Call Control-&gt;Simultaneous Ring Personal</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)</p> <p>E2/CP860/CP920:</p> <p>Menu-&gt;Call Control-&gt;Simultaneous Ring Personal</p>
	<p>callcontrol_mobility = 1</p> <p>(not applicable to SIP VP-T49G/CP960 IP phones)</p>	<p>SIP-T58V/T58A/T56A:</p> <p>Settings-&gt;Features-&gt;Call Control-&gt;Mobility</p> <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:</p>

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Menu->Features->Call Control->Mobility SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Call Control->Mobility
	callcontrol_group_night_forward = 1 (not applicable to SIP VP-T49G/CP960 IP phones)	SIP-T58V/T58A/T56A: Settings->Features->Call Control->Group Night Forward SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29 G: Menu->Features->Call Control->Group Night Forward SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Call Control->Group Night Forward
	callcontrol_callwaiting = 1 (not applicable to SIP VP-T49G/CP960 IP phones)	SIP-T58V/T58A/T56A: Settings->Features->Call Control->Call Waiting SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29 G: Menu->Features->Call Control->Call Waiting SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Call Control->Call Waiting
	callcontrol_forward_selective = 1 (not applicable to SIP VP-T49G/CP960 IP phones)	SIP-T58V/T58A/T56A: Settings->Features->Call Control->Call Forward SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29 G: Menu->Features->Call Control->Call Forward SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]		Menu->Call Control->Call Forward
	callcontrol_executive = 1 (not applicable to SIP VP-T49G/CP960 IP phones)	SIP-T58V/T58A/T56A: Settings->Features->Call Control->Executive SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29 G: Menu->Features->Call Control->Executive SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Call Control->Executive
	callcontrol_securityclassification = 1 (not applicable to SIP VP-T49G/CP960 IP phones)	SIP-T58V/T58A/T56A: Settings->Features->Call Control->Security Classification SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29 G: Menu->Features->Call Control->Security Classification SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Call Control->Security Classification
	callcontrol_executive_assistant = 1 (not applicable to SIP VP-T49G/CP960 IP phones)	SIP-T58V/T58A/T56A: Settings->Features->Call Control->Executive-Assistant SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29 G: Menu->Features->Call Control->Executive-Assistant SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27 P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Call Control->Executive-Assistant
	callcontrol_hidenumber = 1	SIP-T58V/T58A/T56A/CP960: Settings->Features->Call Control->Hide

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	(11 for SIP VP-T49G IP phones)	Number SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Hide Number SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Call Control->Hide Number
	callcontrol_anonymousrejection = 1 (11 for SIP VP-T49G IP phones)	SIP-T58V/T58A/T56A/CP960: Settings->Features->Call Control->Anonymous Rejection SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Anonymous Rejection SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Call Control->Anonymous Rejection
	callcontrol_initialacdstate = 1 (11 for SIP VP-T49G IP phones, not applicable to SIP-T58V/T58A/T56A/CP960 IP phones)	SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->Initial ACD State SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920: Menu->Call Control->Initial ACD State
	callcontrol_setacdstate = 1 (11 for SIP VP-T49G IP phones, not applicable to SIP-T58V/T58A/T56A/C	SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Features->Call Control->ACD State SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[ GUI ]	P960 IP phones)	E2/CP860/CP920: Menu->Call Control->ACD State
	callcontrol_silent_alerting = 0 (only applicable to IP phones running firmware 83 or later)	Menu->Call Control->Silent Alerting

## Configuration Parameters of Handset User Interface

The following table lists configuration items in the WebItemsLevel.cfg file with associated configurations on the W56H handset user interface:

Section Header	Parameters and Default Value	Configuration Items on the Handset User Interface
[ GUI ]	Menu_Status = 0	OK->Status
	Base = 0	OK->Status->Base
	Handset = 0	OK->Status->Handset
	LineStatus = 0	OK->Status->Line Status
	Menu_Intercom = 0	OK->Intercom
	Intercom_HSXS = 0	OK->Intercom->Handset X
	Intercom_ALLHS = 0	OK->Intercom->All HS
	Menu_VoiceMail = 0	OK->Voice Mail
	Play_Message = 0	OK->Voice Mail->Play Message
	Set_Voice_Mail = 0	OK->Voice Mail->Set Voice Mail
	Set_Key_1 = 0	OK->Voice Mail->Set Key 1
	Menu_CallFeatures = 0	OK->Call Features
	CallForward = 0	OK->Call Features->Call Forward
	AlwaysForward= 0 (not applicable for W60 DECT IP phones)	OK->Call Features->LineX->Always(Disable/Enable)
	BusyForward= 0 (not applicable for W60	OK->Call Features->LineX->Busy(Disable/Enable)

Section Header	Parameters and Default Value	Configuration Items on the Handset User Interface
[ GUI ]	DECT IP phones)	
	NoAnswerForward= 0 (not applicable for W60 DECT IP phones)	OK->Call Features->LineX->No Answer(Disable/Enable)
	DND= 0	OK->Call Features->Do Not Disturb
	CallWaiting= 0	OK->Call Features->Call Waiting
	AnonymousRejection = 0	OK->Call Features->Anon.Call Rejection
	AnonymousCall = 0	OK->Call Features->Anonymous Call
	Menu_Directory = 0	OK->Directory
	Local_Contact_List= 0	OK->Directory->Local Directory
	Remote_Contact_List= 0	OK->Directory->Remote Dir
	Broadsoft_Contact_List= 0	OK->Directory->Network Directory
	LDAP_Contact_List= 0	OK->Directory->LDAP
	Menu_Settings = 0	OK->Settings
	DateTime = 0	OK->Settings->Date & Time
	Audio = 0	OK->Settings->Audio
	Advisory_Tones = 0	OK->Settings->Audio->Advisory Tones
	Ring_Tones = 0	OK->Settings->Audio->Ring Tones
	Volume = 0	OK->Settings->Audio->Ring Tones->Volume
	Melodies = 0	OK->Settings->Audio->Ring Tones->Melodies
	Display = 0	OK->Settings->Display
	Screen_Saver = 0	OK->Settings->Display->Screen Saver
	Wallpaper = 0	OK->Settings->Display->Wallpaper
	Display_Backlight = 0	OK->Settings->Display->Display Backlight
	Keypad_Light = 0	OK->Settings->Display->Keypad Light
	Time_Formate = 0	OK->Settings->Display->Time Format
	Date_Formate = 0	OK->Settings->Display->Date Format
	Input_Method = 0	OK->Settings->Display->Input Method

Section Header	Parameters and Default Value	Configuration Items on the Handset User Interface
[ GUI ]	Shortcut = 0	OK->Settings->Shortcut
	Soft_Left = 0	OK->Settings->Shortcut->History
	Soft_Right = 0	OK->Settings->Shortcut->Line Status
	Up = 0	OK->Settings->Shortcut->Intercom
	Down = 0	OK->Settings->Shortcut->Directory
	Left = 0	OK->Settings->Shortcut->Volume-
	Right = 0	OK->Settings->Shortcut->Volume+
	Language = 0	OK->Settings->Language
	Registration = 0	OK->Settings->Registration
	Register_Handset = 0	OK->Settings->Registration->Register Handset
	De_reg_Handset = 0	OK->Settings->Registration->De-reg. Handset
	Select_Base = 0	OK->Settings->Registration->Select Base
	Telephony = 0	OK->Settings->Telephony
	Auto_Answer = 0	OK->Settings->Telephony->Auto Answer
	Auto_Intercom = 0	OK->Settings->Telephony->Auto Intercom
	Default_Line = 0	OK->Settings->Telephony->Default Line
	Incoming_Lines = 02	OK->Settings->Telephony->Incoming Lines
	Speed_Dial = 0	OK->Settings->Telephony->Speed Dial
	Blacklist = 0	OK->Settings->Telephony->Caller Blacklist
	Account_Server = 12	OK->Settings->Telephony->Server
	SystemSettings= 0	OK->Settings->System Settings
	Network = 0	OK->Settings->System Settings->Network
	Handset_Reset = 0	OK->Settings->System Settings->Handset Reset
	Change_Base_PIN = 02	OK->Settings->System Settings->Change



Section Header	Parameters and Default Value	Configuration Items on the Handset User Interface
[ GUI ]		Base PIN
	Base_Reset = 02 (not applicable for W52P/W56P DECT IP phones)	OK->Settings->System Settings->Base Reset
	Base_Reset_Local_Cfg = 1 (02 for W52P/W56P DECT IP phones)	OK->Settings->System Settings->Base Reset->Reset local
	Base_Reset_Non_Static_Cfg = 1	OK->Settings->System Settings->Base Reset->Reset non-static
	Base_Reset_Static_Cfg = 1	OK->Settings->System Settings->Base Reset ->Reset static
	Base_Reset_User_And_Local_Cfg = 1	OK->Settings->System Settings->Base Reset ->Reset user & local
	Base_Reset_Factory_Cfg = 1	OK->Settings->System Settings->Base Reset ->Reset to factory
	Base_Restart = 02	OK->Settings->System Settings->Base Restart
	Auto_Provision = 02	OK->Settings->System Settings->Auto Provision
	RPS = 02	OK->Settings->System Settings->RPS
	Eco_Mode_Plus = 02 (0 for W60 DECT IP phones)	OK->Settings->System Settings->Eco Mode+
	Eco_Mode = 0	OK->Settings->System Settings->Eco Mode
	Repeater_Mode = 02 (0 for W60 DECT IP phones)	OK->Settings->System Settings->Repeater Mode
	HandsetName= 0	OK->Settings->Handset Name
	UpgradeFirmware= 2	OK->Settings->Upgrade Firmware
	Menu_History = 0	OK->History
	All_Calls= 0	OK->History->All Calls
	Missed_Calls= 0	OK->History->Outgoing Calls
	Outgoing_Calls= 0	OK->History->Missed Calls

Section Header	Parameters and Default Value	Configuration Items on the Handset User Interface
	Accepted_Calls= 0	OK->History->Accepted Calls
	Menu_Usermode = 0 (not applicable for W60 DECT IP phones)	OK->User Mode

## Appendix-B : Sample Configuration Files

### SIP-T58V/T58A/T56A/CP960 IP Phones

The default configuration item settings in factory WebItemsLevel.cfg for SIP-T58V/T58A/T56A IP phones running firmware version 80 or later are:

```
[ Status-Menu ]
Status-Basic  = 0
Status-RTP   = 0
Status-TalkStats = 0

[ Status ]
version = 0
network = 0
IPv4 = 0
IPv6 = 0
NetworkCommon = 0
AccountStatus = 0
Ext = 0

[ RTP-Status ]
rtcp-status = 12

[ Talk-Stats ]
talk-stats = 12

[ Account ]
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 2

[ Account-Register ]
switch-account = 0
```

```
account_status = 0
line_active = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 01
enabled-outbound-proxy-server = 2
outbound-proxy-server = 2
transport-item = 2
backup-outbound-proxy-server = 2
proxy-fallback-interval = 2
NAT_traversal = 2
sip_server = 2
```

[ Account-Basic ]

```
switch-account = 0
proxy_require = 2
send_anonymous = 1
anonymous_rejection_enabled = 0
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
send_anonymous_rejection_code = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
misscall-log = 0
auto-answer = 0
ring-type = 0
```

[ Account-Codec ]

```
switch-account = 0
codecs-group = 0
```

[ Account-Adv ]

```
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
subscribe-register = 2
```

```
MWI-items = 2
voice_mail = 2
voice_mail_display = 2
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
Call-Pull-Feature-Access-Code = 2
dialog-info-call-pickup = 2
BLF-list-URI = 2
BlfListCode = 2
BLFListBargeInCode = 2
BLF-List-Retrieve-Code = 2
BLA-number = 2
BLA-subscription-period = 2
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
enable-signal-encode = 2
conference-type = 2
conference-uri = 2
Earlymedia = 2
SIPServerType = 2
Music-ServerURI = 2
Direct-Call-Pickup-Code = 2
Group-Call-Pickup-Code = 2
Distinctive-Ring-Tones = 2
UnregisterOnReboot = 2
Out-Dialog-BLF = 2
RTCP-Collector-Name = 2
RTCP-Collector-Address = 2
RTCP-Collector-Port = 2
Number-Of-Linekey = 2
ACD-subscrip-period = 2
SRTP-Auth-Tag = 2

[ Network ]
network-basic = 0
network-pcport = 0
network-advanced = 2
```

```
shotlevel = 2
```

```
[ Network-Basic ]
```

```
ipaddress-mode = 0
```

```
ipv4config = 0
```

```
ipv6config = 0
```

```
wan-ppoe = 0
```

```
[ Network-PCPort ]
```

```
pcport-active = 0
```

```
[ Network-Advanced ]
```

```
LLDP-items = 2
```

```
CDP-items = 2
```

```
VLAN-items = 2
```

```
NAT-items = 2
```

```
port-link = 2
```

```
voice-QoS = 2
```

```
web-server = 2
```

```
8021x = 2
```

```
span-to-pc-port = 2
```

```
reg-surge-prev = 2
```

```
ICMPv6_Status = 2
```

```
open-VPN = 2
```

```
reserve-port = 2
```

```
[ DSSKey ]
```

```
linekey = 0
```

```
programmablekey = 0
```

```
extkey = 0
```

```
[ LineKey ]
```

```
line-key = 0
```

```
Enable-Page-Tips = 0
```

```
[ ProgramKey ]
```

```
programmable-key = 0
```

```
[ ExtKey ]
```

```
ext-key = 0
```

```
[ Features ]
```

```
features-forward = 0
```

```
features-general = 0
```

```
features-audio = 0
features-intercom = 0
features-transfer = 0
features-callpickup = 0
features-remote = 2
features-phonelock = 0
features-actionurl = 2
features-bluetooth = 0
features-powerled = 0
features-notifypop = 0
features-acd = 0
features-doorphone = 0

[ features-doorphone ]
switch_list = 0
device_model = 0
display_name = 0
phone_number = 0
unlock_pin = 0
full_screen = 0
send_audio = 0
send_video = 0
autovideoview_enable = 0
video_stream_httpurl = 0
device_model = 0
video_preview_enable = 0
auto_preview_enable = 0
authentication = 0
auth_username = 0
auth_password = 0

[ Forward&DND ]
head-forward = 0
forward-mode = 0
forward-account = 0

always-forward = 0
always-forward-enabled = 0
always-forward-target = 0
always-forward-OnCode = 0
always-forward-OffCode = 0
busy-forward = 0
busy-forward-enabled = 0
busy-forward-target = 0
```

busy-forward-OnCode = 0  
busy-forward-OffCode = 0  
NoAnswer-forward = 0  
NoAnswer-forward-enabled = 0  
NoAnswer-forward-ringtimes = 0  
NoAnswer-forward-target = 0  
NoAnswer-forward-OnCode = 0  
NoAnswer-forward-OffCode = 0  
DND = 0  
DND-Emergency = 0  
DND-Authorized-Numbers = 0  
DND-mode = 0  
DND-account = 0  
DND-Status = 0  
DND-OnCode = 0  
DND-OffCode = 0

forward-emergency = 0  
forward-authorized-numbers = 0

[ General-Information ]

call\_waiting = 0  
auto-redial = 0  
auto\_redial\_interval = 0  
auto\_redial\_times = 0  
key\_as\_send = 0  
reserve-pound = 2  
hotline-number = 0  
hotline-delay = 0  
busytone\_delay = 0  
return-code-refuse = 0  
return-code-DND = 0  
call\_completion = 0  
feature-key-synchronisation = 0  
TimeOut-for-DialNow = 0  
RFC-2543-Hold = 2  
use-outbound-in-dialog = 2  
IsDeal-180 = 2  
logon-wizard = 2  
PswPrefix = 0  
PswLength = 0  
PswDial = 0  
SaveCallHistory = 2  
SuppressDTMFDisplay = 1

```
SuppressDTMFDisplayDelay = 1
play-local-DTMF-tone = 0
DTMFRepetition = 0
MulticastCodec = 0
PlayHoldTone = 0
PlayHoldToneDelay = 0
AllowMute = 0
DualHeadset = 0
AutoAnswerDelay = 0
HeadsetPrior = 0
DTMFReplaceTran = 0
TranSendDTMF = 1
SendPoundKey = 0
FwdInternational = 0
Diversion-History-Info = 1
blf-led-mode = 0
ReLogOffTime = 2
call-number-filter = 0
allow-IP-call = 0
IP-direct-auto-answer = 0
callog-show-num = 0
voicemail-tone = 0
DHCP-hostname = 0
EnableAutoFavorite = 0
reboot-in-talking = 0
Hide-Feature-Access-Codes = 0
display-method-on-dialing = 2
callog-show-num = 0
auto-linekeys = 1
sip-trust-control = 2
enable-auto-answer-tone = 0
```

[ Features-Audio ]

```
call-waiting-tone = 0
button-sound = 0
redial_tone = 0
send-sound = 0
headset-send-volume = 1
handset-send-volume = 1
handfree-send-volume = 1
Ringer_Dev = 0
```

[ Features-Intercom ]

```
allow-intercom = 0
```



```
intercom-mute = 0
intercom-tone = 0
intercom-barge = 0

push-to-talk-mode

[ Features-Transfer ]
semi-attend-transfer = 0
blind-tran-onhook = 0
Semi-Attend-Trans-OnHook = 0
transfer-on-conference-hang-up = 0
TransferModeViaDsskey = 0

[ Features-Callpickup ]
Call-Pickup = 0
Call-Park = 0

[ Features-Remote ]
pushxml-server-addr = 2
XMLSIPNotify = 2
XMLBlockInCalling = 2
ActionURILimitIP = 2
CSTAControl = 2

[ Features-Lock ]
Lock_Enable = 0
keyboard_lock = 0
Phone_Unlock_PIN = 0
Phone_lock_time_out = 0
emergency_setting = 0

[ Features-ACD ]
ACD-auto-available = 2
ACD-auto-available-timer = 2

[ Features-ActionURL ]
setup-complete = 2
log-on = 2
log-off = 2
register-fail = 2
off-hook = 2
on-hook = 2
incoming-call = 2
outgoing-call = 2
```

call-establish = 2  
Call-Terminated = 2  
DND-On = 2  
DND-Off = 2  
Forward-On-Code = 2  
Forward-Off-Code = 2  
Busy-Forward-On = 2  
Busy-Forward-Off = 2  
No-Answer-Forward-On = 2  
No-Answer-Forward-Off = 2  
TransferCall = 2  
Blind-transfer-call = 2  
Attended-transfer-call = 2  
Hold = 2  
Unhold = 2  
Mute = 2  
Unmute = 2  
Missed-call = 2  
IPChange = 2  
IdletoBusy = 2  
BusytoIdle = 2  
RejectIncomingCall = 2  
AnswerNewInCall = 2  
TransferFailed = 2  
TransferFinished = 2  
ForwardIncomingCall = 2  
UCServer = 2  
ReportIP = 2  
AutopFinish = 2  
OpenCallWait = 2  
CloseCallWait = 2  
Headset = 2  
Handfree = 2  
CancelCallOut = 2  
RemoteBusy = 2  
CallRemoteCanceled = 2  
Held = 2  
Unheld = 2  
  
[ Features-Bluetooth ]  
bluetooth-active = 0  
  
[ Features-PowerLED ]  
common-power-light-on = 0

```
ring-power-light-flash = 0
mail-power-light-flash = 0
mute-power-light-flash = 0
hold-power-light-flash = 0
talk-power-light-flash = 0
misscall-power-light-flash = 0

[ Features-NotifyPop ]
Display-Voice-Mail-Popup = 0
Display-Missed-Call-Popup = 0
Display-Forward-Call-Popup = 0

[ Settings ]
settings-preference = 0
settings-datetime = 0
settings-calldisplay = 0
settings-upgrade = 0
settings-autop = 2
settings-config = 0
settings-dialplan = 2
settings-voice = 2
settings-ring = 2
settings-tones = 2
settings-softkey = 2
settings-tr069 = 2
settings-voicemonitoring = 2
settings-sip = 2
settings-video = 0
settings-powersaving = 0

[ settings-powersaving ]
enable = 0
office_Monday = 0
office_Tuesday = 0
office_Wednesday = 0
office_Thursday = 0
office_Friday = 0
office_Saturday = 0
office_Sunday = 0
office_timeout = 0
off_timeout = 0
user_input_ext_timeout = 0

[ Settings-Preference ]
```

```
web-language = 0
live-dialpad = 0
inter-digit-time = 0
backlight = 0
BacklightTime = 0
contrast_ctrl = 0
watchdog = 2
ring_type_setting = 0
Wallpaper = 0
ExpWallpaper = 0

[ Settings-PowerSaving ]
enable = 2
office_timeout = 0
off_timeout = 0
user_input_ext_timeout = 0
office_hour = 0
office_Monday = 0
office_Tuesday = 0
office_Wednesday = 0
office_Thursday = 0
office_Friday = 0
office_Saturday = 0
office_Sunday = 0
idle_timeout = 0

[ Time&Date ]
DHCP-Time = 0
time_zone = 0
NTP_priority = 0
prim_server = 0
sec_server = 0
update_interval = 0
daylight-time = 0
time_type = 0
daylight_date= 0
offset = 0
manual-time = 0
manual-time-settings = 0
time_format_setting = 0
date_format_setting = 0
location = 0

daylight_week =0
```

daylight\_day = 0

[ Settings-CallDisplay ]

Incoming-Call-Ringer-Animation = 0

Call-Display-Method = 0

[ Settings-Upgrade ]

version\_info = 0

reset\_to\_factory = 2

reset\_local\_config = 0

reboot\_device = 0

upgrade\_firmware = 0

version\_info = 0

reset = 0

reset\_local\_settings = 0

reset\_nonstatic\_settings = 0

reset\_static\_settings = 2

reset\_userdata = 0

reset\_to\_factory = 0

reset\_builtin\_sdcard = 0

reboot\_device = 0

upgrade\_firmware = 0

[ Settings-AutoProvision ]

pnp-active = 2

dhcp-active = 2

custom-option = 2

DHCP-Option-Value = 2

server-URL = 2

account = 2

password = 2

common-AES-key = 2

MAC-Oriented-AES-key = 2

zero\_active = 2

wait\_time = 2

poweron-active = 2

repeatedly-active = 2

repeat-interval = 2

weekly-active = 2

autop-time = 2

day-of-week = 2

btn-autop-now = 2

attempt-expired-time = 2

```
flexible-switch = 2
flexible-interval = 2
flexible-autotime = 2

[ Settings-Config ]
opt-configfile = 0
opt-factory-configfile = 0
export-cfg-config-file = 0
import-cfg-config-file = 0
pcap_trace  = 0
syslog  = 1
SystemLogLevel = 2
local-configfile = 1

[ Settings-DialPlan ]
replace-rule = 0
dial-now = 0
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0

[ Settings-Voice ]
echo-cancellation = 2
jitter-buffer = 2
noise-proof = 2

[ Settings-Ring ]
personal-ring = 2

[ Settings-Tones ]
tone-items = 2
tone-country = 2

[ Softkey ]
Custom_SoftKey = 2
SoftKey_Type = 2
SoftKey_Select = 2

[ TR069 ]
head = 2
```

```
EnableTR069 = 2
ACSUsername = 2
ACSPassword = 2
ACSURL = 2
EnablePeriodicInform = 2
PeriodicInformInterval = 2
RequestUsername = 2
RequestPassword = 2

[ Settings-VoiceMonitoring ]
RTCP-Session-Report = 2
RTCP-Interval-Report = 2
RTCP-Interval-Period = 2
RTCP-Warning-Moslq = 2
RTCP-Critical-Moslq = 2
RTCP-Warning-Delay = 2
RTCP-Critical-Delay = 2
Display-VQReport-On-Web = 2
Display-VQReport-On-UI = 2
RTCP-Report-Options = 2

[ Settings-SIP ]
sip-session-timer = 2
local-SIP-port = 2
TLS-SIP-Port = 2

[ Settings-Video ]
video-active = 0

[ Contacts ]
contacts-basic = 0
contacts-remote = 1
contacts-callinfo = 0
contacts-LDAP = 1
contacts-broadsoft = 0
contacts-multicastIP = 1
contacts-favorite = 0

[ LocalPhoneBook ]
contact-list = 0
all-contacts-control = 0
import-export-contacts = 0
btnImportCSV = 0
btnExportCSV = 0
```

```
btnImportXML = 0
btnExportXML = 0
opt-contacts = 0

[ Contacts-Remote ]
remote-phonebook-list = 1
SRemoteNameEnable = 1
SRemoteNameFlashTime = 1

[ PhoneCallInfo ]
call-control = 0
dialed-list-title = 0
dialed-list-content = 0
missed-list-title = 0
missed-list-content = 0
received-list-title = 0
received-list-content = 0
forwarded-list-title = 0
forwarded-list-content = 0

[ LDAP ]
enable-LDAP = 0
LDAP-name-filter = 0
LDAP-number-filter = 0
LDAP-TLS-Mode = 0
server-address = 0
port = 0
base = 0
user-name = 0
password = 0
maxhits = 0
LDAP-name-attributes = 0
LDAP-number-attributes = 0
LDAP-display-name = 0
protocol = 0
LDAP-lookup-for-incoming-call = 0
LDAP-lookup-for-callout = 0
LDAP-sorting-results = 0
LDAP-label = 0

[ Contacts-Broadsoft ]
Directotries = 1
XSI = 1
Directotries = 1
```



## [ MulticastIP ]

Receive\_Priority = 1

MulticastIPConfig = 1

PagePriorityActive = 1

PagingList = 1

## [ Contacts-Favorite ]

super-search = 0

## [ Security ]

password = 0

trusted\_cert = 2

server\_cert = 2

## [ TrustCerts ]

trust-certs-records = 2

btn-delete-certs = 2

only-accept-trusted-certs = 2

upload-trust-certs = 2

common-name-validation = 2

ca-certs = 2

## [ ServerCerts ]

server-certs-records = 2

server-certs-upload = 2

server-certs-device-cert = 2

## [ Apps]

broadsoft-XSI = 1

broadsoft-XMPP = 1

## [ Broadsoft ]

XSI = 1

Directotries = 1

XMPP-accout = 1

XMPP-username = 1

XMPP-password = 1

CallLog = 1

## [ HiddenSetting ]

custom-factory-config = 2

DND-Active = 2

Forward-Active = 2

```
Broadsoft-Active = 2
Redirect-Active = 2
UC-Active = 2
pushxml = 2
XSI-Active = 2

[ GUI ]
status = 0
status_list= 0
Status_IP = 0
Status_IPv6 = 0
Status_MAC = 0
Status_HW = 0
network = 0
Status_More_Phone = 0
Status_More_Account = 0
Status_More_RTP = 0
status_general = 0

features= 0
CallControl = 1
callcontrol_anywhere = 1
callcontrol_remoteoffice = 1
callcontrol_forward = 1
always-forward = 0
busy-forward = 0
NoAnswer-forward = 0
callcontrol_dnd = 1
callcontrol_hidenumber = 1
callcontrol_anonymousrejection = 1
callcontrol_simultaneoustring = 1
callcontrol_mobility =1
callcontrol_group_night_forward =1
callcontrol_callwaiting =1
callcontrol_forward_selective =1
callcontrol_executive =1
callcontrol_securityclassification =1
callcontrol_executive_assistant =1
call_waiting = 0
DSSKey = 0
key_as_send= 0
hotline-number = 0
Features_Anonymous = 0
Features_AutoRD = 0
```

```
intercom = 0
call_completion = 0
history_save = 2
multipaginglist = 2
time_zone = 0
Basic_Time_Manual = 0
display = 0
sound = 0
key_tone = 0
ring_type_setting = 0
unlock_pin = 0
bluetooth = 0
wifi = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 01
sip_server = 2
enabled-outbound-proxy-server = 2
outbound-proxy-server = 2
proxy-fallback-interval = 01
STUN_server = 2
auto-Answer = 0
Adv_Network = 0
wan_port_title = 0
VLAN-items = 2
wanport = 0
pcport = 2
dhcipvlan = 2
web-server = 2
8021x = 2
open-VPN = 2
open-lldp = 2
network_cdp = 2
network_nat = 2
keyboard_lock = 0
Adv_Reboot = 0
Adv_ResetToFac = 2
password = 0
autoprovision = 2
international-forward = 2
MSG_Voice = 0
viewvoicemail = 0
```

```
setvoicemail = 0
usermodeentry = 0
NAT_traversal = 2
broadsoft_contact_list = 1
callcontrol_initialacdstate = 1
callcontrol_setacdstate = 1
local_contact_list = 0
remote_contact_list = 0
broadsoft_contact_list = 1
blacklist_list = 0
local_call_log_list = 0
Adv_Account = 0
Basic_LANG = 0
Basic_Setting_BackLight = 0
Basic_Time_Format = 0
Basic_Time_SNTP = 0
Set_Adv = 0
Set_Basic = 0
dhcptimezone = 0
line_active = 0
dnd = 0
advanced_call_feature_default_account = 0
advanced_call_feature_list = 0
broadsoft_callog_list = 0
date_and_time_general = 0
bluetooth = 0
display_wallpaper = 0
reset_default = 0
usb_storage_property = 0
app_account = 0
ResetLocalConfig = 0
reset_configuration = 02
callcontrol_securityclassification = 0
ResetInternalSD = 0
ResetUserDataUserCfg = 0
ResetStaticConfig = 0
ResetNonStaticConfig = 0
Adv_ResetConfig = 0
Adv_AES = 2
```

## SIP VP-T49G IP Phones

The default configuration item settings in factory WebItemsLevel.cfg for SIP VP-T49G IP phones running firmware version 51.80.0.108 or later are:

**[ Status-Menu ]**

Status-Basic = 0

Status-RTP = 0

Status-TalkStats = 0

**[ Status ]**

version = 0

network = 0

IPv4 = 0

IPv6 = 0

NetworkCommon = 0

AccountStatus = 0

Ext = 0

**[ RTP-Status ]**

rtcp-status = 11

**[ Talk-Stats ]**

talk-stats = 0

**[ Account ]**

account-register = 0

account-basic = 0

account-codec = 0

account-adv = 0

account-direct=0

**[ Account-Register ]**

switch-account = 0

account\_status = 0

line\_active = 0

account\_label = 0

display\_name = 0

register\_name = 01

user\_name = 01

account\_password = 2

enabled-outbound-proxy-server = 01

outbound-proxy-server = 01

transport-item = 2

backup-outbound-proxy-server = 01

NAT\_traversal = 2

sip\_server = 2

proxy-fallback-interval = 01

```
[ Account-Basic ]
switch-account = 0
proxy_require = 0
send_anonymous = 1
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
anonymous_rejection_enabled = 0
send_anonymous_rejection_code = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
misscall-log = 0
auto-answer = 0
ring-type = 0
```

```
[ Account-Codec ]
switch-account = 0
codecs-group = 0
```

```
[ Account-Adv ]
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
MWI-items = 2
voice_mail = 0
voice_mail_display = 2
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
Call-Pull-Feature-Access-Code = 2
dialog-info-call-pickup = 2
BLF-list-URI = 2
BlfListCode = 2
```

BLFListBargeInCode = 2  
BLF-List-Retrieve-Code = 2  
BLA-number = 2  
BLA-subscription-period = 2  
SIP-send-MAC = 2  
SIP-send-line = 2  
SIP-Reg-retry-timer = 2  
conference-type = 2  
conference-uri = 2  
Earlymedia = 2  
SIPServerType = 2  
Music-ServerURI = 2  
Direct-Call-Pickup-Code = 2  
Group-Call-Pickup-Code = 2  
Distinctive-Ring-Tones = 2  
UnregisterOnReboot = 2  
Out-Dialog-BLF = 2  
RTCP-Collector-Name = 2  
RTCP-Collector-Address = 2  
RTCP-Collector-Port = 2  
Number-Of-Linekey = 1  
subscribe-register = 2

[ Network ]

network-basic = 0  
network-pcport = 0  
network-advanced = 0  
network-wifi = 0  
shotlevel = 0

[ Network-Basic ]

ipaddress-mode = 2  
ipv4config = 2  
ipv6config = 2  
wan-ppoe = 2

[ Network-PCPort ]

pcport-active = 0

[ Network-Advanced ]

LLDP-items = 2  
CDP-items = 2  
VLAN-items = 2  
NAT-items = 2

```
port-link = 2
voice-QoS = 2
web-server = 2
8021x = 2
span-to-pc-port = 2
reg-surge-prev = 2
ICMPv6_Status = 2
open-VPN = 2
reserve-port = 0

[Network-Wifi]
wifi-active = 2
wifi-list = 2
wifi-label = 2
wifi-ssid = 2
wifi-mode = 2
wifi-type = 2
wifi-psk = 2

wifi-edit = 2
wifi-status-detection-timeout = 0

[ DSSKey ]
memorykey = 0
linekey = 0
programmablekey = 0
extkey = 0

[ MemoryKey ]
memory-key = 0

[ LineKey ]
line-key = 0
Enable-Page-Tips = 0
Label-Length = 0
Label-Length-Shorten = 0

[ ProgramKey ]
programmable-key = 0

[ ExtKey ]
ext-key = 0

[ Features ]
```



```
features-forward = 0
features-general = 0
features-audio = 0
features-intercom = 0
features-transfer = 0
features-callpickup = 0
features-remote = 0
features-phonelock = 0
features-actionurl = 0
features-bluetooth = 0
features-powerled = 0
features-notifypop = 0

[ Forward&DND ]
head-forward = 0
forward-mode = 0
forward-account = 0

always-forward = 0
always-forward-enabled = 0
always-forward-target = 0
always-forward-OnCode = 0
always-forward-OffCode = 0
busy-forward = 0
busy-forward-enabled = 0
busy-forward-target = 0
busy-forward-OnCode = 0
busy-forward-OffCode = 0
NoAnswer-forward = 0
NoAnswer-forward-enabled = 0
NoAnswer-forward-ringtimes = 0
NoAnswer-forward-target = 0
NoAnswer-forward-OnCode = 0
NoAnswer-forward-OffCode = 0
DND = 0
DND-Emergency = 0
DND-Authorized-Numbers = 0
DND-mode = 01
DND-account = 01
DND-Status = 01
DND-OnCode = 01
DND-OffCode = 01

forward-emergency = 0
```

forward-authorized-numbers = 0

[ General-Information ]

call\_waiting = 0

auto-redial = 0

auto\_redial\_interval = 0

auto\_redial\_times = 0

key\_as\_send = 0

reserve-pound = 2

hotline-number = 0

hotline-delay = 0

busytone\_delay = 0

return-code-refuse = 0

return-code-DND = 0

call\_completion = 0

feature-key-synchronisation = 0

TimeOut-for-DialNow = 0

RFC-2543-Hold = 2

use-outbound-in-dialog = 2

IsDeal-180 = 2

logon-wizard = 2

PswPrefix = 2

PswLength = 2

PswDial = 2

SaveCallHistory = 2

SuppressDTMFDisplay = 1

SuppressDTMFDisplayDelay = 1

play-local-DTMF-tone = 0

DTMFRepetition = 0

MulticastCodec = 0

PlayHoldTone = 0

PlayHoldToneDelay = 0

AllowMute = 0

DualHeadset = 1

AutoAnswerDelay = 0

HeadsetPrior = 0

DTMFReplaceTran = 0

TranSendDTMF = 1

SendPoundKey = 0

FwdInternational = 0

Diversion-History-Info = 1

allow-trans-exist-call = 0

ReLogOffTime = 2

call-number-filter = 0

```
Use_Logo = 0
upload_logo = 0
allow-IP-call = 0
IP-direct-auto-answer = 0
calllog-show-num = 0
voicemail-tone = 0
DHCP-hostname = 0
EnableAutoFavorite = 0
reboot-in-talking = 0
Hide-Feature-Access-Codes = 0
display-method-on-dialing = 2
cloud_activae = 0
calllog-show-num = 0
auto-linekeys = 1
sip-trust-control = 2
enable-auto-answer-tone = 0

[ Features-Audio ]
call-waiting-tone = 0
button-sound = 0
redial_tone = 0
send-sound = 0
headset-send-volume = 1
handset-send-volume = 1
handfree-send-volume = 1
Ringer_Dev = 0

[ Features-Intercom ]
allow-intercom = 0
intercom-mute = 0
intercom-tone = 0
intercom-barge = 0

[ Features-Transfer ]
semi-attend-transfer = 0
blind-tran-onhook = 0
Semi-Attend-Trans-OnHook = 0
transfer-on-conference-hang-up = 0
TransferModeViaDsskey = 0

[ Features-Callpickup ]
Call-Pickup = 0
Call-Park = 0
```

## [ Features-Remote ]

pushxml-server-addr = 2

XMLSIPNotify = 2

XMLBlockInCalling = 1

ActionURILimitIP = 2

## [ Features-Lock ]

Lock\_Enable = 2

keyboard\_lock = 2

Phone\_Unlock\_PIN = 2

Phone\_lock\_time\_out = 2

emergency\_setting = 2

## [ Features-ACD ]

ACD-auto-available = 2

ACD-auto-available-timer = 2

## [ Features-SMS ]

send-sms = 0

## [ Features-ActionURL ]

setup-complete = 2

log-on = 2

log-off = 2

register-fail = 2

off-hook = 2

on-hook = 2

incoming-call = 2

outgoing-call = 2

call-establish = 2

Call-Terminated = 2

DND-On = 2

DND-Off = 2

Forward-On-Code = 2

Forward-Off-Code = 2

Busy-Forward-On = 2

Busy-Forward-Off = 2

No-Answer-Forward-On = 2

No-Answer-Forward-Off = 2

TransferCall = 2

Blind-transfer-call = 2

Attended-transfer-call = 2

Hold = 2

Unhold = 2

```
Mute = 2
Unmute = 2
Missed-call = 2
IPChange = 2
IdletoBusy = 2
BusytoIdle = 2
RejectIncomingCall = 2
AnswerNewInCall = 2
TransferFailed = 2
TransferFinished = 2
ForwardIncomingCall = 2
UCServer = 2
ReportIP = 2
AutopFinish = 2
OpenCallWait = 2
CloseCallWait = 2
Headset = 2
Handfree = 2
CancelCallOut = 2
RemoteBusy = 2
CallRemoteCanceled = 2

[ Features-Bluetooth ]
bluetooth-active = 0

[ Features-PowerLED ]
common-power-light-on = 0
ring-power-light-flash = 0
mail-power-light-flash = 0
mute-power-light-flash = 0
hold-power-light-flash = 0
talk-power-light-flash = 0

[ Features-NotifyPop ]
Display-Voice-Mail-Popup = 0
Display-Missed-Call-Popup = 0
Display-Forward-Call-Popup = 0
Display-Text-Message-Popup = 0

[ Settings ]
settings-preference = 0
settings-datetime = 0
settings-calldisplay = 0
settings-upgrade = 0
```

```
settings-autop = 0
settings-config = 0
settings-dialplan = 0
settings-voice = 0
settings-ring = 1
settings-tones = 0
settings-softkey = 2
settings-tr069 = 2
settings-voicemonitoring = 0
settings-sip = 1
settings-camera = 0
settings-video = 0
settings-powersaving = 0
```

[ Settings-Preference ]

```
web-language = 0
live-dialpad = 0
inter-digit-time = 0
UnusedBackLight = 0
backlight = 0
BacklightTime = 0
contrast_ctrl = 0
watchdog = 2
ring_type_setting = 0
Wallpaper = 0
screen-saver-wait-time = 0
screen-saver-type = 0
```

[ Time&Date ]

```
DHCP-Time = 0
time_zone = 0
NTP_priority = 0
prim_server = 0
sec_server = 0
update_interval = 0
daylight-time = 0
time_type = 0
daylight_date = 0
offset = 0
manual-time = 0
manual-time-settings = 0
time_format_setting = 0
date_format_setting = 0
location = 0
```

## [ Settings-CallDisplay ]

Display-Contact-Photo = 0

Incoming-Call-Ringer-Animation = 0

Call-Display-Method = 0

## [ Settings-Upgrade ]

version\_info = 0

reset\_to\_factory = 1

reset\_local\_config = 0

reboot\_device = 0

upgrade\_firmware = 1

## [ Settings-AutoProvision ]

pnp-active = 2

dhcp-active = 2

custom-option = 2

DHCP-Option-Value = 2

server-URL = 2

account = 2

password = 2

common-AES-key = 2

MAC-Oriented-AES-key = 2

zero\_active = 2

wait\_time = 2

poweron-active = 2

repeatedly-active = 2

repeat-interval = 2

weekly-active = 2

autop-time = 2

day-of-week = 2

btn-autop-now = 2

attempt-expired-time = 2

## [ Settings-Config ]

opt-configfile = 1

opt-factory-configfile = 2

export-cfg-config-file = 2

import-cfg-config-file = 2

pcap\_trace = 1

syslog = 1

SystemLogLevel = 2

ExportAllDiagnosticFiles = 2

## [ Settings-DialPlan ]

replace-rule = 0  
dial-now = 0  
area-code = 0  
block-out = 0  
replace-rule-control = 0  
dial-now-control = 0  
area-code-control = 0  
block-out-control = 0

## [ Settings-Voice ]

echo-cancellation = 0  
jitter-buffer = 0

## [ Settings-Ring ]

personal-ring = 1

## [ Settings-Tones ]

tone-items = 0

## [ Softkey ]

Custom\_SoftKey = 2  
SoftKey\_Type = 2  
SoftKey\_Select = 2

## [ TR069 ]

head = 2  
EnableTR069 = 2  
ACSUsername = 2  
ACSPassword = 2  
ACSURL = 2  
EnablePeriodicInform = 2  
PeriodicInformInterval = 2  
RequestUsername = 2  
RequestPassword = 2

## [ Settings-VoiceMonitoring ]

RTCP-Session-Report = 2  
RTCP-Interval-Report = 2  
RTCP-Interval-Period = 2  
RTCP-Warning-Moslq = 2  
RTCP-Critical-Moslq = 2  
RTCP-Warning-Delay = 2  
RTCP-Critical-Delay = 2



Display-VQReport-On-Web = 2

Display-VQReport-On-UI = 2

RTCP-Report-Options = 2

[ Settings-SIP ]

sip-session-timer = 2

local-SIP-port = 2

TLS-SIP-Port = 2

[ Settings-Camera ]

scene-mode = 2

manual-settings = 2

exposure = 2

status-bar-icon = 2

[ Settings-Video ]

video-active = 0

auto-start-video = 0

auto-answer-video-mute = 0

uplink-bandwidth = 2

downlink-bandwidth = 2

[ Settings-PowerSaving ]

office\_hour = 2

office\_Monday = 2

office\_Tuesday = 2

office\_Wednesday = 2

office\_Thursday = 2

office\_Friday = 2

office\_Saturday = 2

office\_Sunday = 2

idle\_timeout = 2

office\_timeout = 2

off\_timeout = 2

user\_input\_ext\_timeout = 2

[ Contacts ]

contacts-basic = 0

contacts-remote = 0

contacts-callinfo = 0

contacts-LDAP = 0

contacts-broadsoft = 0

contacts-multicastIP = 0

contacts-favorite = 0

```
[ LocalPhoneBook ]
contact-list = 0
all-contacts-control = 0
import-export-contacts = 1
btnImportCSV = 1
btnExportCSV = 1
btnImportXML = 1
btnExportXML = 1
opt-contacts = 0

[ Contacts-Remote ]
remote-phonebook-list = 0
SRemoteNameEnable = 0
SRemoteNameFlashTime = 0

[ PhoneCallInfo ]
call-control = 0
dialed-list-title = 0
dialed-list-content = 0
missed-list-title = 0
missed-list-content = 0
received-list-title = 0
received-list-content = 0
forwarded-list-title = 0
forwarded-list-content = 0

[ LDAP ]
enable-LDAP = 0
LDAP-name-filter = 0
LDAP-number-filter = 0
LDAP-TLS-Mode = 0
server-address = 0
port = 0
base = 0
user-name = 0
password = 0
maxhits = 0
LDAP-name-attributes = 0
LDAP-number-attributes = 0
LDAP-display-name = 0
protocol = 0
LDAP-lookup-for-incoming-call = 0
LDAP-lookup-for-callout = 0
```

LDAP-sorting-results = 0

[ Contacts-Broadsoft ]

Directotries = 0

XSI = 0

[ MulticastIP ]

Receive\_Priority = 0

MulticastIPConfig = 0

PagePriorityActive = 0

PagingList = 0

[ Contacts-Favorite ]

contacts-group = 0

super-search = 0

[ Security ]

password = 0

trusted\_cert = 2

server\_cert = 2

[ Password ]

set-password = 0

[ TrustCerts ]

trust-certs-records = 2

btn-delete-certs = 2

only-accept-trusted-certs = 2

upload-trust-certs = 2

common-name-validation = 2

ca-certs = 2

[ ServerCerts ]

server-certs-records = 2

server-certs-upload = 2

server-certs-device-cert = 2

[ HiddenSetting ]

custom-factory-config = 2

DND-Active = 2

Forward-Active = 2

Broadsoft-Active = 1

Redirect-Active = 1

UC-Active = 1

```
pushxml = 2

[ GUI ]
status_list= 0
Status_IP = 11
Status_IPv6 = 11
Status_MAC = 21
Status_HW = 01
Status_More = 01
network = 0
Status_More_Phone = 0
Status_More_Account = 0
Status_More_RTP = 02
status_general = 02

features= 02
CallControl = 0
callcontrol_anywhere = 11
callcontrol_remoteoffice = 11
callcontrol_forward = 11
always-forward = 1
busy-forward = 1
NoAnswer-forward = 1
callcontrol_dnd= 11
callcontrol_hidenummer = 11
callcontrol_anonymousrejection = 11
callcontrol_simultaneousring = 11

call_waiting = 1
DSSKey = 1
key_as_send= 12
hotline-number = 1
Features_Anonymous = 1
Features_AutoRD = 1
intercom = 1
call_completion = 1
history_save= 2

multipaginglist = 10

Main_Settings = 0

time_zone = 0
Basic_Time_Manual = 0
```

```
display = 10
sound = 1
key_tone = 1
ring_type_setting = 1
unlock_pin= 2

account_label = 02
display_name = 02
register_name = 02
user_name = 01
account_password = 01
sip_server = 01
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
STUN_server = 02
auto-Answer= 1
Adv_Network = 0
wan_port_title = 02
VLAN-items = 02
wanport = 02
pcport = 02
dhcplan = 02
web-server = 02
8021x = 02
open-VPN = 02
open-lldp = 02
network_cdp = 02
network_nat = 02
softkey Label = 02
keyboard_lock = 02
Adv_Reboot = 02
Adv_ResetToFac = 2
password = 0
Adv_AES = 02
autoprovision = 02
international-forward = 02

SMS= 12
MSG_Voice = 1
viewvoicemail = 1
setvoicemail = 1
usermodeentry = 0
NAT_traversal = 02
contrast_ctrl = 0
```

```
callcontrol_initialacdstate = 11
callcontrol_setacdstate = 11

Main_Contacts = 0
local_contact_list = 0
remote_contact_list = 0
broadsoft_contact_list = 0
blacklist_list = 0

call_info= 0
local_call_log_list = 01

Adv_Account = 2
Basic_LANG = 0
Basic_Setting_BackLight = 0
Basic_Time_Format = 0
Basic_Time_SNTP = 0
MSG_Text = 0
SMS_Draftbox = 0
SMS_Inbox = 0
SMS_NEW = 0
SMS_Outbox = 0
SMS_Sentbox = 0
Set_Adv = 0
Set_Basic = 0
dhcptimezone = 0
line_active = 2
status = 0
dnd= 0
advanced_call_feature_default_account = 2
advanced_call_feature_general = 1
advanced_call_feature_list = 1
broadsoft_callog_list = 0
date_and_time_general = 0
display_wallpaper = 1
reset_default = 0
bluetooth = 1
wifi = 2

camera_setting_interface = 00
usb_interface = 00
usb_browse_audio = 00
usb_browse_video = 00
```

```

usb_browse_photo = 00
usb_storage_property = 00
hdmi = 00
video_setting_interface = 00
proxy-fallback-interval = 01

```

## SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP920 IP Phones

The default configuration item settings in factory WebItemsLevel.cfg for SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2 IP phones running firmware version 83 or later are:

```

[ Status-Menu ]
Status-Basic  = 0
Status-RTP   = 0

[ Status ]
version =0
DeviceCertificate =0
network =0
IPv4 =0
NetworkCommon =0
IPv6 =0
AccountStatus =0
Ext =0

[ Account ]
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 2

[ Account-Register ]
switch-account =0
account_status =0
line_active =0
account_label =0
display_name =0
register_name =01
user_name =01

```

```
account_password =01
sip_server =2
sip_server2 =2
sip_server_host_addr =0
sip_server_host_port =0
sip_server_transport =0
sip_server_expires =0
sip_server_retrycounts =0
sip_server2_host_addr = 0
sip_server2_host_port =0
sip_server2_transport = 0
sip_server2_expires = 0
sip_server2_retrycounts = 0
enabled-outbound-proxy-server =2
outbound-proxy-server =2
outbound-proxy-server-port =2
backup-outbound-proxy-server =2
backup-outbound-proxy-server-addr =2
backup-outbound-proxy-server-port =2
proxy-fallback-interval =2
NAT_traversal =2
```

[ Account-Basic ]

```
switch-account =0
proxy_require =2
send_anonymous =1
anonymous_rejection_enabled =0
anonymous_call_enabled =0
anonymous_call_OnCode =1
anonymous_call_OffCode =1
send_anonymous_rejection_code =0
anonymous_rejection_OnCode =1
anonymous_rejection_OffCode =1
misscall-log =0
auto-answer =0
ring-type =0
```

[ Account-Codec ]

```
switch-account = 0
codecs-group = 0
```

[ Account-Adv ]

```
switch-account = 0
udp-keep-alive-type =2
```



```
udp-keep-alive-interval =2
rport = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
subscribe-register =2
MWI-items = 2
voice_mail = 2
voice_mail_display =2
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
BLF-list-URI = 2
BlfListCode = 2
BLFListBargeInCode = 2
BLF-List-Retrieve-Code = 2
share-line =2
dialog-info-call-pickup =2
BLA-number = 2
BLA-subscription-period = 2
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
conference-type = 2
conference-uri = 2
ACD-subscrip-period = 2
Earlymedia = 2
SIPServerType = 2
Music-ServerURI = 2
Direct-Call-Pickup-Code = 2
Group-Call-Pickup-Code = 2
Distinctive-Ring-Tones = 2
UnregisterOnReboot = 2
Out-Dialog-BLF = 2
RTCP-Collector-Name = 2
RTCP-Collector-Address = 2
RTCP-Collector-Port = 2
Number-Of-Linekey = 2
Call-Pull-Feature-Access-Code = 2
UDP_keep-alive = 2
```

## [ Network ]

network-basic = 0  
network-pcport = 0  
network-advanced = 2  
network-nat = 2  
network-wifi = 0  
network-diagnosis = 0

## [ Network-Basic ]

ipaddress-mode = 0  
ipv4config = 0  
ipv6config = 0

## [ Network-PCPort ]

pcport-active = 0

## [ Network-Nat ]

manual = 2  
manual-switch = 2  
manual-ip = 2  
ICE = 2  
ICE-switch = 2  
STUN = 2  
STUN-switch = 2  
STUN-server = 2  
STUN-port = 2  
TURN = 2  
TURN-switch = 2  
TURN-server = 2  
TURN-port = 2  
TURN-username = 2  
TURN-password = 2

## [ Network-Advanced ]

LLDP-items = 2  
CDP-items = 2  
VLAN-items = 2  
port-link = 2  
voice-QoS = 2  
local-RTP-port = 2  
web-server = 2  
8021x = 2  
span-to-pc-port = 2

```
reg-surge-prev = 2
ICMPv6_Status = 2
open-VPN = 2

[ Network-Wifi ]
wifi-active = 0
wifi-list = 0
wifi-label = 0
wifi-ssid = 0
wifi-mode = 0
wifi-type = 0
wifi-user-name = 0
wifi-psk = 0

[ DSSKey ]
linekey = 0
programmablekey = 0
extkey = 0

[ LineKey ]
line-key = 0
Enable-Page-Tips = 0
Label-Length = 0

[ ProgramKey ]
programmable-key = 0

[ ExtKey ]
ext-key = 0

[ Features ]
features-forward = 0
features-general = 0
features-audio = 0
features-intercom = 0
features-transfer = 0
features-callpickup = 0
features-remote = 2
features-phonelock = 0
features-acd = 2
features-sms = 0
features-actionurl = 2
features-bluetooth = 0
features-poweredled = 0
```

features-notifypop = 0

[ Forward&DND ]

head-forward = 0

forward-emergency = 0

forward-authorized-numbers = 0

forward-mode = 0

forward-account = 0

always-forward = 0

always-forward-enabled = 0

always-forward-target = 0

always-forward-OnCode = 0

always-forward-OffCode = 0

busy-forward = 0

busy-forward-enabled = 0

busy-forward-target = 0

busy-forward-OnCode = 0

busy-forward-OffCode = 0

NoAnswer-forward = 0

NoAnswer-forward-enabled = 0

NoAnswer-forward-ringtimes = 0

NoAnswer-forward-target = 0

NoAnswer-forward-OnCode = 0

NoAnswer-forward-OffCode = 0

DND = 0

DND-Emergency = 0

DND-Authorized-Numbers = 0

DND-mode = 0

DND-account = 0

DND-Status = 0

DND-OnCode = 0

DND-OffCode = 0

[ General-Information ]

call\_waiting = 0

auto-redial = 0

auto\_redial\_interval = 0

auto\_redial\_times = 0

key\_as\_send = 0

reserve-pound = 2

hotline-number = 0

hotline-delay = 0

busytone\_delay = 0

```
return-code-refuse = 0
return-code-DND = 0
call_completion = 0
TimeOut-for-DialNow = 0
RFC-2543-Hold = 2
use-outbound-in-dialog = 2
IsDeal-180 = 2
logon-wizard = 2
PswPrefix = 0
PswLength = 0
PswDial = 0
SaveCallHistory = 2
SuppressDTMFDisplay = 1
SuppressDTMFDisplayDelay = 1
play-local-DTMF-tone = 0
DTMFRepetition = 0
MulticastCodec = 0
PlayHoldTone = 0
PlayHoldToneDelay = 0
PlayHoldToneInterval = 0
PlayHeldTone = 0
PlayHeldToneDelay = 0
PlayHeldToneInterval = 0
AllowMute = 0
DualHeadset = 0
AutoAnswerDelay = 0
enable-auto-answer-tone = 0
HeadsetPrior = 0
DTMFReplaceTran = 0
TranSendDTMF = 1
SendPoundKey = 0
FwdInternational = 0
Diversion-History-Info = 1
allow-trans-exist-call = 0
blf-led-mode = 0
ReLogOffTime = 2
call-number-filter = 0
Use_Logo = 0
upload_logo = 0
sip-trust-control = 2
allow-IP-call = 0
IP-direct-auto-answer = 0
voicemail-tone = 0
DHCP-hostname = 0
```

```
reboot-in-talking = 0
Hide-Feature-Access-Codes = 0
display-method-on-dialing = 2
callog-show-num = 0
auto-linekeys = 1
EnableAutoFavorite = 0

[ Features-Audio ]
call-waiting-tone = 0
button-sound = 0
send-sound = 0
redial_tone = 0
headset-send-volume = 1
handset-send-volume = 1
handfree-send-volume = 1
Ringer_Dev = 0

[ Features-Intercom ]
allow-intercom = 0
intercom-mute = 0
intercom-tone = 0
intercom-barge = 0
push-to-talk-mode = 0

[ Features-Transfer ]
semi-attend-transfer = 0
blind-tran-onhook = 0
Semi-Attend-Trans-OnHook = 0
transfer-on-conference-hang-up = 0
TransferModeViaDsskey = 0

[ Features-Callpickup ]
Call-Pickup = 0
Call-Park = 0

[ Features-Remote ]
pushxml-server-addr = 2
XMLSIPNotify = 2
XMLBlockInCalling = 2
ActionURLimitIP = 2
CSTAControl = 2
pushxml-user-name=2
pushxml-password=2
```

## [ Features-Lock ]

Lock\_Enable = 0

keyboard\_lock = 0

Phone\_Unlock\_PIN = 0

Phone\_lock\_time\_out = 0

emergency\_setting = 0

## [ Features-ACD ]

ACD-auto-available = 2

ACD-auto-available-timer = 2

## [ Features-ActionURL ]

setup-complete = 2

log-on = 2

log-off = 2

register-fail = 2

off-hook = 2

on-hook = 2

incoming-call = 2

outgoing-call = 2

call-establish = 2

Call-Terminated = 2

DND-On = 2

DND-Off = 2

Forward-On-Code = 2

Forward-Off-Code = 2

Busy-Forward-On = 2

Busy-Forward-Off = 2

No-Answer-Forward-On = 2

No-Answer-Forward-Off = 2

TransferCall = 2

Blind-transfer-call = 2

Attended-transfer-call = 2

Hold = 2

Unhold = 2

Mute = 2

Unmute = 2

Missed-call = 2

IPChange = 2

IdletoBusy = 2

BusytoIdle = 2

RejectIncomingCall = 2

AnswerNewInCall = 2

TransferFailed = 2

TransferFinished = 2  
ForwardIncomingCall = 2  
UCServer = 2  
ReportIP = 2  
AutopFinish = 2  
OpenCallWait = 2  
CloseCallWait = 2  
Headset = 2  
Handfree = 2  
CancelCallOut = 2  
RemoteBusy = 2  
CallRemoteCanceled = 2  
PeripheralInformation = 2

[ Features-Bluetooth ]  
bluetooth-active = 0

[ Features-PowerLED ]  
common-power-light-on = 0  
ring-power-light-flash = 0  
mail-power-light-flash = 0  
mute-power-light-flash = 0  
hold-power-light-flash = 0  
talk-power-light-flash = 0  
misscall-power-light-flash = 0

[ Features-NotifyPop ]  
Display-Voice-Mail-Popup = 0  
Display-Missed-Call-Popup = 0  
Display-Forward-Call-Popup = 0  
Display-Text-Message-Popup = 0

[ Settings ]  
settings-preference = 0  
settings-datetime = 0  
settings-callldisplay = 0  
settings-upgrade = 0  
settings-autop = 2  
settings-config = 0  
settings-dialplan = 2  
settings-voice = 2  
settings-ring = 2  
settings-tones = 2  
settings-softkey = 2



```
settings-tr069 = 2
settings-voicemonitoring = 2
settings-sip = 2
settings-powersaving = 0

[ Settings-Preference ]
web-language =0
live-dialpad =0
inter-digit-time =0
transparency =0
UnusedBackLight =0
backlight =0
BacklightTime =0
contrast_ctrl =0
watchdog =2
ring_type_setting =0
Wallpaper =0
ScreenSaver =0
ScreenSaverWaitTime =0
ScreenSaverDisplayClock =0
ScreenSaverType =0
ScreenSaverList =0
ScreenSaverUpload =0
ScreenSaverXmlBrowserUrl =0

[ Time&Date ]
DHCP-Time = 0
manual-time =0
manual-time-settings =0
time_zone = 0
daylight-time =0
location =0
time_type =0
daylight_date=0
offset =0
NTP_priority = 0
prim_server = 0
sec_server = 0
update_interval = 0
time_format_setting = 0
date_format_setting = 0

[ Settings-CallDisplay ]
Display-Contact-Photo = 0
```

Incoming-Call-Ringer-Animation = 0

Call-Display-Method = 0

[ Settings-Upgrade ]

version\_info = 0

reset = 0

reset\_local\_settings = 0

reset\_nonstatic\_settings = 0

reset\_static\_settings = 2

reset\_userdata = 0

reset\_to\_factory = 2

reboot\_device = 0

upgrade\_firmware = 0

[ Settings-AutoProvision ]

pnip-active =2

dhcp-active =2

custom-option =2

DHCP-Option-Value =2

server-URL =2

account =2

password =2

attempt-expired-time =2

common-AES-key =2

MAC-Oriented-AES-key =2

zero\_active =2

wait\_time =2

poweron-active =2

repeatly-active =2

repeat-interval =2

weekly-active =2

weekly-upgrade-interval =2

inactivity-time-expire =2

autop-time =2

day-of-week =2

flexible-switch =2

flexible-interval =2

flexible-autoptime =2

btn-autop-now =2

custom-option-ipv6=0

[ Settings-Config ]

opt-configfile =0

opt-factory-configfile =0

```
export-cfg-config-file =0
import-cfg-config-file =0
pcap_trace =0
Local_Logging =0
Local_Log_Switch =0
Local_Log_Level =0
Local_Log_Max_File_Size =0
Local_Log_Export =0
Syslog_Switch =2
Syslog_Server =2
Syslog_Transport_Type =2
Syslog_Level =2
Syslog_Facility =2
Syslog_Prepended_Mac =2
ExportAllDiagnosticFiles =0
```

[ Settings-DialPlan ]

```
replace-rule = 0
dial-now = 0
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0
```

[ Settings-Voice ]

```
echo-cancellation = 2
jitter-buffer = 2
```

[ Settings-Ring ]

```
personal-ring = 2
```

[ Settings-Tones ]

```
tone-items = 2
tone-country = 2
```

[ Softkey ]

```
Custom_SoftKey = 2
SoftKey_Type = 2
SoftKey_Select = 2
Custom_SoftKey_List=2
```

## [ TR069 ]

head = 2

EnableTR069 = 2

ACSUsername = 2

ACSPassword = 2

ACSURL = 2

EnablePeriodicInform = 2

PeriodicInformInterval = 2

RequestUsername = 2

RequestPassword = 2

## [ Settings-VoiceMonitoring ]

RTCP-Session-Report =2

RTCP-Interval-Report =2

RTCP-Interval-Period =2

RTCP-Warning-Moslq =2

RTCP-Critical-Moslq =2

RTCP-Warning-Delay =2

RTCP-Critical-Delay =2

Display-VQReport-On-Web =2

Display-VQReport-On-UI =2

Voice-RTCP-XR-REPORT =2

RTCP-Report-Options =2

## [ Settings-SIP ]

sip-session-timer = 2

local-SIP-port = 2

TLS-SIP-Port = 2

## [ Settings-PowerSaving ]

enable = 0

office\_hour = 0

office\_Monday = 0

office\_Tuesday = 0

office\_Wednesday = 0

office\_Thursday = 0

office\_Friday = 0

office\_Saturday = 0

office\_Sunday = 0

idle\_timeout = 0

office\_timeout = 0

off\_timeout = 0

user\_input\_ext\_timeout = 0

## [ Contacts ]

contacts-basic = 0  
contacts-remote = 1  
contacts-callinfo = 0  
contacts-LDAP = 1  
contacts-multicastIP = 1  
contacts-favorite = 0

## [ LocalPhoneBook ]

contact-list = 0  
all-contacts-control = 0  
import-export-contacts = 0  
btnImportCSV = 0  
btnExportCSV = 0  
btnImportXML = 0  
btnExportXML = 0  
opt-contacts = 0

## [ Contacts-Remote ]

remote-phonebook-list = 1  
SRemoteNameEnable = 1  
SRemoteNameFlashTime = 1

## [ PhoneCallInfo ]

call-control = 0  
dialed-list = 0  
missed-list = 0  
received-list = 0  
forwarded-list = 0

## [ LDAP ]

enable-LDAP = 0  
LDAP-name-filter = 0  
LDAP-number-filter = 0  
LDAP-TLS-Mode = 0  
server-address = 0  
port = 0  
base = 0  
user-name = 0  
password = 0  
maxhits = 0  
LDAP-name-attributes = 0  
LDAP-number-attributes = 0

```
LDAP-display-name = 0
protocol = 0
LDAP-lookup-for-incoming-call = 0
LDAP-lookup-for-callout = 0
LDAP-sorting-results = 0
LDAP-customize_label=0
```

[ MulticastIP ]

```
Receive_Priority = 1
MulticastIPConfig = 1
PagePriorityActive = 1
PagingList = 1
Ignore_DND = 2
```

[ Contacts-Favorite ]

```
contacts-group = 0
super-search = 0
```

[ Security ]

```
password = 0
trusted_cert = 2
server_cert = 2
License = 2
```

[ TrustCerts ]

```
trust-certs-records = 2
btn-delete-certs = 2
only-accept-trusted-certs = 2
common-name-validation = 2
ca-certs = 2
upload-trust-certs = 2
```

[ ServerCerts ]

```
server-certs-records = 2
server-certs-device-cert = 2
server-certs-upload = 2
```

[ Apps ]

```
broadsoft-XSI = 1
broadsoft-XMPP = 1
```

[ Broadsoft ]

```
XSI = 1
Directotries = 1
```

```
XMPP-account = 1
XMPP-username = 1
XMPP-password = 1
CallLog = 1

[ HiddenSetting ]
custom-factory-config = 2
DND-Active = 2
Forward-Active = 2
Broadsoft-Active = 2
Redirect-Active = 2
UC-Active = 2
pushxml = 2
XSI-Active = 2
remote_pcap = 2
remote_pcap_switch = 2
remote_pcap_port = 2
remote_pcap_password = 2
Metaswitch-Active = 2
Metaswitch-Login-Mode = 2

[ GUI ]
status = 0
status_list = 0
Status_IP = 0
Status_IPv6 = 0
Status_MAC = 0
Status_HW = 0
Status_More = 0
network = 0
Status_More_Phone = 0
Status_More_Account = 0
Status_More_RTP = 0
status_general = 0
Status_WIFI_MAC = 0
Status_CFG_VER = 0

features = 0
Main_Settings = 0
CallControl = 1
callcontrol_anywhere = 1
callcontrol_remoteoffice = 1
callcontrol_forward = 1
always-forward = 0
```

```
busy-forward =0
NoAnswer-forward =0
callcontrol_dnd=1
callcontrol_hidenummer =1
callcontrol_anonymousrejection =1
callcontrol_simultaneousing =1
callcontrol_mobility =1
callcontrol_group_night_forward =1
callcontrol_callwaiting =1
callcontrol_forward_selective =1
callcontrol_executive =1
callcontrol_securityclassification =1
callcontrol_executive_assistant =1
callcontrol_initialacdstate =1
callcontrol_setacdstate =1
auto-Answer=0
call_waiting =0
dnd=0
DSSKey =0
intercom =0
advanced_call_feature_general =0
advanced_call_feature_list = 0
key_as_send=0
history_save=2
hotline-number =0
advanced_call_feature_default_account =0
Features_AutoRD =0
call_completion =0
multipaginglist =2
Features_Diagnostics =0
Diagnostics_Network =0
Diagnostics_Ping =0
Diagnostics_TraceRoute =0
Features_Anonymous =0

Main_Contacts =0
local_contact_list =0
remote_contact_list =0
blacklist_list =0
broadsoft_contact_list =0
metaswitch_contact_list =0
pab_contact_list =0
gab_contact_list =0
```



```
call_info=0
local_call_log_list =0
broadsoft_callog_list =0
metaswitch_callog_list =0

SMS=0
MSG_Text =0
SMS_Draftbox =0
SMS_Inbox =0
SMS_NEW =0
SMS_Outbox =0
SMS_Sentbox =0
MSG_Voice =0
viewvoicemail =0
setvoicemail =0

Set_Basic =0
Basic_LANG =0
time_zone =0
date_and_time_general =0
Basic_Time_Manual =0
Basic_Time_SNTP =0
dhcptimezone =0
Basic_Time_Format =0
display =0
Basic_Setting_BackLight =0
contrast_ctrl =0
display_wallpaper =0
display_dsskey_wallpaper =0
screensaver =0
sound =0
ring_type_setting =0
key_tone =0
blf_ring_setting =0
unlock_pin=0
check_key_guard_lock =0
keyboard_lock =0
bluetooth =0
wifi =0

Set_Adv =0
Adv_Account =0
line_active =0
account_label =0
```

```
display_name =0
register_name =01
user_name =01
account_password =01
sip_server =2
enabled-outbound-proxy-server =2
outbound-proxy-server =2
STUN_server =2
NAT_traversal =2
Adv_Network =0
wan_port_title =0
VLAN-items =2
wanport =0
pcport =2
dhcpvlan =2
web-server =2
8021x =2
open-VPN =2
open-lldp =2
network_cdp =2
network_nat =2
autoprovision =2
Adv_Reboot =0
Adv_ResetConfig =0
ResetLocalConfig =0
ResetNonStaticConfig =0
ResetStaticConfig =2
ResetUserDataUserCfg =0
Adv_ResetToFac =2
password =0
international-forward =2
softkey Label =0

usermodeentry =0

usb_record=0
browse_usb_record=0
browse_usb_storage=0
basicsetting_update_configuration =0
callcontrol_silent_alerting =0
```

## W52P/W56P/W60 DECT IP Phones

The default configuration item settings in factory WebItemsLevel.cfg for W56P DECT IP phones

running firmware version 81 or later are:

[ Status-Menu ]

Status-Basic = 0

Status-RTP = 0

Status-VoIP = 0

[ Status ]

version = 0

network = 0

DeviceCertificate = 0

IPv4 = 0

IPv6 = 0

NetworkCommon = 0

[ Status-VoIP ]

registered-handset = 0

registered-new-handset = 0

voip-status = 0

paging = 0

[ Account ]

account-register = 0

account-basic = 0

account-codec = 0

account-adv = 0

account-assign = 0

account-handsetname = 0

[ Account-Register ]

switch-account = 0

account\_status = 0

line\_active = 0

account\_label = 0

display\_name = 0

register\_name = 01

user\_name = 01

```
account_password = 2
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
transport-item = 2
backup-outbound-proxy-server = 01
proxy-fallback-interval = 01
NAT_traversal = 2
sip_server = 2
sip_server2 = 2
```

[ Account-Basic ]

```
switch-account = 0
proxy_require = 0
send_anonymous = 1
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
anonymous_rejection_enabled = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
send_anonymous_rejection_code = 0
```

[ Account-Codec ]

```
switch-account = 0
codecs-group = 0
```

[ Account-Adv ]

```
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
MWI-items = 2
voice_mail = 0
```

```
voice_mail_display = 0
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
conference-type = 2
conference-uri = 2
SIPServerType = 2
UnregisterOnReboot = 2
RTCP-Collector-Name = 2
RTCP-Collector-Address = 2
RTCP-Collector-Port = 2
subscribe-register = 2
SimultaneousOutgoingNum = 2
```

[ Account-Assign ]

```
incoming-lines = 0
outgoing-lines = 0
```

[ Account-Handsetname ]

```
handsetname = 1
```

[ Network ]

```
network-basic = 0
network-advanced = 0
network-nat = 0
shotlevel = 0
```

[ Network-Basic ]

```
ipaddress-mode = 2
```

```
ipv4config = 2
ipv6config = 2

[ Network-Nat ]
manual = 2
manual-switch = 2
manual-ip = 2
ICE = 2
ICE-switch = 2
STUN = 2
STUN-switch = 2
STUN-server = 2
STUN-port = 2
TURN = 2
TURN-switch = 2
TURN-server = 2
TURN-port = 2
TURN-username = 2
TURN-password = 2

[ Network-Advanced ]
LLDP-items = 2
VLAN-items = 2
NAT-items = 2
voice-QoS = 2
local-RTP-port = 2
web-server = 2
8021x = 2
reg-surge-prev = 2
open-VPN = 2

[ Features ]
features-forward = 0
features-general = 0
features-audio = 0
features-transfer = 0
features-callpickup = 0
```

```
features-phonelock = 0
features-powered = 0

[ Forward&DND ]
head-forward = 0
forward-account = 0

always-forward = 0
always-forward-enabled = 0
always-forward-target = 0
always-forward-OnCode = 0
always-forward-OffCode = 0
busy-forward = 0
busy-forward-enabled = 0
busy-forward-target = 0
busy-forward-OnCode = 0
busy-forward-OffCode = 0
NoAnswer-forward = 0
NoAnswer-forward-enabled = 0
NoAnswer-forward-ringtimes = 0
NoAnswer-forward-target = 0
NoAnswer-forward-OnCode = 0
NoAnswer-forward-OffCode = 0
DND = 0
DND-account = 0
DND-Status = 0
DND-OnCode = 0
DND-OffCode = 0

[ General-Information ]
call_waiting = 0
key_as_send = 0
reserve-pound = 2
busytone_delay = 0
return-code-refuse = 0
return-code-DND = 0
feature-key-synchronisation = 0
```

TimeOut-for-DialNow = 0  
RFC-2543-Hold = 2  
use-outbound-in-dialog = 2  
IsDeal-180 = 2  
SaveCallHistory = 2  
SuppressDTMFDisplay = 1  
SuppressDTMFDisplayDelay = 1  
MulticastCodec = 1  
FwdInternational = 0  
Diversion-History-Info = 1  
ReLogOffTime = 2  
call-number-filter = 0  
allow-IP-call = 0  
voicemail-tone = 0  
DHCP-hostname = 0  
reboot-in-talking = 0  
display-method-on-dialing = 2  
sip-trust-control = 2  
end-call-onhook = 0  
number-of-active-handsets = 0  
  
[ Features-Audio ]  
call-waiting-tone = 0  
Ringer\_Dev = 0  
  
[ Features-Transfer ]  
semi-attend-transfer = 0  
Semi-Attend-Trans-OnHook = 0  
blind-tran-onhook = 0  
  
[ Features-Callpickup ]  
Call-Park = 0  
  
[ Features-Lock ]  
emergency\_setting = 2  
  
[ Features-PowerLED ]



```
common-power-light-on = 0
ring-power-light-flash = 0
mail-power-light-flash = 0
misscall-power-light-flash = 0
```

[ Settings ]

```
settings-preference = 0
settings-datetime = 0
settings-calldisplay = 0
settings-upgrade = 0
settings-autop = 0
settings-config = 0
settings-dialplan = 0
settings-voice = 0
settings-tones = 0
settings-tr069 = 0
settings-voicemonitoring = 0
settings-sip = 0
```

[ Settings-Preference ]

```
web-language = 0
watchdog = 2
```

[ Time&Date ]

```
DHCP-Time = 0
time_zone = 0
NTP_priority = 0
prim_server = 0
sec_server = 0
update_interval = 0
daylight-time = 0
time_type = 0
daylight_date= 0
offset = 0
manual-time = 0
manual-time-settings = 0
time_format_setting = 0
```

```
date_format_setting = 0
location = 0

[ Settings-CallDisplay ]
Incoming-Call-Ringer-Animation = 0
Call-Display-Method = 0

[ Settings-Upgrade ]
version_info = 0
reset_settings = 2
reset = 2
reset_to_factory = 1
reset_local_config = 0
reboot_device = 0
upgrade_firmware = 1
upgrade_handset_firmware = 1

[ Settings-AutoProvision ]
pnp-active = 2
dhcp-active = 2
custom-option = 2
DHCP-Option-Value = 2
server-URL = 2
account = 2
password = 2
common-AES-key = 2
MAC-Oriented-AES-key = 2
poweron-active = 2
repeatedly-active = 2
repeat-interval = 2
weekly-active = 2
autop-time = 2
day-of-week = 2
btn-autop-now = 2
attempt-expired-time = 2
weekly-upgrade-interval = 2
inactivity-time-expire = 2
```

```
flexible-switch = 2
flexible-interval = 2
flexible-autotime = 2

[ Settings-Config ]
opt-configfile = 0
opt-factory-configfile = 0
export-cfg-config-file = 0
import-cfg-config-file = 0
pcap_trace   = 0
ExportAllDiagnosticFiles = 0
Local_Logging = 0
Local_Log_Switch = 0
Local_Log_Level = 0
Local_Log_Max_File_Size = 0
Local_Log_Export = 0
syslog = 1
Syslog_Switch = 0
Syslog_Server = 0
Syslog_Transport_Type = 0
Syslog_Level = 0
Syslog_Facility = 0
Syslog_Prepended_Mac = 0

[ Settings-DialPlan ]
replace-rule = 0
dial-now = 0
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0

[ Settings-Voice ]
echo-cancellation = 0
jitter-buffer = 0
```

[ Settings-Tones ]

tone-items = 0

[ TR069 ]

head = 2

EnableTR069 = 2

ACSUsername = 2

ACSPassword = 2

ACSURL = 2

EnablePeriodicInform = 2

PeriodicInformInterval = 2

RequestUsername = 2

RequestPassword = 2

[ Settings-VoiceMonitoring ]

RTCP-Session-Report = 2

RTCP-Interval-Report = 2

RTCP-Interval-Period = 2

RTCP-Warning-Moslq = 2

RTCP-Critical-Moslq = 2

RTCP-Warning-Delay = 2

RTCP-Critical-Delay = 2

Display-VQReport-On-Web = 2

Display-VQReport-On-UI = 2

RTCP-Report-Options = 2

RTCP-XR-Report = 2

Voice-RTCP-XR-Report = 2

[ Settings-SIP ]

sip-session-timer = 2

local-SIP-port = 2

TLS-SIP-Port = 2

[ Contacts ]

contacts-basic = 0

contacts-remote = 0

```
contacts-LDAP = 0
contacts-broadsoft = 0
contacts-favorite = 0
contacts-multicastIP = 0

[ Contacts-Basic ]
download-contacts = 0
import-contacts = 0
export-contacts = 0

[ LocalPhoneBook ]
contact-list = 0
all-contacts-control = 0
import-export-contacts = 1
btnImportCSV = 1
btnExportCSV = 1
btnImportXML = 1
btnExportXML = 1
opt-contacts = 0

[ Contacts-Remote ]
remote-phonebook-list = 0
SRemoteNameEnable = 0
SRemoteNameFlashTime = 0

[ LDAP ]
enable-LDAP = 0
LDAP-name-filter = 0
LDAP-number-filter = 0
LDAP-TLS-Mode = 0
server-address = 0
port = 0
base = 0
user-name = 0
password = 0
maxhits = 0
LDAP-name-attributes = 0
```

LDAP-number-attributes = 0  
LDAP-display-name = 0  
protocol = 0  
LDAP-lookup-for-incoming-call = 0  
LDAP-lookup-for-callout = 0  
LDAP-sorting-results = 0

[ MulticastIP ]

Receive\_Priority = 0  
MulticastIPConfig = 0  
PagePriorityActive = 0  
PagingList = 0

[ Broadsoft ]

Directotries = 0  
CallLog = 0  
XSI = 0

[ Contacts-Favorite ]

super-search = 0

[ Security ]

password = 0  
trusted\_cert = 0  
server\_cert = 0  
base-pin = 0

[ BasePin ]

base-unit-pin = 0

[ TrustCerts ]

trust-certs-records = 2  
btn-delete-certs = 2  
only-accept-trusted-certs = 2  
upload-trust-certs = 2  
common-name-validation = 2  
ca-certs = 2

## [ ServerCerts ]

server-certs-records = 2

server-certs-upload = 2

server-certs-device-cert = 2

## [ HiddenSetting ]

custom-factory-config = 2

DND-Active = 2

Forward-Active = 2

Broadsoft-Active = 1

XSI-Active = 1

Redirect-Active = 1

## [ GUI ]

Menu\_Status = 0

Base = 0

Handset = 0

LineStatus = 0

Menu\_Intercom = 0

Intercom\_HSXS = 0

Intercom\_ALLHS = 0

Menu\_VoiceMail = 0

Play\_Message = 0

Set\_Voice\_Mail = 0

Set\_Key\_1 = 0

Menu\_CallFeatures = 0

CallForward = 0

DND = 0

CallWaiting = 0

AnonymousRejection = 0

AnonymousCall = 0

MultiPagingList = 0

Menu\_Directory = 0

Local\_Contact\_List = 0

Remote\_Contact\_List = 0

Broadsoft\_Contact\_List = 0

LDAP\_Contact\_List = 0

Menu\_Settings = 0

DateTime = 0

Audio = 0

Advisory\_Tones = 0

Ring\_Tones = 0

Volume = 0

Melodies = 0

Display = 0

Screen\_Saver = 0

Color\_Schemes = 0

Wallpaper = 0

Display\_Backlight = 0

Keypad\_Light = 0

Notification\_Light = 0

Time\_Formate = 0

Date\_Formate = 0

Input\_Method = 0

Shortcut = 0

Soft\_Left = 0

Soft\_Right = 0

Up = 0

Down = 0

Left = 0

Right = 0

Language = 0



Registration = 0  
Register\_Hadndset = 0  
De\_reg\_Hadndset = 0  
Select\_Base = 0  
  
Telephony = 0  
Auto\_Answer = 0  
Auto\_Intercom = 0  
Default\_Line = 0  
Incoming\_Lines = 02  
Speed\_Dial = 0  
Blacklist = 0  
Account\_Server = 12  
  
SystemSettings = 0  
Network = 0  
Handset\_Reset = 0  
Change\_Base\_PIN = 02  
Base\_Reset = 02  
Base\_Reset\_Local\_Cfg = 1  
Base\_Reset\_Non\_Static\_Cfg = 1  
Base\_Reset\_Static\_Cfg = 1  
Base\_Reset\_User\_And\_Local\_Cfg = 1  
Base\_Reset\_Factory\_Cfg = 1  
Base\_Restart = 02  
Auto\_Provision = 02  
RPS = 02  
Eco\_Mode\_Plus = 0  
Eco\_Mode = 0  
Repeater\_Mode = 0  
  
HandsetName = 0  
UpgradeFirmware = 2  
  
Menu\_History = 0  
  
All\_Calls = 0

Missed\_Calls = 0

Outgoing\_Calls = 0

Accepted\_Calls = 0

## Customer Feedback

We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to [DocsFeedback@yealink.com](mailto:DocsFeedback@yealink.com).

