 





T48S-Skype for Business[®] Edition

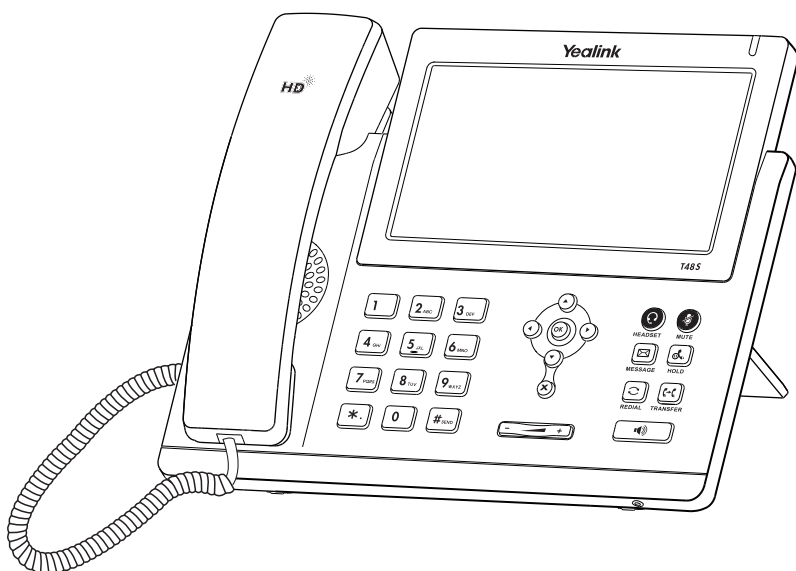

Quick Start Guide (V9.42)

Packaging Contents

 The following items are included in your package. If you find anything missing, contact your system administrator.

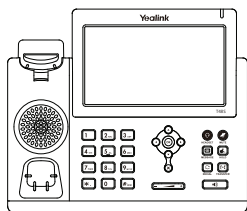

Skype for Business Phone



Handset



Handset Cord



Quick Start Guide



 
Ethernet Cable
(2m CAT5E FTP Cable)



Power Adapter
(Optional)



Stand





Wall Mount Bracket
(Optional)



Note: We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in reduced performance.

Assembling the Phone

  1. Attach the stand, as shown below:

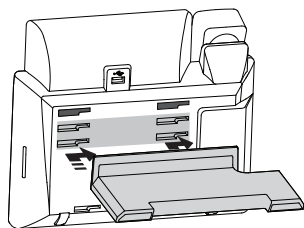



Desk Mount Method

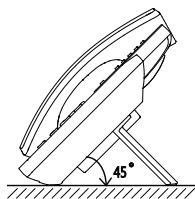  

The two wall mount slots are plugged up by silica gels. You can pull out the silica gels when mounting your IP phone to a wall.

Note: You can also mount the phone to a wall. For more information on how to attach the wall mount bracket, refer to Yealink Wall Mount Quick Installation Guide.

  2. Connect the handset and optional headset, as shown below:

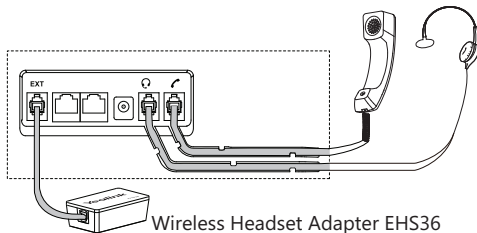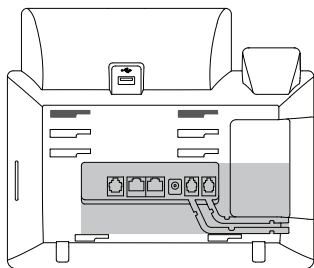


Wireless Headset Adapter EHS36

Note: The headset or wireless headset adapter EHS36 should be purchased separately.

The EXT port can also be used to connect the expansion module EXP40. For more information on how to use the EHS36 and EXP40, refer to Yealink_EHS36_User_Guide and Yealink_EXP40-Skype_for_Business_Edition_Quick_Start_Guide.

3. Connect optional USB devices:

 You can connect a Bluetooth USB dongle BT40, Wi-Fi USB dongle WF40, USB headset or USB flash drive (to record calls) to the USB port.

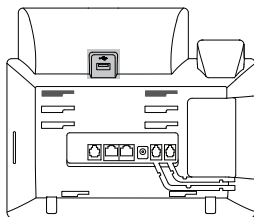


Note: The optional USB devices should be purchased separately.

For more information on how to use the BT40 and WF40, refer to Yealink Bluetooth USB Dongle BT40 User Guide and Yealink Wi-Fi USB Dongle WF40 User Guide.

4. Connect the network and power, as shown below:

 You have two options for network and power connections. Your system administrator will advise you which one to use.

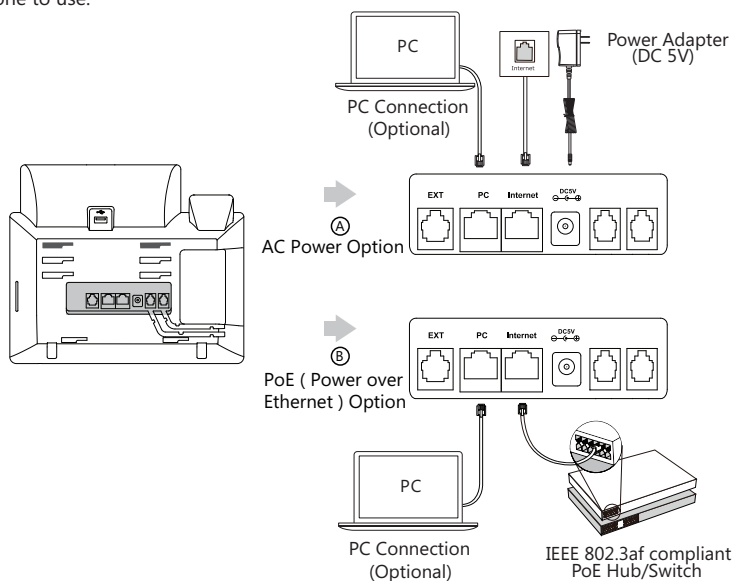

Note: The Skype for Business phone should be used with Yealink original power adapter (5V/2A) only. The use of the third-party power adapter may cause the damage to the phone. If you are connecting a PC to your phone, we recommend that you use the Ethernet cable provided by Yealink.

If inline power (PoE) is provided, you don't need to connect the power adapter. Make sure the hub/switch is PoE-compliant.

Startup

After the Skype for Business phone is connected to the network and supplied with power, it automatically begins the initialization process. After startup, the sign-in screen appears on the touch screen.

Welcome
Initializing... Please wait

Sign into or Sign Out of Your Skype for Business Account

You can sign into or sign out of your Skype for Business account on the phone.

To sign into your Skype for Business account:

1. Tap **Sign in**, and then select a desired sign-in method.
2. Follow the onscreen prompts.

To sign out of your Skype for Business account:

1. Tap your avatar at the top-right corner of the touch screen.
2. Tap **Sign Out**.

Phone Lock

If the Skype for Business server is configured to forcibly lock the phone, user can use phone lock feature to lock the phone to prevent it from unauthorized use.

The Skype for Business phone will prompt the user to create a lock PIN at the initial sign-in.

To set a lock PIN:

1. Enter the lock PIN in the **New PIN** field.
2. Enter the lock PIN again in the **Confirm PIN** field.
3. Tap **Save** or press  to accept the change.

After you create a lock PIN, you can use it to unlock your phone.

To unlock the phone:

1. Enter the lock PIN when the phone is locked.
2. Tap **Unlock** to unlock the phone.

Update Your Presence Status

Your presence information is a quick way for other people to see your availability status. You can change it manually if you want to.

To update your presence status:

1. Tap your avatar at the top-right corner of the touch screen.
2. Tap the desired status.

You can tap **Reset Status** to change your status to **Available**.

Directory

The phone directory includes local directory and Skype for Business directory.

To add a local contact:

1. Tap **Contacts->Local Directory**.
2. Tap the desired group, and then tap  to add a contact.
3. Enter a unique contact name in the **Name** field and other information in the corresponding fields.
4. Tap  or press  to accept the change.

To search for contacts:

1. Pick up the handset, press Speakerphone key or tap .
2. Enter a few continuous characters of the contact name or continuous numbers of the contact number to search for the contact.

The phone automatically displays search results.

To add a Skype for Business contact:

1. Tap the desired contact from the search results.
2. Tap **Add to SFB**.
3. Tap the desired group.

To add a contact to the Favorites group:

When you add contacts to the **Favorites** group, those favorites display on the **Favorites** screen too. By default, local favorites are displayed before the Skype for Business favorites. Local favorites are indicated by the icon . Skype for Business favorites are indicated by the presence status icon.

To view a contact's information:

1. Tap **Contacts**.
2. Tap the desired group.
3. Tap the desired contact to view the detailed information.

To call contacts from the directory:

1. Tap **Contacts**.
2. Tap the desired group.
3. Tap the desired contact to view the detailed information.
4. Tap .

Basic Call Features

To place a call:

1. Do one of the following:
 - Pick up the handset.
 - Press .
 - Press .
2. Enter the number and then tap .

To answer a call:

1. Do one of the following:
 - Pick up the handset. The call is answered in handset mode.
 - Press . The call is answered in hands-free (speakerphone) mode.
 - Press . The call is answered in headset mode.

To end a call:

1. Do one of the following:
 - If you are using the handset, hang up the handset or tap .
 - If you are using the speakerphone, press  or tap .
 - If you are using the headset, tap .

To redial a call:

1. Press  when the phone is idle to dial out the last dialed number.

To mute or un-mute a call:

1. Press  to mute the microphone or press it again to un-mute the microphone during a call.

To place a call on hold:

1. Press  or tap  during an active call.

To resume the held call, do one of the following:

- If there is only one call on hold, press  or tap .
- If there is more than one call on hold, tap the call you want to resume, and then press  or tap .

Initiate a Conference Call

You can initiate a Skype for Business conference call by meet now or calling a group of Skype for Business contacts.

To initiate a conference call:

1. Tap **Menu**->**Meet Now**-> .
2. Select a contact and tap .
3. Tap  to add additional contacts.

To initiate a conference call with a Skype for Business group:

1. Tap **Contacts**.
2. Tap the desired Skype for Business group.
3. Tap  to dial all Skype for Business contacts in the group.

Call Forward

You can enable the call forward feature to forward all incoming calls to the desired destination.

To enable call forward:

1. Tap **Menu**->**Setting**->**Features**->**Call Forward**.
2. Tap the **On** radio box of the **Call Forward** field.
3. Tap the desired type.
4. Tap  or press  to accept the change.

You can also forward an incoming call when your phone is ringing.

To forward an incoming call to a contact when your phone is ringing:

1. Tap .
2. Select a contact and tap .

To forward an incoming call to voicemail when your phone is ringing:

1. Tap .

Call Transfer

You can transfer a call in the following ways:

To perform a blind transfer during a call:

1. Press  or tap  during an active call. The call is placed on hold.
2. Select a contact.
3. Press  or tap  to complete the transfer.

Then the call is connected to the number to which you are transferring.

To perform a consultative transfer:

1. Tap  during an active call. The call is placed on hold.
2. Select a contact and tap .
3. After the party answers the call, press  or tap  to complete the transfer.

Using Better Together over Ethernet (BToE)

Better Together over Ethernet (BToE) enables you to place, hold, and answer calls on your phone and Skype for Business client on your computer. You can download the Yealink BToE Connector application from the Yealink Website and install the application on your computer.

Before you can begin using BToE, you must pair your phone with your computer.

To activate BToE:

1. Do one of the following:

- Connect an Ethernet cable from your computer to the PC port on your phone.
- Enter the phone IP address into the BToE application manually and click **OK**.

If you are not signed into Skype for Business on your phone, a dialog box is displayed on your computer asking for your Skype for Business login credentials.

2. If the dialog box does not display on your computer, tap **Sign in** on your phone and select **Sign in via PC**.

3. Enter your login credentials in the dialog box.

The same user account is signed into your phone and your Skype for Business client, so that the BToE is activated.

To place BToE calls, do one of the following:

- Hover your cursor over the avatar of the contact, and then click  in the Skype for Business client.
- Select a contact or enter the phone number, and then tap .

To answer BToE calls, do one of the following:

- Click  in the Skype for Business client.
- Tap  on your phone.

To hold BToE calls, do one of the following:

- Click , and then click  in the Skype for Business client.
- Tap  or press  on your phone.

To resume a call, do one of the following:

- Click , and then click  in the Skype for Business client.
- Tap  or press  on your phone.

To change the audio device during a call in the Skype for Business client:

1. Click , and then click  to change the audio device.

About Yealink

Yealink (Stock Code: 300628) is a global leading unified communication (UC) terminal solution provider that primarily offers video conferencing systems and voice communication solutions. Founded in 2001, Yealink leverages its independent research and development and innovation to pursue its core mission: "Easy collaboration, high productivity." The company's high-quality UC terminal solutions enhance the work efficiency and competitive advantages of its customers in over 100 countries. Yealink is the world's second-largest SIP phone provider and is number one in the China market.

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for the latest firmware, guides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



T48S-SFB-EN

YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.
Web: www.yealink.com
Addr: 309, 3th Floor, No.16, Yun Ding North Road, Huli District, Xiamen City, Fujian, P.R. China
Copyright©2018YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.All rights reserved.