Yealink

USB Speakerphone USB 扬声器 CP900



English | 简体中文

Quick Start Guide (V1.2) 快速入门指南

Package Contents










CP900

Carrying Case BT50(optional) Quick Start Guide


Charging Your CP900

 Plug the CP900 into a USB power source. The CP900 battery lasts for up to 12 hours of talk time and takes approximately 3 hours (5V/1A) to fully charge.



Viewing the Battery Status

 Tap (1) to view the battery status.





Low battery

Connecting Your CP900

Connect to PC via USB Cable



Connect to PC via Bluetooth

Connect the BT50 into a USB port on your PC. The CP900 and the BT50 are pre-paired and ready to use out of the box. The Bluetooth range is 30m/100ft.



Note: If there is no sound coming from your CP900, you may need to set the CP900 as the playback device in your operating system's audio settings.

Connect to smartphone via Bluetooth


Hold \$\frac{2}{3}\$ for 3 seconds to enter the pairing mode, and pair to your smartphone. The Bluetooth range is 10m/30ft.




To disconnect, double-tap *. To reconnect, tap * again.

Placing Your CP900

Place the speakerphone in the center of the table, up to 2m/6ft from each participant. A CP900 is ideal for up to 6 people.

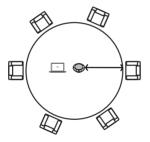

Using Your CP900

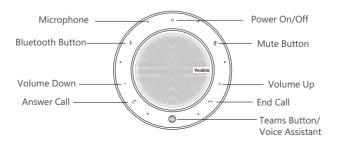

The CP900 is compatible with Microsoft Teams/Skype for Business client and Yealink VCD client. The CP900 can connect to PC via USB cable or Bluetooth, and to smartphone via Bluetooth. After connected, you can control the calls on the CP900.

Task	Do
Power on or off	Hold U for 3 seconds.
Answer a call	Тар 🥻 .
End or reject a call	Тар 🖳 .
Volume up/down	Tap+/
Mute/unmute microphone	During a call, tap . The mute LED indicator and LED light-ring glow red.
Hold a call	During a call, tap . The LED light-ring flashes green.
Reset to the factory	Hold and for 6 seconds.

Note: If you do not use the CP900 within 60 seconds, the CP900 will go to the power safe mode, under this mode, you can tap any key to awake the CP900.

The Bluetooth pairing information will be cleared if you reset the CP900 to the factory.

Teams Button functions

Task	Do
Activate Cortana	Hold of for 2 seconds.
Invoke the Teams client	After the Teams client connects , tap 1.
Activate your smartphone's voice assistant	Тар 🥶 .

Note: Before using the Teams button functions, you should install the Microsoft Teams client on your PC or smartphone.

Teams Button LED Indicator

LED Indicator	Description
Slow-flashing white	Receive missed calls/voice mails/ Teams Notification Indicators
Solid white	Connected to the PC via USB and the Teams client is running
Off	Disconnected

BT50 LED Indicator


LED Indicator	Description
Slow-flashing blue	Pairing
Solid blue	Connected
Off	Disconnected

包装清单




充电

 
使用CP900自带的USB线缆接入USB电源。CP900电池可支持12小时通话时长,充满电大约需要3小时(5V/1A)。



检查电量


在开机状态下,按 😈 查看电池电量状态。

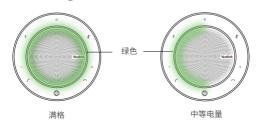

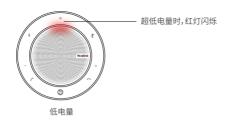

连接CP900

 通过USB线连接至PC



通过蓝牙连接至PC

将BT50插入电脑的USB接口。BT50与CP900已预先配对,开箱即可使用。蓝牙距离为30米/100英尺。



说明:如果使用过程无声,尝试手动将CP900设为系统音频设备。

连接至移动电话


长按蓝牙键 \$3S,蓝牙进入配对模式,然后与智能手机进行配对。蓝牙距离为10米/30英尺。



如果要断开蓝牙连接,双击蓝牙键*断开连接。 再次按蓝牙键*可重新连接。

摆放位置

将CP900放在桌子中间,与每名与会者的距离不超过2米/6英尺。一台CP900可供6人使用。

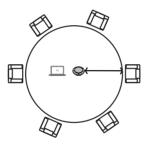

使用CP900



CP900可以兼容Microsoft Teams/Skype for Business客户端、Yealink UME/VCD客户端。CP900可以通过蓝牙连接至智能手机,或通过USB线/蓝牙连接至PC,连接后,你可以在CP900上控制通话。

任务	操作
开机/关机	长按电源键 😈 3秒。
接听来电	按接听键 🗸 。
挂断电话/拒接来电	按挂断键 🕜 。
音量调高/调低	按音量调高键十/调低键 — 。 环形灯带的蓝色LED数增多/减少。
麦克风静音/取消静音	通话中,按静音键 💇 。 静音键红灯常亮,环形灯带呈红色。
通话保持	通话中,按接听键 (。环形灯带绿色闪烁。
恢复出厂	按住接听键 和挂断键 6秒钟。

说明:CP900在60秒无操作后进入低功耗模式,在该模式下,你可以按任意键激活。 恢复出厂后,蓝牙配对信息会被清空。

Teams键功能

任务	操作
激活Cortana	长按Teams键 动 2秒。
调出Teams客户端	Teams客户端连接成功后,按Teams键 😈 。
唤醒智能手机的语音助手	按Teams键 🕠 。

说明:在使用Teams按键功能之前,需要先在PC或智能手机上安装Microsoft Teams客户端。

Teams指示灯的状态

指示灯	描述
白色慢闪	收到未接来电/语音留言/会议通知提示
白色常亮	连接成功,且电脑运行Teams客户端
不亮灯	未连接

BT50指示灯的状态

指示灯	描述
蓝色慢闪	进入配对状态
蓝色常亮	连接成功
不亮灯	未连接

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +32 to 104°F (0 to 40°C)
- Relative humidity: 5% to 90% noncondensing
- ◆Storage temperature: -22 to +160°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product: we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

- DC symbol
- is the DC voltage symbol.
- WEEE Warning symbol
- To avoid the potential effects on the environment and human health electronic equipment, end users of electrical and electronic

equipment should understand the meaning of the crossed-out wheeled him symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEF separately

Restriction of Hazardous Substances Directive (RoHS) This device complies with the requirements of the EU RoHS Directiv

Statements of compliance can be obtained by contacting support@yealink.co Safety Instructions Save these instructions. Read these safety instructions before use!

- Before you install and use the device, read the safety instructions
- carefully and observe the situation during operation · During the process of storage, transportation, and operation, please
- always keep the device dry and clean, avoid collision and crash.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair. Please refer to the relevant laws and statutes while using the device.

♠ Environmental Requirements

- Place the device at a well-ventilated place. Do not expose the device under direct sunlight
- Keep the device dry and free of dusts. Do not place the device on or near any inflammable or fire-vulnerable
- object, such as rubber-made materials · Keep the device away from any heat source or bare fire, such as a candle
- or an electric heater. ⚠ Operating Requirements

. Do not let a child operate the device without guidance.

Legal rights of others should be respected as well.

- . Do not let a child play with the device or any accessory in case of accidental quallouing
- Please use the accessories provided or authorized by the manufactures
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power
- · Before plugging or unplugging any cable, make sure that your hands are completely dry
- . Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet
- basement or near a swimming pool. · During a thunderstorm, stop using the device and disconnect it from the
- power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike

- If the device is left unused for a rather long time, disconnect it from the ower supply and unplug the power plug.
- When there is smoke emitted from the device or some abnormal noise or smell. disconnect the device from the power supply, and unplug the power plug immediately
- Contact the specified maintenance center for repair Do not insert any object into equipment slots that is not part of the
- product or auxiliary product Before connecting a cable, connect the grounding cable of the device
- first. Do not disconnect the grounding cable until you disconnect all othe

↑ Cleaning Requirements

- Before cleaning the device, disconnect it from the power supply.
- · Use a piece of soft, dry and anti-static cloth to clean the device · Keep the power plug clean and dry.

Troubleshooting

- The unit cannot supply power to device other than Yealink device.
 There is a bad connection with the plug.
- 1. Clean the plug with a dry cloth
- 2. Connect it to another wall outlet. The usage environment is out of operating temperature range.
- 1. Use in the operating temperature range The cable between the unit and the Yealink device is connected incorrectly. Connect the cable correctly.
- You cannot connect the cable properly 1. You may have connected a wrong Yealink device.
- Use the correct power supply.
 Some dust, etc., may be in the port.
- 1. Clean the port
- Contact your dealer or authorized service facility for any further questions

FCC Statement This device complies with part 15 of the ECC Rules. Operation is subject to the

- two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 - This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions
- (1) this device may not cause interference; and (2) this device must accept any interference, including interference that may cause underired operation of the desire CAN ICES-3(R)
- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes
- (1) l'appareil ne doit pas produire de brouillage (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi,

même si le brouillage est susceptible d'en compromettre le

fonctionnement.NMB-3(B) Radiation Exposure Statement

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated

with minimum distance 20cm between the radiator and your body Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et

votre corps Contact Information

YEALINK NETWORK TECHNOLOGY CO.LTD.

- 309, 3rd Floor, No.16, Yun Ding North Road, Huli District, Xiamen City, Fujian, P.R.C. YEALINK (FUROPE) NETWORK TECHNOLOGY BV Strawinskylaan 3127, Atrium Building, 8th floor, 1077ZX A
- YEALINK (USA) NETWORK TECHNOLOGY CO., LTD 999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA

Made in China

About Yealink

Yealink is a global leading provider of enterprise communication and collaboration solutions, offering video conferencing service to worldwide enterprises. Focusing on research and development, Yealink also insists on innovation and creation. With the outstanding technical patents of cloud computing, audio, video and image processing technology, Yealink has built up a panoramic collaboration solution of audio and video conferencing by merging its cloud services with a series of endpoints products. As one of the best providers in more than 140 countries and regions including the US, the UK and Australia, Yealink ranks No.1 in the global market share of SIP phones shipments.

Technical Support

Visit Yealink WIKI (http://support.yealink.com/) for the latest firmware, quides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (https://ticket.yealink.com) to submit all your technical issues



Certified for Microsoft Teams

