

Yealink Meeting Server Release Notes of Version 1.3

Table of Contents

Yealink Meeting Server Release Notes of Version 1.3	1
Yealink Meeting Server Release Notes of Version 1.3	2
1. Introduction	2
2. New Features	2
3. Optimization.....	2
4. Bug Fixes.....	2
5. New Features Descriptions	2
6. Optimization Description	7

Yealink Meeting Server Release Notes of Version 1.3

1. Introduction

- Firmware Version:
YMS: 10.23.0.35 upgrades to 10.23.0.55
- Applicable Models: YMS
- Release Date: Apr. 17th, 2018.

2. New Features

1. Added the feature of GK.
2. Added the feature of LDAP.
3. Added the feature of Enabling RTMP Live.
4. Added the feature of IP Call Blacklist.
5. Added the feature of Conference Control.
6. Added the feature of SIP Trunk IVR.
7. Added the feature of Licenses Management.

3. Optimization

1. Optimized the Broadcasting Interactive Video Conferences.
2. Optimized the feature of Configuring Personal Layout.
3. Optimized the user interface of Conference Control.

 
 
4. Bug Fixes

1. Fixed some bugs and improved the system stability as well as compatibility.

5. New Features Descriptions

1. Added the feature of GK.

Description: If the embedded GK server is enabled, H.323 GK ports are enabled by default to make sure the H.323 gateway can register to embedded GK server.

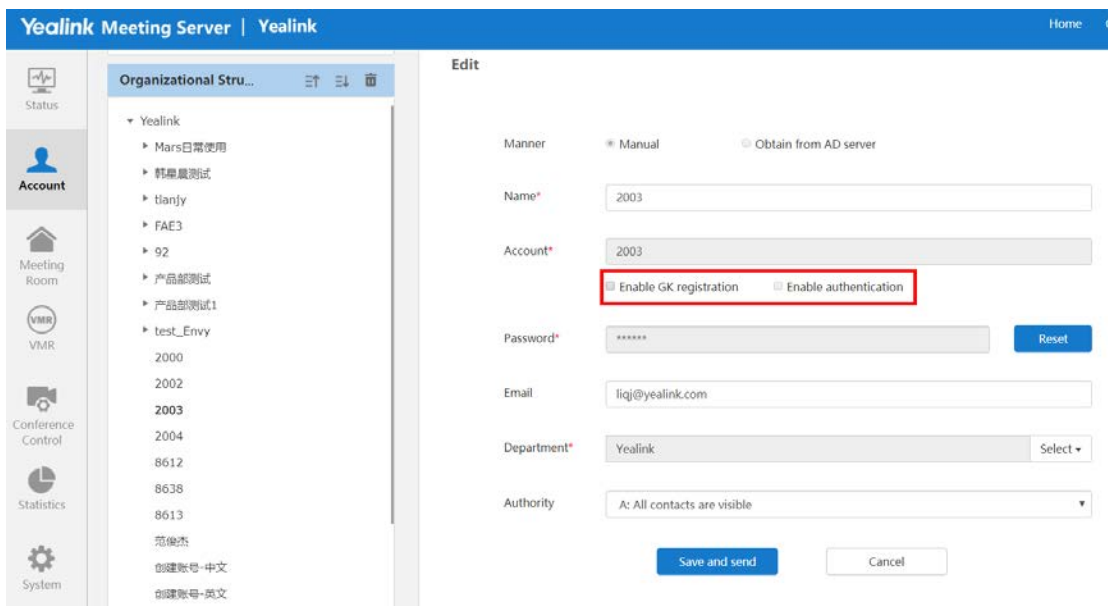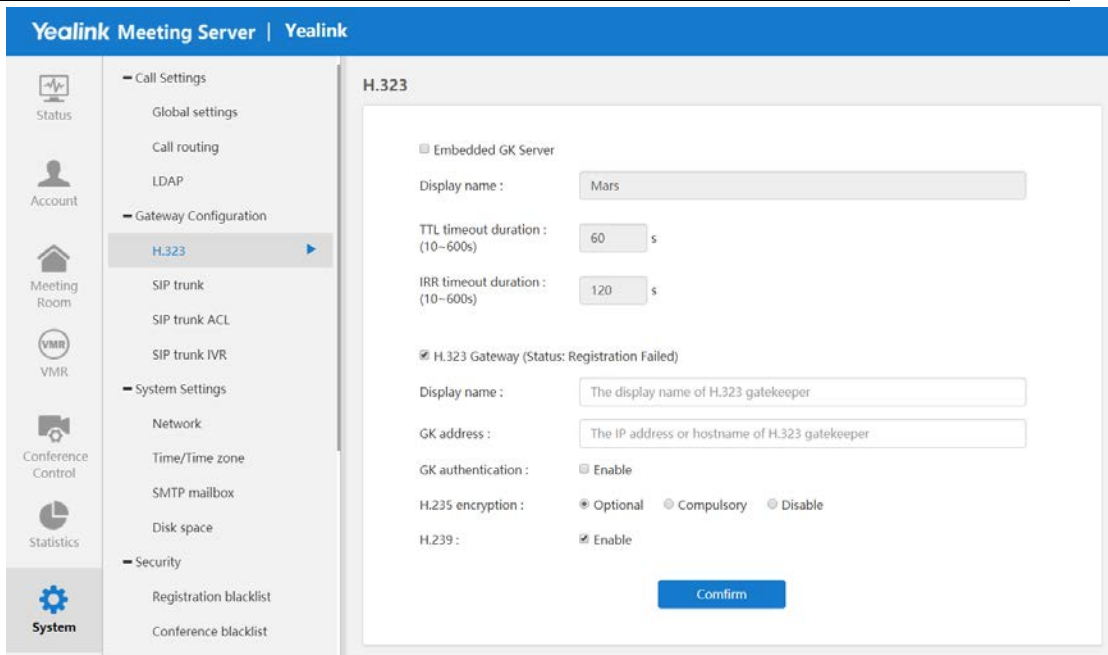

2. Added the feature of LDAP.

Description: After configuring LADP server, when you want to create an account, the user name and number can be obtained automatically by entering the AD account. You can use AD account to log into YMS server directly.

Yealink Meeting Server | Yealink

- Status
- Account
- Meeting Room
- VMR
- Conference Control
- Statistics
- System**

- Call Settings
 - Global settings
 - Call routing
 - LDAP**
- Gateway Configuration
 - H.323
 - SIP trunk
 - SIP trunk ACL
 - SIP trunk IVR
- System Settings
 - Network
 - Time/Time zone
 - SMTP mailbox
 - Disk space
- Security
 - Registration blacklist
 - Conference blacklist
 - IP call blacklist

LDAP

Enable : Used to obtain information from AD server

Server address : * 192.168.1.22

Port : * 389

Base DN : * OU=亿联-用户,DC=yealink,DC=com

Username : * YEALINK\yl1464

Password : *

Name attribute : * name

Number attribute : * telephoneNumber

AD account attribute : * sAMAccountName

Edit

Manner Manual Obtain from AD server

Name* 2003

Account* 2003

Enable GK registration Enable authentication

Password* ***** Reset

Email liqj@yealink.com

Department* Yealink Select ▾

Authority A: All contacts are visible ▾

 
Save and send Cancel

3. Added the feature of Enabling RTMP Live.

Description: You can enable the RTMP live feature, it allows users to watch the live conference.

To enable the RTMP live feature:

During a video conference, Click **Invite** -> **Invite Third Party**.

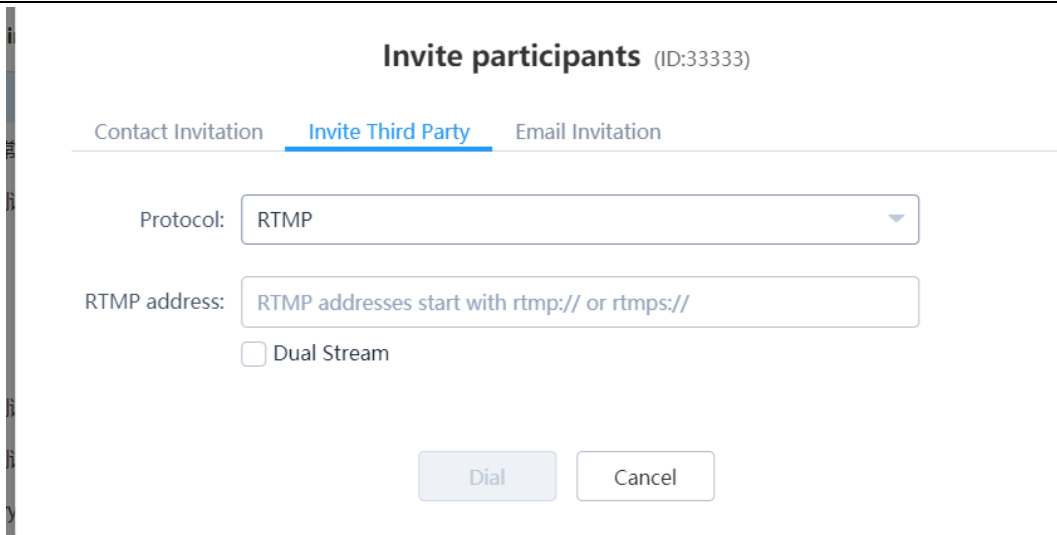


4. Added the feature of IP Call Blacklist.

Description: When users make IP calls 100 times in a minute (including place a call to YMS directly or join conferences by URI), the users will be recorded in the blacklist and cannot make IP calls in the certain time.


To view the IP call blacklist:

 Click **System** -> **Security** -> **IP call blacklist**.

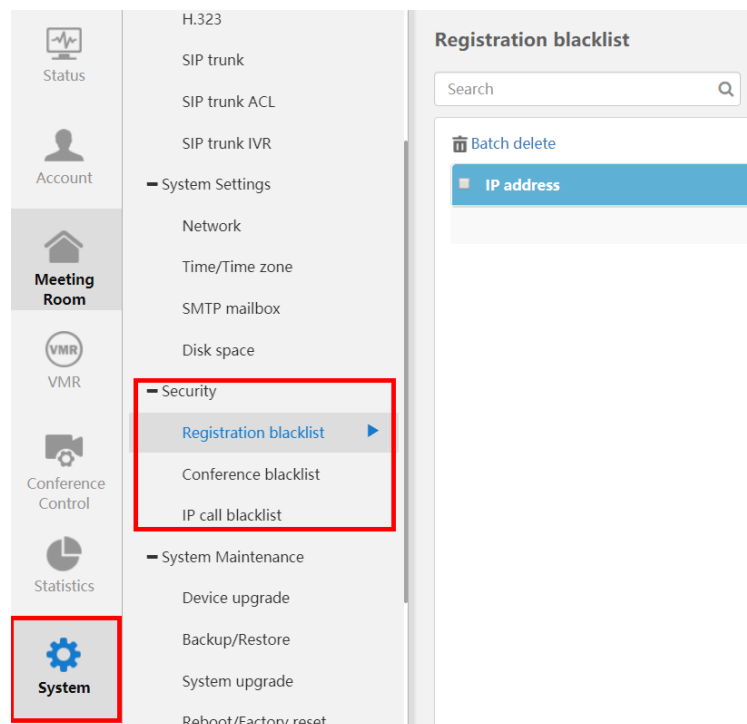

5. Added the feature of Conference Control.

 Description: You can view, delete and control video conferences.

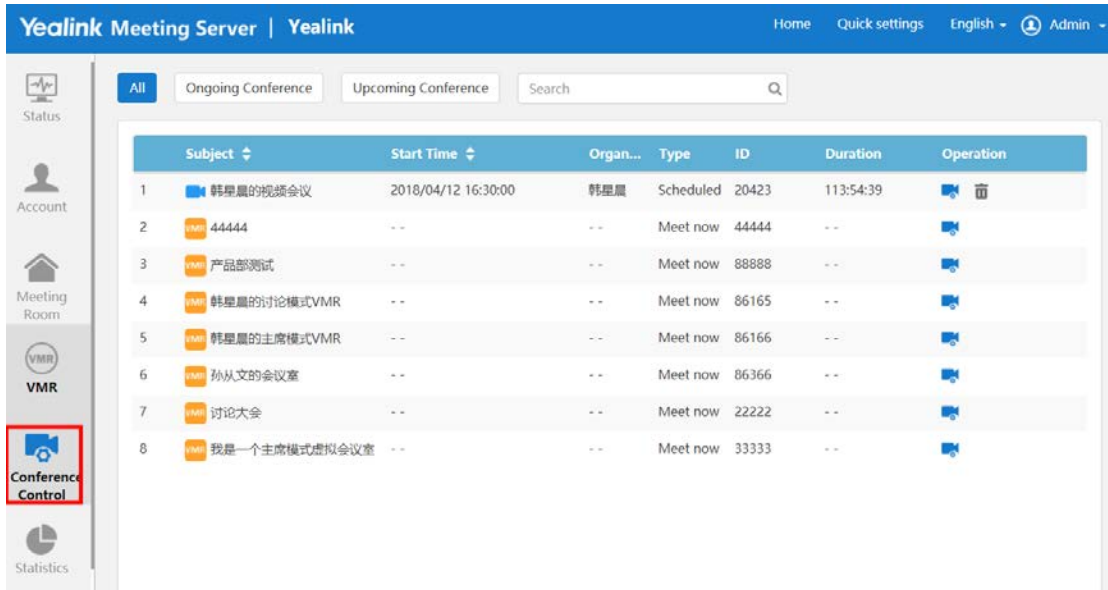


6. Added the feature of SIP Trunk IVR.

Description: After you configure the SIP trunk and call routing, users will listen to the voice prompt when they enter YMS via SIP trunk. You can configure the voice prompt and key functions.

To configure SIP trunk IVR:

 Click **System** -> **Gateway Configuration** -> **SIP trunk IVR**.

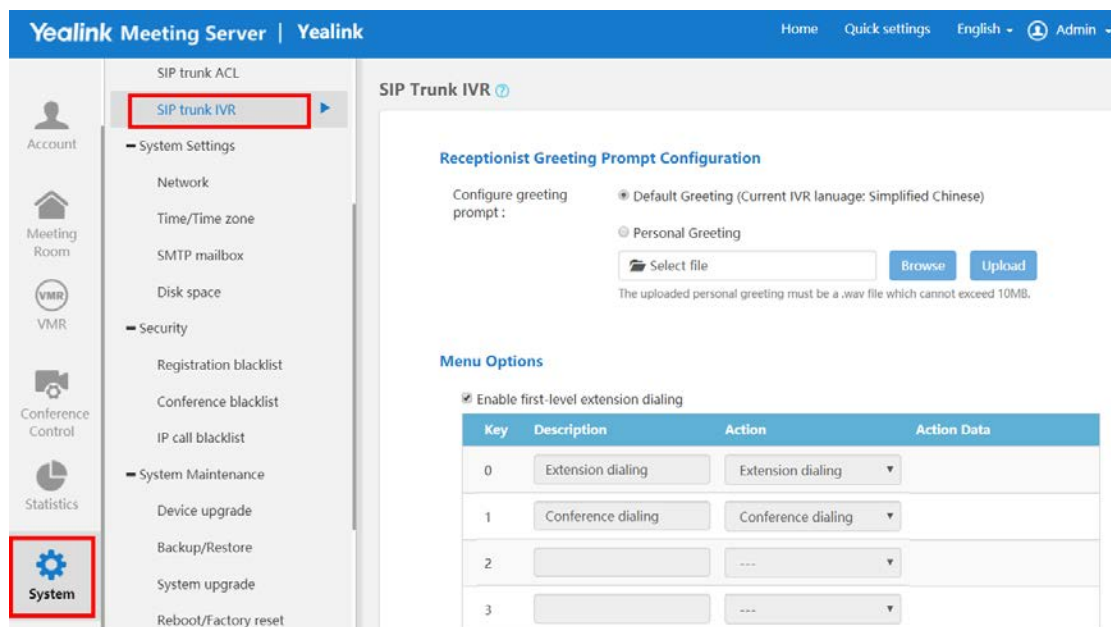


7. Added the feature of Licenses Management.

Description: If interactive parties want MCU to process video image or users want to register accounts, you can activate a video port license. If the video port license

is activated, you can activate a broadcasting (only receive video and audio, and do not send video and audio) port license to use the broadcasting interactive feature. When you access YMS by domain name, the browser will prompt you that it is insecure. To solve this, you need import trusted CA certificates related to domain name.

To activate the broadcasting port license/the video port license or import trusted CA certificates:

 
Click **System** -> **Licenses**.

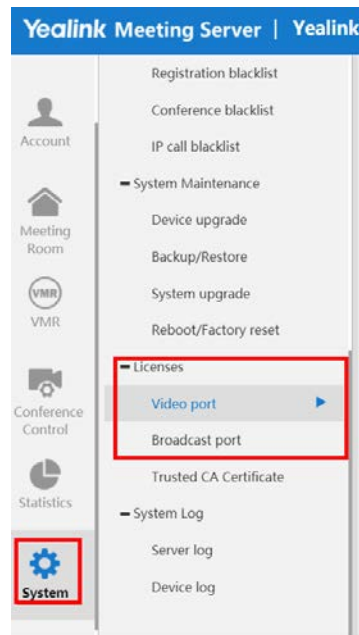

6. Optimization Description


1. Optimized the Broadcasting Interactive Video Conferences.

 Description: You can import the broadcasting port license to manage the current ports of the broadcasting party. Also, you can view that how many broadcasting parties and interactive parties are involved in the conference control interface, and change the default layout directly.

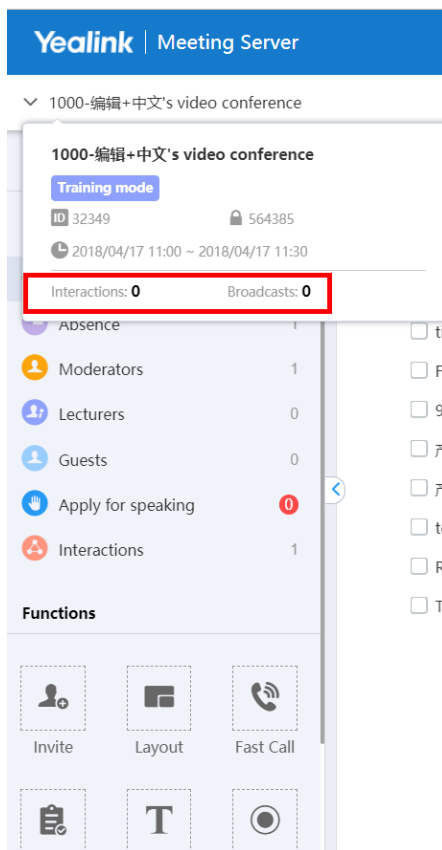

2. Optimized the feature of Configuring Personal Layout.

 Description: You can select the desired conference participants directly when you set the layout, and perform the feature of mute, allow to speak, turn off the video quickly.

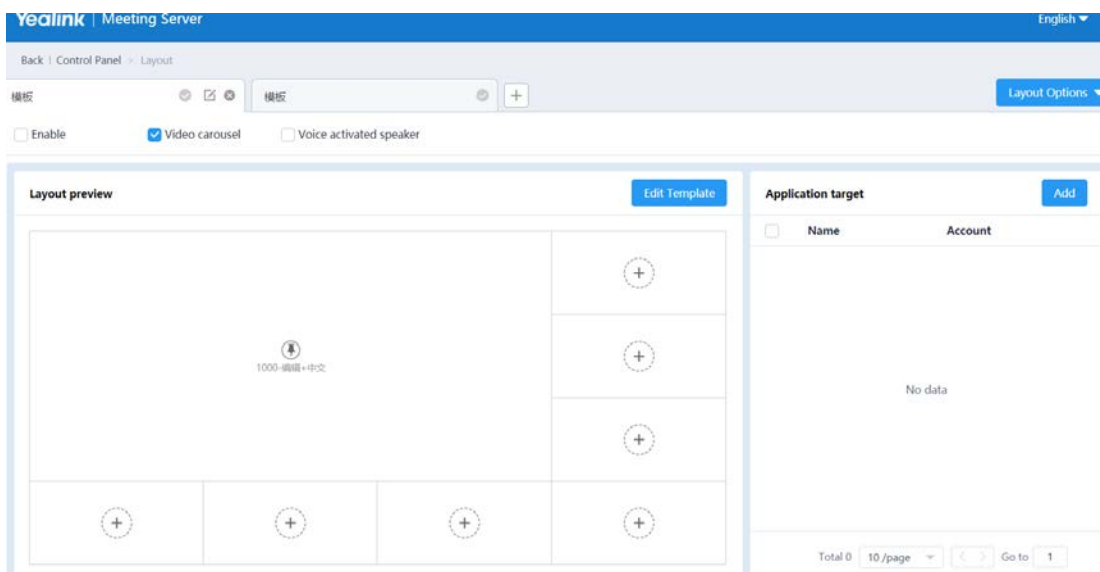

3. Optimized the user interface of Conference Control.

The screenshot displays the Yealink Meeting Server interface. At the top, the header shows "Yealink | Meeting Server" and "English". Below the header, the meeting title is "我是一个主席模式虚拟会议室" and the status is "Idle" with an "End" button.

The interface is divided into several sections:

- Participant List:** A sidebar on the left with a search bar and a list of participant categories: Attendance (0), Absence (33), Moderators (3), Lecturers (0), Guests (30), and Apply for speaking (1). Below this is a "Functions" section with icons for Invite, Layout, Fast Call, Roll Call, Message, and Record.
- Participant Grouping:** A central area with a search bar and a list of participants under the "Yealink" group. The list includes: Mars日常使用, 韩建晨测试, tianjy, FAE3, 92, 产品部测试, 产品部测试1, test_Emvy, Room System, and Third Party Device.
- Operations:** A sidebar on the right with a "Selected 0" dropdown and several action buttons: Mute, Unmute, Hold, and Release. Below these are buttons for "Set as a lecturer", "Cancel the lecturer", "Call", "FECC", "Call Statistics", and "Rejoin". At the bottom, there is a "Global Operations" section with "Mute" and "Unmute" buttons.