

**Yealink**

# **T58A&T56A Skype for Business<sup>®</sup> HD IP Phone User Guide**



**Version 9.5  
Nov.2018**

# Contents

<b>About This Guide.....</b>	<b>9</b>
Related Documentations.....	9
<b>Getting Started with Skype for Business Phones.....</b>	<b>9</b>
Hardwares of T58A and T56A.....	9
Overview of Phone Screens.....	11
Accessing the Favorites Screen.....	11
Accessing the History Screen.....	11
Accessing the Contacts Screen.....	12
Accessing the Menu Screen.....	12
Icon Instructions.....	13
Icons in the Status Bar.....	13
Icons in the Main Window.....	13
LED Instructions.....	14
Power LED Indicator.....	14
Entering Data and Editing Fields.....	15
Using the On-screen Keyboard.....	15
Using the Phone Keypad.....	16
<b>Logging in to and Locking Your Phone.....</b>	<b>16</b>
Multi-Factor Authentication.....	16
Binding Your Mobile Phone with Online Account.....	16
Passing Multi-Factor Authentication.....	17
Signing in to Skype for Business.....	18
Sign In Using Your Skype for Business User Credentials.....	18
Sign in to Skype for Business on Your Computer Using BToE.....	19
Sign In Using Your Skype for Business PIN Authentication.....	19
Sign in to Skype for Business Using Web Sign-In Method.....	19
Signing Out of Skype for Business.....	19
Using a Skype for Business phone as a Common Area Phone.....	20
Setting a Common Area Phone.....	20
Signing into a Common Area Phone Account.....	20
Signing Out of a Common Area Phone.....	20
Signing into a Skype for Business Phone as a Guest User.....	20
Sign In as a Guest User.....	21
Signing out the Guest User.....	21
Disabling Hot Desking.....	21
Phone Lock.....	21
Tips for Phone Lock.....	22
Setting a lock PIN.....	22
Setting the Idle Timeout for Phone Lock.....	22
Setting the Unlock Attempts.....	22
Locking Your Phone.....	23
Unlocking Your Phone.....	23
Changing Your lock PIN.....	23
Resetting Your lock PIN.....	23
Disabling Phone Lock.....	23

## **Audio Calls..... 24**

Switching among the Handset, Speakerphone and Headset Modes.....	24
Placing Calls.....	24
Placing Calls using the Dialer.....	24
Placing Multiple Calls.....	25
Placing Calls from a Locked Phone.....	25
Redialing a Number.....	25
Placing Calls from the Call History.....	25
Calling Favorites from the Favorites Screen.....	26
Calling Contacts from the Directory.....	26
Calling Contacts from the Search Results List.....	26
Setting a Hotline Number and Delay Time.....	26
Answering Calls.....	26
Answering a Call.....	27
Answering a Call When in a Call.....	27
Answering Calls Automatically.....	27
Muting and Unmuting Audio.....	27
Holding and Resuming Calls.....	27
Placing a call on Hold.....	28
Resuming a Call.....	28
Ending an Active Call.....	28
Transferring Calls.....	28
Performing a Blind Transfer.....	28
Performing a Consultative Transfer.....	28
Parking and Retrieving Calls on the Skype for Business Server.....	29
Parking Skype for Business Calls.....	29
Retrieve Parked Skype for Business Calls on the Same Phone.....	29
Retrieve Parked Skype for Business Calls on Another Phone.....	29
Silencing or Rejecting Incoming Calls.....	29
Silencing an Incoming Call.....	29
Reject Incoming Calls.....	30
Forwarding An Incoming Call Manually.....	30
Forwarding An Incoming Call to a Contact Manually.....	30
Forwarding An Incoming Call to Your Voicemail Manually.....	30
Forwarding All Incoming Calls.....	30
Forwarding Calls to a Contact.....	30
Forwarding Calls to Voicemail.....	31
Forwarding Calls to Delegates.....	31
Simultaneously Ring a Contact.....	31
Simultaneously Ring a Group of Contacts.....	31
Simultaneously Ring Delegates.....	32
Disabling Call Forward Feature.....	32
Configuring the Delay Time for Forwarding Incoming Calls.....	32

## **Skype for Business Conferences.....32**

Initiating a Skype for Business Conference Call.....	33
Initiating a Conference Call by Meet Now.....	33
Initiating a Conference Call during a Skype for Business Call.....	33
Initiating a Group Conference Call.....	33
Merging Multiple Calls into a Conference Call.....	33
Merging an Active Call and a Held Call into a Conference Call.....	34
Sending the Conference Information.....	34
Viewing the Conference Participants.....	34

Managing the Conference Participants.....	34
Muting and Unmuting All Conference Participants.....	35
Muting or Unmuting Individual Conference Participants.....	35
Demoting or Promoting Conference Participants.....	35
Enabling or Disabling Conference Announcements.....	35
Locking or Unlocking a Conference Call.....	36
Admitting or Denying Participants to a Locked Conference Call.....	36
Removing Conference Participants.....	36
Leaving the Conference.....	36
<b>Recording Audio.....</b>	<b>37</b>
Recording Local Audios.....	37
Recording a Call.....	37
Playing the Recorded Audios.....	38
Copying Recorded Audios to USB Flash Drive.....	38
Copying a Recorded Audio to USB Flash Drive.....	38
Copying Multiple Recorded Audios to USB Flash Drive.....	38
Renaming the Recorded Audios.....	39
Deleting the Recorded Audios.....	39
Deleting a Recorded Audio.....	39
Deleting Multiple Recorded Audios.....	39
Checking Storage Space.....	40
<b>Boss-Admin for Skype for Business.....</b>	<b>40</b>
Assigning Delegates.....	40
Viewing the Delegates Group.....	41
Viewing the Boss Group.....	41
Editing the Delegates Group.....	41
Managing Calls on the Boss's Line.....	42
Responding to Incoming Boss Calls.....	42
Viewing Held Boss Calls.....	42
Resuming Held Boss Calls.....	42
Transferring a Boss Call.....	42
Resuming a Transferred Boss Call.....	43
Transferring a Call to a Boss's Voicemail.....	43
Placing a Call on Behalf of a Boss.....	43
Initiating a Conference Call on Behalf of a Boss.....	43
Joining Conference Calls for a Boss.....	43
<b>Managing Call History.....</b>	<b>44</b>
Viewing History Records.....	44
Adding a History Record to Local Directory.....	44
Adding a History Record to Skype for Business Directory.....	44
Deleting History Records.....	45
Deleting a Call Record.....	45
Deleting Multiple Call Records.....	45
Disabling Contact Avatar.....	45
Disabling History Record.....	45
<b>Managing Contact Directory.....</b>	<b>46</b>
Searching for Contacts.....	46
Skype for Business Directory.....	46

Adding Skype for Business Contacts.....	46
Adding Skype for Business Contacts.....	46
Viewing Skype for Business Contacts.....	47
Deleting Skype for Business Contacts.....	47
Local Directory.....	48
Adding Local Contacts.....	48
Viewing Local Contacts.....	49
Editing Local Contacts.....	49
Deleting Local Contacts.....	49
<b>Favorites.....</b>	<b>49</b>
Skype for Business Favorites.....	49
Adding Skype for Business Favorites.....	50
Viewing Skype for Business Favorites on the Favorites Screen.....	50
Viewing Skype for Business Favorites in the Directory.....	50
Local Favorites.....	50
Adding Local Favorites.....	50
Viewing Local Favorites on the Favorites Screen.....	50
Viewing Local Favorites in the Directory.....	51
Reordering Local Favorites.....	51
Deleting Local Favorites.....	51
<b>Using the Voicemail.....</b>	<b>51</b>
Leaving a Voicemail.....	52
Accessing the Message Center.....	52
Managing the Voicemail.....	52
Listening to the Voicemail.....	52
Calling a Contact from Voicemail.....	52
Marking Message as Read or Unread.....	53
Deleting Voicemail Messages.....	53
<b>Using the Calendar.....</b>	<b>53</b>
Opening the Calendar.....	53
Availability during Meeting.....	54
Navigating Year View.....	54
Navigating Month View.....	55
Navigating Day View.....	55
Displaying Meeting View on the Calendar.....	55
Tracking the Calendar.....	55
Disabling the Meeting Reminders.....	55
Setting the Reminder Interval.....	56
Responding to Meeting Reminders.....	56
Joining Skype Conferences.....	56
Joining a Skype Conference from a Meeting Reminder.....	56
Joining a Skype Conference from Meeting View.....	57
Joining a Skype Conference by Dialing the Conference Dial-in Number.....	57
<b>Skype for Business Phone Settings.....</b>	<b>57</b>
Setting the Language.....	57
Changing the Screen Backlight Brightness and Time.....	58
Disabling Playing Tone.....	58
Disabling Call Waiting.....	58

Changing the Administrator Password.....	58
Time and Date Display.....	59
Setting the Time and Date Manually.....	59
Changing the Time and Date Format.....	59
Setting a Send Key.....	60
Setting Screen Savers.....	60
Changing Audio Settings.....	60
Adjusting the Volume.....	60
Setting a Ringtone for the Phone.....	60
Setting a Ringtone for a Contact.....	61
Setting a Ringtone for Incoming Private Line.....	61
Setting a Ringtone for a Incoming Team-Call.....	61
Setting a Ringtone for Response Group.....	61
Disabling the Key Tone.....	61
Presence Status.....	62
Updating Your Skype for Business Presence.....	63
Enhanced 911.....	63
E911 Location Tip.....	63
Adding the Location Information.....	64
Selecting a Default Location.....	64
Viewing the Location Information.....	64

## **Advanced Phone Features.....64**

Intercom.....	65
Setting Intercom.....	65
Configuring the Target Extension Number.....	65
Deleting the Target Extension Number.....	66
Placing an Intercom Call.....	66
Multicast Paging.....	66
Setting a Paging List.....	66
Deleting a Paging Group.....	67
Sending Multicast Paging.....	67
Receiving Multicast Paging.....	67
Managing a Paging Call.....	67
Privacy Mode.....	68
Modifying the Privacy Mode from the Phone.....	68
Modifying the Privacy Mode from the Skype for Business Client.....	68
Editing Your Team-Call Group Members.....	69
Private Lines.....	69
Call Queue.....	70
Response Group.....	70
Group Call Pickup.....	70
Picking Up a Call for Your Group.....	70
Branch Office Resiliency.....	71

## **Optional Accessories with Your Phone.....71**

Supported Accessories.....	71
Headset.....	71
Analog Headset.....	72
Bluetooth Headset.....	72
USB Headset.....	72
Using Headsets.....	72
Using an EXP50 Expansion Module.....	73

<b>Wireless Network.....</b>	<b>73</b>
Activating the Wi-Fi Mode.....	73
Connecting to the Wireless Network.....	73
Connecting to an Available Wireless Network Manually.....	74
Connecting to the Wireless Network Using Wi-Fi Protected Setup (WPS).....	74
Adding a Wireless Network manually.....	75
Viewing the Wireless Network Information.....	75
Disconnecting the Wireless Network Connection.....	75
Deactivating the Wi-Fi Mode.....	75
 <b>Connecting a Mobile Phone Using Bluetooth.....</b>	 <b>76</b>
Activating the Bluetooth Mode.....	76
Pairing and Connecting the Bluetooth-Enabled Mobile Phone.....	76
Handling Incoming Mobile Phone Calls by Using Skype for Business Phone.....	77
Editing Your Phone's Bluetooth Device Name.....	77
Disabling Bluetooth Device Discovery.....	77
Renaming the Paired Bluetooth Devices.....	78
Disconnecting the Bluetooth Device.....	78
Un-pairing the Mobile Phone.....	78
Deactivating the Bluetooth Mode.....	78
 <b>Using Better Together over Ethernet.....</b>	 <b>79</b>
Getting Started with Better Together over Ethernet.....	79
Downloading and Installing the Yealink BToE Connector.....	79
Starting the Yealink BToE Connector.....	80
Setting the Yealink BToE Connector.....	80
Pairing Your Phone with Your Computer.....	80
Enabling BToE and Selecting a Pairing Mode.....	80
Pairing Your Phone with Your Computer over Ethernet.....	80
Pairing Your Phone with Your Computer using Phone IP Address.....	81
Viewing Pairing Status.....	81
Using Your Phone as Your Primary Audio Device for Your Computer.....	82
Using BToE to Lock and Unlock Your Phone.....	82
Disabling Phone Lock with PC.....	82
Using BToE to Manage Calls on Your Phone and Skype for Business Client.....	83
Setting Your Phone as Your Primary Audio Device.....	83
Answering BToE Calls.....	83
Placing BToE Calls.....	83
Pausing and Resuming BToE Calls.....	84
Moving Call Audio between Your Phone and Computer.....	84
Disabling BToE on Your Phone.....	84
Exiting BToE on Your Computer.....	84
Uninstalling the Yealink BToE Connector.....	85
 <b>Maintaining Skype for Business Phones.....</b>	 <b>85</b>
Rebooting Your Phone.....	85
Viewing Phone Status.....	85
Updating Phone Firmware.....	85
Resetting Your Phone.....	86

**Troubleshooting..... 86**

    Why is the screen blank?..... 86

    Why does the phone display “Network unavailable”?..... 86

    Why does the phone display time and date incorrectly?..... 87

    How can I obtain the MAC address of a phone when the phone is not powered on?..... 87

    Why can’t I sign into the Skype for Business server on the phone?..... 87

    Why can't the phone pair with my Skype for Business client?..... 87

    Why can't I see the Calendar menu on the phone?..... 87

    Why can't I get a dial tone?..... 87

    Why doesn't the phone ring?..... 88

    Why can't I receive calls?..... 88

    Why doesn't my handset work?..... 88

**Regulatory Notices..... 88**

    Service Agreements..... 88

    Limitations of Liability..... 88

    Safety Instructions..... 88



## About This Guide

---

Thank you for choosing Yealink T58A/T56A Skype for Business phones, which are designed to work with the Skype for Business Server. This guide provides everything you need to quickly use your new phone. Firstly, verify with your system administrator that the IP network is ready for phone configuration. Also be sure to read the Quick Start Guide in your phone package before you set up and use the phone.

- [Related Documentations](#)

## Related Documentations

---

You can view the following types of documents on each product support page on [Yealink Support](#):

- Release Notes: This guide describes what's new for a new phone firmware.
- Quick Start Guide: This guide describes the contents of your package, how to assemble the phone or accessory, and how to use the basic features. This guide is also included in your phone package.
- Administrator Guide: This guide provides detailed information about setting up your network and configuring features.
- Regulatory Notice: This guide provides information for all regulatory and safety guidance.

## Getting Started with Skype for Business Phones

---

This chapter aims to make you familiar with phone user interface.




**Note:** As you read this guide, keep in mind that some features are only configurable by your system administrator or determined by your phone environment. As a result, some features may not be enabled or may be operated differently on your phone. Additionally, the examples and graphics in this guide may not directly reflect what is displayed or is available on your phone screen.

- [Hardwares of T58A and T56A](#)
- [Overview of Phone Screens](#)
- [Icon Instructions](#)
- [LED Instructions](#)
- [Entering Data and Editing Fields](#)

## Hardwares of T58A and T56A

---

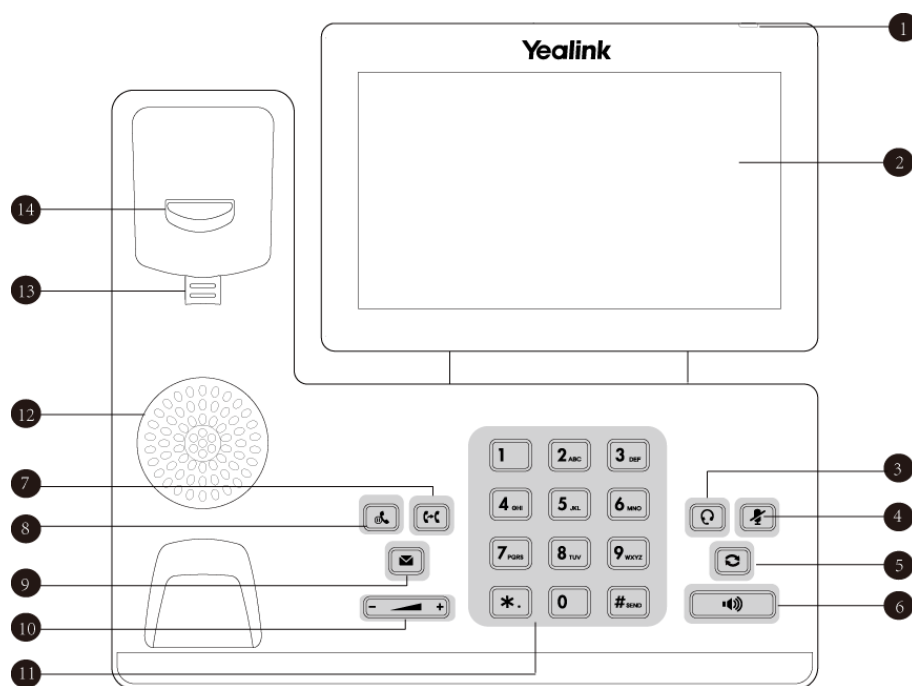

The table lists each feature numbered in the figures.


	Item	Description
1	Power LED indicator	Indicates call status, message status and phone's system status.
2	Touch Screen	7 inch (1024 x 600) capacitive (5 point) touch screen. Tap to select and highlight screen items.
3	HEADSET Key	Toggles the headset on or off. The LED indicator glows green when the headset is activated.
4	MUTE Key	Toggles the microphone on or off. The LED indicator glows green when the mute feature is activated.
5	REDIAL Key	Redials a previously dialed number.
6	Speakerphone Key	Toggles the speakerphone (hands-free) mode or not. The LED indicator glows green when the speakerphone is activated.
7	TRANSFER Key	Transfers a call.
8	HOLD Key	Places a call on hold or resumes a held call.
9	MESSAGE Key	Accesses your voice messages.
10	Volume Key	Adjust the volume of handset, headset, speaker, ringer, or media.
11	Keypad Keys	Enable you to enter numbers, letters, and special characters.
12	Speaker	Provide the digits and special characters in context-sensitive applications.
13	Reversible Tab	Secures the handset in the handset cradle when the Phone is mounted vertically. For more information on how to adjust the reversible tab, refer to <a href="#">Yealink Wall Mount Quick Installation Guide for Yealink IP Phones</a> .
14	Hookswitch	Connects or disconnects the phone from the phone line. The hookswitch is automatically activated when a user lifts the handset from the cradle to get a dial tone.

## Overview of Phone Screens

You can access the following screens on your phone.


- [Accessing the Favorites Screen](#)
- [Accessing the History Screen](#)
- [Accessing the Contacts Screen](#)
- [Accessing the Menu Screen](#)

### Accessing the Favorites Screen

Local favorites and Skype for Business favorites are displayed on the Favorites screen. By default, local favorites are displayed before the Skype for Business favorites. Local favorites are indicated by the  icon. Skype for Business favorites are indicated by the presence status icon.

#### Procedure

1. Tap **Favorites**.
2. Slide up and down to view more favorites.

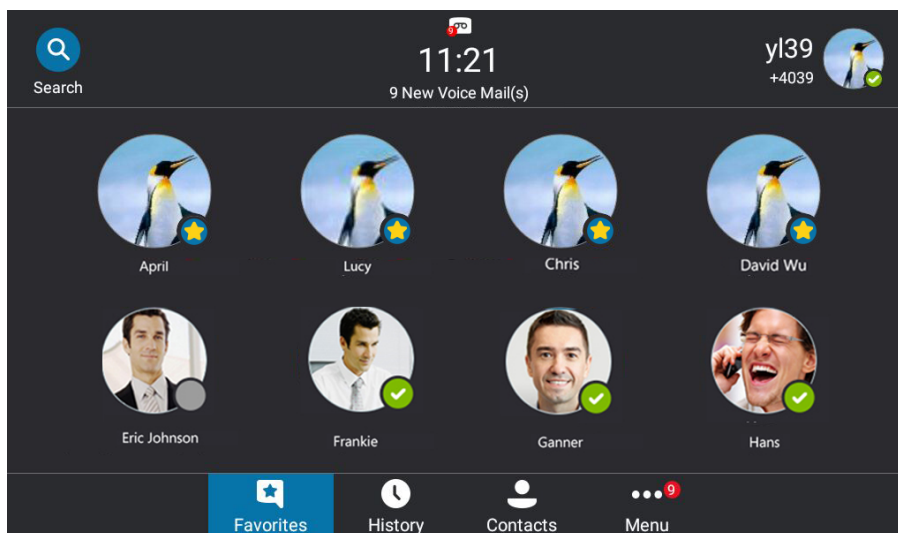


### Accessing the History Screen

You can view missed, placed, received and forwarded calls in the History screen.

#### Procedure

1. Tap **History**.
2. Slide up and down to view more history records.

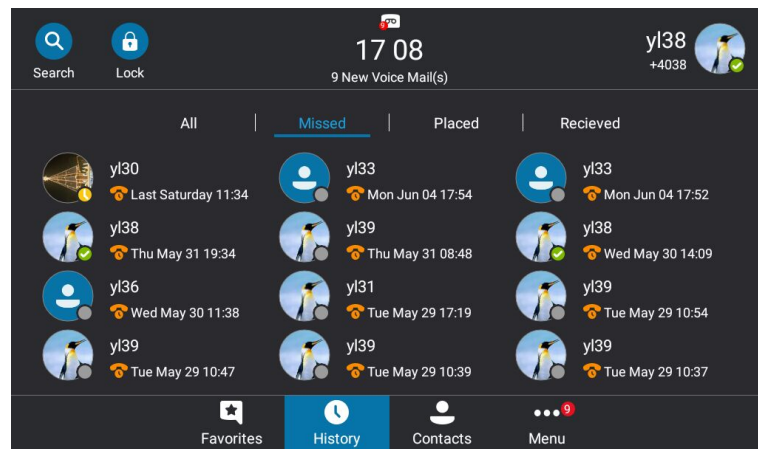


## Accessing the Contacts Screen

The Contacts screen includes your local directory and Skype for Business directory.

### Procedure

1. Tap **Contacts**.
2. Slide up and down to view more groups.

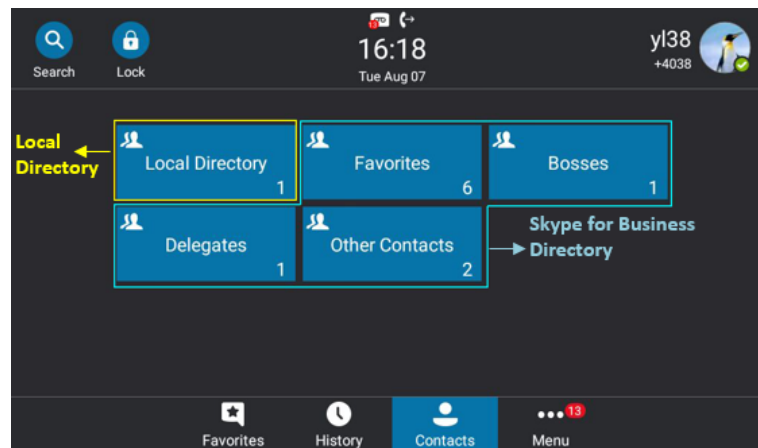


## Accessing the Menu Screen

In menu screen, you can access phone features, settings and information.

### Procedure

1. Tap **Menu**.

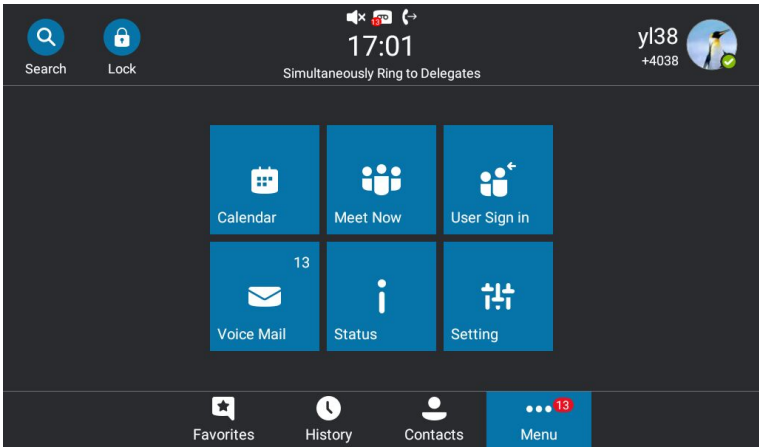








## Icon Instructions

Your phones have various icons that display the status of the phone.

- [Icons in the Status Bar](#)
- [Icons in the Main Window](#)

### Icons in the Status Bar








 
 








The following table displays icons in the status bar.

Icons	Description
	Search for contacts
	Missed Calls
	Forwarded Calls
	Voicemail
	Auto Answer
	Phone lock
	Ringer volume is 0

### Icons in the Main Window

The following table displays icons in the main window.

Icons	Description
	Local Favorites

Icons	Description
	Call Mute
	Call Hold
	Invite a new call to the Skype for Business conference
	Received Calls
	Placed Calls
	Missed Calls
	Hands-free speakerphone mode
	Location is not set
	Unread voicemail
	Read voicemail
	Enable the conference announcement
	Conference presenter
	Conference attendee
	Conference lock
	Phone Lock
	Private conference
	Set your phone as primary audio device for PC

## LED Instructions

- *Power LED Indicator*

### Power LED Indicator

LED Status	Description
Red	The phone is initializing.
Fast-flashing red (300ms)	The phone is ringing.

LED Status	Description
Slow-flashing red (1s)	The phone receives a voicemail.
Red for 500ms and off for 3s alternately	The phone enters power-saving mode.
Off	<p>The phone is powered off.</p> <p>The phone is idle.</p> <p>The phone is busy.</p> <p>The call is placed on hold.</p> <p>The call is muted.</p>


## Entering Data and Editing Fields


You can enter data and edit fields using the phone keypad or using the on-screen keyboard.

- [Using the On-screen Keyboard](#)
- [Using the Phone Keypad](#)

### Using the On-screen Keyboard

Before using the on-screen keyboard to enter data, you need to know the function of the keys on the on-screen keyboard. The Skype for Business phone supports the English (US) input method.

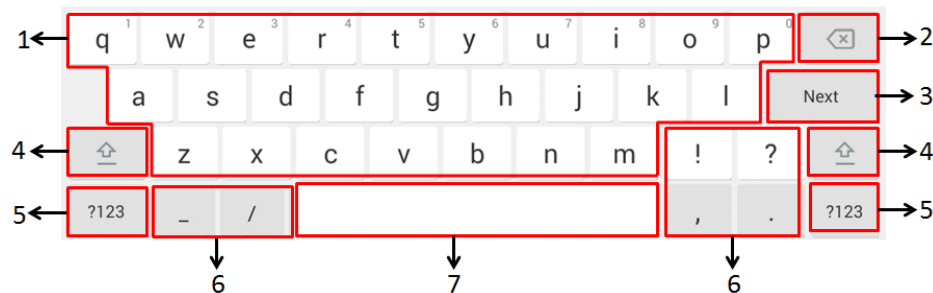

No.	Item	Description	
1	26 English Letters	<ul style="list-style-type: none"> <li>• Tap to enter letters.</li> <li>• Long tap a key then slide to choose one of the options to enter an alternate character.</li> </ul>	
2	Delete Key	<ul style="list-style-type: none"> <li>• Tap to delete the entered characters one by one.</li> <li>• Long tap to delete two or more characters.</li> </ul>	
3	Label automatically to identify the context-sensitive features	Next Key	Tap to go to the next field.
		Done Key	Tap to confirm the settings.
		Send Key	Tap to dial out the number.
4		Tap to switch to the uppercase input mode.	

5	Input Method	Tap to switch between input modes.
6	Special Characters	Tap to enter the corresponding character.
7	Space Key	<ul style="list-style-type: none"> <li>• Tap to enter spaces.</li> <li>• Long tap to change input method.</li> </ul>

## Using the Phone Keypad

Instead of using the onscreen keyboard, you can also use phone keypad to enter data. The phone keypad only provides digit keys, # key and \* key.

### Procedure

Press digit keys, pound key and star key on the phone.

# Logging in to and Locking Your Phone

---

You can sign in to the phone with your Skype for Business credentials and lock your phone when necessary.

- [Multi-Factor Authentication](#)
- [Signing in to Skype for Business](#)
- [Using a Skype for Business phone as a Common Area Phone](#)
- [Signing into a Skype for Business Phone as a Guest User](#)
- [Phone Lock](#)

## Multi-Factor Authentication

---

To guarantee the security of account, your network administrator may enable multi-factor authentication (MFA) feature for your online account. In this case, you need to pass a 2-step verification at the initial sign-in. It means that you should sign in with your password and a verification sent to your phone.

- [Binding Your Mobile Phone with Online Account](#)
- [Passing Multi-Factor Authentication](#)

## Binding Your Mobile Phone with Online Account

To use MFA feature, you should bind your mobile phone with online account first.

### Procedure

1. On the Skype for Business Client, enter your online account, and then click **Sign in**.
2. Enter your sign-in password, and then click **Sign in**.
3. Click **Set it up now**.





For added security, we need to further verify your account



zhaops04@yealink5.onmicr...

Your admin has required that you set up this account for additional security verification.

[Set it up now](#)

[Sign out and sign in with a different account](#)

©2018 Microsoft

[Terms of use](#) [Privacy & cookies](#)



4. Enter your mobile phone number in the corresponding field and select an authentication method.

5. Click **Next**.

6. Select a method to complete the authentication:

- If you select **Call me**, your mobile phone will receive a call and you need to follow the voice prompt to complete authentication, and then click **Done**.
- If you select **Send me a code by text message**, enter the correct verification code received from your mobile phone in the corresponding field, and then click **Verify**.

## Passing Multi-Factor Authentication

MFA applies to user sign-in, web sign-in and sign in via PC methods. You can use Voice call verification or Text verification to log in and use the Skype for Business phones. The Skype for Business phones will use the authentication mode you set on the Skype for Business client by default.

## Procedure

1. Log into your Skype for Business phones using the user Sign-in, web sign-in or sign in via PC method. Your phone or web browser enters the verification screen.
2. Depend on the authentication mode you selected on the Skype for Business client:
  - If you select **Call me**, your mobile phone will receive a call. Answer the call and follow the voice prompt to complete authentication.
  - If you select **Send me a code by text message**, your mobile phone will receive a verification code. Enter the verification code into the Skype for Business phones or web browser and then select **Verify**.

Your phone signs into Skype for Business phone successfully.



**Note:** You can switch between the **Voice call verification** and **Text verification** methods on your phone or web browser.

## Related tasks

[Sign In Using Your Skype for Business User Credentials](#)

[Sign in to Skype for Business on Your Computer Using BToE](#)

[Sign in to Skype for Business Using Web Sign-In Method](#)

# Signing in to Skype for Business

---

You can use one of the following methods to sign in to your phone with your Skype for Business credentials:

- **User Sign-in:** This method uses the user's credentials (sign-in address, user name, and password) to sign into Skype for Business server. This sign-in method is applicable to On-Premises account and Skype for Business Online account.
- **Sign in via PC:** Sign in with the Skype for Business client when your phone is paired to your computer with Better Together over Ethernet (BToE). This sign-in method is applicable to On-Premises account and Online account.
- **PIN Authentication:** This method uses the user's phone number (or extension) and personal identification number (PIN) to sign into Skype for Business server. This sign-in method is only applicable to On-Premises account.
- **Web Sign-in:** Sign in to your account on your computer using the web address shown on the phone. This sign-in method is only applicable to Skype for Business Online account.



**Note:** If the phone reboots after successful login, the login credentials from the previous Sign-In will be cached. User can sign in successfully without reentering the credentials.

- [Sign In Using Your Skype for Business User Credentials](#)
- [Sign in to Skype for Business on Your Computer Using BToE](#)
- [Sign In Using Your Skype for Business PIN Authentication](#)
- [Sign in to Skype for Business Using Web Sign-In Method](#)
- [Signing Out of Skype for Business](#)

## Related tasks

[Setting a lock PIN](#)

## Sign In Using Your Skype for Business User Credentials

You can sign in to your Skype for Business account using your login credentials, which includes your address, username, and password. Contact your system administrator to get your login credentials.

## Procedure

1. Select **Sign in**.
2. Select **User Sign-in**.

3. Enter your Skype for Business account user credentials and select **Sign in**.

## Sign in to Skype for Business on Your Computer Using BToE

When your phone is connected to your computer and paired using Better Together over Ethernet (BToE), you can sign in to the phone using the Skype for Business client on your computer.

### Procedure

1. Select **Sign in**.
2. Select **Sign in via PC**.
3. In the Skype for Business client on your computer, enter your login credentials.

### Related tasks

*Using Better Together over Ethernet*

## Sign In Using Your Skype for Business PIN Authentication

You can sign in to your Skype for Business account using your PIN Authentication credentials. Contact your system administrator to get your login credentials.

### Before you begin

Your system administrator should configure network environment in advanced for PIN Authentication method. If not, your phone may not display this sign-in method.

### Procedure

1. Select **Sign in**.
2. Select **PIN Authentication**.
3. Enter your PIN authentication credentials and select **Sign in**.

## Sign in to Skype for Business Using Web Sign-In Method

You can sign in to your Skype for Business Online account using a web browser. Contact your system administrator to get your login credentials.

### Procedure

1. Select **Sign in**.
2. Select **Web Sign-in**.  
A web address and pairing code are displayed.
3. Enter the web address into the web browser on your computer.
4. On the Skype for Business Authentication website, enter your email address then select **Verify email**.
5. Enter the pairing code generated on the phone into the web browser.  
A confirmation message is displayed when the phone successfully signs into Skype for Business.

## Signing Out of Skype for Business

You may want to sign out of your account when you are using a public phone. After you sign out of your account, the account-related features (for example: calling or viewing your Skype for Business contacts) are not available. However, you can still use other available features.

### Procedure

1. Tap your avatar at the top-right corner of the touch screen.
2. Select **Sign Out**.

The phone screen prompts “Are you sure to sign out?”.

3. Select **OK**.

## Using a Skype for Business phone as a Common Area Phone

---

Your phone can be set as a CommonArea Phone (CAP) . Instead of being located in someone’s office, common area phones are typically located in building lobbies, cafeterias, employee lounges, conference rooms, and other locations where a large number of people are likely to gather.

- [Setting a Common Area Phone](#)
- [Signing into a Common Area Phone Account](#)
- [Signing Out of a Common Area Phone](#)

### Setting a Common Area Phone

You can configure an individual phone to be a Common Area Phone.

#### Procedure

1. Navigate to **Menu > Setting > Advanced > Common Area Phone**.
2. Turn on **Set as CAP** and select **Save**.  
The phone screen prompts “Reboot to save the configuration?”.
3. Select **OK**.  
This configuration will take effect after a reboot.

### Signing into a Common Area Phone Account

The system administrator can use a web browser to provision numerous common area phones quickly. As a user, you can also sign into a common area phone by yourself.

#### Before you begin

[Setting a Common Area Phone](#)

#### Procedure

1. Select a sign-in method.
2. Enter your login credentials and select **Sign in**.

#### Related concepts

[Signing in to Skype for Business](#)

### Signing Out of a Common Area Phone

You can sign out of your account after you use the common area phone.

#### Procedure

1. Navigate to **Menu > Setting > Advanced > CAP sign out**.
2. Tap **Sign Out**.

## Signing into a Skype for Business Phone as a Guest User

---

If your system administrator enables the Hot Desking feature for your phone in your environment, you can sign in to a phone as a guest user. Hot Desking feature is convenient for different employees to share one Skype for Business

phone. When you sign out, any changes you made on the phone while signed in are removed and the host user settings are restored.

- [Sign In as a Guest User](#)
- [Signing out the Guest User](#)
- [Disabling Hot Desking](#)

## Sign In as a Guest User

You can sign into Skype for Business on your phone or common area phone as a guest user.

### Procedure

1. Do one of the following:
  - When the phone is locked, tap **User Sign in**.
  - When the phone is unlocked, tap **Menu > User Sign in**.
2. Select **OK** to start the hot-desking.  
The host user is signed out, and the sign-in screen displays.
3. Select a sign-in method.
4. Enter your login credentials and select **Sign in**.  
The phone displays “It is in the hot-desking mode”.

### Related concepts

[Signing in to Skype for Business](#)

## Signing out the Guest User

You can sign out the guest user after you use the phone.

### Procedure

Do one of the following:

- When the phone is locked, select **Sign Out**.
- When the phone is unlocked, tap your avatar at the top-right corner of the touch screen and then tap **Sign Out**.

The guest user is signed out and the host user is signed in automatically.



**Note:** When the phone has been inactive for a designated time (this time is configured by system administrator), the guest user will automatically be signed out. One minute before logout, the phone will prompt you to sign out immediately or continue using the phone as a guest user for 5 minutes.

## Disabling Hot Desking

You can disable the Hot Desking feature, so that guests are not allowed to sign into your phone.

### Procedure

1. Navigate to **Menu > Setting > Features > Hot-Desking**.
2. Turn off **Hot-Desking**.
3. Select **Save**.

## Phone Lock

If your system administrator enables the phone lock feature for your phone in your environment, you can lock your phone when necessary.

- [Tips for Phone Lock](#)
- [Setting a lock PIN](#)
- [Setting the Idle Timeout for Phone Lock](#)
- [Setting the Unlock Attempts](#)
- [Locking Your Phone](#)
- [Unlocking Your Phone](#)
- [Changing Your lock PIN](#)
- [Resetting Your lock PIN](#)
- [Disabling Phone Lock](#)

## Tips for Phone Lock

You can choose to lock your phone in following situations:

- Prevent unauthorized outgoing calls.
- Prevent people from viewing or modifying phone information, such as your conference schedules and history records.

When your phone is locked, you can:

- Place outgoing calls to a contact, unless your system administrator restricts your phone to placing calls to emergency and authorized numbers only.
- Answer incoming calls, unless your administrator has set your phone to require a password to answer calls.

## Setting a lock PIN

When you sign in to your Skype for Business account, you are prompted to set a lock PIN, which is used for unlocking your phone.

### Procedure

1. Enter the lock PIN in the **New PIN** field.
2. Enter the lock PIN again in the **Confirm PIN** field.
3. Select **Save**.



**Note:** If you do not create a lock PIN when prompted, you will be automatically signed out of the phone in a set amount of time, and you must create a lock PIN when you try to sign in again.

### Related concepts

[Signing in to Skype for Business](#)

## Setting the Idle Timeout for Phone Lock

You can configure an idle timeout, after which the phone will lock automatically. The default time is 10 minutes.

### Procedure

1. Navigate to **Menu > Setting > Basic > Phone Lock**.
2. Enter the integer between 1 to 1440 minutes in the **Idle time-out(mins)** field.
3. Select **Save**.

### Related tasks

[Locking Your Phone](#)

## Setting the Unlock Attempts

You can specify the maximum number of unsuccessful unlock attempts for a locked phone. You will be automatically signed out of the phone when the unsuccessful unlock attempts exceeds the limit.

**Procedure**

1. Navigate to **Menu > Setting > Basic > Phone Lock**.
2. Select the desired value from the **Unlock attempts** field.
3. Select **Save** .

**Locking Your Phone**

Your phone automatically locks after being idle for a set amount of time, which is set by your system administrator. You can also lock your phone anytime you want.

**Procedure**

Tap **Lock**.

**Related tasks**

[\*Setting the Idle Timeout for Phone Lock\*](#)

**Unlocking Your Phone**

You can unlock your phone using your lock PIN.

**Procedure**

1. Enter the lock PIN in the input field.
2. Tap **Unlock**.

**Changing Your lock PIN**

You can change your lock code at any time.

**Procedure**

1. Tap **Menu > Setting > Basic > Phone Lock** .
2. Enter the lock PIN in the **Current PIN** field.
3. Enter the lock PIN in the **New PIN** field.
4. Enter the lock PIN again in the **Confirm PIN** field.
5. Select **Save**.

**Resetting Your lock PIN**

If you forget your lock PIN, you can reset the lock PIN from a phone using your login password.

**Procedure**

1. Tap **Forgot unlock PIN** on the lock screen .
2. Enter your login password for your Skype for Business account.
3. Select **Unlock**.
4. Enter and confirm your new lock PIN.

**Disabling Phone Lock**

If you do not want to lock your phone, you can disable phone lock.

**Procedure**

1. Navigate to **Menu > Setting > Basic > Phone Lock**.

2. Turn off **Lock Enable**.
3. Select **Save**.

## Audio Calls

---

You can place calls, answer calls, transfer a call to someone else, or conduct a Skype for Business conference call.

- [\*Switching among the Handset, Speakerphone and Headset Modes\*](#)
- [\*Placing Calls\*](#)
- [\*Answering Calls\*](#)
- [\*Muting and Unmuting Audio\*](#)
- [\*Holding and Resuming Calls\*](#)
- [\*Ending an Active Call\*](#)
- [\*Transferring Calls\*](#)
- [\*Parking and Retrieving Calls on the Skype for Business Server\*](#)
- [\*Silencing or Rejecting Incoming Calls\*](#)
- [\*Forwarding An Incoming Call Manually\*](#)
- [\*Forwarding All Incoming Calls\*](#)

## Switching among the Handset, Speakerphone and Headset Modes

---

You can place and answer calls on your phone using the handset, headset, or speakerphone, and you can alternate among these three modes during calls, if available.

### Procedure

Do one of the following:

- Pick up the handset to use the handset mode.
- Press the Speakerphone key to use the speakerphone mode. The key LED glows green.
- Press the HEADSET key to use the headset mode. The key LED glows green.

## Placing Calls

---

You can use your phone like a regular phone to place calls in many ways easily.

- [\*Placing Calls using the Dialer\*](#)
- [\*Placing Multiple Calls\*](#)
- [\*Placing Calls from a Locked Phone\*](#)
- [\*Redialing a Number\*](#)
- [\*Placing Calls from the Call History\*](#)
- [\*Calling Favorites from the Favorites Screen\*](#)
- [\*Calling Contacts from the Directory\*](#)
- [\*Calling Contacts from the Search Results List\*](#)
- [\*Setting a Hotline Number and Delay Time\*](#)

### Placing Calls using the Dialer

You can enter a phone number by using the dialer to place a call.




### Procedure

1. Do one of the following:
  - Pick up the handset.
  - Press the Speakerphone key.
  - Press the HEADSET key.
2. Enter the desired number.  
You can also tap a desired contact from the search result list, favorites screen, history screen or contacts screen.
3. Select **Call**.

## Placing Multiple Calls

When you are in a call, you can hold your current call and place a new call. Only one active call (the call that has audio associated with it) can be in progress at any time.

### Procedure

1. During a call, Press  or select **Hold**.  
The active call is placed on hold.
2. Select **New Call**.
3. Enter the desired number.  
You can also tap a desired contact from the search result list, favorites screen, history screen or contacts screen.
4. Select **Call**.

## Placing Calls from a Locked Phone

On the locked phone, you can place outgoing calls to any contact unless your system administrator restricts your phone to placing calls only to emergency numbers, such as 911, and authorized numbers that your system administrator can set up.

### Procedure

1. Select **Emerg Call**.
2. Dial the desired number.

## Redialing a Number

You can recall the last contact you called when your phone is idle.

### Procedure

Press .

A call to your last dialed number is attempted.

## Placing Calls from the Call History

You can place a call to the history record.

### Procedure

1. Select **History**.
2. Slide up and down to scroll through call list.
3. Tap the desired entry.

## Calling Favorites from the Favorites Screen

When you add a contact as a favorite, the Favorites screen on your phone display your favorites.

### Procedure

1. Tap **Favorites**.
2. Slide up and down to scroll through favorites.
3. Tap the desired favorite.

## Calling Contacts from the Directory

You can place calls to your contacts.



### Procedure

1. Select **Contacts**.
2. Select the group that contains the desired contact.
3. Tap the desired contact.

## Calling Contacts from the Search Results List

On the Dialing screen, you can search for Skype for Business contacts, local contacts and Microsoft Outlook contacts.

### Procedure

1. Tap .
2. Enter a few continuous characters of the contact name or continuous numbers of the contact number to search for a desired contact.
3. Tap the avatar of the desired contact.
4. Tap .

## Setting a Hotline Number and Delay Time

You can configure a hotline number and a delay. When you lift the handset or press the Speakerphone key, the phone will dial out the hotline number automatically after a designated period of time.

### Procedure

1. Navigate to **Menu > Setting > Features > Hotline**.
2. Enter the desired number in the **Hot Number** field.
3. Enter the desired delay time in the **HotLine Delay** field.
4. Select **Save**.

## Answering Calls

---

When you receive an incoming call on your phone, you can choose to answer it in various ways.

- [Answering a Call](#)
- [Answering a Call When in a Call](#)
- [Answering Calls Automatically](#)

## Answering a Call

### Procedure

Do one of the followings:

- Pick up the handset.
- Press the Speakerphone key.
- Press the HEADSET key.
- Select **Answer**.

## Answering a Call When in a Call

When you are in an active call and an incoming call arrives on the phone, the call waiting tone beeps, and the incoming call information is displayed.

### Procedure

Select **Answer**.

The active call is placed on hold, and the incoming call becomes active.

### Related tasks

[Disabling Call Waiting](#)

## Answering Calls Automatically

You can enable auto answer feature to automatically answer an incoming call in speakerphone (hands-free) mode when your phone is idle.

### Procedure

1. Navigate to **Menu > Setting > Features > Auto Answer**.
2. Turn on **Auto Answer**.
3. Select **Save**.

When you are in an active call and an incoming call arrives on the phone, the incoming call will not be automatically answered even if auto answer is enabled.

## Muting and Unmuting Audio

---

You can mute the microphone during an active call, and then the other party cannot hear you.

### Procedure

1. During a call, press the mute key on the phone.
2. To unmute audio, press the mute key on the phone or tap **Mute** on the touch screen.

## Holding and Resuming Calls

---

You can place an active call on hold. Only one active call can be in progress on the phone at any time. Other calls can be made and received while placing the original call on hold.

- [Placing a call on Hold](#)
- [Resuming a Call](#)

## Placing a call on Hold

### Procedure

During a call, Press  or tap **Hold**.

Your phone will beep softly every 30 seconds to remind you that you still have a call on hold.

## Resuming a Call

### Procedure

Do one of the following:


- If only one call is placed on hold, select **Resume**.
- If multiple calls are placed on hold, tap the held call and then tap **Resume**.

## Ending an Active Call

---

### Procedure

Do one of the following:

- If you are using the handset, hang up the handset or select **End Call**.
- If you are using the headset, select **End Call**.
- If you are using the speakerphone, press  or tap **End Call**.

## Transferring Calls

---


You can transfer a call to another party using the blind transfer or consultative transefer method:

- [Performing a Blind Transfer](#)
- [Performing a Consultative Transfer](#)

### Performing a Blind Transfer

You can transfer calls to another contacts immediately without consulting with them first.

#### Procedure

1. During a call, press  or tap **Blind Tran**.
2. Do one of the following:
  - Enter a number and then select **Transfer**.
  - Tap a desired contact directly from the search result list, favorites screen, history screen or contacts screen.

### Performing a Consultative Transfer

You can transfer calls to other contacts after consulting them first.

#### Procedure

1. During a call, tap **Transfer**.
2. Do one of the following:

- Enter a number and then select **Call**.
  - Select a desired contact directly from the search result list, favorites screen, history screen or contacts screen.
3. After the party answers the call, tap **Transfer**.

## Parking and Retrieving Calls on the Skype for Business Server

---

Parked calls are placed in the call orbit and you are given a retrieval number to retrieve the call.

- [Parking Skype for Business Calls](#)
- [Retrieve Parked Skype for Business Calls on the Same Phone](#)
- [Retrieve Parked Skype for Business Calls on Another Phone](#)

### Parking Skype for Business Calls

You can park a call, and continue to make calls and answer other incoming calls on your phone.

#### Procedure

During a call, navigate to **More > Park**.

The call is placed in the call orbit and the phone displays a retrieval number.

### Retrieve Parked Skype for Business Calls on the Same Phone

After you park a call, you can retrieve it on the same phone.

#### Procedure

Select **Retrieve Park**.

### Retrieve Parked Skype for Business Calls on Another Phone

After you park a call, you can provide another contact with the call retrieval number to retrieve the call.

#### Procedure

Dial the retrieval number.



**Note:** If the call is ended before being retrieved, the prompting message “Parked call ended before it can be retrieved” is displayed on the screen of the person who parked the call.

## Silencing or Rejecting Incoming Calls

---

When you receive an incoming call, you can choose to silence or reject the call instead of answering.

- [Silencing an Incoming Call](#)
- [Reject Incoming Calls](#)

### Silencing an Incoming Call

You can silence a call to stop your phone from ringing. Even if you silence the ringer, an incoming call notification continues to display on your phone.

#### Procedure

When you receive an incoming call, select **Silence**.

## Reject Incoming Calls

You can reject a call and send the call directly to voicemail (if voicemail is available). Rejected calls display in the Received Calls list in your call history.

### Procedure

When you receive an incoming call, select **Reject**.

## Forwarding An Incoming Call Manually

---

You can manually forward the call to another contact or your voicemail when your phone is ringing.

- [Forwarding An Incoming Call to a Contact Manually](#)
- [Forwarding An Incoming Call to Your Voicemail Manually](#)

## Forwarding An Incoming Call to a Contact Manually

You can manually forward the incoming call to another contact when your phone is ringing.

### Procedure

1. When your phone is ringing, tap **Forward**.
2. Do one of the following:
  - Enter a number and then select **Forward**
  - Tap a desired contact directly from the search result list, favorites screen, history screen or contacts screen.
  - Tap a desired contact directly from the search result list, favorites screen, history screen or contacts screen.

## Forwarding An Incoming Call to Your Voicemail Manually

You can manually forward the call to your voicemail when your phone is ringing.

### Procedure

When your phone is ringing, tap **FWD VM**.

## Forwarding All Incoming Calls

---

You can set up your phone to forward all incoming calls to a specified destination.

- [Forwarding Calls to a Contact](#)
- [Forwarding Calls to Voicemail](#)
- [Forwarding Calls to Delegates](#)
- [Simultaneously Ring a Contact](#)
- [Simultaneously Ring a Group of Contacts](#)
- [Simultaneously Ring Delegates](#)
- [Disabling Call Forward Feature](#)
- [Configuring the Delay Time for Forwarding Incoming Calls](#)

## Forwarding Calls to a Contact

You can forward all incoming calls to a contact.

### Procedure

1. Navigate to **Menu > Setting > Features > Call Forward**.

You can also press  when the phone is idle.

2. Turn on **Call Forward**.
3. Select **Forwarding Calls to a Contact**.
4. Enter a contact's number or select a contact.
5. Save the change.

## Forwarding Calls to Voicemail

You can forward all incoming calls to your voicemail.

### Procedure

1. Navigate to **Menu > Setting > Features > Call Forward**.

You can also press  when the phone is idle.

2. Turn on **Call Forward**.
3. Select **Forward to Voice Mail**.
4. Save the change.

## Forwarding Calls to Delegates

You can forward all incoming calls directly to your delegates.

### Before you begin

[Assigning Delegates](#)

### Procedure

1. Navigate to **Menu > Setting > Features > Call Forward**.

You can also press  when the phone is idle.

2. Turn on **Call Forward**.
3. Select **Forward to Delegates**.
4. Save the change.

## Simultaneously Ring a Contact

You can choose to simultaneously ring a contact when you receive incoming calls.

### Procedure

1. Navigate to **Menu > Setting > Features > Call Forward**.

You can also press  when the phone is idle.

2. Turn on **Call Forward**.
3. Select **Simultaneously Ring to a Contact**.
4. Enter a contact's number.
5. Save the change.

## Simultaneously Ring a Group of Contacts

You can choose to simultaneously ring a group of Skype for Business contacts when you receive incoming calls.

**Before you begin***Editing Your Team-Call Group Members***Procedure**

1. Navigate to **Menu > Setting > Features > Call Forward**.

You can also press  when the phone is idle.

2. Turn on **Call Forward**.
3. Select **Simultaneously Ring to Team Call**.
4. Save the change.

**Simultaneously Ring Delegates**

You can enable your delegates' phones to simultaneously ring when you receive incoming calls.

**Before you begin***Assigning Delegates***Procedure**

1. Navigate to **Menu > Setting > Features > Call Forward**.

You can also press  when the phone is idle.

2. Turn on **Call Forward**.
3. Select **Simultaneously Ring to Delegates**.
4. Save the change.

**Disabling Call Forward Feature****Procedure**

1. Navigate to **Menu > Setting > Features > Call Forward**.

You can also press  when the phone is idle.

2. Turn off **Call Forward**.

**Configuring the Delay Time for Forwarding Incoming Calls**

You can configure the delay time for forwarding incoming calls. That is, incoming calls are forwarded if it is not answered after designated delay time.

**Procedure**

1. Navigate to **Menu > Setting > Features > Call Forward**.
2. Select the desired value from the **Reject call delay(s)** field.
3. Save the change.

## Skype for Business Conferences

---

This chapter provides basic operating instructions about initiating and managing a Skype for Business conference call.

- *Initiating a Skype for Business Conference Call*



- [Sending the Conference Information](#)
- [Viewing the Conference Participants](#)
- [Managing the Conference Participants](#)
- [Leaving the Conference](#)

## Initiating a Skype for Business Conference Call

---

You can initiate a Skype for Business conference call in many ways.

- [Initiating a Conference Call by Meet Now](#)
- [Initiating a Conference Call during a Skype for Business Call](#)
- [Initiating a Group Conference Call](#)
- [Merging Multiple Calls into a Conference Call](#)
- [Merging an Active Call and a Held Call into a Conference Call](#)

### Initiating a Conference Call by Meet Now


#### Procedure

Navigate to **Menu** > **Meet Now**.

### Initiating a Conference Call during a Skype for Business Call

You can initiate a Skype for Business conference call by inviting contacts to the active call.

#### Procedure

1. During a call, tap .
2. Do one of the followings:
  - Enter the desired number, and then tap **Call**.
  - You can also select a desired contact directly from the search result list, favorites screen, history screen or contacts screen.

### Initiating a Group Conference Call

You can initiate a Skype for Business conference call by calling a group of Skype for Business contacts.

#### Procedure

1. Tap **Contacts**.
2. Select the desired Skype for Business group, and then select **Dial All**.  
The phone screen prompts “Are you sure to start a conference?”.
3. Select **OK** to dial all contacts in the group.

### Merging Multiple Calls into a Conference Call

You can merge multiple calls into a conference call.

#### Before you begin

[Placing Multiple Calls](#)

#### Procedure

During multiple calls, tap **Merge calls**.



**Note:** Multiple conferences cannot be merged into one conference call.


## Merging an Active Call and a Held Call into a Conference Call

You can merge two individual calls instead of all calls into a conference call.

### Before you begin

[Placing Multiple Calls](#)

### Procedure

1. During multiple calls, tap  .
2. Tap the held call.  
The active call and the selected held call are merged into a conference.

## Sending the Conference Information

---

If you are a conference participant, you can send the conference dial-in number and conference ID to contacts who want to join the conference.

### Procedure

1. During a Skype for Business conference, navigate to **More > Conf Info** to view the dial-in number and conference ID.
2. Send the dial-in number and conference ID to the contacts who you want to join the conference.





**Note:** If the conference is locked, anyone that tries to join the conference will enter the lobby and wait for the organizer or presenters to accept the call.

## Viewing the Conference Participants

---

When you initiate or join a conference call, you can view the conference participants.

### Procedure

1. Tap **Participants** to view the conference participants' information during a conference.
2. You may see following 3 roles in the conference:
  - **Organizer** :A user who creates a conference. Organizer can manage the presenters and attendees.
  - **Presenter** (): The participant who is invited to the conference will be a presenter by default. The presenter can only manage other presenters and attendees.
  - **Attendee** (): A user who is invited to a conference but who is not authorized to act as a presenter. The attendee cannot manage call participants.

## Managing the Conference Participants

---

When you initiate a Skype for Business conference call, you will be an organizer and other participants are listed as presenters by default. As an organizer or presenter, you can manage call participants.

- [Muting and Unmuting All Conference Participants](#)

- *Muting or Unmuting Individual Conference Participants*
- *Demoting or Promoting Conference Participants*
- *Enabling or Disabling Conference Announcements*
- *Locking or Unlocking a Conference Call*
- *Admitting or Denying Participants to a Locked Conference Call*
- *Removing Conference Participants*

## Muting and Unmuting All Conference Participants

The organizer and presenters can mute or unmute all conference participants.



### Procedure

1. Select **Mute All**.  
The mute icon is displayed on each person who is muted.
2. Select **Unmute All** to enable all participants to speak in the conference.
3. The muted participants press the mute key to unmute themselves.

## Muting or Unmuting Individual Conference Participants

The organizer and presenters can mute or unmute individual conference participants.



### Procedure

1. Select **Participants**.
2. To forbid the participant from speaking, tap  next to the participant.
3. To unmute the participant, tap  next to the participant.
4. The muted participants press the mute key to unmute themselves.

## Demoting or Promoting Conference Participants

The organizer and presenters can promote conference participants from an attendee to a presenter or demote conference participants from a presenter to an attendee.

### Procedure

1. Tap **Participants**.
2. Do one of the followings:
  - Tap  to demote a presenter to an attendee.
  - Tap  to promote an attendee to a presenter.

## Enabling or Disabling Conference Announcements

Only the organizer and presenters can enable or disable the announcement. When the announcement feature is enabled, the phone will issue a voice message to announce that a participant joins or leaves the conference.

### Procedure

During a conference call, do one of the following:

- Navigate to **More > E.Anc** to enable announcements.
- Navigate to **More > U.Anc** to disable announcement.

## Locking or Unlocking a Conference Call

The organizer and presenters can lock a conference call to prevent other people from joining the conference call without approval. When the conference is locked, contacts must wait for the organizer or presenters to admit them to the meeting.

### Procedure

1. During a conference call, navigate to **More > ConfLock** to lock the conference.

An icon  (the number indicates the participants waiting in the lobby) appears on the screen.

2. When you're ready to enable people to join the conference, navigate to **More > ConfUnLock**.



## Admitting or Denying Participants to a Locked Conference Call

The conference participants can invite participant to join a locked conference. Participants can also join locked conference by dialing dial-in number and Conference ID.

### Before you begin

The conference is locked and you are the conference organizer or presenter. For more information, refer to [Locking or Unlocking a Conference Call](#).

### Procedure

1. Navigate to **More > Lobby** to view the callers waiting in the lobby.
2. Do one of the following:
  - Tap . The caller joins the locked conference as a presenter successfully.
  - Tap . The caller joins the locked conference as a presenter successfully.

## Removing Conference Participants

An organizer can remove presenters and attendees. A presenter can remove other presenters and attendees. An attendee cannot remove other participants.

### Procedure

1. Tap **Participants**.
2. Tap  to remove the participant from the conference call.

## Leaving the Conference

---

All participants can leave the conference at any moment.

### Procedure

Select **End Call**.

Other participants remain connected.

## Recording Audio

---

If your system administrator enables recording fast entrance and recording feature for your phone, you can record local audio when the phone is idle or record active calls.

### About this task

You can record up to 12 hours in one file. By default, the recorded audios are saved in the internal SD card. You can also connect a USB flash drive to your phone, and choose to save the recorded audios to it instead of the internal SD card.



**Note:** If recording feature is disabled, you can only view and play the recorded audios, if they exist.






- [Recording Local Audios](#)
- [Recording a Call](#)
- [Playing the Recorded Audios](#)
- [Copying Recorded Audios to USB Flash Drive](#)
- [Renaming the Recorded Audios](#)
- [Deleting the Recorded Audios](#)
- [Checking Storage Space](#)

## Recording Local Audios

---

You can record local audio when the phone is idle. The recorded audios are saved in \*.amr format. The recorded audios are saved with the name consisting of a prefix “record@” and date & time stamp, for example, record@180530-151118 was created on May 30, 2018, at 15:11:18. During recording, you can mark specific moments so that you can quickly find and listen to them later.

### Procedure

1. Tap **Menu** > **Recording**.
2. If you want to save the recorded audio to USB flash drive, tap **USB**.
3. During recording, you can do one of the following:
  - Tap  to mark specific moments.
  - Tap  to cancel the recording. The recorded audio will not be saved.
  - Tap  to pause the recording, and then tap  to resume the recording.
  - Tap  to end the recording and save the recorded audio.

## Recording a Call


---

You can record active calls. The recorded calls saved in \*.aac format and include a date & time stamp and the other party's number or name. For example, 20180530-1452-yl39 was created on May 30, 2018, at 14:52 and you have a call with yl39. During recording, you can mark specific moments so that you can quickly find and listen to them later.

### Procedure

1. During a call, tap **More** > **Start REC**.
2. If a USB flash drive is connected, select where to save your recording.

3. During recording, you can do one of the following:





- Tap  to mark specific moments.
- Tap **More** > **Pause REC** to pause the recording, and then tap **More** > **Resume REC** to resume the recording.
- Tap **Stop Recording** to end the recording and save the recorded audio.
- Tap **End Call** to end the recording and save the recorded audio.

## Playing the Recorded Audios

---

When you receive an incoming call while playing a recording, the recording is paused automatically. If you do not answer or reject the incoming call, or if you answer the incoming call and end the call, the recording will continue to play automatically.

### Procedure

1. Tap **Menu** > **Recording**.
2. If you want to play the recorded audio saved in USB flash drive, tap **USB**.
3. Tap  before the desired recorded audio to play the recorded audio.
4. During recording, you can do one of the following:
  - Tap  to pause playing recorded audio.
  - To continue the playing, tap .
  - Drag the slider to skip forward the playing or rewind the playing.
  - Drag the slider to the position with red flag to listen to the marked moments.
  - Tap Volume touch key to increase or decrease the volume of the speakerphone.
  - Tap  to stop the playing.

## Copying Recorded Audios to USB Flash Drive

---


Before copying recorded audios to USB flash drive, you should connect a USB flash drive first.

- [Copying a Recorded Audio to USB Flash Drive](#)
- [Copying Multiple Recorded Audios to USB Flash Drive](#)

### Copying a Recorded Audio to USB Flash Drive

You can copy recorded audios that stored in the internal SD card to a USB Flash drive.

#### Procedure

1. Tap **Menu** > **Recording**.
2. Tap  > **Copy to USB** after the desired recorded audio.

### Copying Multiple Recorded Audios to USB Flash Drive

You can copy multiple or all recorded audios that stored in the internal SD card to a USB Flash drive.

#### Procedure

1. Tap **Menu** > **Recording**.


2. Tap **Edit** on the top-right of the screen.
3. Tap the desired recorded audios or tap the radio box on the top-left of the screen to select all recorded audios.
4. Tap **Copy to USB**.

## Renaming the Recorded Audios

---

You can rename recorded audios.

### Procedure

1. Tap **Menu** > **Recording**.
2. If you want to rename the recorded audio saved in the USB flash drive, tap **USB**.
3. Tap  > **Rename** after the desired recorded audio.
4. Enter the desired file name.
5. Tap **OK** to accept the change.

## Deleting the Recorded Audios


---

When you have played a recording or need additional space for new file, you can delete recorded audios from the phone.

- [Deleting a Recorded Audio](#)
- [Deleting Multiple Recorded Audios](#)

### Deleting a Recorded Audio


#### Procedure

1. Tap **Menu** > **Recording**.
2. If you want to delete the recorded audio saved in the USB flash drive, tap **USB**.
3. Tap  > **Delete** after the desired recorded audio.
4. Tap **OK** to accept the change.

### Deleting Multiple Recorded Audios

You can delete multiple or all recorded audios.

#### Procedure

1. Tap **Menu** > **Recording**.
2. If you want to delete the recorded audio saved in the USB flash drive, tap **USB**.
3. Tap **Edit** on the top-right of the screen.
4. Tap the desired recorded audios or tap the radio box on the top-left of the screen to select all recorded audios.
5. Tap  .  
The phone prompts "Are you sure to delete"
6. Tap **OK**.

## Checking Storage Space

You can check the storage space (e.g., total space, available space) of the internal SD card or connected USB flash drive. At least 10M free space is required for recording.

### Procedure

1. Tap **Menu** > **Recording**.
2. If you want to check the storage space of the USB flash drive, tap **USB**.
3. Check the capacity and remaining recordable time.

## Boss-Admin for Skype for Business

When your phone is registered with Skype for Business Server, you can use the Boss-Admin feature to manage shared lines. The Boss-Admin feature enables a "boss" phone and delegates' phones to ring simultaneously when a user calls the boss. When one party answers the call, the other phone will stop ringing. A boss can assign delegates, and delegates can manage calls on behalf of the boss's line.


- [Assigning Delegates](#)
- [Viewing the Delegates Group](#)
- [Viewing the Boss Group](#)
- [Editing the Delegates Group](#)
- [Managing Calls on the Boss's Line](#)

## Assigning Delegates

You can assign delegates to your line using the Skype for Business client only. However, you cannot assign yourself as a delegate. As a delegate, you can be assigned to multiple bosses' lines.

### Procedure

1. In your Skype for Business client, click , and select **Call Forwarding Settings**.
2. Select **Simultaneously Ring** > **My Delegates**, as shown next.

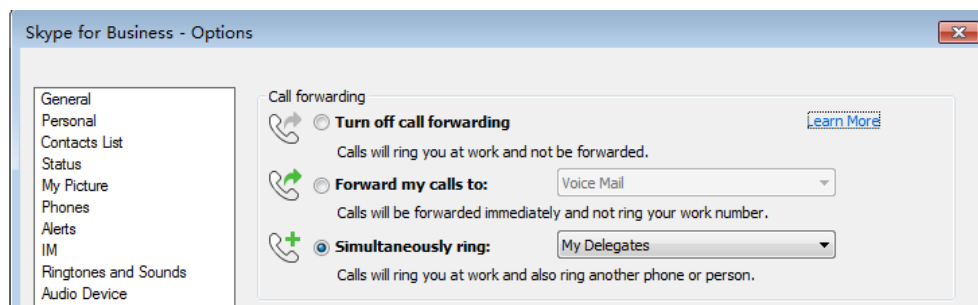

3. In the **Call Forwarding - Delegates** dialog box, click **Add** to add contacts as delegates for your
4. In the **Choose a Delegate** dialog box, select the contact you want to add as a delegate and click **OK**.
5. Click **OK** when you have finished assigning contacts as delegates.  
Simultaneous ringing is enabled for all assigned delegates. If the boss's line receives an incoming call, both the boss and delegate's phones ring.



## Viewing the Delegates Group

Your delegates are automatically added to the **Delegates** group on your phone and in the Skype for Business client.

### Procedure

Navigate to **Contacts > Delegates**.

## Viewing the Boss Group

You can view the contacts for which you are assigned as a delegate in the **Bosses** group on your phone and in the Skype for Business client.


### Procedure


Navigate to **Contacts > Bosses**.

## Editing the Delegates Group

You cannot edit the Delegates group on your phone. If you want to add or remove delegates, you need to edit the Delegates group in your Skype for Business client.

### Procedure

1. In your Skype for Business client, click and select , and select **Call Forwarding Settings**.
2. Select **Edit my delegate members**, as shown next.

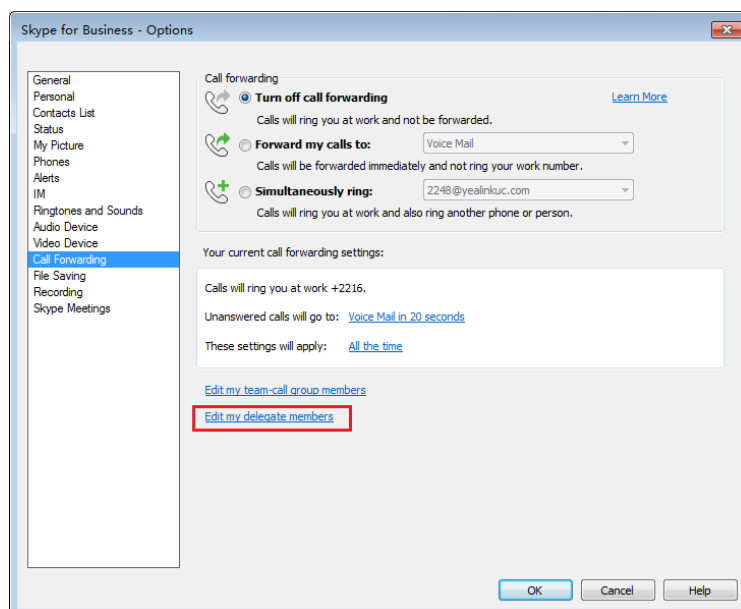

3. Do one of the following:

- Select **Add** to add delegates.
- Select a delegate and click **Remove** to delete the delegate from the group.

## Managing Calls on the Boss's Line

---

Delegates can place, answer, hold, or transfer calls on behalf of the boss's line.

- [\*Responding to Incoming Boss Calls\*](#)
- [\*Viewing Held Boss Calls\*](#)
- [\*Resuming Held Boss Calls\*](#)
- [\*Transferring a Boss Call\*](#)
- [\*Resuming a Transferred Boss Call\*](#)
- [\*Transferring a Call to a Boss's Voicemail\*](#)
- [\*Placing a Call on Behalf of a Boss\*](#)
- [\*Initiating a Conference Call on Behalf of a Boss\*](#)
- [\*Joining Conference Calls for a Boss\*](#)

### Responding to Incoming Boss Calls

When a call is placed to the boss's line, the call is displayed on the boss's and delegate's phones. As a delegate, you can answer an incoming call on a boss's line, reject the call, or forward the call directly to the boss's voicemail.

#### Procedure

Do one of the following:

- Select **Answer** to answer the call.
- Select **Boss VM** to forward the call to the boss's voicemail.
- Select to forward the call to the other people.
- Select **More > Silence** to mute the ringtone.
- Select **More > FWD VM** to forward the call your voicemail.
- Select **Reject** to reject the call.

### Viewing Held Boss Calls

Bosses and delegates can both view held calls on the boss's line.

#### Procedure

Tap the **Boss/Admin** soft key.

### Resuming Held Boss Calls

Any assigned delegate can resume held calls on the boss's line.

#### Procedure

1. Tap the **Boss/Admin** soft key.
2. Tap the avator of the caller.

### Transferring a Boss Call

After a delegate answers a delegation call, the delegate can transfer the call to the boss's phone using Safe Transfer, which enables the delegate to transfer the call to the boss's phone and prevent the call from going to voicemail if the boss does not answer the call.

#### Procedure

During a delegation call, navigate to **More > Safe Tran**.

The call is transferred to the boss's phone.

## Resuming a Transferred Boss Call

If the boss is not available to answer the transferred call or rejects the transferred call, the delegate's phone displays a notification stating that the transferred call failed. The delegate can resume the call.

### Procedure

Select **Resume** or press .

## Transferring a Call to a Boss's Voicemail

If a boss is unavailable to take calls, delegates can transfer the calls directly to the voicemail of the boss.

### Procedure

During a delegation call, select **Boss VM**.

## Placing a Call on Behalf of a Boss

As a delegate, you can make calls on behalf of your assigned boss on their lines.

### Procedure

1. Navigate to **Contacts > Bosses**.
2. Tap the avatar of the desired boss.
3. Tap **On behalf**.
4. Enter the desired number, and then tap **Call** or tap a desired contact.

## Initiating a Conference Call on Behalf of a Boss

As a delegate, you can initiate a conference call on behalf of your assigned boss on their lines.

### Procedure

1. Navigate to **Contacts > Bosses**.
2. Tap the avatar of the desired boss.
3. Tap **More > On Behalf of Conf**.

## Joining Conference Calls for a Boss

As a delegate, you can join an incoming conference call on behalf of a boss on their line and add the boss to the conference call.

### Procedure

1. Select **Answer** to answer an incoming conference call.
2. Navigate to **More > Invite Boss** to add the boss to the conference call.
3. Select **OK** to confirm invitation.
4. After you have connected the boss's line to the conference call, select **End Call** to leave the conference call.

# Managing Call History

---

The call history on your phone includes missed, placed and received calls. Each list holds up to 100 entries.

- [Viewing History Records](#)
- [Adding a History Record to Local Directory](#)
- [Adding a History Record to Skype for Business Directory](#)
- [Deleting History Records](#)
- [Disabling Contact Avatar](#)
- [Disabling History Record](#)

## Viewing History Records

---

You can view your history records.

### Procedure

1. Select **History**.
2. Slide up and down to view more history records.
3. Tap the avatar of the desired entry.

## Adding a History Record to Local Directory

---

You can add a history record to the local directory.

### Procedure

1. Select **History**.
2. Slide up and down to view more history records.
3. Tap the avatar of the desired contact.
4. Tap **Add to Local**.
5. Edit the contact information and save your change.



**Note:** Conference records cannot be added to the local directory.

## Adding a History Record to Skype for Business Directory

---

You can add a history record to the Skype for Business directory.

### Procedure

1. Select **History**.
2. Slide up and down to view more history records.
3. Tap the avatar of the desired contact.
4. Select **Add to SFB**.
5. Select the desired Skype for Business group.



**Note:** Conference records cannot be added to the Skype for Business directory.

## Deleting History Records

---

You can delete one or a batch of history records.

- [Deleting a Call Record](#)
- [Deleting Multiple Call Records](#)

### Deleting a Call Record

#### Procedure

1. Select **History**.
2. Slide up and down to view more history records.
3. Tap the avatar of the desired contact.
4. Select **Delete**.

### Deleting Multiple Call Records

You can delete multiple call records or all records.

#### Procedure

1. Tap **History**.
2. Slide up and down to scroll through call list.
3. Long tap any entry.
4. Do one of the followings:
  - Tap the desired entries.
  - Tap **Select All** on the status bar to delete all history records.
5. Tap **Delete**.

## Disabling Contact Avatar

---

If you do not want to see the avatars of call records, you can disable contact avatar feature.

#### Procedure

1. Tap **Menu > Setting > Features > History Setting**.
2. Turn off **Contacts Avatar**.

## Disabling History Record

---

If you do not want to save the call history, you can disable history record feature.

#### Procedure

1. Navigate to **Menu > Setting > Features > History Setting**.
2. Turn off **History Record**.

# Managing Contact Directory

---

The phone directory includes local directory and Skype for Business directory (for example: Favorites, Delegates, Bosses or Other Contacts). Local directory are stored in the phone only. Skype for Business directory synchronize contacts in the Skype for Business client.


- [Searching for Contacts](#)
- [Skype for Business Directory](#)
- [Local Directory](#)

## Searching for Contacts

---

You can search for Skype for Business contacts, local contacts and Microsoft Outlook contacts.

### Procedure

1. On the idle screen, tap .
2. Enter the search criteria to search for a desired contact.  
The search result is displayed.

## Skype for Business Directory

---

On your phone, you can only view and search Skype for Business contacts. If you want to add, edit or delete Skype for Business contacts, you should use Skype for Business client.

- [Adding Skype for Business Contacts](#)
- [Adding Skype for Business Contacts](#)
- [Viewing Skype for Business Contacts](#)
- [Deleting Skype for Business Contacts](#)

## Adding Skype for Business Contacts

You can add Skype for Business contacts using your Skype for Business client only.

### Procedure

1. In the search field of your Skype for Business client, enter your search criteria.
2. From the search results, right-click the contact, and then click **Add to Contacts List**.
3. Select the desired group.  
The contact is added to the selected group.

## Adding Skype for Business Contacts

You can add contacts to the Skype for Business directory in the following ways:

- [Adding Skype for Business Contacts from the Search Results](#)
- [Adding Skype for Business Contacts from Local Directory](#)

### Adding Skype for Business Contacts from the Search Results

### Procedure

1. Tap the avatar of the desired contact from the search results.
2. Select **Add to SFB** from the prompt list.
3. Select the desired Skype for Business group.  
The contact is added to your phone.

### Adding Skype for Business Contacts from Local Directory

If you want to display a local contact on your Skype for Business client, you should add the local contact to the Skype for Business directory on the phone first.


### Procedure

1. Navigate to **Contacts > Local Directory**.
2. Select the desired group (All Contact or Favorites) that contains the desired local contact.
3. Tap the avatar of the desired contact.
4. Tap **More > Add to SFB**.
5. Select the desired Skype for Business group.

## Viewing Skype for Business Contacts

### Procedure

1. Tap **Contacts**.
2. Select the Skype for Business group (e.g., Favorites or Other Contacts) that includes the desired contact.

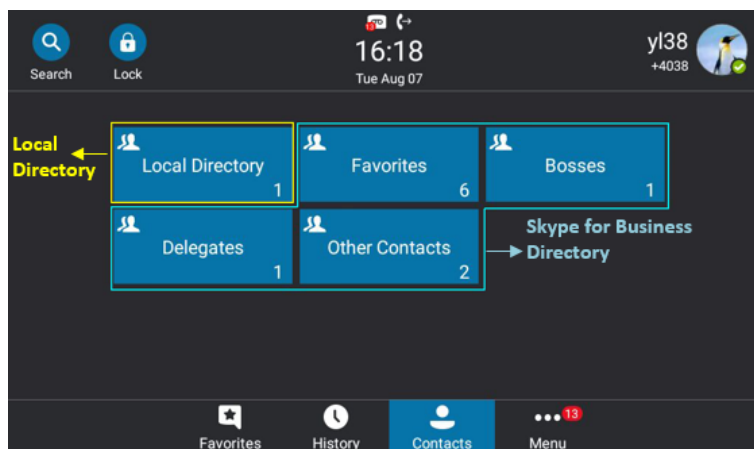

3. Tap the avatar of the desired contact.

## Deleting Skype for Business Contacts

You can delete Skype for Business contacts on your phone.

### Procedure

1. Tap **Contacts**.
2. Select the Skype for Business group (e.g., Favorites or Other Contacts) that includes the desired contact.
3. Tap the avatar of the desired contact.
4. Select **Delete from Sfb**.  
The phone screen prompts "Delete the contact?".
5. Select **OK**.

## Local Directory

You can add, edit or delete local contacts on your phone.

- [Adding Local Contacts](#)
- [Viewing Local Contacts](#)
- [Editing Local Contacts](#)
- [Deleting Local Contacts](#)

## Adding Local Contacts


You can add local contacts using the following ways:

- [Adding Local Contacts Manually](#)
- [Adding Local Contacts from Skype for Business Directory](#)

### Adding Local Contacts Manually

You can add contacts to local directory. Make the contact name is unique.


#### Procedure

1. Navigate to **Contacts > Local Directory > All**.
2. Tap .
3. Enter information in the corresponding fields.
4. Select the desired ringtone for this contact from the **Ring** field.
5. Select **Save**.

### Adding Local Contacts from Skype for Business Directory

#### Procedure

1. Tap **Contacts**.
2. Select a Skype for Business group.

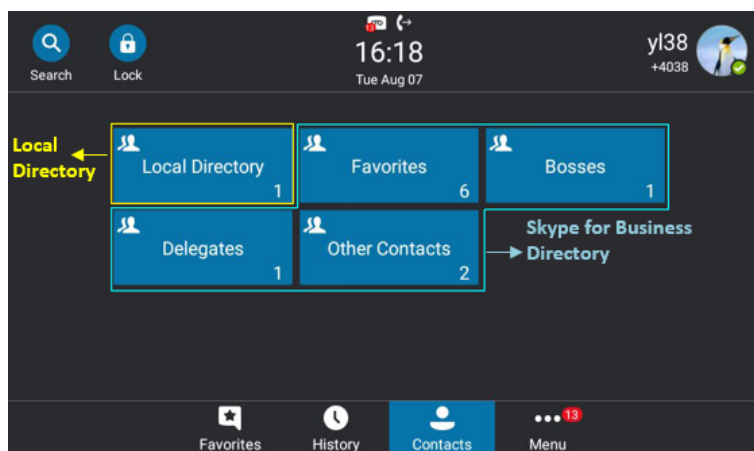

3. Tap the avatar of the desired contact.
4. Tap **Add to Local**.
5. Edit the contact information.
6. Select **Save**.



## Viewing Local Contacts

You can view information about each local contact on the phone.

### Procedure

1. Navigate to **Contacts > Local Directory**.
2. Select the desired group.
3. Tap the avatar of the desired contact.

## Editing Local Contacts

You can change or add more information to your contacts.

### Procedure

1. Navigate to **Contacts > Local Directory**.
2. Select the desired group.
3. Tap the avatar of the desired contact.
4. Tap **Edit**.
5. Edit the contact information.
6. Select **Save**.

## Deleting Local Contacts

You can delete local contacts to make room for new local contacts.

### Procedure

1. Navigate to **Contacts > Local Directory**.
2. Select the desired group.
3. Tap the avatar of the desired contact.
4. Tap **Delete**.  
The phone screen prompts "Delete selected items?".
5. Select **OK**.

# Favorites

---

Favorites are the contacts in your directory that you call most often. The favorites on your phone include local favorites and Skype for Business favorites.

- [Skype for Business Favorites](#)
- [Local Favorites](#)

## Skype for Business Favorites

---

Skype for Business favorites on your phone synchronize with the favorites in the Skype for Business client.

- [Adding Skype for Business Favorites](#)
- [Viewing Skype for Business Favorites on the Favorites Screen](#)
- [Viewing Skype for Business Favorites in the Directory](#)

## Adding Skype for Business Favorites

You can add Skype for Business favorites using your Skype for Business client only.


### Procedure

1. Right-click a Skype for Business contact.
2. Click **Add to Favorites**.  
The contact is added to the Favorites group.

## Viewing Skype for Business Favorites on the Favorites Screen

### Procedure

Tap **Favorites**.

By default, Skype for Business favorites are displayed behind the local favorites on the idle screen (local favorites are indicated by the  icon, Skype for Business favorites are indicated by the presence status icon).

## Viewing Skype for Business Favorites in the Directory

You can view Skype for Business favorites in the directory.

### Procedure

Navigate to **Contacts > Favorites**.

## Local Favorites

---

Local favorites are stored on your phone only.

- [Adding Local Favorites](#)
- [Viewing Local Favorites on the Favorites Screen](#)
- [Viewing Local Favorites in the Directory](#)
- [Reordering Local Favorites](#)
- [Deleting Local Favorites](#)

## Adding Local Favorites

You can add local favorites. Local favorites are displayed on the Favorites screen and in your directory.


### Procedure

1. Navigate to **Contacts > Local Directory > All**.
2. Tap the avatar of the desired contact.
3. Tap **Add to favorite**.
4. Select the desired index number for this contact from the **Index** field. You can also automatically accept an index number.  
The favorite with the lowest index number is displayed first. The lowest number is Null.
5. Select **Save**.

## Viewing Local Favorites on the Favorites Screen

### Procedure

#### Tap **Favorites**

By default, Skype for Business favorites are displayed behind the local favorites on the idle screen (local favorites are indicated by the  icon, Skype for Business favorites are indicated by the presence status icon).

## Viewing Local Favorites in the Directory

You can view local favorites in the directory.

### Procedure

Tap **Contacts** > **Local Directory** > **Favorites**.

## Reordering Local Favorites

You can change the order in which your favorites display on the idle or Favorites screen. The favorite with the lowest index number is displayed first.

### Procedure

1. Tap **Contacts** > **Local Directory** > **Favorites**.
2. Tap the avatar of the desired contact.
3. Tap **Edit**.
4. Select the desired index number for this contact from the **Index** field.
5. Select **Save**.

## Deleting Local Favorites

You can delete local favorites to make room for new local favorites.

### Procedure

1. Tap **Contacts** > **Local Directory** > **Favorites**.
2. Tap the avatar of the desired contact.
3. Tap **Delete**.  
The phone screen prompts "Delete selected items?".
4. Select **OK**.

# Using the Voicemail

---

You can leave voicemails for someone else using the Skype for Business phone. You can also listen to voicemails that are stored in your voicemail. Voicemail is available only when the system administrator enables it for the Skype for Business user.

- [Leaving a Voicemail](#)
- [Accessing the Message Center](#)
- [Managing the Voicemail](#)

## Leaving a Voicemail

---

You can leave voicemails for others who are busy or inconvenient to answer your call. Follow the voice prompt from the system server to leave a voicemail, and then hang up. You can also dial the voicemail address of a Skype for business contact to leave a voicemail.

### Procedure

1. Tap **Contacts**.
2. Select the desired Skype for business group.
3. Tap the avatar of the desired contact.
4. Tap **Voice Mail** to leave a voicemail.

## Accessing the Message Center

---

You can access the message center, and then follow the voice prompts to listen to your voicemails.

### Procedure

Do one of the following:

- If you sign into the phone using **PIN Authentication** method, navigate to **Menu > Voice Mail**.
- If you sign into the phone using **User Sign-in**, **Web Sign-In** or **Signing in via PC** method, navigate to **Menu > Voice Mail > Message**.

## Managing the Voicemail

---


When the phone is connected to Microsoft Exchange Server, you can manage the visual voicemails, including viewing a list of voicemails, call back to those who left the voicemails list, mark voicemails as read and delete voicemails, and so on. Make sure that you sign into the phone using **User Sign-in**, **Web Sign-In** or **Signing in via PC** method.

- [Listening to the Voicemail](#)
- [Calling a Contact from Voicemail](#)
- [Marking Message as Read or Unread](#)
- [Deleting Voicemail Messages](#)

### Listening to the Voicemail

You can listen to a voicemail directly.


#### Procedure

1. Navigate to **Menu > Voice Mail**.
2. Do one of the followings:
  - Tap  beside the desired voicemail.
  - Tap the avatar of the desired voicemail, and then tap **Play Message**.

### Calling a Contact from Voicemail

After you listen to a contact's voicemail, you can call the contact from the Voicemail screen.

**Procedure**

1. Navigate to **Menu > Voice Mail**.
2. Select the desired voicemail.
3. Tap .

**Marking Message as Read or Unread**

You can choose to mark unread messages that you do not want to listen to as read, and you can choose to mark read messages that you want to listen to again as unread.

**Procedure**

1. Navigate to **Menu > Voice Mail**.
2. Select the desired voicemail.
3. Tap **Mark as Read** or **Mark as unRead**.

**Deleting Voicemail Messages**

After you listen to a message, you can delete them.

**Procedure**

1. Navigate to **Menu > Voice Mail**.
2. Select the desired voicemail.
3. Tap **Delete**.

## Using the Calendar

---

When connected to Microsoft Exchange Server, you can view and join meetings scheduled in Microsoft Outlook from your Skype for Business phones. Make sure that you sign into the phone using **User Sign-in**, **Web Sign-In** or **Signing in via PC** method.

- [\*Opening the Calendar\*](#)
- [\*Availability during Meeting\*](#)
- [\*Navigating Year View\*](#)
- [\*Navigating Month View\*](#)
- [\*Navigating Day View\*](#)
- [\*Displaying Meeting View on the Calendar\*](#)
- [\*Tracking the Calendar\*](#)
- [\*Disabling the Meeting Reminders\*](#)
- [\*Setting the Reminder Interval\*](#)
- [\*Responding to Meeting Reminders\*](#)
- [\*Joining Skype Conferences\*](#)


## Opening the Calendar

---

You can access to Skype conference, appointment, meeting and event scheduled in Microsoft Outlook.



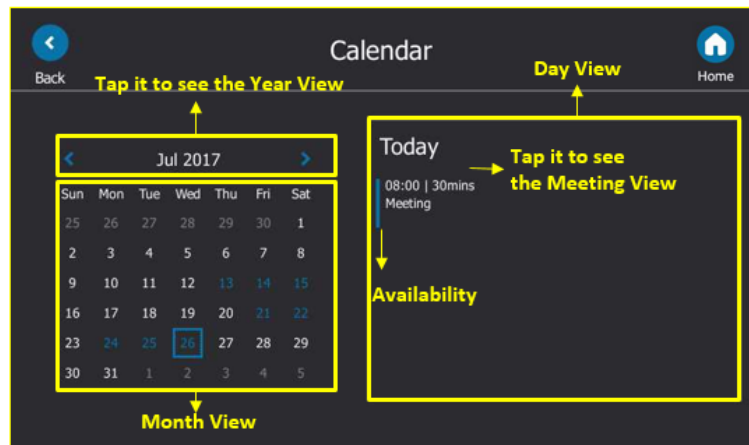

## Procedure

Navigate to **Menu > Calendar**.



## Availability during Meeting

You can set your availability during a meeting via the Outlook software. So that others can schedule a meeting according to your availability on the Outlook software.

Name	Description	
Availability		Your availability during this time shows as <b>Free</b> or <b>Working Elsewhere</b> on the Outlook software.
		Your availability during this time shows as <b>Tentative</b> on the Outlook software.
		Your availability during this time shows as <b>Busy</b> on the Outlook software.
		Your availability during this time shows as <b>Out of Office</b> on the Outlook software.

## Navigating Year View

### Procedure

1. In your calendar, tap the title of the month to open Year view.
2. Do one of the following:
  - Tap to view the previous year.
  - Tap to view the upcoming year.
  - Tap the desired month.

- Tap **Back** or **Home** to close the calendar and return to the idle screen.

## Navigating Month View

---

From Month view, you can select a date to view meetings for that day. The days have meeting are displayed in blue. The current day is displayed within a blue frame.

### Procedure

In your calendar, tap a desired date.

## Navigating Day View

---

In Day view, you can see your scheduled meetings for the day.

## Displaying Meeting View on the Calendar

---

Meeting view displays the details for a chosen meeting. If the conference organizer schedules a public meeting on the Outlook software, you can view the subject, organizer, start and end time, location, account availability, participants and content on the phone. If the conference organizer schedules a private meeting on the Outlook software, you can only see the organizer, start and end time, and account availability on the phone.

### Procedure

Do one of the following:

- From Day view, select a meeting.
- From Month view, select a date and select a meeting.

## Tracking the Calendar

---

When you schedule a Skype meeting via the Outlook software, the attendees can respond to the meeting request via Outlook software. You can see response on your phone.

### Procedure

In the day view, tap a Skype conference to view details.

- Do not reply the invitation (show as **None** beside the participant).
- Accept the invitation (show as **Accepted** beside the participant)
- Tentatively accept the invitation (show as **Tentative** beside the participant)
- Decline the invitation (show as **Declined** beside the participant)

## Disabling the Meeting Reminders

---

Meeting reminders are enabled by default and display reminders for all meetings. You can choose to disable meeting reminders so they do not display for any meetings.

### Procedure

1. Navigate to **Menu > Setting > Basic > Calendar Settings**.

2. Turn off **Reminder**.
3. Tap **Save** to accept the change.

## Setting the Reminder Interval

---

If you snooze a meeting reminder, it appears again in 5 minutes by default. You can change the reminder interval.

### Procedure

1. Navigate to **Menu > Setting > Basic > Calendar Settings**.
2. Turn on **Reminder**.
3. Enter the interval in the **Reminder Interval** field.
4. Tap **Save** to accept the change.

## Responding to Meeting Reminders

---

If you enable meeting reminder feature, a reminder pop-up is displayed 15 minutes before a meeting starts.

### Procedure

Do the following:

- Tap **Snooze** to temporarily remove the reminder from the screen, until the next schedule reminder.
- Tap **Ignore** to permanently remove the reminder from the screen and stop all future reminders for the Skype conference.
- If you receive a Skype conference, tap **Join** to join the Skype conference.

## Joining Skype Conferences

---

You can join the Skype conferences from calendar in following three ways:

- **Joining a Skype conference from a conference reminder** (Once joined, presenter and attendee will be muted automatically, organizer will not be muted).
- **Joining a Skype conference from Schedule view** (Once joined, presenter and attendee will be muted automatically, organizer will not be muted).
- **Dialing the conference dial-in number to join a Skype conference** (Once joined, presenter, attendee and organizer will not be muted).



**Note:** When the organizer sets up a conference in Outlook and enables **Mute all attendees** feature, all conference participants will be muted automatically once join the Skype conferences in above ways.

- [\*Joining a Skype Conference from a Meeting Reminder\*](#)
- [\*Joining a Skype Conference from Meeting View\*](#)
- [\*Joining a Skype Conference by Dialing the Conference Dial-in Number\*](#)

### Joining a Skype Conference from a Meeting Reminder

If the meeting reminder feature is enabled, you can join the Skype conferences from a meeting reminder.

#### Procedure

On the meeting reminder, tap **Join**.



**Related tasks**[\*Disabling the Meeting Reminders\*](#)**Joining a Skype Conference from Meeting View****Procedure**

1. Tap a desired Skype conference in the day view to view specific information.
2. Tap **Join** to join the Skype conference.

**Related tasks**[\*Displaying Meeting View on the Calendar\*](#)**Joining a Skype Conference by Dialing the Conference Dial-in Number**

When you are invited to a Skype conference scheduled via Outlook software, you will receive an email including dial-in number and conference ID . Your phone also display the dial-in number and conference ID. You can join the Skype conference from phone by dialing dial-in number and conference ID.

**Procedure**

1. In the day view, tap a desired Skype conference.
2. Obtain the dial-in number and conference ID.
3. Dial the dial-in number to join the Skype conference.

## Skype for Business Phone Settings

---

You can make your Phone more personalized by customizing various settings.

- [\*Setting the Language\*](#)
- [\*Changing the Screen Backlight Brightness and Time\*](#)
- [\*Disabling Playing Tone\*](#)
- [\*Disabling Call Waiting\*](#)
- [\*Changing the Administrator Password\*](#)
- [\*Time and Date Display\*](#)
- [\*Setting a Send Key\*](#)
- [\*Setting Screen Savers\*](#)
- [\*Changing Audio Settings\*](#)
- [\*Presence Status\*](#)
- [\*Enhanced 911\*](#)

### Setting the Language

---

The default language of the phone user interface is English. You can change the language for the phone user interface.

**Procedure**

1. Navigate to **Menu > Setting > Basic > Language**.
2. Slide up and down to view more languages.
3. Select the desired language.
4. Select **Save**.

## Changing the Screen Backlight Brightness and Time

---

You can change the backlight brightness of the phone screen during phone activity and inactivity. The backlight brightness automatically changes after the phone has been idle for a specified time.

### About this task

You can change the screen backlight brightness and time in the following settings:

**Backlight Active Level:** The brightness level of the phone screen when the phone is active.

**Backlight Time:** The delay time to change the brightness of the phone screen when the phone is inactive. Backlight time includes the following settings:

- **Always On:** Backlight is on permanently.
- **15s, 30s, 60s, 120s, 300s, 600s or 1800s:** Backlight is changed when the phone is inactive after the designated time (in seconds)

### Procedure

1. Navigate to **Menu > Setting > Basic > Display > Backlight**.
2. Slide the **Backlight Active Level** slider to change the intensity of the touch screen.
3. Tap the desired time from the **Backlight Time** field.

## Disabling Playing Tone

---

By default, you can receive another call when you are during an active call, and your phone plays a warning tone when the new incoming call arrives. You can disable playing tone feature, so that your phone does not play a warning tone when the new incoming call arrives.

### Procedure

1. Navigate to **Menu > Setting > Features > Call Waiting**.
2. Turn off **Play Tone**.
3. Select **Save**.

## Disabling Call Waiting

---

By default, you can receive another call when you are during an active call when the new incoming call arrives. You can disable call waiting feature, so that the new incoming call will be rejected automatically.

### Procedure

1. Navigate to **Menu > Setting > Features > Call Waiting**.
2. Turn off **Call Waiting**.
3. Select **Save**.

## Changing the Administrator Password

---

Accessing advanced features on the phone requires an administrator password. The default administrator password is “admin”. For security reasons, you should change the it as soon as possible.

### Procedure

1. Navigate to **Menu > Setting > Advanced > Set Password**.
2. Enter the desired value in the **Current Password**, **New Password** and **Confirm Password** fields respectively.
3. Select **Save**.

## Time and Date Display

---

You can set the time and date manually. The time and date format is also customizable.

- [Setting the Time and Date Manually](#)
- [Changing the Time and Date Format](#)

### Setting the Time and Date Manually

If your phone cannot obtain the time and date automatically, you can set the time and date manually.

#### Procedure

1. Navigate to **Menu > Setting > Basic > Time&Date > General**.
2. Tap the **Type** field and select **Manual Setting** from the pop-up dialog box.
3. Enter the specific date and time in the corresponding fields.
4. Select **Save**.

### Changing the Time and Date Format

You can change the time and date format.

#### About this task

You can customize the date by choosing among a variety of time and date formats. The built-in date formats are listed as below:

Date Format	Example(2018-05-30)
WWW MMM DD	Wed May 30
DD-MMM-YY	30- May-18
YYYY-MM-DD	2018-05-30
DD/MM/YYYY	30/05/2018
MM/DD/YY	05/30/18
DD MMM YYYY	30 May 2018
WWW DD MMM	Wed 30 May

#### Procedure

1. Navigate to **Menu > Setting > Basic > Time&Date > Format..**
2. Select the desired date format from the **Date Format** field.
3. Select the desired date format from the **Time Format** field.
4. Select **Save**.

## Setting a Send Key

---

You can set the “#” key or “\*” key to perform as a send key while dialing.

### Procedure

1. Navigate to **Menu > Setting > Features > Key As Send**.
2. Select # or \* from the **Key As Send** field, or select **Disabled** to disable this feature.

## Setting Screen Savers

---

The screen saver automatically starts each time your phone is idle for a certain amount of time. You can stop the screen saver at any time by pressing any key. When your phone is idle again for a preset waiting time, the screen saver starts again.

### Procedure

1. Navigate to **Menu > Setting > Basic > Display > Screen Saver**.
2. Tap the **Screen Saver Wait Time** field.
3. Tap the desired time from the pop-up dialog box.
4. Tap the radio box after desired screen saver type.

## Changing Audio Settings

---

You can control certain audio settings on your phone, including adjusting the audio volume, setting a ringtone and key tone.


- [Adjusting the Volume](#)
- [Setting a Ringtone for the Phone](#)
- [Setting a Ringtone for a Contact](#)
- [Setting a Ringtone for Incoming Private Line](#)
- [Setting a Ringtone for a Incoming Team-Call](#)
- [Setting a Ringtone for Response Group](#)
- [Disabling the Key Tone](#)

### Adjusting the Volume

You can increase or decrease the volume.

#### Procedure

Press volume keys to adjust the volume.

If ringer volume is adjusted to minimum when the phone is idle, the minimum volume icon  appears on the screen.

### Setting a Ringtone for the Phone

You can choose a ringtone for all incoming calls.

#### Procedure

1. Navigate to **Menu > Setting > Basic > Sounds > Ring Tones > Normal**.

2. Select the desired ringtone.
3. Select **Save**.

## Setting a Ringtone for a Contact

You can select a unique ringtone for various local contacts. This helps you quickly identify callers according to the ringtones. By default, the Auto is selected, and this contact uses the ringtone according to this priority: Contact ringtone > Phone ringtone. For more information, refer to [Adding Local Contacts Manually](#).

## Setting a Ringtone for Incoming Private Line

Private line feature allows your phone to play a specific ringtone when receiving a private call.

### Before you begin

Your system administrator set a private line for you. For more information, refer to [Private Lines](#).

### Procedure

1. Navigate to **Menu > Setting > Basic > Sounds > Ring Tones > Private Line**.
2. Select the desired ringtone.
3. Select **Save**.

## Setting a Ringtone for an Incoming Team-Call

Team-call ringtone feature allows the phone to play a distinct ringtone when receiving a team call.

### Before you begin

You set a team-call group. For more information, refer to [Team-Call Group](#).

### Procedure

1. Navigate to **Menu > Setting > Basic > Sounds > Ring Tones > Team Call**.
2. Select the desired ringtone.
3. Select **Save**.

## Setting a Ringtone for Response Group

Response group ringtone feature allows your phone to play a distinct ringtone when receiving a call for your response group.

### Before you begin

Your system administrator set you to be a member of a response group. For more information, refer to [Response Group](#).

### Procedure

1. Navigate to **Menu > Setting > Basic > Sounds > Ring Tones > Response Group**.
2. Select the desired ringtone.
3. Select **Save**.

## Disabling the Key Tone

Key tone is enabled by default. The phone produces a sound when you press the keypad keys. You can disable it according to your needs.











## Procedure






1. Navigate to **Menu > Setting > Basic > Sounds > Key Tone**.
2. Turn off **Key Tone**.

## Presence Status

Your presence information is a quick way for other people to see your availability status. Presence is automatically set based on your Outlook calendar, but you can change it manually if you want to. For example, when you are busy with urgencies, you can change your status to DND to avoid being disturbed.

The following table describes each presence status that other people may see for you, what each status means, and which ones you can set yourself.

If your presence is	It means	How this status gets set
 Available	You are online and available to contact.	Set automatically for you based on your phone activity or Outlook calendar. You can also set this status when you want others to know you're in your office.
 Be Right Back	You are stepping away from the phone for a few moments.	You can set your presence to this anytime you want.
 Inactive	Your phone has been idle for a specified period of time (set by you).	Set automatically for you when your phone has been idle for a specified time (5 minutes by default).
 Away	Your phone has been idle for a specified period of time (set by you).	Set automatically for you when your phone has been inactive for a specified time (5 minutes by default). You can also set your presence to this anytime you want.
 Off Work	You are not working and not available to be contacted.	You can set your presence to this anytime you want.
 Busy	You are busy and don't want to be interrupted.	Set automatically for you based on your Outlook calendar. You can also set your presence to this anytime you want.
 Urgent interruptions only	You are allowed to call a contact even though his status is Do not Disturb	You can see this status for a contact whose status is Do not Disturb, and the contact has configured your privacy relationship to be Workgroup.
 In a call	In a Skype for Business call (a two-way audio call) and don't want to be disturbed.	Set automatically for you based on your phone activity.
 In a meeting	In a meeting and don't want to be disturbed.	Set automatically for you based on your Outlook calendar.
 In a conf call	In a Skype for Business conference call (a Skype for Business meeting with audio) and don't want to be disturbed.	Set automatically for you when you have joined a conference call or a meet now session. It will display this status when you have an active call and a held conference call.

If your presence is	It means	How this status gets set
 Do Not Disturb	You don't want to be disturbed and will see conversation notifications only if sent by someone in your workgroup.	If you manually set it to Do Not Disturb, the incoming call will be forwarded to your voicemail directly. But you can still receive calls from the work group.  You can set your presence to this anytime you want.
 Blocked	You want to prevent a contact from reaching you via Skype for Business	You can see this status for a contact who has assigned by you to be a blocked contact using the Skype for Business client.
 Presenting	You are giving a presentation and can't be disturbed.	Set automatically for you when you are presenting using your Skype for Business client.
 Offline	Not signed in or you'll appear as Offline to people whom you've blocked from seeing your presence.	Set automatically for you when you log off your phone. Or you'll appear as Offline to people whom you've blocked from seeing your presence.
 Unknown	Your presence can't be detected.	This status might appear to contacts who are not using Skype for Business as their instant messaging program.

- [Updating Your Skype for Business Presence](#)

## Updating Your Skype for Business Presence

You can update your Skype for Business presence status on the phone, and your presence status is automatically updated in the Skype for Business client.

### Procedure


1. Tap your avatar at top right of the touch screen.
2. Select the desired status from the drop-down menu.

## Enhanced 911

Enhanced 911(E911 ) is a location technology that enables the called party to identify the geographical location of the calling party. For example, when you make an emergency call, the E911 feature extracts your location information for the police department to immediately identify your location.

- [E911 Location Tip](#)
- [Adding the Location Information](#)
- [Selecting a Default Location](#)
- [Viewing the Location Information](#)

## E911 Location Tip

After you sign into your phone, your phone may prompt "Location is not set" when the location of the phone is not set. You can ignore the tip or edit your location. If you ignore it, a  icon appears on the **Status** field

### Related tasks

[Adding the Location Information](#)

## Adding the Location Information

If your system administrator does not add a location information for you, you can add the location information manually.

### Procedure

1. Navigate to **Menu > Setting > Basic > Location**.
2. Edit your location information.
3. Select **Save**.

## Selecting a Default Location

If your system administrator has already configured a location for your account and you also add a location manually on the phone, you can select one of them to be the default location.

### Procedure

1. Do one of the following:
  - Navigate to **Menu > Setting > Basic > Location**.
  - Navigate to **Menu > Status > Location**.
2. Select **Edit**.
3. Select the desired value from the **Set Mode** field.
  - If you select **Default**, the location configured on the Skype for Business Server will be the default one.
  - If you select **Custom**, the location configured on the phone will be the default one.
4. Select **Save**.

## Viewing the Location Information

You can view location information of your phone.

### Procedure

Do one of the following:

- Navigate to **Menu > Setting > Basic > Location**.
- Navigate to **Menu > Status > Location**.

# Advanced Phone Features

---

Most features described in this chapter require configurations by your system administrator. Contact your system administrator to know whether you can use them.

- [\*Intercom\*](#)
- [\*Multicast Paging\*](#)
- [\*Privacy Mode\*](#)
- [\*Editing Your Team-Call Group Members\*](#)
- [\*Private Lines\*](#)
- [\*Call Queue\*](#)
- [\*Response Group\*](#)
- [\*Group Call Pickup\*](#)
- [\*Branch Office Resiliency\*](#)



## Intercom

---

Intercom is a useful feature in an office environment to quickly connect with the operator or the secretary. This enables you to place an intercom call that is answered automatically on the contact's phone as long as the contact is not in an active call.


- [Setting Intercom](#)
- [Configuring the Target Extension Number](#)
- [Deleting the Target Extension Number](#)
- [Placing an Intercom Call](#)

### Setting Intercom

You can configure the following behavior when receiving an intercom call.

#### About this task

##### Outgoing Intercom

You can enable or disable intercom feature. If Outgoing Intercom is enabled, an Intercom icon  will display on the screen automatically. You can tap it to enter intercom list.

##### Intercom Allow

Intercom Allow allows the phone to automatically answer an incoming intercom call. If you disable this feature, the phone will handle an incoming intercom call like a normal incoming call. Intercom Allow is enabled by default.

##### Intercom Mute

Intercom Mute allows the phone to mute the microphone when incoming intercom calls is answered automatically. Intercom Mute is disabled by default.

##### Intercom Tone

Intercom Tone allows the phone to play a warning tone before answering an intercom call automatically. Intercom Tone is enabled by default.

##### Intercom Barge

Intercom Barge allows the phone to automatically answer an incoming intercom call while an active call is in progress. The active call will be placed on hold. If you disable this feature, the phone will handle an incoming intercom call like a normal incoming call while there is already an active call on the IP phone. Intercom Barge is disabled by default.


#### Procedure


1. Navigate to **Menu > Setting > Features > Intercom**.
2. Select the desired value.
3. Select **Save**.

### Configuring the Target Extension Number

You need to configure the target extension number for outgoing intercom calls after you enable the intercom feature.



#### Procedure

1. Do one of the following to enter intercom list:
  - Tap .
  - Navigate to **Menu > Setting > Features > Intercom List**.

2. Select a desired item.
3. Tap  > **Edit**.
4. (Optional.) Enter the string that will appear on the intercom list in the **Label** field.
5. Enter the target extension number in the **Value** field.
6. Select **Save**.
7. Repeat steps 2 to 6, you can add more target extension numbers.

## Deleting the Target Extension Number


### Procedure

1. Do one of the following to enter the intercom list:
  - Tap .
  - Tap **Menu** > **Setting** > **Features** > **Intercom List**.
2. Select a desired item.
3. Tap  > **Delete**.
4. Select **OK**.  
If you want to delete all target extension numbers, you can select **Delete All**.

## Placing an Intercom Call

You can place an intercom call when the phone is idle or during a call. The target phone plays a warning tone and automatically answers the call in speakerphone (hands-free) mode by default. When the target phone has an active call, the intercom call is answered automatically after the active call ends.

### Procedure

1. Do one of the following to enter the intercom list:
  - When the phone is idle, tap  or navigate to **Menu** > **Setting** > **Features** > **Intercom List**.
  - During a call, navigate to **More** > **Intercom**.
2. Tap the desired item.

## Multicast Paging

---


You can use multicast paging to quickly and easily broadcast time-sensitive announcements to users who are listening to a specific multicast group. You can configure the paging list on the phone, which allows you to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can configure the phone to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

- [Setting a Paging List](#)
- [Deleting a Paging Group](#)
- [Sending Multicast Paging](#)
- [Receiving Multicast Paging](#)
- [Managing a Paging Call](#)

## Setting a Paging List

You can set a Paging List which includes all your paging groups.

### Procedure



1. Navigate to **Menu > Setting > Features > Paging List**.
2. Select a desired paging group.  
The default tag is Empty if it is not configured before.
3. Tap  .
4. Enter the multicast IP address and port number (e.g., 224.5.6.20:10008) in the **Address** field.  
The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.
5. Enter the group name in the **Label** field.
6. Select **Save**.
7. Repeat steps 2 to 6, you can add more paging groups.

If the paging group is configured successfully, an icon  appears on the screen title area. You can tap it to enter the paging list.

## Deleting a Paging Group


You can delete the desired paging group.

### Procedure

1. Tap  or navigate to **Menu > Setting > Features > Paging List**.
2. Select a desired paging group.
3. Tap  > **Delete**.  
The phone prompts “Delete selected paging group?”.
4. Select **OK**.  
If you want to delete all paging groups, you can tap **Delete All** .

## Sending Multicast Paging

### Procedure

1. Do one of the following to enter the paging list:
  - When the phone is idle, tap  or navigate to **Menu > Setting > Features > Paging List**.
  - During a call, navigate to **More > Paging**.
2. Tap the desired item.  
Both your phone and receiver’s phone play a warning tone and the multicast RTP session will be automatically answered on the receiver’s phone in the speakerphone (hands-free) mode.

## Receiving Multicast Paging

Your system administrator has set a listening paging group for you, and then you can receive a paging call when the phone is idle. The paging call is automatically answered on your phone. When there is a voice call or a paging call in progress, or when DND is activated on your phone, the phone handles the new paging call differently which depends on multicast listening settings configured by your system administrator.

## Managing a Paging Call

### Procedure

During a paging call, you can do the following:

- Tap **Hold** to place the current paging call on hold. The paging call is placed on hold and receiver's phone releases the session.
- Tap **Resume** to resume the held paging call. The multicast RTP session is re-established.
- Tap **End Call** to end the paging call.

## Privacy Mode

---

Privacy mode allows you to hide your presence information, so that your presence information is only visible to the contacts in your Skype for Business directory.



**Note:** Microsoft Active Directory includes all Skype for Business users configured by the system administrator. You can add them as your Skype for Business contacts.

When the privacy mode is disabled on the Skype for Business Server, you can see the following two options available on the phone/Skype for Business client:

- **Everyone Can See My Status Regardless Of System Settings/I want everyone to be able to see my presence regardless of system settings (override default settings):** Everyone in my Microsoft Active Directory Domain can see my presence regardless of system settings.
- **Only Contacts Can See My Status If System Setting/I want the system administrator to decide:** Currently everyone can see my presence but this could be change in the future.

When the privacy mode is enabled on the Skype for Business Server, you can see the following two options available on the phone or Skype for Business client:

- **Everyone can see my status/I want everyone to be able to see my presence:** Everyone in my Microsoft Active Directory Domain can see my presence.
- **Only contacts can see my status/I only want people in Contacts to see my presence:** Only the contacts in my Skype for Business directory can see my presence. But my presence is offline for those contacts who are in my Microsoft Active Directory Domain.
- [\*Modifying the Privacy Mode from the Phone\*](#)
- [\*Modifying the Privacy Mode from the Skype for Business Client\*](#)


## Modifying the Privacy Mode from the Phone


### Procedure

1. Navigate to **Menu > Setting > Features > Private Mode**.
2. Select the desired value.
3. Select **Save**.

## Modifying the Privacy Mode from the Skype for Business Client

### Procedure

1. Open Skype for Business client.
2. Click .
3. In the **Skype for Business - Options** dialog box, click **Status**.

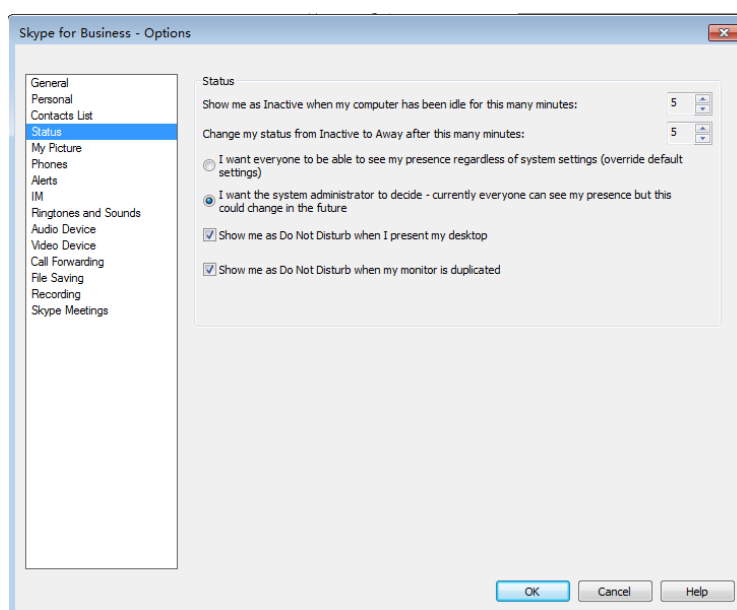

4. Select the desired value.
5. Click **OK**.

## Editing Your Team-Call Group Members

---

A team-call group is a team of people who can answer your work calls. Assume that you have a team of people working on the same project or task. If you are away from your desk and your phone rings, anyone in the team-call group can answer the call for you. As soon as a team member picks up the phone, the other phones stop ringing. You can use Skype for Business client to configure a team-call group only.

### Procedure

1. In the Skype for Business client, click and select > **Call Forwarding Settings**.
2. Select **Simultaneously Ring** > **My Team-Call Group**.
3. In the **Call Forwarding - Team-Call Group** dialog box, click **Add**.
4. In the **Choose a Team-Call Group Member** dialog box, select the contacts you want to add and click **OK**.  
The contacts you add as group members are displayed in the **Call Forwarding - Team-Call Group** dialog box.
5. Click the **Ring your team-call group after this many seconds** drop-down menu to determine when your contacts' phones ring.

### Related tasks

[Setting a Ringtone for a Incoming Team-Call](#)

[Simultaneously Ring a Group of Contacts](#)

## Private Lines

---

Beyond the primary Skype for Business account, your system administrator may assign a private line to you in one of the following situations occurs:

- You do not want to miss important calls denied by your DND status.
- As a boss, you do not want the delegate to answer some important or confidential calls for you.
- You wish your friends and families to reach you directly or bypass your delegate.



**Note:** Private line feature is available in On-Premises environment. Current Online environment does not support this feature. Contact your administrator for private line when necessary. When you receive a private call, the phone screen prompts “Call for private line”.

#### Related tasks

[Setting a Ringtone for Incoming Private Line](#)

## Call Queue

---

Your system administrator may assign you to be a member of a queue.

The call queue is a feature that route and queue incoming calls to group members, called agents, such as a help desk or a customer service desk. When people dial a phone number that is set with a call queue, they will hear a greeting first (if any is setup), and then they will be put in the queue and wait for the available call agent. The person calling in will hear music while they are placed on hold and waiting, and the call in the queue will ring all call agents at the same time. After a call agent accepts the call, other agents’ phones stop ringing.



**Note:** Call queue feature is available in On-Premises environment. Current Online environment does not support this feature. Contact your administrator for more information.

## Response Group

---

Your system administrator may assign you to be a member of a response group.

A response group is a feature that route and queue incoming calls to groups of people, called agents, such as for a help desk or a customer service desk.

When someone calls a response group, the call is routed to an agent based on a hunt group or the caller's answers to interactive voice response (IVR) questions. The Response Group application uses standard response group routing methods to route the call to the next available agent. After a call agent accepts the call, other agents’ phones stop ringing.

For example, you have been selected by your system administrator to be a call agent for a response group named “YEALINK”. When a user calls your response group, your phone prompts that this is a call for YEALINK.



**Note:** Response group feature is available in On-Premises environment. Current Online environment does not support this feature. Contact your administrator for more information.

#### Related tasks

[Setting a Ringtone for Response Group](#)

## Group Call Pickup

---

Your system administrator may assign you to be a member of a pre-defined group. Group call pickup is used for picking up incoming calls for your group members. If many group members receive incoming calls at once, you will pick up the first incoming call, by dialing the group pickup code.



**Note:** Group call pickup feature is available in On-Premises environment. Current Online environment does not support this feature. Contact your administrator for more information.

- [Picking Up a Call for Your Group](#)

## Picking Up a Call for Your Group

You can dial the group pickup code to pick up incoming calls for your group member.

## Procedure

When any group member receives an incoming call, you can dial the group pick code (for example: #603) to answer it.

## Branch Office Resiliency

---

When the WAN connection between the branch site and central site is unavailable, your phone that locates in the branch site goes into resiliency mode.

Branch office resiliency is critical for multi-site deployments of Skype for Business where the control servers are located at a central site or data center. It allows branch site users to continue to have Enterprise Voice service and voicemail (if voicemail rerouting settings are configured) when the branch site loses the connection to the central site. In this situation, your phone will prompt "Limited service due to outage", and the presence icon is displayed as Unknown.



**Note:** Branch office resiliency feature is available in On-Premises environment. Current Online environment does not support this feature. Contact your administrator for more information.

## Optional Accessories with Your Phone

---

This section describes the optional accessories that you can use to extend your phone's capabilities.

- [Supported Accessories](#)
- [Headset](#)
- [Using an EXP50 Expansion Module](#)

## Supported Accessories

---

You can use your phone with different types of accessories. The following optional accessories need to purchase separately if required for your particular phone:

- Headset
- Expansion Module EXP50

Check with your system administrator to find out which of these applications or accessories are available on your phone.



**Note:** We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in poor performance.

## Headset

---

You can connect an analog or USB headset to your phone and use the headset to place and answer calls. If you want to use the analog headset, you require an optional headset YHS33. For more information on how to use your USB headset, refer to your USB headset documentation from the manufacturer. You can also pair and connect a Bluetooth headset with your phone.

- [Analog Headset](#)
- [Bluetooth Headset](#)
- [USB Headset](#)
- [Using Headsets](#)

**Related tasks**

[Pairing and Connecting the Bluetooth Headset](#)

**Analog Headset**

If you want to use an analog headset, you require an optional headset YHS33.

- [Connecting a YHS33 Headset](#)

**Connecting a YHS33 Headset****Procedure**

Simply insert the headset connector into the headset port on the back of your phone.

For the information on how to connect headset YHS33, refer to the YHS33 user guide on [Yealink Technical Support](#) page.

**Bluetooth Headset**

You can use a Bluetooth headset to handle calls on the phone. If both a Bluetooth headset and an analog headset are connected, only the Bluetooth headset can be used.

For more information, refer to the documentation from your Bluetooth headset manufacturer.

**USB Headset**

You can use a USB headset to handle calls on the phone.

For a list of supported headsets, refer to [Tested headset list compatible with Yealink IP Phone](#) for your IP phone. USB headsets that are not listed may not function properly if you connect them to your IP phone. For more information on how to use your USB headset, refer to the related documentation from the manufacturer.

- [Connecting a USB Headset](#)

**Connecting a USB Headset****Procedure**

Simply insert the headset connector into the USB port on the back of your IP phone.

**Using Headsets**

You can use only one headset at a time. The IP phone will use the headset according to the priority: USB headset>YHS33.

- [Activating the Headset Mode](#)
- [Deactivating the Headset Mode](#)

**Activating the Headset Mode**

After connecting a headset to your phone, you can activate the headset mode and use the headset when answering and placing calls.

**Procedure**

Press the HEADSET key on the phone.

The HEADSET key LED glows green, and the headset icon appears on the phone screen.



**Note:** You can initiate or end calls by pressing the HEADSET key. Check with your system administrator to find out if it is available on your phone.



### Deactivating the Headset Mode

If you do not want to use a headset to handle calls, you can deactivate the headset mode.

#### Procedure

Press the HEADSET key again on the phone.

The HEADSET key LED goes out, and the headset icon disappears from the phone screen.

## Using an EXP50 Expansion Module

---

When the EXP50 extension module is connected to your Skype for Business phone, you can specify the group of Skype for Business contacts to display on the EXP50 extension module, so that you can quickly call the contact by pressing the corresponding EXP key. You can also view your Skype for Business contacts' presence status from your expansion module.

#### Procedure

1. Connect the supplied cable from the USB jack on the host phone to the mini USB jack on the expansion module.
2. Navigate to **Menu > Settings > Basic > Exp Module**.
3. Select a desired group of Skype for Business contacts.  
The contacts will be displayed on the EXP50.
4. Press the corresponding EXP key to call the contact.



**Note:** For more information about how to connect and use the EXP50, please refer to [Yealink\\_EXP50\\_Skype\\_for\\_Business\\_Edition\\_Quick\\_Start\\_Guide](#).

## Wireless Network

---

You can connect your T58A Skype for Business phones to wireless network.

- [Activating the Wi-Fi Mode](#)
- [Connecting to the Wireless Network](#)
- [Viewing the Wireless Network Information](#)
- [Disconnecting the Wireless Network Connection](#)
- [Deactivating the Wi-Fi Mode](#)

### Activating the Wi-Fi Mode

---

#### Procedure

1. Navigate to **Menu > Setting > Basic > Wi-Fi**.
2. Select **On** from the **Wi-Fi** field.

## Connecting to the Wireless Network

---

There are three ways to connect the phone to the wireless network:

- [Connecting to an Available Wireless Network Manually](#)
- [Connecting to the Wireless Network Using Wi-Fi Protected Setup \(WPS\)](#)

- [Adding a Wireless Network manually](#)

## Connecting to an Available Wireless Network Manually

### Before you begin

Get the password of the wireless network from your system administrator. Make sure that the Wi-Fi mode is activated.

### Procedure

1. Navigate to **Menu > Setting > Basic > Wi-Fi**.
2. To re-search the available network, tap **More > Scan**.
3. Select the desired wireless network.
4. If the network is secure, enter its password.
5. Tap **Connect** to accept the change.

### Related tasks

[Activating the Wi-Fi Mode](#)

## Connecting to the Wireless Network Using Wi-Fi Protected Setup (WPS)

Wi-Fi Protected Setup (WPS) provides simplified mechanisms to configure secure wireless networks which can automatically configure a wireless network with a network name (SSID) and strong WPA data encryption and authentication.

### About this task

There are two methods supported by Yealink IP phones in the Wi-Fi protected setup:

- **Push Button Configuration (PBC):** The user simply has to press WPS key on both the IP phone and gateway/router to connect.
- **Personal Identification Number (PIN):** The user has to enter a PIN generated randomly by the IP phone on the gateway/router to connect.
- [Connecting to the Wireless Network Using PBC](#)
- [Connecting to the Wireless Network Using PIN](#)

### Related tasks

[Activating the Wi-Fi Mode](#)

## Connecting to the Wireless Network Using PBC

### Procedure

1. Navigate to **Menu > Setting > Basic > Wi-Fi**.
2. Tap **More > WPS**.  
The phone screen prompts that you need to press the Wi-Fi Protected Setup button on your router.
3. Long press the WPS key on your gateway/router.  
Once WPS setup has completed successfully, the touch screen will prompt connect successfully.

## Connecting to the Wireless Network Using PIN

### Procedure

1. Navigate to **Menu > Setting > Basic > Wi-Fi**.
2. Tap **More > WPS-PIN**.  
The phone screen prompts that you need to enter the PIN xxx on your Wi-Fi router.

3. Log into your gateway/router's web interface, and configure it to search the clients. For more information, refer to the documentation from the gateway/router manufacturer.
4. Long press the WPS key on your gateway/router.  
Once WPS-PIN setup completes successfully, the web interface of gateway/router will prompt success.

## Adding a Wireless Network manually

If your gateway/router has SSID broadcast disabled, it might not appear in the scanning results. In that case, you must manually add a wireless network.

### Procedure

1. Navigate to **Menu > Setting > Basic > Wi-Fi**.
2. Tap **More > Add**.
3. Enter the SSID and then select a security mode, depend on your choice:
  - If you select **None** , tap **Save**.
  - If you select **WEP** or **WPA/WPA2-PSK** , enter the password and then tap **Save**.
  - If you select **802.1×EAP**, select a desired EAP method, Phase-2 authentication and CA certificate, enter the desired values in the **Identity**, **Anonymous identity** and **Password** fields and then tap **Save**.

If you tap the **Show advanced options** radio box, select a desired value in the **Proxy** field; If you select **Manual**, enter the information about proxy server in the corresponding fields.

### Related tasks

[Activating the Wi-Fi Mode](#)

## Viewing the Wireless Network Information

---

After connecting to the wireless network, you can view the wireless network information (such as wireless status, profile name, SSID, signal strength and so on.)

### Procedure

Navigate to **Menu > Setting > Basic > Wi-Fi > Wireless Status**.  
You can view the wireless status, profile name, SSID and so on.

### Related tasks

[Connecting to the Wireless Network](#)

## Disconnecting the Wireless Network Connection

---

### Procedure

1. Navigate to **Menu > Setting > Basic > Wi-Fi**.
2. Tap the connected wireless network.
3. Tap **Forget** from the pop-up menu.

## Deactivating the Wi-Fi Mode

---

You should deactivate the Wi-Fi mode when you need to connect your phone to the wired network.

**Procedure**

1. Navigate to **Menu > Setting > Basic > Wi-Fi**.
2. Select **Off** from the **Wi-Fi** field.

## Connecting a Mobile Phone Using Bluetooth

---

The T58A Skype for Business phone supports Bluetooth. Bluetooth enables low-bandwidth wireless connections within a range of 10 meters (32 feet). The best performance is in the 1 to 2 meters (3 to 6 feet) range. You can pair and connect the Bluetooth-Enabled mobile phone with your phone.

- [Activating the Bluetooth Mode](#)
- [Pairing and Connecting the Bluetooth-Enabled Mobile Phone](#)
- [Handling Incoming Mobile Phone Calls by Using Skype for Business Phone](#)
- [Editing Your Phone's Bluetooth Device Name](#)
- [Disabling Bluetooth Device Discovery](#)
- [Renaming the Paired Bluetooth Devices](#)
- [Disconnecting the Bluetooth Device](#)
- [Un-pairing the Mobile Phone](#)
- [Deactivating the Bluetooth Mode](#)

## Activating the Bluetooth Mode

---

You need to activate Bluetooth mode to use the Bluetooth feature.

**Procedure**

1. Tap **Menu > Setting > Basic > Bluetooth**.
2. Turn on **Bluetooth**.  
The phone scans the available Bluetooth devices automatically.

## Pairing and Connecting the Bluetooth-Enabled Mobile Phone


---

You can pair and connect the Bluetooth-Enabled mobile phone to your phone.

**Before you begin**

Make sure that you have activated the Bluetooth mode and the Bluetooth-Enabled mobile phone is discoverable.

**Procedure**

1. Tap **Menu > Setting > Basic > Bluetooth**.
2. If there is no mobile phone found on the touch screen, tap  to search for the Bluetooth-Enabled mobile phone.
3. Tap the desired mobile phone in the available devices list to connect the it to your Skype for Business phone.
4. Tap **Pair** on both mobile phone and Skype for Business phone.  
Once the connection is successful, the prompt “Connected” appears under the mobile phone name. And a Bluetooth icon is displayed in the status bar.

**Related tasks**

[Activating the Bluetooth Mode](#)

## Handling Incoming Mobile Phone Calls by Using Skype for Business Phone

---

When your mobile phone is paired and connected with your Skype for Business phone, the phone audio feature is enabled by default. So that an incoming call to your mobile phone is also shown on the Skype for Business phone. You can answer, silence, or reject the call by using your Skype for Business phone.

### Procedure

When the paired mobile phone receives an incoming call, do one of the following on your Skype for Business phone:

- Tap **Answer**.
- Tap **Silence**.
- Tap **Reject**.



**Note:** If you disable the phone audio feature, your mobile phone will be disconnected with your Skype for Business phone.

### Related tasks

[Pairing and Connecting the Bluetooth-Enabled Mobile Phone](#)

## Editing Your Phone's Bluetooth Device Name

---

You can change the Bluetooth device name for your phone. By default, the device name for Yealink Skype for Business phones display as **Yealink- T58**.

### Before you begin

Activate the Bluetooth mode.

### Procedure

1. Tap **Menu** > **Setting** > **Basic** > **Bluetooth**.
2. Tap **Edit My Device Information**.
3. Enter the desired name in the **Device Name** field.
4. Tap **Save** to accept the change.

### Related tasks

[Activating the Bluetooth Mode](#)

## Disabling Bluetooth Device Discovery

---

After Bluetooth is turned on, your phone is visible to other Bluetooth-enabled devices by default. You can choose to disable this feature to not allow your phone to show as an available device on other Bluetooth devices.

### Procedure

1. Tap **Menu** > **Setting** > **Basic** > **Bluetooth**.
2. Tap **Edit My Device Information**.
3. Turn off **Open Discover**.

### Related tasks

[Activating the Bluetooth Mode](#)

## Renaming the Paired Bluetooth Devices


---

You can rename the paired Bluetooth devices for better recognition effect.

### Before you begin

Pair and connect the Bluetooth-Enabled mobile phone.

### Procedure

1. Tap **Menu** > **Setting** > **Basic** > **Bluetooth**.
2. Tap  after the connected mobile phone name.
3. Enter the desired device name in the **Rename** field.
4. Tap **Save** to accept the change.

### Related tasks

[Pairing and Connecting the Bluetooth-Enabled Mobile Phone](#)

## Disconnecting the Bluetooth Device

---

You can disconnect the Bluetooth device from your phone. After you disconnect the Bluetooth device, it stay in the paired devices list, so that you can easily connect it to your phone next time.

### Procedure

1. Tap **Menu** > **Setting** > **Basic** > **Bluetooth**.
2. Tap the connected Bluetooth devices.  
The phone prompts "Disconnect?"
3. Tap **OK**.

### Related tasks


[Pairing and Connecting the Bluetooth-Enabled Mobile Phone](#)

## Un-pairing the Mobile Phone

---

You can unpair your mobile phone and your Skype for Business phone. After you unpair them, the mobile phone disappears from the **paired devices** list. To connect mobile phone to your Skype for Business phone again, yo need to find and tap the desired mobile phone in the **available devices** list.

### Procedure

1. Tap **Menu** > **Setting** > **Basic** > **Bluetooth**.
2. Tap  after the connected mobile phone name.
3. Tap **Unpair**.

### Related tasks

[Pairing and Connecting the Bluetooth-Enabled Mobile Phone](#)

## Deactivating the Bluetooth Mode

---

You can deactivate the Bluetooth mode when you no longer use a Bluetooth device.

**Procedure**

1. Tap **Menu** > **Setting** > **Basic** > **Bluetooth**.
2. Turn off **Bluetooth**.

## Using Better Together over Ethernet

---

Better Together over Ethernet (BToE) feature on Yealink Skype for Business phones enables you to control call from your phones and your computer using your Skype for Business client. You can also use BToE to sign into your phone using your Skype for Business credentials. In order to use BToE, you need to download and install the Yealink BToE Connector application first.

- [\*Getting Started with Better Together over Ethernet\*](#)
- [\*Downloading and Installing the Yealink BToE Connector\*](#)
- [\*Starting the Yealink BToE Connector\*](#)
- [\*Setting the Yealink BToE Connector\*](#)
- [\*Pairing Your Phone with Your Computer\*](#)
- [\*Using Your Phone as Your Primary Audio Device for Your Computer\*](#)
- [\*Using BToE to Lock and Unlock Your Phone\*](#)
- [\*Using BToE to Manage Calls on Your Phone and Skype for Business Client\*](#)
- [\*Disabling BToE on Your Phone\*](#)
- [\*Exiting BToE on Your Computer\*](#)
- [\*Uninstalling the Yealink BToE Connector\*](#)

## Getting Started with Better Together over Ethernet

---

To enable and use BToE, you need to ensure the following requirements are available on your PC:


- Skype for Business client
- A registered Skype for Business user (Obtain Skype for Business credentials from your system administrator)
- Running Windows Vista version or later/MAC 10.12 version or later
- Administrator privileges are needed to install the Yealink BToE Connector

## Downloading and Installing the Yealink BToE Connector

---

Before you can start using BToE, you need to download and install the BToE Connector application from [\*Yealink Support\*](#).

**Procedure**

1. Unzip the downloaded file.
2. Double click the installation application **Yealink BToE Connector for Lync.msi**.
3. Follow the steps in the installation wizard to complete the installation.  
When the installation completes, the Yealink BToE Connector application starts on your computer and the icon  is displayed in the notification area of your system tray.

## Starting the Yealink BToE Connector

---

You can start the Yealink BToE connector manually if it does not start automatically.

### Procedure


Click the Yealink BToE Connector desktop icon on your computer or click **Start > All Programs > Yealink BToE Connector**.

## Setting the Yealink BToE Connector

---

You can customize settings for the Yealink BToE connector.

### Procedure

1. Right-click  in the system tray, and click **Settings**.
2. You can do the followings:
  - Check the **Run automatically when starting Windows** checkbox, this software starts automatically once the PC starts.
  - If you uncheck the **Wired** checkbox, you need to enter the IP address of your phone manually.
  - If you check the **Wired** checkbox, and you connect a computer to the PC port on your phone using an Ethernet cable, the IP address of your phone is entered automatically.

## Pairing Your Phone with Your Computer

---

Before you can begin using BToE, you must pair your phone with your computer.

- [Enabling BToE and Selecting a Pairing Mode](#)
- [Pairing Your Phone with Your Computer over Ethernet](#)
- [Pairing Your Phone with Your Computer using Phone IP Address](#)
- [Viewing Pairing Status](#)

### Enabling BToE and Selecting a Pairing Mode

By default, your phone is set to pair with your computer automatically when Better Together over Ethernet is enabled and you connect your phone to your computer over Ethernet. You can also choose to manually pair your phone with your computer using the BToE Connector application and a pairing code generated by your phone.

### Procedure

1. Navigate to **Menu > Setting > Features > BToE**.
2. Turn on **BToE**.
3. Select the desired value from the drop-down menu of the **BToE Pairing Mode**.
4. Select **Save**.

## Pairing Your Phone with Your Computer over Ethernet

You can connect an Ethernet cable from your computer to the PC port on your phone.


### Before you begin

Ensure that the Yealink BToE Connector application is running on your PC.



### Procedure

1. On the Yealink BToE connector application, make sure the **Wired** checkbox is checked. the IP address of your phone is automatically filled.
  2. Click **OK**.
    - If BToE Pairing Mode is set to **Auto**, your phone pairs with Skype for Business client directly.
    - If BToE Pairing Mode is set to **Manual**, a six-digit pairing code displays. You should enter the six-digit pairing code shown on the phone into the notification on your computer.

a dialog box indicating that the computer has successfully paired with the phone displays on your phone.
  3. If the phone is not registered, enter your login credentials into the dialog displayed on your computer.
-  **Note:** If the dialog box does not display on your computer, select **Sign In** on your phone and choose **Sign in via PC**.

## Pairing Your Phone with Your Computer using Phone IP Address


If you do not connect an Ethernet cable from your computer to the PC port on your phone, you can choose to enter phone IP address manually.

### Before you begin

Ensure that the Yealink BToE Connector application is running on your PC.

### Procedure

1. On the Yealink BToE connector application, make sure the **Wired** checkbox is unchecked.
  2. Enter the IP address of your phone.
  3. Click **OK**.
    - If BToE Pairing Mode is set to **Auto**, your phone pairs with Skype for Business client directly.
    - If BToE Pairing Mode is set to **Manual**, a six-digit pairing code displays. You should enter the six-digit pairing code shown on the phone into the notification on your computer.


a dialog box indicating that the computer has successfully paired with the phone displays on your phone.
  4. If the phone is not registered, enter your login credentials into the dialog displayed on your computer.
-  **Note:** If the dialog box does not display on your computer, select **Sign In** on your phone and choose **Sign in via PC**.

## Viewing Pairing Status

You can view the pairing status between your phone and computer.

### Procedure

1. Tap **Menu > Setting > Features > BToE**.
2. View the BToE pairing status in the **BToE Pairing Status** field.
  - **Unpaired (Not signed in):** Your phone and your computer are not paired.
  - **Paired (Not signed in):** Your phone and your computer are paired but the Skype for Business user signing on your phone differs from the one signing on the Skype for Business client.
  - **Paired (Signed in):** Your phone and your computer are paired and the Skype for Business user signing on the phone is same as the one signing on the Skype for Business client.


 **Note:** You can also hover your mouse over the BToE icon in the system tray to view the BToE pairing status.

## Using Your Phone as Your Primary Audio Device for Your Computer

With BToE, you can use your Skype for Business phone to play audio from media, such as music or web videos, by setting your phone as your default communication device for your computer.

### Procedure

1. On your computer, click **Start > Control Panel > Hardware and Sound > Sound**.
2. Click **Yealink USB Audio Playback**, and click **Set Default**.
3. Click **OK**, then the PC Audio screen is displayed as following:

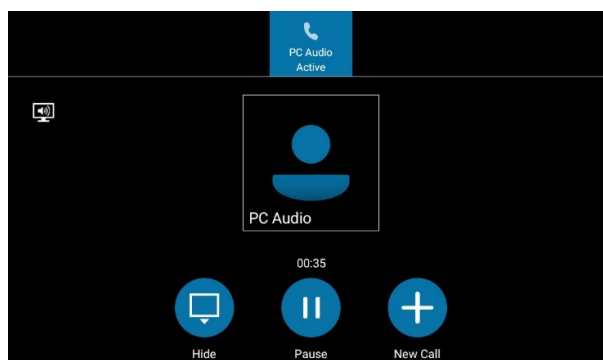

## Using BToE to Lock and Unlock Your Phone

When your phone is paired with your computer, you can lock and unlock your phone automatically when you lock or unlock your computer.

### Before you begin

Make sure the BToE status is Paired (Sign In) and the phone lock with PC feature is enabled:

### About this task

The phone unlocks automatically when one of the following situations occur:

- The paired PC gets locked.
- The paired PC enters sleep mode.
- The paired PC starts the screen saver.
- The account status changes to inactive.
- BToE status changes from Paired (Sign In) to Paired (Sign Out) or Unpaired.

The phone unlocks automatically when one of the following situations occur:

- The paired PC gets unlocked.
- The paired PC wakes up and is not locked.
- The paired PC stops the screen saver and is not locked.
- The account status changes from inactive to active.
- BToE status changes from Paired (Sign Out) or Unpaired to Paired (Sign In).
- [Disabling Phone Lock with PC](#)

## Disabling Phone Lock with PC

When your phone is paired with your computer, you can disable the phone lock with PC feature, so that your phone will not be locked or unlocked with your PC.

### Procedure

1. Naviagte to **Menu > Setting > Basic > Phone Lock > Phone Lock with PC.**
2. Turn off **Phone Lock with PC.**
3. Select **Save .**

## Using BToE to Manage Calls on Your Phone and Skype for Business Client

---


After your phone is paired with your computer, you can manage calls with your Skype for Business contacts on your phone and in the Skype for Business client on your computer. Using any registered phone as your primary audio device, you can answer, place, hold and resume calls on your phone. If the Skype for Business client and the connected phone are signed in with different accounts, the phone acts as a speakerphone for all audio and video calls initiated in the Skype for Business client on your computer.

- [Setting Your Phone as Your Primary Audio Device](#)
- [Answering BToE Calls](#)
- [Placing BToE Calls](#)
- [Pausing and Resuming BToE Calls](#)
- [Moving Call Audio between Your Phone and Computer](#)

### Setting Your Phone as Your Primary Audio Device

Before you begin using your phone to manage the calls of Skype for Business client, you need to ensure that your phone is set as your primary audio device in your Skype for Business client on your computer.

#### Procedure




In your Skype for Business client, click the audio device icon  and select your phone as your primary device.

### Answering BToE Calls

You can sign in to the Skype for Business client and the connected phone with the same account or with different account. The way you answer calls is different for these two sign-in methods.

#### Procedure

When your Skype for Business client receives a call, do one of the following:

- If signed in with the same user account, select **Answer** on your phone or click  in the Skype for Business client.
- If signed in with different user accounts and the incoming call is for the account signed in to Skype for Business client, click  in the Skype for Business client. The call is displayed on your phone and Skype for Business client. On your phone, the  icon is displayed during the Skype for Business call and the audio for the call is played through the phone's speakerphone.
- If signed in with different user accounts and the incoming call is for the account signed in to the phone, select **Answer** on your phone, the call is displayed on your phone only.

### Placing BToE Calls

You can place calls to Skype for Business contacts in the Skype for Business client and on your phone.

### Procedure

Choose a contact and select **Call**.

## Pausing and Resuming BToE Calls

When your Skype for Business client is during an audio or video call and different user accounts are signed in to your phone and Skype for Business client, you can pause active audio and video calls on your phone. When your Skype for Business client is during a video call and same user accounts are signed in to your phone and Skype for Business client, you can pause active video calls on your phone. However, when you pause an audio or a video call on your phone, the call remains active in the Skype for Business client on your computer.



### Procedure

1. When your Skype for Business client is during a call, select **Pause** on your phone.  
The call is paused on your phone but not in the Skype for Business client on your computer.
2. Select **Resume** on your phone to continue talking.

## Moving Call Audio between Your Phone and Computer

During an active Skype for Business call, you can move the call audio from your phone to your computer or from your computer to your phone.

### Procedure

1. During an active call in the Skype for Business client, click , and then select .
2. Do one of the following:
  - Click **Handset** to move the call audio from your computer to your phone.
  - Click **PC Mic and Speakers** to move the call audio from your phone to your computer.

## Disabling BToE on Your Phone

---

When you disable BToE, you can no longer use the feature on your phone and Skype for Business client on your computer.

### Procedure

Do one of the following:

- Disconnect the Ethernet cable from the PC port on your phone.
- Tap **Menu > Settings > Features > BToE**, and turn off **BToE**.

## Exiting BToE on Your Computer

---

When you stop the application, you can no longer use the BToE functions on your phone and computer.

### Procedure

On your computer, right-click  in the system tray and select **Exit**.

## Uninstalling the Yealink BToE Connector

---

After you uninstall the Yealink BToE Connector, you can no longer use BToE. Before uninstalling the Yealink BToE Connector, you need to exit BToE.

### Procedure

1. On your computer, select **Menu > All Programs > Yealink BToE Connector > Uninstall**.  
A dialog box asking if you're sure you want to uninstall this product is displayed.
2. Choose **Yes** to uninstall the Yealink BToE Connector.  
A dialog box showing the progress of the application uninstall is displayed.

## Maintaining Skype for Business Phones

---

When the phone is not operating properly, you can investigate or troubleshoot issues along with any other tasks your administrator may ask you to perform.

- [Rebooting Your Phone](#)
- [Viewing Phone Status](#)
- [Updating Phone Firmware](#)
- [Resetting Your Phone](#)

## Rebooting Your Phone

---

Your system administrator may ask you to reboot if it malfunctions or to assist in troubleshooting.

### Procedure

1. Navigate to **Menu > Setting > Advanced > Reboot**.
2. Select **Reboot**.  
The phone screen prompts "Reboot the phone?".
3. Select **OK** to reboot the phone.

## Viewing Phone Status

---

On your phone, you can view network, firmware, location, license information and so on.

### Procedure

1. Navigate to **Menu > Status**.
2. Tap the desired item to view the specific information.

## Updating Phone Firmware

---

When a firmware update is available on the Skype for Business server, you can trigger an update manually.

### Procedure

1. Navigate to **Menu > Setting > Advanced > Firmware Update**.

2. Tap **Firmware Update**.

## Resetting Your Phone

---

You can reset the phone to factory default settings.

### Procedure

1. Navigate to **Menu > Setting > Advanced > Reset Config**.
2. Tap **Reset to Factory**.  
The phone screen prompts “Reset to factory setting?”.
3. Select **OK**

## Troubleshooting

---

If you are having issues with your phone, you can try the troubleshooting options and solutions in the following topics to resolve certain issues.

- [\*Why is the screen blank?\*](#)
- [\*Why does the phone display “Network unavailable”?\*](#)
- [\*Why does the phone display time and date incorrectly?\*](#)
- [\*How can I obtain the MAC address of a phone when the phone is not powered on?\*](#)
- [\*Why can't I sign into the Skype for Business server on the phone?\*](#)
- [\*Why can't the phone pair with my Skype for Business client?\*](#)
- [\*Why can't I see the Calendar menu on the phone?\*](#)
- [\*Why can't I get a dial tone?\*](#)
- [\*Why doesn't the phone ring?\*](#)
- [\*Why can't I receive calls?\*](#)
- [\*Why doesn't my handset work?\*](#)

### Why is the screen blank?

---

- Ensure that the phone is properly plugged into a functional AC outlet.
- Ensure that the phone is plugged into a socket controlled by a switch that is on.
- If the phone is plugged into a power strip, try to plug it directly into a wall outlet instead.
- If the phone is powered from PoE, ensure you use a PoE-compliant switch or hub.

### Why does the phone display “Network unavailable”?

---

- Ensure that the Ethernet cable is plugged into the Internet port on the phone and the Ethernet cable is not loose.
- Ensure that the switch or hub in your network is operational.
- Contact your system administrator for more information.

## Why does the phone display time and date incorrectly?

---

Check whether your phone obtains the time and date from the SNTP server automatically. If the phone fails to connect the SNTP server, contact your system administrator for more information. You can also configure time and date manually.

## How can I obtain the MAC address of a phone when the phone is not powered on?

---

You can use one of the following ways to obtain the MAC address of a phone:

- You can ask your supplier for shipping information sheet which includes MAC addresses according to the corresponding PO (Purchase Order).
- You can find the MAC address on the label of the carton box.
- You can also find the MAC address from the phone's bar code on the back of the phone.

## Why can't I sign into the Skype for Business server on the phone?

---

- Check your phone is properly connected to the switch or hub.
- Ensure that your login credentials are correct.
- Ensure network is available.
- Ensure the date and time is correct.
- Ensure that the phone has obtained the license.

## Why can't the phone pair with my Skype for Business client?

---

- Ensure that your Skype for Business client is installed on your PC and a Skype for Business user signs into Skype for Business server successfully.
- Ensure that the user signing on the phone is the same as the one signing on the Skype for Business client.
- Re-pair the phone and Skype for Business client manually.
- Ensure that Yealink BToE Connector and application driver are successfully installed on your PC, and both of them start successfully. If the phone still cannot pair with the Skype for Business client, reboot the PC.
- After a reboot, if the phone still cannot pair with the Skype for Business client, uninstall the Yealink BToE Connector and application driver, and then reinstall them.
- Ensure that Yealink BToE Connector is an allowed program in your system's firewall on your PC.

## Why can't I see the Calendar menu on the phone?

---

It is possible that the phone is not connected to the Microsoft Exchange Server. Make sure that you sign into the phone using **User Sign-in**, **Web Sign-In** or **Signing in via PC** method.

## Why can't I get a dial tone?

---

- Check for any loose connections and that the phone has been installed properly.

- Switch between the Handset, Headset (if present) or Hands-Free Speakerphone to check whether the dial tone is present for one of the audio modes.
- If the dial tone exists on another audio mode, connect a different handset or headset to isolate the problem.

## Why doesn't the phone ring?

---

Check the ringer volume on the phone. To adjust the ringer volume setting, tap the Volume key when the phone is idle.

## Why can't I receive calls?

---

- Check whether your status is DND mode, if it is, you should reset status.
- Check whether call forward is enabled on the phone.

## Why doesn't my headset work?

---

- Check that the headset cord is fully connected to the headset jack on the phone.

## Regulatory Notices

---

- [Service Agreements](#)
- [Limitations of Liability](#)
- [Safety Instructions](#)

## Service Agreements

---

Contact your Yealink Authorized Reseller for information about service agreements applicable to your product.

## Limitations of Liability

---

TO THE FULL EXTENT ALLOWED BY LAW, YEALINK EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF YEALINK OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT YEALINK'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

## Safety Instructions

---



## Safety Instructions

### Save these instructions. Read these safety instructions before use!

The following basic safety precautions should always be followed to reduce risk of fire, electrical shock, and other personal injury.

### General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- During the process of storage, transportation, and operation, please always keep the device dry and clean.
- During the process of storage, transportation, and operation, please avoid collision and crash of the device.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Without prior written consent, no organization or individual is permitted to make any change to the structure or the safety design of the device. Yealink is under no circumstance liable to consequences or legal issues caused by such changes.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.

### Environmental Requirements

- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Place the device on a stable and level platform.
- Please place no heavy objects on the device in case of damage and deformation caused by the heavy load.
- Keep at least 10 cm between the device and the closest object for heat dissipation.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.
- Keep the device away from any household appliance with strong magnetic field or electromagnetic field, such as a microwave oven or a refrigerator.

### Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- Do not tread on, pull, or over-bend any cable in case of malfunction of the device.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately. Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.

### Cleaning Requirements

- Before cleaning the device, stop using it and disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Keep the power plug clean and dry. Using a dirty or wet power plug may lead to electric shock or other perils.

