
Yealink

CP Wireless Microphones

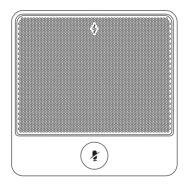

Quick Start Guide (V1.0)

Packaging Contents

The following items are included in your package. If you find anything missing, contact your system administrator.



CPW90 Wireless









Charging Cradle

Micx2

DD10

Power Adapter

Quick Start Guide

 
Micro USB Cable USB Donale

Component Instruction





Charging the CPW90



During charging, the battery LED indicator on the CPW90 illuminates solid red. When the battery capacity reaches 100%, the battery LED indicator on the CPW90 will illuminate solid green.

When you charge the CPW90, the CPW90 will start up automatically. You can also long tap the mute button on the CPW90 for 3 seconds to turn on the CPW90

Note: If it is the first time you use the CPW90, you need to fully charge the CPW90 for normal use.

If the CPW90 is not in use, we still recommend you to charge the CPW90 even when the battery is full.

Rergistering CPW90 with the VC500

The CPW90 wireless microphones and DD10 USB dongle are automatically paired from the factory. To use the CPW90 wireless microphones, connect the DD10 USB dongle to one of the USB ports on the VC500 codec, then the CPW90 wireless microphones can work as audio input devices of VC500.

You may need to deregister or register the CPW90 wireless microphones manually if new CPW90 need to be registered with the VC500.

It is configurable via the web user interface of VC500 only.

To log into the web user interface of VC500:

- 1. On your computer, enter IP address of the VC500 into your web browser, and then press the Enter key.
- Enter the administrator name and password. The default user name is "admin" (case-sensitive), and the default password is "0000".
- 3. Click Login.

To deregister the CPW90 from the VC500:

- 1. Log into the web user interface of VC500.
- 2. Click on Setting->Wireless Micphone.
- 3. Click Deregistration.
- 4. Click Confirm.

To register the CPW90 with the VC500:

- 1. Log into the web user interface of VC500.
- 2. Click on Setting->Wireless Micphone.
- 3. Click Search Mic.
- Tap and hold the mute button on the CPW90 wireless microphones for 5 seconds until the mute indicator LED flashes yellow.
 - The CPW90 wireless microphones and the dongle will be paired automatically.

Finding the CPW90

- 1. Log into the web user interface of VC500.
- 2. Click on Setting->Wireless Micphone.
- Select the desired microphone, and then click Find.The mute indicator LED on the CPW90 flashes red and green alternately.
- 4. Click Stop Find.

Muting or Unmuting the CPW90

Tap the mute button on the CPW90 to mute or tap it again to unmute the CPW90.

About Yealink

Yealink (Stock Code: 300628) is a global leading unified communication (UC) terminal solution provider that primarily offers video conferencing systems and voice communication solutions. Founded in 2001, Yealink leverages its independent research and development and innovation to pursue its core mission: "Easy collaboration, high productivity." The company's high-quality UC terminal solutions enhance the work efficiency and competitive advantages of its customers in over 100 countries. Yealink is the world's second-largest SIP phone provider and is number one in the China market.

Technical Support

Visit Yealink WiKI (http://support.yealink.com/) for the latest firmware, guides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (https://ticketyealink.com) to submit all your technical issues.





YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD. Web: www.yealink.com Addr: 309, 3th Floor, No.16, Yun Ding North Road,

Addr: 309, 3th Floor, No.16, Yun Ding North Road, Huli District, Xiamen City, Fujian, P.R. China Copyright © 2018 Yealink Inc. All rights reserved.