
VCR11 Remote Control Quick Reference Guide

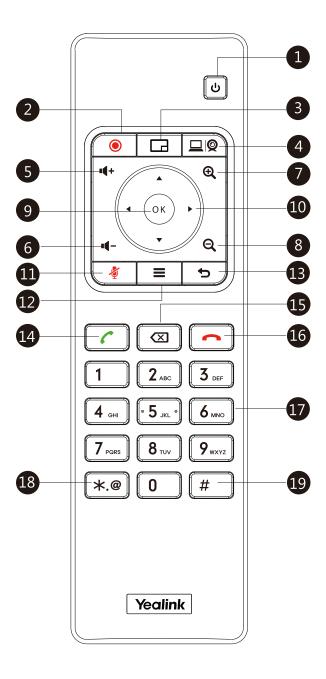

Parts of the Remote Control

No.	Item	Description
1	Power Key	Powers the system on and off.Makes the system sleep or wakes the system.
2	Video Recording Key	Starts or stops recording video and audio.
3	Layout Key	Adjusts layout during a video call.
4	Custom Key	Assigns predefined functions to this key. Input key: press to select the video input source. Screencapture key: press to capture screen. Mute Speaker key: press to mute or unmute the speaker. Presentation key: press to start or stop presentation.
5	Vol+	Increases the system volume.
6	Vol-	Decreases the system volume.
7	Zoom in Key	 Increases the camera zoom. Increases the captured image magnifications. Behaves as page up in a multiple page list.
8	Zoom out Key	 Decreases the camera zoom. Decreases the captured image magnifications. Behaves as page down in a multiple page list.
9	OK Key	Confirms actions or answers incoming calls.
10	Navigation Key	Navigate through menu items using the Up, Down, Left, and Right keys Pan and tilt the camera to adjust the viewing angle.

No.	Item	Description
11	Mute Key	Toggles the mute feature.
12	Home Key	 Returns to the idle screen when in the menu. Enters the Talk Menu during a call.
13	Back Key	Returns to the previous menu.
14	Off-hook Key	Enters the pre-dialing screen.Places a call.Answers a call.
15	Delete Key	 Deletes one character at a time. Long press to delete all characters in the input field. Long press it for 2 seconds to start capturing packets and long press it for 2 seconds again to stop capturing packets.
16	On-hook Key	Ends a call or exits from a conference call.Returns to the idle screen.
17	Keypad	 Enters digits. Enters the pre-dialing screen.
18	Character Key	Generates special characters: .*@.
19	# Key	Generates a pound key (#).

Waking the System

1. To wake the system, press any key on the remote control.

Placing a Call

Entering the Calling Information

1. Select **Dial** menu or press **c** to enter the pre-dialing screen.

2. Select the desired account type from the pull-down list of
Call Type before calling.
3. Enter the calling information in the input box.
You can also select the desired record from the recent call
history.
4. Press ▶ to select
5. Press OK .
Calling a Contact
1. Select Dial menu or press to enter the pre-dialing
screen.
2. Press to return to the menu.
 Press ▲ or ▼ to select Directory.
4. Press to enter submenu.
5. Select the desired contact type from the pull-down list of the
All Contacts.
6. Press ▲ or ▼ to select the desired contact.
7. Press to enter submenu, select the Video Call/Voice Call.
8. Press OK).
Calling a Call Record
1. Select Dial menu or press r to enter the pre-dialing
screen.
2. Press def to return to the menu.
3. Press ▲ or ▼ to select History .
4. Press to enter submenu.
The display device shows recent call records.
5. Select the desired list from the pull-down list of All Calls .
6. Press ▲ or ▼ to select the desired call record.
7. Press to enter submenu, select the Video Call/Voice Call .
8. Press OK
Initiating a Conference
Initiating a Conference by Dialing a Group:
1 Select Dial menu or press to enter the pre-dialing

screen.

2. Press

to return to the menu.

- 3. Press ▲ or ▼ to select **Group Dial**.
- 4. Press to enter submenu.
- 5. Check multiple contact checkboxes.
- 6. Press to enter submenu.
- 7. Select Start conference call.
- 8. Press (ок).

Initiating a Conference by Inviting Participants:

- 1. Use your preferred dialing method, call the first site.
- 2. Press (ок) or **=** to enter **Talk Menu**.
- 3. Press 🛕 or 🔻 to select **New Call**, and then press ok

You can do one of the following:

- If you select **Dial**, enter the calling information to dial out.
- If you select **Directory**, select the desired contact to dial out.
- If you select **Group Dial**, check multiple contact checkboxes.

Press to enter submenu.

Select Start conference call.

- If you select **History**, select the desired call record to dial out.

The site is added to the conference after answering.

Answering a Call

1. Press on the remote control.

Ending a Call

1. Press on the remote control.

Call Mute and Unmute During a Call

- Press on the remote control to mute the microphone, others cannot hear you.
- If the call is muted, press on the remote control to unmute the call.

Video Recording

Before recording video, make sure a USB flash driver is connected to VC800 codec, VCH50 video conferencing hub or CP960 conference phone and the USB feature is enabled.

To record video when the system is idle or during a call:

1. Press to start recording and then press again to stop recording.

Joining a Scheduled Conference

When you register a YMS account, you can join a scheduled conference.

- Do one of the following:
- On a conference reminder, select **Join**.
- Select **Calendar** menu, and then select **Join** from the desired conference.
- Select **Dial** menu, and then enter the corresponding conference information to dial out.

Adjusting the Volume

1. Press • or • on the remote control.

Adjusting the Video Layout in a Call

- 1. Press on the remote control in a call.
- 2. Select the desired layout, and then press $\binom{OK}{C}$.

Adjusting the Camera

zoom out.

- On the idle screen, selcet the local video image first, and then press ▲ ,
 ▼, ◀ or ▶ to pan or tilt the camera. Press ⊕ to zoom in or ⊖
- In a call, press ▲ , ▼ , ◀ or ▶ to pan and tilt the camera. Press
 to zoom in or Q zoom out.

Powering the System On and Off

- Press on the remote control to power on the system.
- Press on the remote control, and then select **Shut down** to power the system off.

More Information

For more information about setting up and using the system, refer to http://support.yealink.com/.