

User Access Level of Web/Phone User Interface

Overview

User access level feature is used to achieve different access levels for different authorized users. It is useful for protecting the IP phone from unauthorized configuration, and popularly used for the Hosted PBX solution. The following describes how to customize the access permission for configurations on the web user interface and phone user interface.

Scenario

For a Hosted PBX solution, IP phones are provided to customers for free but required a minimum consumption monthly. All PBX services associated features on the deployed IP phones are preconfigured to avoid customers from using other Hosted PBX's service, and the Hosted PBX system administrator can restrict the user access permission using user access level feature. For example, the Hosted PBX system administrator restricts the write permission of the account associated configurations. This means customers can only read these configurations on both web user interface and phone user interface.

Introduction

Yealink SIP-T48G, SIP-T46G, SIP-T42G, SIP-T41P, SIP-T29G, SIP-T27P, SIP-T23P/G, SIP-T21(P) E2 and SIP-T19(P) E2 IP phones support access levels of admin, var and user. The following describes the detailed information of each access level:

- **Admin:** The administrator access level. With this access level, all configurations on both web user interface and phone user interface can be read and written. The authentication identity for this access level is **admin**. And the default password is **admin**.
- **Var:** The value-added reseller access level. Generally, with this access level, most configurations on the web user interface and phone user interface can be read and written. The authentication identity for this access level is **var**. And the default password is **var**.
- **User:** The end user access level. Generally, only a few configurations are allowed to be written and read for access user. The authentication identity for this access level is **user**. And the default password is **user**.

Specification

Access permissions of all configuration items available on Yealink SIP-T48G/T46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2 IP phones' web user interface and phone user interface can be defined in a fixed WebItemsLevel.cfg file. Each configuration item in the file is formatted as:

ItemName = X₁X₂

The valid values of X₁, X₂ include 0, 1, 2 and 3.

X₁ is used for specifying the access level. The access levels: 2 = admin, 1 = var, 0 = user, 3 = none.

X₂ is used for defining the access permission. 2 means the configuration item is read-only for X₁ and higher access levels, the highest is always writable. 1 means the configuration item is read-only for X₁ access level, and writable for higher access levels. 0 means the configuration item is writable for X₁ and higher access levels. 3 means the configuration item is read-only for X₁ and higher access levels.

If X₂ does not exist, the configuration item is visible for X₁ and higher access levels.

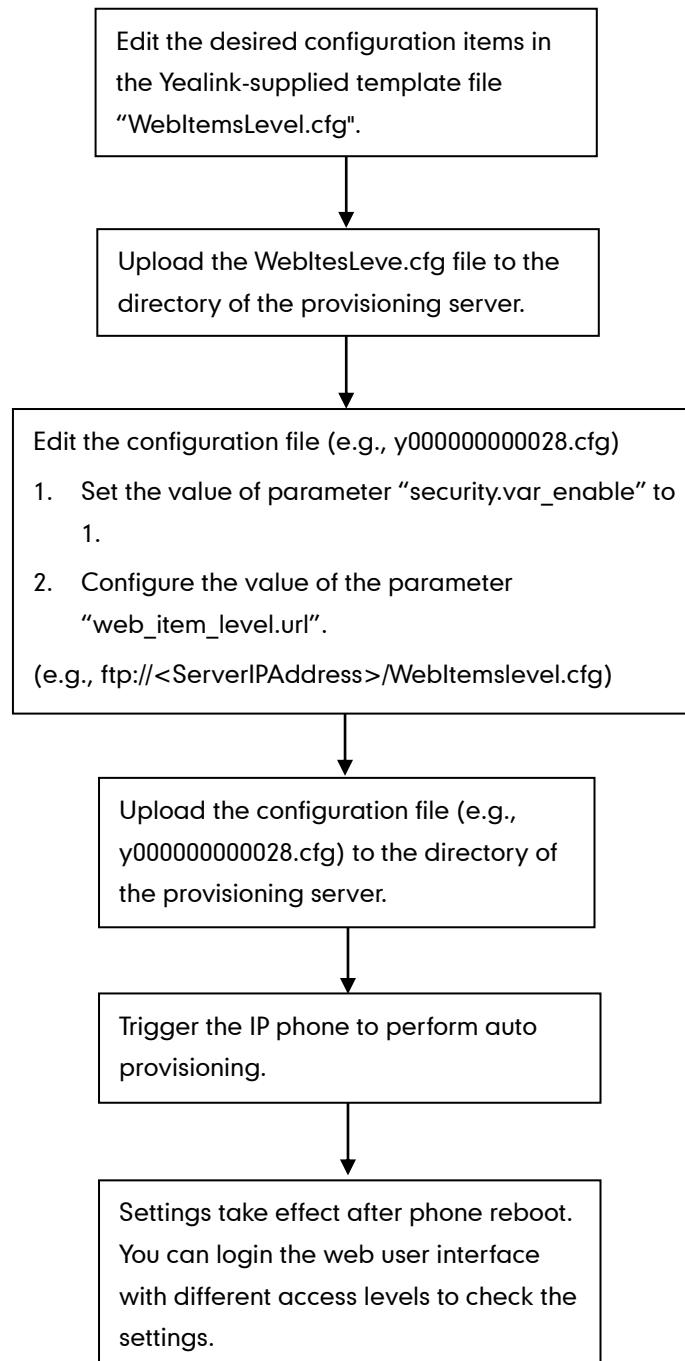
The following table lists the possible values of X₁X₂:

Value of X ₁ X ₂	Description
0	This configuration item is visible for admin, var and user access levels.
1	This configuration item is visible for admin and var access levels.
2	This configuration item is visible for admin access level only.
3	This configuration item is hidden for admin, var and user access levels.
00	This configuration item is writable for admin, var and user access levels.
01	This configuration item is read-only for user access level, writable for admin and var access levels.
02	This configuration item is read-only for var and user access levels, writable for admin access level.
03	This configuration item is read-only for admin, var and user access level.
10	This configuration item is writable for admin and var access levels, hidden for user access level.
11/12	This configuration item is read-only for var access level,

Value of X ₁ X ₂	Description
	writable for admin access level, hidden for user access level.
13	This configuration item is read-only for var and admin access level, hidden for user access level.
20/21/22	This configuration item is writable for admin access level, hidden for var and user access levels.
23	This configuration item is read-only for admin access level, hidden for var and user access levels.
30/31/32/33	This configuration item is hidden for admin, var and user access levels.

Application

This section will introduce procedures to configure access permission of the web user interface in detail. The flow chart of configuring user access level is shown as below:



Customizing WebItemsLevel.cfg

You can ask Yealink Field Application Engineer for the template file "WebItemsLevel.cfg", or you can download it online:
<http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

We recommend you only edit the desired configuration items in the supplied "WebItemsLevel.cfg" file, and keep other configuration items constant.

WebItemsLevel.cfg downloaded via auto provisioning will override that in the phone flash. Access level of any configuration item missed (including configuration value left blank) in the downloaded WebItemsLevel.cfg file will be changed to user by default.

The following shows configuration segments for the web user interface in the WebItemsLevel.cfg file for reference:

Sample 1: Configuration items in the WebItemsLevel.cfg for navigation bar settings of the Features page:

```
[ Features ]  
features-forward = 0  
features-general = 0  
features-audio = 0  
features-intercom = 0  
features-transfer = 1  
features-callpickup = 0  
features-remote = 2  
features-phonelock = 0  
features-acd = 0  
features-sms = 2  
features-actionurl = 1  
features-bluetooth = 0  
features-poweredled = 2  
features-notifypop = 0
```

According to the above configuration of access level, when logging in the web user interface with user access level, the web user interface displays as below:

Forward [?](#)

- Forward Emergency: Disabled
- Forward Authorized Numbers:
- Mode: Phone Custom [?](#)
- Account:
- Always Forward:
 - Target:
 - On Code:
 - Off Code:
- Busy Forward:
 - Target:
 - On Code:
 - Off Code:
- No Answer Forward:
 - After Ring Time(0~120s): 12
 - Target:
 - On Code:
 - Off Code:

DND [?](#)

- DND Emergency: Disabled
- DND Authorized Numbers:
- Mode: Phone Custom [?](#)
- Account:
- DND Status:
 - On Off [?](#)
- DND On Code:
- DND Off Code:

NOTE

Call Forward
It allows users to redirect an incoming call to a third party.

Call Forward Mode
Phone: Call forward feature is effective for the IP phone.
Custom: Call forward feature can be configured for each or all accounts.

Do Not Disturb (DND)
It allows IP phones to ignore incoming calls.

DND Mode
Phone: DND feature is effective for the IP phone.
Custom: DND feature can be configured for each or all accounts.

[? You can click here to get more guides.](#)

When logging in the web user interface with var access level, the web user interface displays as below:

The screenshot shows the Yealink T46G web configuration interface. The top navigation bar includes links for Log Out, Status, Account, Network, DSSKey, Features (which is the active tab), Settings, Directory, and Security. The main content area is titled "Forward&DND".

Forward

- Forward Emergency: Disabled
- Forward Authorized Numbers: [Input Field]
- Mode: Phone (radio button selected)
- Account: [Input Field]
- Always Forward

 - Target: [Input Field]
 - On Code: [Input Field]
 - Off Code: [Input Field]
 - Busy Forward

 - Target: [Input Field]
 - On Code: [Input Field]
 - Off Code: [Input Field]

No Answer Forward

- After Ring Time(0~120s): 12
- Target: [Input Field]
- On Code: [Input Field]
- Off Code: [Input Field]

DND

- DND Emergency: Disabled
- DND Authorized Numbers: [Input Field]
- Mode: Phone (radio button selected)
- Account: [Input Field]
- DND Status

 - On: On (radio button selected)
 - Off: Off (radio button selected)

NOTE

Call Forward
It allows users to redirect an incoming call to a third party.

Call Forward Mode
Phone: Call forward feature is effective for the IP phone.
Custom: Call forward feature can be configured for each or all accounts.

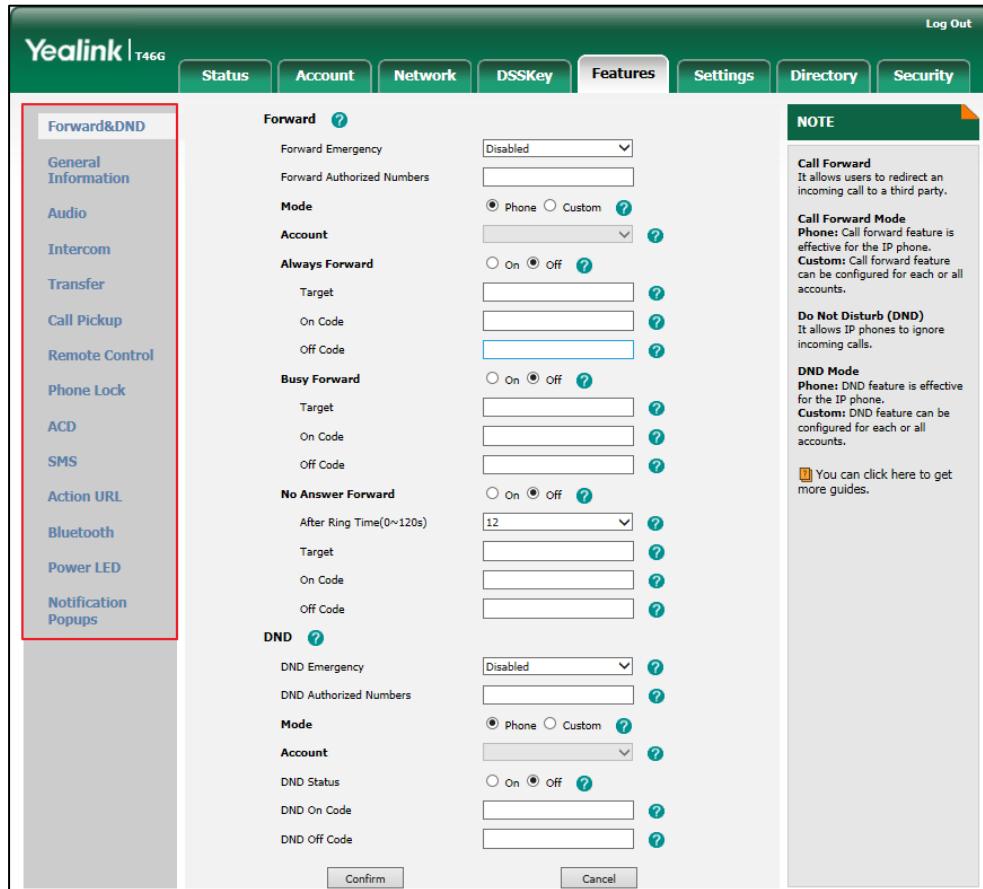
Do Not Disturb (DND)
It allows IP phones to ignore incoming calls.

DND Mode
Phone: DND feature is effective for the IP phone.
Custom: DND feature can be configured for each or all accounts.

Note: You can click here to get more guides.

Buttons at the bottom: Confirm and Cancel.

When logging in the web user interface with admin access level, the web user interface displays as below:

**NOTE**

Call Forward
It allows users to redirect an incoming call to a third party.

Call Forward Mode
Phone: Call forward feature is effective for the IP phone.
Custom: Call forward feature can be configured for each or all accounts.

Do Not Disturb (DND)
It allows IP phones to ignore incoming calls.

DND Mode
Phone: DND feature is effective for the IP phone.
Custom: DND feature can be configured for each or all accounts.

You can click here to get more guides.

Note: Configuration items for navigation bar are not writable on both web user interface and phone user interface. So, configuration items for navigation bar can be configured only using the format “**ItemName = X**”.

If the access permission of the first navigation configuration item for each main page is restricted, the access to the main web page will be denied.

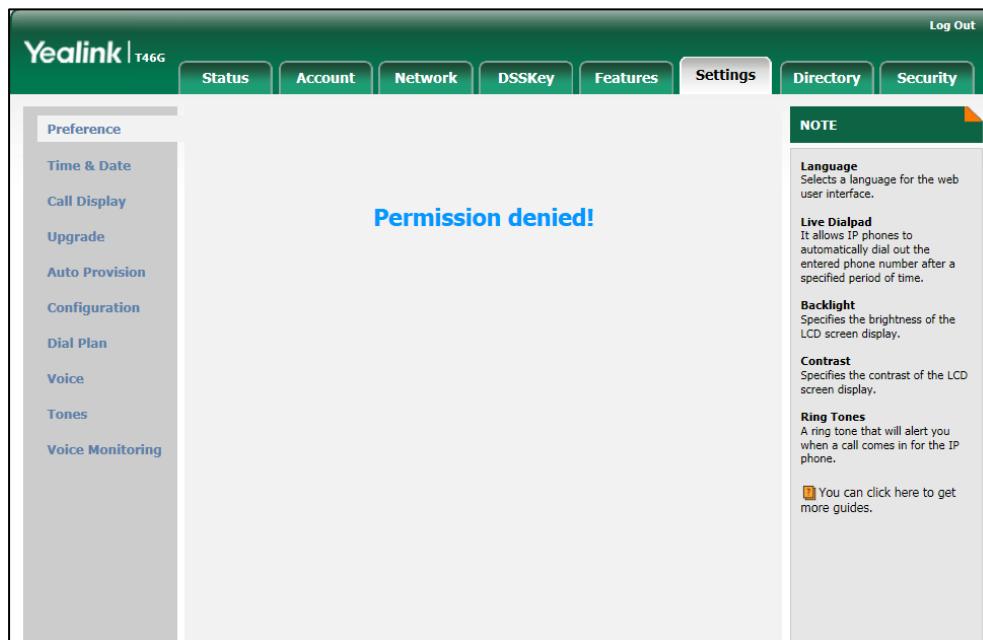
The following table lists the first navigation configuration items for each main page:

Main Page	First Navigation Item	Configuration Item
Account	Register	account-register
Network	Basic	network-basic
DSSKey	Line Key 1-11 (for SIP-T48G), Line Key 1-9 (for SIP-T46G/T29G), Line Key 1-7 (for SIP-T27P), Line Key 1-5 (for SIP-T42G/T41P), Line Key (for SIP-T23P/T23G), Line Key (for SIP-T21(P) E2), Programable key (for SIP-T19(P))	linekey

Main Page	First Navigation Item	Configuration Item
	E2)	
Features	Forward&DND	features-forward
Settings	Preference	settings-preference
Directory	Local Directory	contacts-basic
Security	Password	password

For example, set the value of the configuration item “settings-preference” to be 1.

When logging into with user access level, the access to the Settings web page will be denied.

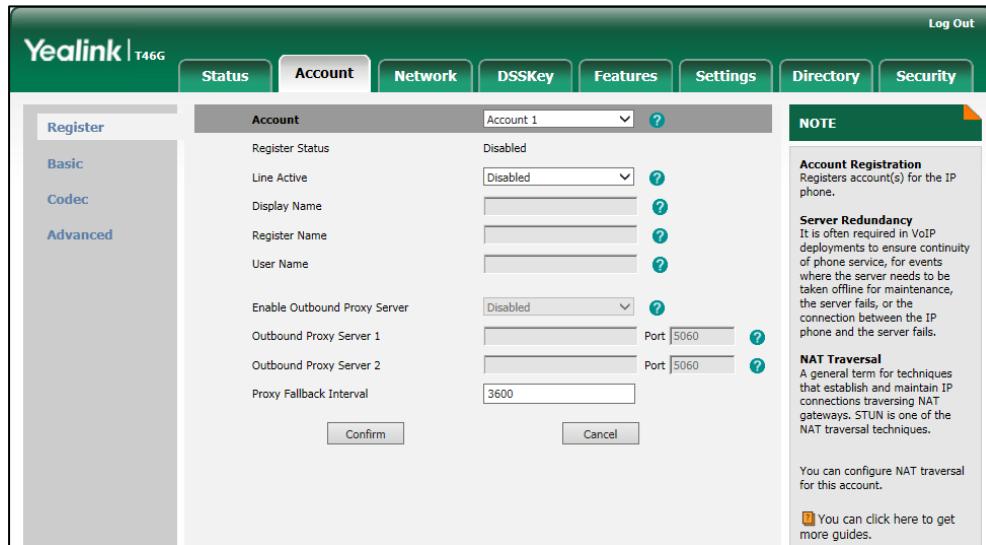


Sample2: Configuration items in the WebItemsLevel.cfg for the Register settings of Account page:

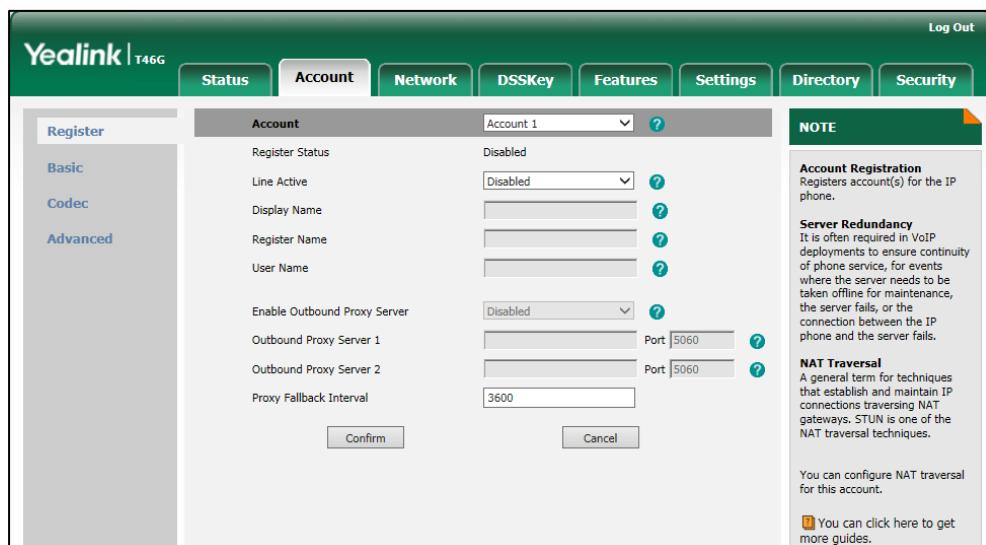
```
[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 11
display_name = 01
register_name = 03
user_name = 01
account_password = 12
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
backup-outbound-proxy-server = 01
transport-item = 11
NAT_traversal = 12
```

sip_server = 2

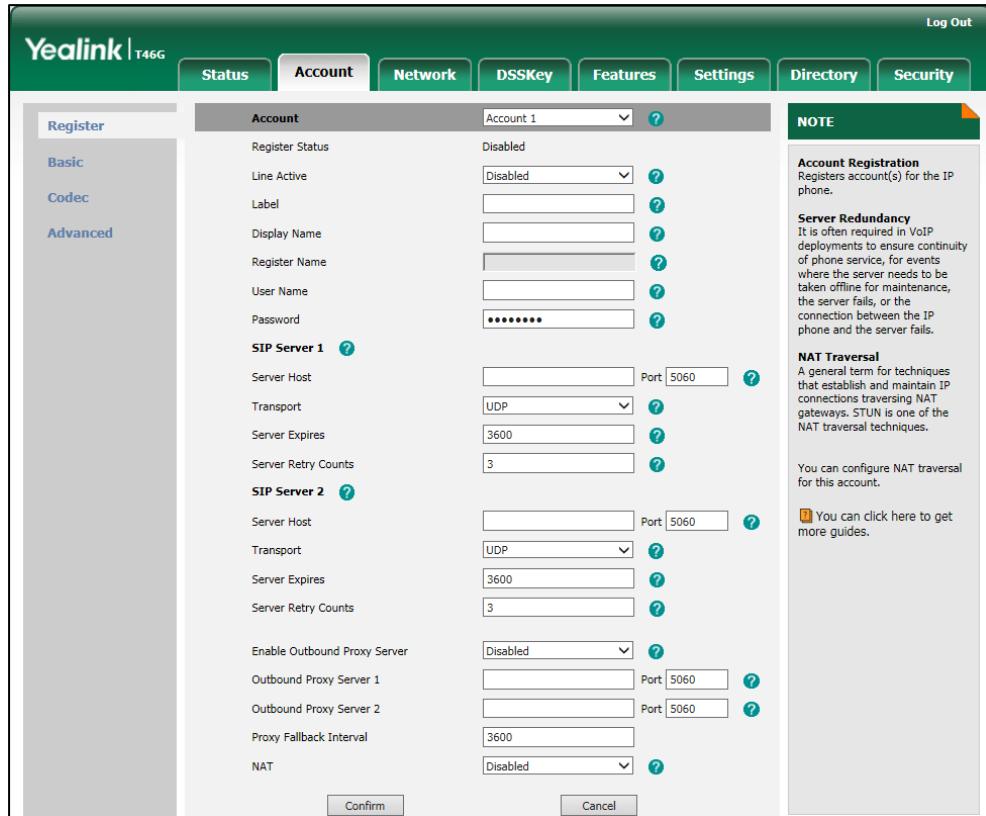
According to the above configuration of access level, when logging in the web user interface with user access level, the web user interface displays as below:



When logging in the web user interface with var access level, the web user interface displays as below:



When logging in the web user interface with admin access level, the web user interface displays as below:



For more information on parameters of the WebItemsLevel.cfg file, refer to [Appendix-A: Configuration Parameters](#) on page 20.

The following shows configuration segments for the phone user interface in the WebItemsLevel.cfg file for reference:

If you set the access permission of the high level, it will have an impact on that of the low level. In the following examples, the call forward menu has a higher level than always forward/busy forward/no answer forward submenu.

Example1: Configuration items in the WebItemsLevel.cfg for call forward menu and its submenu settings:

```
[ GUI ]
callcontrol_forward = 02
always-forward = 10
busy-forward = 00
NoAnswer-forward = 00
```

Note: The configuration of busy forward is the same as the one of the no answer forward, so the following figures take busy forward as an example.

According to the above configuration of access level, when logging in to the phone user interface with user access level, the access permission of each submenu is displayed as below:

Always forward submenu is hidden for user access level:



Busy forward/no answer forward submenu is read-only for user access level:



When logging in to the phone user interface with var access level, the access permission of each submenu is displayed as below:

Always forward submenu is read-only for var access level:



Busy forward/no answer forward submenu is read-only for var access level:



When logging in to the phone user interface with admin access level, the phone user interface displays as below:

Always forward submenu is writable for admin access level:



Busy forward/no answer forward submenu is writable for admin access level:



Example2: Configuration items in the WebItemsLevel.cfg for call forward menu and its submenu settings:

```
[ GUI ]
callcontrol_forward = 00
always-forward = 01
busy-forward = 02
NoAnswer-forward = 00
```

According to the above configuration of access level, when logging in to the phone user interface with user access level, the access permission of each submenu is displayed as below:

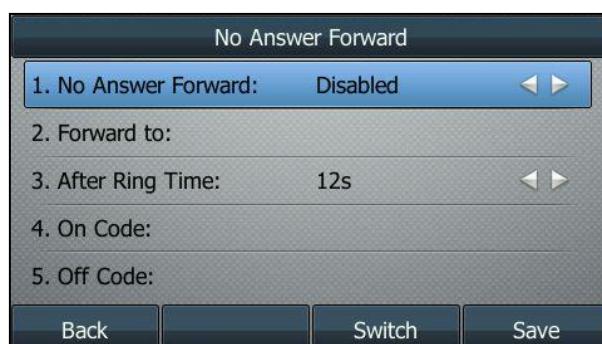
Always forward submenu is read-only for user access level:



Busy forward submenu is read-only for user access level:



No answer forward submenu is writable for user access level:



When logging in to the phone user interface with var access level, the access permission of each submenu is displayed as below:

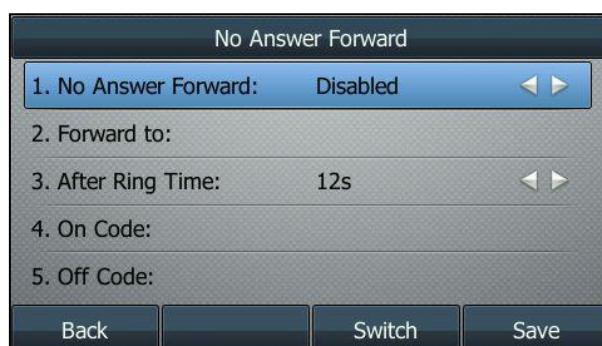
Always forward submenu is writable for var access level:



Busy forward submenu is read-only for var access level:



No answer forward submenu is writable for var access level:



When logging in to the phone user interface with admin access level, the phone user interface displays as below:

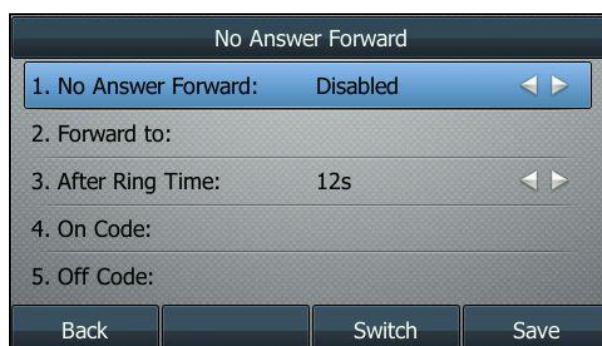
Always forward submenu is writable for admin access level:



Busy forward submenu is writable for admin access level:



No answer forward submenu is writable for admin access level:



For more information on parameters of the WebItemsLevel.cfg file, refer to [Appendix-A: Configuration Parameters](#) on page 20.

Configuring Yealink IP Phones

User access level feature is disabled for Yealink SIP-T48G/T46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2 IP phones in neutral firmware version by default. Before using this feature, you need to enable it through auto provisioning introduced as following. User access level feature is configurable only via configuration files.

To configure user access level feature for Yealink IP phones:

1. Edit the following parameters in the configuration file (e.g., y000000000028.cfg).

Parameters	Permitted Values	Default
security.var_enable	0 or 1	0
Description:		
This parameter is used to enable or disable the login of the web/phone user interface with different access levels.		
0-Disabled 1-Enabled		
Note: It takes effect after reboot.		
Web User Interface:		
None		
Phone User Interface:		
None		
security.default_access_level	0, 1 or 2	0
Description:		
This parameter is used to configure the default access level to access the phone user interface.		
0-user 1-var 2-admin		
Note: It works only if the value of the parameter "security.var_enable" is set to 1 (Enabled). It takes effect after reboot.		
Web User Interface:		
None		
Phone User Interface:		
None		
web_item_level.url	FTP, TFTP, HTTP or HTTPS download URL	Blank

Parameters	Permitted Values	Default
<p>Description: This parameter is used to configure the access URL of the WebItemsLevel.cfg file.</p> <p>Note: It takes effect after reboot.</p> <p>Web User Interface: None</p> <p>Phone User Interface: None</p>		

The parameter settings in the configuration file for reference are shown as below:

```
security.var_enable =1
web_item_level.url = ftp://192.168.1.100/download/WebItemslevel.cfg
security.default_access_level = 1
```

2. Upload the configuration file to the directory of the provisioning server.
3. Configure the access URL of the provisioning server for the IP phone.
4. Trigger the IP phone to perform auto provisioning.

For more information on auto provisioning Yealink IP phones, refer to [Yealink_SIP-T2 Series_T19\(P\) E2_T4 Series_IP_Phones_Auto_Provisioning_Guide](#).

When the user access level is enabled, you can login the web/phone user interface with different access levels.

To login the web user interface with different access levels:

1. Press the **OK/V** key when the phone is idle to obtain the IP address.
2. Enter the IP address (e.g., http://192.168.0.10 or 192.168.0.10) in the address bar of web browser on your PC and then press the **Enter** key.
3. Enter the user name (admin/var/user) and password (admin/var/user) in the login page.
4. Click **Confirm** to login.

When logging in with different access levels, you can see different permissions of web user interface.

To login the phone user interface with different access levels:

1. Press **Menu->UserMode**.
2. Press  or  , or the **Switch** soft key to select the desired access level in the **User Type** field.

3. Enter the password in the **Password** field.



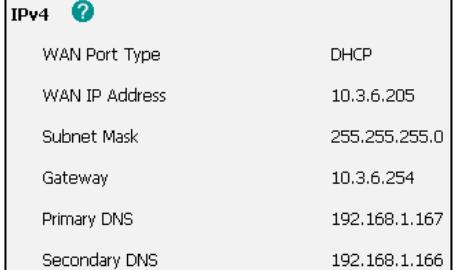
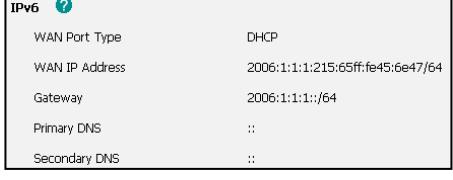
4. Press the **Save** soft key to accept the change.

You can see different permissions of phone user interface when logging in with different access levels.

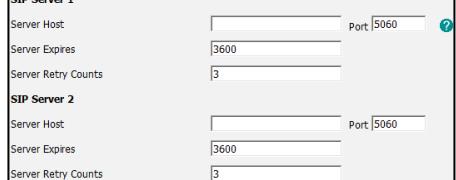
Appendix-A : Configuration Parameters

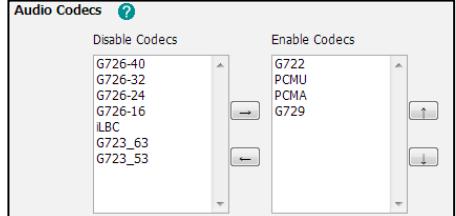
Configuration Parameters of Web User Interface

The following table lists configuration items in the WebItemslevel.cfg file with associated configurations on the web user interface (take SIP-T46G IP phones as an example for reference):

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Status-Menu]	Status-Basic = 0	Status->Status (the whole page)
	Status-RTP = 0	Status->RTP Status (the whole page)
[Status]	version = 0	Status->Version 
	network = 0	Status->Network 
	IPv4 = 0	Status->IPv4 
	IPv6 = 0	Status->IPv6 
	NetworkCommon = 0	Status->Network Common

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
		Network Common  MAC Address 001565456e47 Link Status Connected Device Type Bridge
	AccountStatus = 0	Status->Account Status Account Status  Account1 1010@10.2.1.199 : Registered Account2 Disabled Account3 Disabled Account4 Disabled Account5 Disabled Account6 Disabled
	Ext = 0 (only applicable to SIP-T48G/T46G/T29G/T27P IP phones)	Status->Ext For SIP-T29G and SIP-T27P: Ext  EXP38 1 Hardware Version 16.0.0.0 EXP38 1 Firmware Version 5.17.0.0
[Account]	account-register = 0	Account->Register (the whole page)
	account-basic = 0	Account->Basic (the whole page)
	account-codec = 0	Account->Codec (the whole page)
	account-adv = 0	Account->Advanced (the whole page)
[Account-Register]	switch-account = 0 (not applicable to SIP-T19(P) E2 IP phones)	Account->Register->Account
	account_status = 0	Account->Register->Register Status
	line_active = 0	Account->Register->Line Active

 
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	account_label = 0	Account->Register->Label
	display_name = 0	Account->Register->Display Name
	register_name = 01	Account->Register->Register Name
	user_name = 01	Account->Register->User Name
	account_password = 2	Account->Register->Password
	enabled-outbound-proxy-server = 01	Account->Register->Enable Outbound Proxy Server
	outbound-proxy-server1 = 01	Account->Register->Outbound Proxy Server 1
	backup-outbound-proxy-server = 01	Account->Register->Outbound Proxy Server 2
	proxy-fallback-interval = 01	Account->Register->Proxy Fallback Interval
	transport-item = 2	Account->Register->Transport
	NAT_traversal = 2	Account->Register->NAT
	sip_server = 2	Account->Register->SIP Server 1/2 
[Account-Basic]	switch-account = 0 (not applicable to SIP-T19(P) E2 IP phones)	Account->Basic->Account
	proxy_require = 0	Account->Basic->Proxy Require
	send_anonymous = 1	Account->Basic->Local Anonymous
	anonymous_rejection_enabled = 0	Account->Basic->Local Anonymous Rejection
	anonymous_call_enabled = 0 (for neutral firmware version only)	Account->Basic->Send Anonymous Code

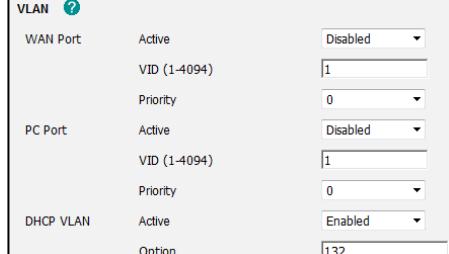
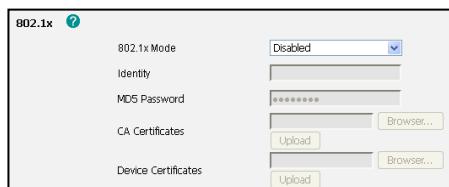
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Account-Basic]	anonymous_call_OnCode = 1 (for neutral firmware version only)	Account->Basic->On Code
	anonymous_call_OffCode = 1 (for neutral firmware version only)	Account->Basic->Off Code
	send_anonymous_rejection_code= 0 (for neutral firmware version only)	Account->Basic->Send Anonymous Rejection Code
	anonymous_rejection_OnCode = 1 (for neutral firmware version only)	Account->Basic->On Code
	anonymous_rejection_OffCode = 1 (for neutral firmware version only)	Account->Basic->Off Code
	misscall-log = 0	Account->Basic->Missed Call Log
	auto-answer = 0	Account->Basic->Auto Answer
	ring-type = 0	Account->Basic->Ring Type
	switch-account = 0 (not applicable to SIP-T19(P) E2 IP phones)	Account->Codec->Account
[Account-Codec]	codecs-group = 0	Account->Codec
		
[Account-Adv]	switch-account = 0 (not applicable to	Account->Advanced->Account

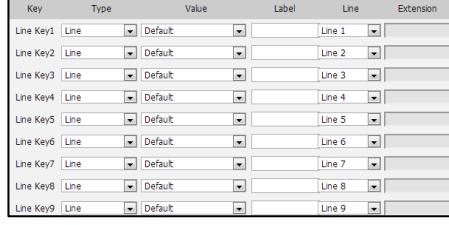
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	SIP-T19(P) E2 IP phones)	
	UDP_keep-alive = 2	Account->Advanced->Keep Alive Type Account->Advanced->Keep Alive Interval(Seconds)
	rport = 2	Account->Advanced->RPort
	subscribe-period = 2	Account->Advanced->Subscribe Period (Seconds)
	DTMF_items = 2	Account->Advanced->DTMF Type Account->Advanced->DTMF Info Type Account->Advanced->DTMF Payload Type(96~127)
	reliable_retransmission = 2	Account->Advanced->Retransmission
	subscribe-register = 2	Account->Advanced->Subscribe Register
	MWI-items = 2	Account->Advanced->Subscribe for MWI Account->Advanced->MWI Subscription Period(Seconds) Account->Advanced->Subscribe MWI To Voice Mail
	voice_mail = 0	Account->Advanced->Voice Mail
	voice_mail_display = 2	Account->Advanced->Voice Mail Display
	caller-ID-header = 2	Account->Advanced->Caller ID Source
	use-session-timer = 2	Account->Advanced-> Session Timer
	session-timer = 2	Account->Advanced->Session Expires(30~7200s)
	session-refresher = 2	Account->Advanced->Session Refresher

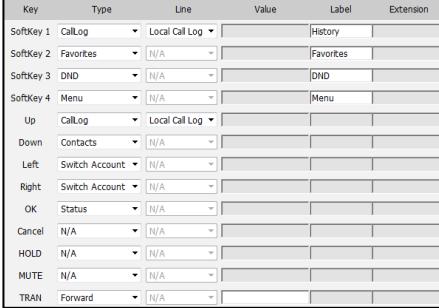
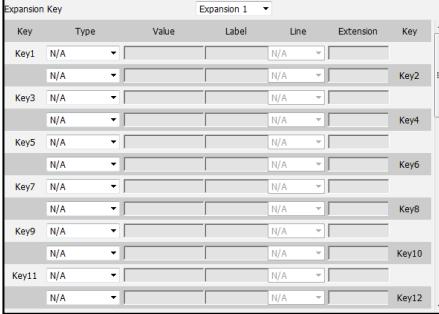
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	user-equal-phone = 2	Account->Advanced->Send user=phone
	voice-encryption = 2	Account->Advanced->RTP Encryption(SRTP)
	ptime-item = 2	Account->Advanced->PTime(ms)
	BLF-list-URI = 2 (not applicable to SIP-T19(P) E2 IP phones)	Account->Advanced->BLF List URI
	BlfListCode = 2 (not applicable to SIP-T19(P) E2 IP phones)	Account->Advanced->BLF List Pickup Code
	BlfListCode = 2 (not applicable to SIP-T19(P) E2 IP phones)	Account->Advanced->BLF List Pickup Code
	BLFListBargeInCode = 2 (not applicable to SIP-T19(P) E2 IP phones)	Account->Advanced->BLF List Barge In Code
	BLF-List-Retrieve-Code = 2 (not applicable to SIP-T19(P) E2 IP phones)	Account->Advanced->BLF List Retrieve Call Parked Code
	share-line = 2	Account->Advanced->Shared Line
	Call-Pull-Feature-Access-Code = 2	Account->Advanced->Call Pull Feature access code (only appear when the parameter "account.X.shared_line" is set to 1)
	dialog-info-call-pickup = 2 (not applicable to SIP-T19(P) E2 IP	Account->Advanced->Dialog Info Call Pickup

 
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	phones)	
	BLA-number = 2	Account->Advanced->BLA Number
	BLA-subscription-period = 2	Account->Advanced->BLA Subscription Period
	SIP-send-MAC = 2	Account->Advanced->SIP Send MAC
	SIP-send-line = 2	Account->Advanced->SIP Send Line
	SIP-Reg-retry-timer = 2	Account->Advanced->SIP Registration Retry Timer(0~1800s)
	conference-type = 2	Account->Advanced->Conference Type
	conference-uri = 2	Account->Advanced->Conference URI
	ACD-subscription-period = 2	Account->Advanced->ACD Subscription Period(120~3600s)
	Earlymedia = 2	Account->Advanced->Early Media
	SIPServerType = 2	Account->Advanced->SIP Server Type
	Music-ServerURI = 2	Account->Advanced->Music Server URI
	Direct-Call-Pickup-Code = 2	Account->Advanced->Directed Call Pickup Code
	Group-Call-Pickup-Code = 2	Account->Advanced->Group Call Pickup Code
	Distinctive-Ring-Tones = 2	Account->Advanced->Distinctive Ring Tones
	UnregisterOnReboot = 2	Account->Advanced->Unregister When Reboot
	Out-Dialog-BLF = 2 (not applicable to SIP-T19(P) E2 IP phones)	Account->Advanced->Out Dialog BLF
	RTCP-Collector-Name = 2	Account->Advanced->VQ RTCP-XR Collector name
	RTCP-Collector-Address	Account->Advanced->VQ RTCP-XR

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	ss = 2	Collector address
	RTCP-Collector-Port = 2	Account->Advanced->VQ RTCP-XR Collector port
	Number-Of-Linekey = 1 (not applicable to SIP-T19(P) E2 IP phones)	Account->Advanced->Number of line key (only appear when the parameter "features.auto_linekeys.enable" is set to 1)
[Network]	network-basic = 0	Network->Basic (the whole page)
	network-pcport = 0	Network->PC Port (the whole page)
	network-advanced = 0	Network->Advanced (the whole page)
	shotlevel = 0	
[Network-Basic]	ipaddress-mode = 2	Network->Basic->Internet Port->Mode(IPv4/IPv6)
	ipv4config = 2	Network->Basic-> IPv4 Config
	ipv6config = 2	Network->Basic-> IPv6 Config
	wan-ppoe = 0 (not applicable to SIP-T42G/T41P IP phones)	Network->Basic->PPPoE Network->Basic->PPPoE User Name Network->Basic->PPPoE Password
[Network-PCPort]	pcport-active = 0	Network->PC Port->Active 
[Network-Advanced]	LLDP-items = 2	Network->Advanced->LLDP 
	CDP-items = 2	Network->Advanced->CDP 
	VLAN-items = 2	Network->Advanced->VLAN

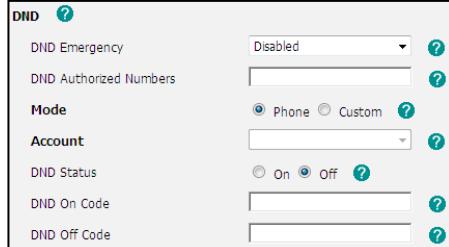
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface																								
		 <p>VLAN</p> <table border="1"> <tr><td>WAN Port</td><td>Active</td><td>Disabled</td></tr> <tr><td></td><td>VID (1~4094)</td><td>1</td></tr> <tr><td></td><td>Priority</td><td>0</td></tr> <tr><td>PC Port</td><td>Active</td><td>Disabled</td></tr> <tr><td></td><td>VID (1~4094)</td><td>1</td></tr> <tr><td></td><td>Priority</td><td>0</td></tr> <tr><td>DHCP VLAN</td><td>Active</td><td>Enabled</td></tr> <tr><td></td><td>Option</td><td>132</td></tr> </table>	WAN Port	Active	Disabled		VID (1~4094)	1		Priority	0	PC Port	Active	Disabled		VID (1~4094)	1		Priority	0	DHCP VLAN	Active	Enabled		Option	132
WAN Port	Active	Disabled																								
	VID (1~4094)	1																								
	Priority	0																								
PC Port	Active	Disabled																								
	VID (1~4094)	1																								
	Priority	0																								
DHCP VLAN	Active	Enabled																								
	Option	132																								
NAT-items = 2		<p>Network->Advanced->NAT</p>  <p>NAT</p> <table border="1"> <tr><td>Active</td><td>Disabled</td></tr> <tr><td>STUN Server</td><td></td></tr> <tr><td>STUN Port(1024~65000)</td><td>3478</td></tr> </table>	Active	Disabled	STUN Server		STUN Port(1024~65000)	3478																		
Active	Disabled																									
STUN Server																										
STUN Port(1024~65000)	3478																									
port-link = 2		<p>Network->Advanced->Port Link</p>  <p>Port Link</p> <table border="1"> <tr><td>WAN Port Link</td><td>Auto Negotiate</td></tr> <tr><td>PC Port Link</td><td>Auto Negotiate</td></tr> </table>	WAN Port Link	Auto Negotiate	PC Port Link	Auto Negotiate																				
WAN Port Link	Auto Negotiate																									
PC Port Link	Auto Negotiate																									
voice-QoS = 2		<p>Network->Advanced->Voice QoS</p>  <p>Voice QoS</p> <table border="1"> <tr><td>Voice QoS (0~63)</td><td>46</td></tr> <tr><td>SIP Qos (0~63)</td><td>26</td></tr> </table>	Voice QoS (0~63)	46	SIP Qos (0~63)	26																				
Voice QoS (0~63)	46																									
SIP Qos (0~63)	26																									
local-RTP-port = 2		<p>Network->Advanced->Local RTP Port</p>  <p>Local RTP Port</p> <table border="1"> <tr><td>Max RTP Port (1~65535)</td><td>11800</td></tr> <tr><td>Min RTP Port (1~65535)</td><td>11780</td></tr> </table>	Max RTP Port (1~65535)	11800	Min RTP Port (1~65535)	11780																				
Max RTP Port (1~65535)	11800																									
Min RTP Port (1~65535)	11780																									
web-server = 2		<p>Network->Advanced->Web Server</p>  <p>Web Server</p> <table border="1"> <tr><td>HTTP</td><td>Enable</td></tr> <tr><td>HTTP Port (1~65535)</td><td>80</td></tr> <tr><td>HTTPS</td><td>Enable</td></tr> <tr><td>HTTPS Port (1~65535)</td><td>443</td></tr> </table>	HTTP	Enable	HTTP Port (1~65535)	80	HTTPS	Enable	HTTPS Port (1~65535)	443																
HTTP	Enable																									
HTTP Port (1~65535)	80																									
HTTPS	Enable																									
HTTPS Port (1~65535)	443																									
8021x = 2		<p>Network->Advanced->802.1x</p>  <p>802.1x</p> <table border="1"> <tr><td>802.1x Mode</td><td>Disabled</td></tr> <tr><td>Identity</td><td></td></tr> <tr><td>MDS Password</td><td>*****</td></tr> <tr><td>CA Certificates</td><td>Upload</td></tr> <tr><td>Device Certificates</td><td>Upload</td></tr> </table>	802.1x Mode	Disabled	Identity		MDS Password	*****	CA Certificates	Upload	Device Certificates	Upload														
802.1x Mode	Disabled																									
Identity																										
MDS Password	*****																									
CA Certificates	Upload																									
Device Certificates	Upload																									
span-to-pc-port = 2		<p>Network->Advanced->Span to PC</p>																								
reg-surge-prev = 2		<p>Network->Advanced->Registration Random</p>																								
ICMPv6_Status = 2		<p>Network->Advanced->ICMPv6 Status</p>																								

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	(only applicable to SIP-T48G/T46G/T29G IP phones)	
	open-VPN = 2 (not applicable to SIP-T19(P) E2 IP phones)	Network->Advanced->VPN 
[DSSKey]	linekey = 0 (not applicable to SIP-T19(P) E2 IP phones)	DSSKey->Line Key (the whole page)
	programmablekey = 0	DSSKey->Programable Key (the whole page)
	extkey = 0 (only applicable to SIP-T48G/T46G/T29G/T27P IP phones)	DSSKey->Ext Key (the whole page)
[LineKey] (not applicable to SIP-T19(P) E2 IP phones)	line-key = 0	DSSKey->Line Key 
	Enable-Page-Tips = 0 (only applicable to SIP-SIP-T46G/T29G/T42G/T41P/T27P IP phones)	DSSKey->Line Key->Enable Page Tips
	Label-Length = 0 (only applicable to SIP-T48G/T46G/T29G IP phones)	DSSKey->Line Key->Label Length
[ProgramKey]	programmable-key = 0	DSSKey->Programable Key

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
		
[ExtKey] (only applicable to SIP-T48G/T46G/T29G/T27P IP phones)	ext-key = 0	DSSKey->Ext Key 
[Features]	features-forward = 0	Features->Forward & DND (the whole page)
	features-general = 0	Features->General Information (the whole page)
	features-audio = 0	Features->Audio (the whole page)
	features-intercom = 0	Features->Intercom (the whole page)
	features-transfer = 0	Features->Transfer (the whole page)
	features-callpickup = 0	Features->Call Pickup (the whole page)
	features-remote = 0	Features->Remote Control (the whole page)
	features-phonelock = 0	Features->Phone Lock (the whole page)
	features-acd = 0	Features->ACD (the whole page)
	features-sms = 0	Features->SMS (the whole page)
	features-actionurl = 0	Features->Action URL (the whole page)
	features-bluetooth = 0	Features->Bluetooth (the whole page)

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Forward&DND]	(only applicable to SIP-T48G/T46G/T29G IP phones)	
	features-poweredled = 0	Features->Power LED (the whole page)
	features-notifypop = 0	Features->Notification Popups (the whole page)
	head-forward = 0	Features->Forward & DND->  Forward
	forward-emergency = 0	Features-> Forward & DND->Forward ->Forward Emergency
	forward-authorized-numbers = 0	Features-> Forward & DND->Forward ->Forward Authorized Numbers
	forward-mode = 0 (not applicable to SIP-T19(P) E2 IP phones)	Features->Forward & DND->Forward->Mode
	forward-account = 0 (not applicable to SIP-T19(P) E2 IP phones)	Features->Forward & DND->Forward->Account
	always-forward = 0	Features->Forward & DND->Always Forward 
	always-forward-enabled = 0	Features->Forward & DND->Always Forward On/Off
	always-forward-target = 0	Features->Forward & DND->Target
	always-forward-OnCode = 0 (for neutral firmware version only)	Features->Forward & DND->On Code
	always-forward-OffCode = 0	Features->Forward & DND->Off Code

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	(for neutral firmware version only)	
	busy-forward = 0	Features->Forward & DND->Busy Forward
	busy-forward-enable d = 0	Features->Forward & DND->Busy Forward On/Off
	busy-forward-target = 0	Features->Forward & DND->Target
	busy-forward-OnCode e = 0 (for neutral firmware version only)	Features->Forward & DND->On Code
	busy-forward-OffCode e = 0 (for neutral firmware version only)	Features->Forward & DND->Off Code
	NoAnswer-forward = 0	Features->Forward & DND->No Answer Forward
	NoAnswer-forward-enabled = 0	Features->Forward & DND->No Answer Forward On/Off
	NoAnswer-forward-ringtimes = 0	Features->Forward & DND->After Ring Time(0~120s)
	NoAnswer-forward-target = 0	Features->Forward & DND->Target
	NoAnswer-forward-OnCode = 0 (for neutral firmware version only)	Features->Forward & DND->On Code

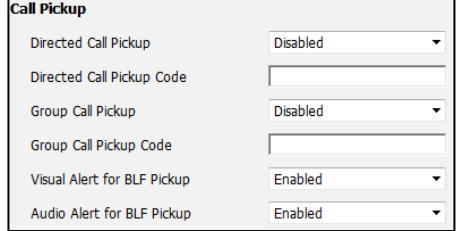
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	NoAnswer-forward-OffCode = 0 (for neutral firmware version only)	Features->Forward & DND->Off Code
DND = 0		Features->Forward & DND->DND 
DND-Emergency = 0		Features->Forward & DND->DND Emergency
DND-Authorized-Numbers = 0		Features->Forward & DND->DND Authorized Numbers
DND-mode = 01 (not applicable to SIP-T19(P) E2 IP phones)		Features->Forward & DND->DND->Mode
DND-account = 01 (not applicable to SIP-T19(P) E2 IP phones)		Features->Forward & DND->DND->Account
DND>Status = 01		Features->Forward & DND->DND Status
DND-OnCode = 01 (for neutral firmware version only)		Features->Forward & DND->DND On Code
DND-OffCode = 01 (for neutral firmware version only)		Features->Forward & DND->DND Off Code

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[General-Information]	call_waiting = 0	Features->General Information->Call Waiting Features->General Information->Call Waiting On Code Features->General Information->Call Waiting Off Code
	auto-redial = 0	Features->General Information->Auto Redial
	auto_redial_interval = 0	Features->General Information->Auto Redial Interval(1~300s)
	auto_redial_times = 0	Features->General Information->Auto Redial Times (1~300)
	key_as_send = 0	Features->General Information->Key As Send
	reserve-pound = 2	Features->General Information->Reserve # in User Name
	hotline-number = 0	Features->General Information->Hotline Number
	hotline-delay = 0	Features->General Information->Hotline Delay(0~10s)
	busytone_delay = 0	Features->General Information->Busy Tone Delay (Seconds)
	return-code-refuse = 0	Features->General Information->Return Code When Refuse
	return-code-DND = 0	Features->General Information->Return Code When DND
	call_completion = 0	Features->General Information->Call Completion
	feature-key-synchronization = 0	Features->General Information->Feature Key Synchronization
	TimeOut-for-DialNow = 0	Features->General Information->Time-Out for Dial-Now Rule
	RFC-2543-Hold = 2	Features->General Information->RFC 2543 Hold

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	use-outbound-in-dialog = 2	Features->General Information->Use Outbound Proxy In Dialog
	IsDeal-180 = 2	Features->General Information->180 Ring Workaround
	logon-wizard = 2	Features->General Information->Logon Wizard
	PswPrefix = 2	Features->General Information->PswPrefix
	PswLength = 2	Features->General Information->PswLength
	PswDial = 2	Features->General Information->PswDial
	SaveCallHistory = 2	Features->General Information->Save Call Log
	SuppressDTMFDisplay = 1	Features->General Information->Suppress DTMF Display
	SuppressDTMFDisplayDelay = 1	Features->General Information->Suppress DTMF Display Delay
	play-local-DTMF-tone = 0	Features->General Information->Play Local DTMF Tone
	DTMFRepetition = 0	Features->General Information->DTMF Repetition
	MulticastCodec = 0 (not applicable to SIP-T19(P) E2 IP phones)	Features->General Information->Multicast Codec
	PlayHoldTone = 0	Features->General Information->Play Hold Tone
	PlayHoldToneDelay = 0	Features->General Information->Play Hold Tone Delay
	AllowMute = 0	Features->General Information->Allow Mute
	DualHeadset = 1	Features->General Information->Dual-Headset

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	AutoAnswerDelay = 0	Features->General Information->Auto-Answer Delay(1~4s)
	enable-auto-answer-tone = 0	Features->General Information->Enable auto answer tone
	HeadsetPrior = 0	Features->General Information->Headset Prior
	DTMFReplaceTran = 0	Features->General Information->DTMF Replace Tran
	TranSendDTMF = 1	Features->General Information->Tran Send DTMF
	SendPoundKey = 0	Features->General Information->Send Pound Key
	FwdInternational = 0	Features->General Information->Fwd International
	Diversion-History-Info = 1	Features->General Information->Diversion/History-Info
	allow-trans-exist-call = 0 (not applicable to SIP-T48G/T46G/T29G IP phones)	Features->General Information->Allow Trans Exist Call
	blf-led-mode = 2 (not applicable to SIP-T19(P) E2 IP phones)	Features->General Information->BLF LED Mode
	ReLogOffTime = 2	Features->General Information->Auto-Logout Time(1~1000min)
	call-number-filter = 0	Features->General Information->Call Number Filter
	Use_Logo = 0 (not applicable to SIP-T48G/T46G/T29G IP phones)	Features->General Information->Use Logo
	upload_logo = 0	Features->General

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	(not applicable to SIP-T48G/T46G/T29G IP phones)	Information->Upload Logo
	sip-trust-control = 2	Features->General Information->Accept SIP Trust Server Only
	allow-IP-call = 0	Features->General Information->Allow IP Call
	IP-direct-auto-answer = 0	Features->General Information-> IP Direct Auto Answer
	calllog-show-num = 0	Features->General Information->Call List Show Number
	voicemail-tone = 0	Features->General Information->Voice Mail Tone
	DHCP-hostname = 0	Features->General Information-> DHCP Hostname
	reboot-in-talking = 0	Features->General Information->Reboot In Talking
	Hide-Feature-Access-Codes = 0	Features->General Information-> Hide Feature Access Codes
	display-method-on-dialing = 2	Features->General Information-> Display Method on Dialing
[Features-Audio]	auto-linekeys = 1 (not applicable to SIP-T19(P) E2 IP phones)	Features->General Information->Auto Linekeys
	call-waiting-tone = 0	Features->Audio->Call Waiting Tone
	button-sound = 0	Features->Audio->Key Tone
	redial_tone = 0	Features->Audio->Redial Tone
	send-sound = 0	Features->Audio->Send Sound
[Features-Intercom]	Ringer_Dev = 0	Features->Audio->Ringer Device for Headset
	allow-intercom = 0	Features->Intercom->Accept Intercom

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	intercom-mute = 0	Features->Intercom->Intercom Mute
	intercom-tone = 0	Features->Intercom->Warning Tone
	intercom-barge = 0	Features->Intercom->Intercom Barge
[Features-Transfer]	semi-attend-transfer = 0	Features->Transfer->Semi-Attend Transfer
	Semi-Attend-Trans-OnHook = 0	Features->Transfer->Semi Attend Transfer On Hook
	blind-tran-onhook = 0	Features->Transfer->Blind Transfer On Hook
	transfer-on-conference-hang-up = 0 (not applicable to SIP-T19(P) E2 IP phones)	Features->Transfer->Transfer on Conference Hang up
	TransferModeViaDsskey = 0	Features->Transfer->Transfer Mode Via Dsskey
[Features-Callpickup]	Call-Pickup = 0	Features->Call Pickup->Call Pickup 
[Features-Remote]	pushxml-server-addr = 2	Features->Remote Control->Push XML Server IP Address
	XMLSIPNotify = 2	Features->Remote Control->SIP Notify
	XMLBlockInCalling = 1	Features->Remote Control->Block XML in Calling
	ActionURILimitIP = 2	Features->Remote Control->Action URI allow IP List
[Features-Lock]	Lock_Enable = 2	Features->Phone Lock->Phone Lock Enable
	keyboard_lock = 2 (not applicable to SIP-T48G IP phones)	Features->Phone Lock->Phone Lock Type

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Features-ACD]	Phone_Unlock_PIN = 2	Features->Phone Lock->Phone Unlock PIN(0~15 Digit)
	Phone_lock_time_out = 2	Features->Phone Lock->Phone Lock Time Out(0~3600s)
	emergency_setting = 2	Features->Phone Lock->Emergency
[Features-Action URL]	ACD-auto-available = 2	Features->ACD->ACD Auto Available
	ACD-auto-available-timer = 2	Features->ACD->ACD Auto Available Timer(0~120s)
[Features-Action URL]	setup-complete = 2	Features->Action URL->Setup Completed
	log-on = 2	Features->Action URL->Registered
	log-off = 2	Features->Action URL->Unregistered
	register-fail = 2	Features->Action URL->Register Failed
	off-hook = 2	Features->Action URL->Off Hook
	on-hook = 2	Features->Action URL->On Hook
	incoming-call = 2	Features->Action URL->Incoming Call
	outgoing-call = 2	Features->Action URL->Outgoing Call
	call-establish = 2	Features->Action URL->Established
	Call-Terminated = 2	Features->Action URL->Terminated
	DND-On = 2	Features->Action URL->Open DND
	DND-Off = 2	Features->Action URL->Close DND
	Forward-On-Code = 2	Features->Action URL->Open Always Forward
	Forward-Off-Code = 2	Features->Action URL->Close Always Forward
	Busy-Forward-On = 2	Features->Action URL->Open Busy Forward
	Busy-Forward-Off = 2	Features->Action URL->Close Busy Forward
	No-Answer-Forward-	Features->Action URL->Open No

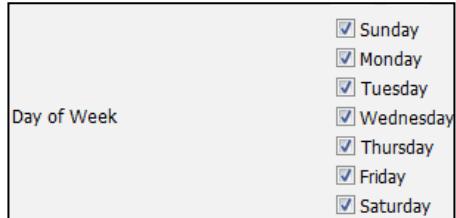
 
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	On = 2	Answer Forward
	No-Answer-Forward-Off = 2	Features->Action URL->Close No Answer Forward
	TransferCall = 2	Features->Action URL->Transfer Call
	Blind-transfer-call = 2	Features->Action URL->Blind Transfer
	Attended-transfer-call = 2	Features->Action URL->Attended Transfer
	Hold = 2	Features->Action URL->Hold
	Unhold = 2	Features->Action URL->UnHold
	Mute = 2	Features->Action URL->Mute
	Unmute = 2	Features->Action URL->UnMute
	Missed-call = 2	Features->Action URL->Missed Call
	IPChange = 2	Features->Action URL->IP Changed
	IdleToBusy = 2	Features->Action URL->Idle To Busy
	Busytoldle = 2	Features->Action URL->Busy To Idle
	RejectIncomingCall = 2	Features->Action URL->Reject Incoming Call
	AnswerNewInCall = 2	Features->Action URL->Answer New-in Call
	TransferFailed = 2	Features->Action URL->Transfer Failed
	TransferFinished = 2	Features->Action URL->Transfer Finished
	ForwardIncomingCall = 2	Features->Action URL->Forward Incoming Call
	UCServer = 2	Features->Action URL->UCServer (only appear when the parameter "action_url.is_ume" is set to 1)
	ReportIP = 2	Features->Action URL-> Report IP (only appear when the parameter "action_url.is_ume" is set to 1)
	AutopFinish = 2	Features->Action URL->Autop Finish

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Features-Call]	OpenCallWait = 2	Features->Action URL->Open Call Waiting
	CloseCallWait = 2	Features->Action URL->Close Call Waiting
	Headset = 2	Features->Action URL->Headset
	Handfree = 2	Features->Action URL->Handfree
	CancelCallOut = 2	Features->Action URL->Cancel Call Out
	RemoteBusy = 2	Features->Action URL->Remote Busy
	CallRemoteCanceled = 2	Features->Action URL->Call Remote Canceled
[Features-Bluetooth]	bluetooth-active = 0 (only applicable to SIP-T48G/T46G/T29G IP phones)	Features->Bluetooth->Bluetooth Active
[Features-Power LED]	common-power-light-on = 0	Features->Power LED->Common Power Light On
	ring-power-light-flash = 0	Features->Power LED->Ring Power Light Flash
	mail-power-light-flash = 0	Features->Power LED->Voice/Text Mail Power Light Flash
	mute-power-light-flash = 0	Features->Power LED->Mute Power Light Flash
	hold-power-light-flash = 0	Features->Power LED->Hold/Held Power Light Flash
	talk-power-light-flash = 0	Features->Power LED->Talk/Dial Power Light On
[Features-Notify Pop]	Display-Voice-Mail-Popup = 0	Features-> Notification Popups->Display Voice Mail Popup
	Display-Missed-Call-Popup = 0	Features-> Notification Popups->Display Missed Call Popup
	Display-Forward-Call-Popup = 0	Features-> Notification Popups->Display Forward Call Popup
	Display-Text-Messag	Features-> Notification Popups->

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	e-Popup = 0	Display Text Message Popup
[Settings]	settings-preference = 0	Settings->Preference (the whole page)
	settings-datetime = 0	Settings->Time & Date (the whole page)
	settings-calldisplay = 0	Settings->Call Display (the whole page)
	settings-upgrade = 0	Settings->Upgrade (the whole page)
	settings-autop = 0	Settings->Auto Provision (the whole page)
	settings-config = 0	Settings->Configuration (the whole page)
	settings-dialplan = 0	Settings->Dial Plan (the whole page)
	settings-voice = 0	Settings->Voice (the whole page)
	settings-ring = 1	Settings->Ring (the whole page)
	settings-tones = 0	Settings->Tones (the whole page)
	settings-softkey = 2	Settings->Softkey Layout (the whole page)
[Settings-Preference]	settings-tr069 = 2	Settings->TR069 (the whole page)
	settings-voicemonitoring = 2	Settings->Voice Monitoring (the whole page)
	settings-sip = 1	Settings->SIP (the whole page)
	web-language = 0	Settings->Preference->Language
	live-dialpad = 0	Settings->Preference->Live Dialpad
[Settings-Preference]	inter-digit-time = 0	Settings->Preference->Inter Digit Time(1~14s)
	UnusedBackLight = 0 (only applicable to SIP-T48G/T46G/T29G IP phones)	Settings->Preference->Backlight Inactive Level
	backlight = 0 (only applicable to SIP-T48G/T46G/T29G/T)	Settings->Preference->Backlight Active Level

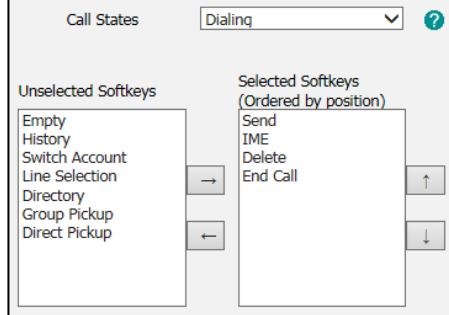
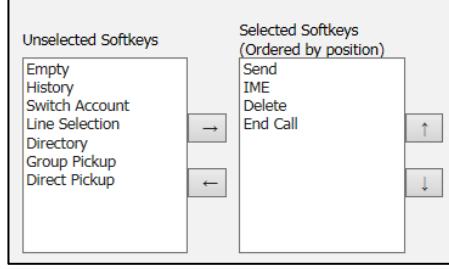
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Time&Date]	27P IP phones)	
	BacklightTime = 0 (not applicable to SIP-T19(P) E2)	Settings->Preference->Backlight Time
	contrast_ctrl = 0 (only applicable to SIP-T27P/T23P/T23G/T21(P) E2/T19(P) E2 IP phones)	Settings->Preference->Contrast
	watchdog = 2	Settings->Preference->Watch Dog
	ring_type_setting = 0	Settings->Preference->Ring Type Settings->Preference->Upload Ringtone
	Wallpaper = 0 (only applicable to SIP-T48G/T46G/T29G IP phones)	Settings->Preference->Wallpaper Settings->Preference->Upload Wallpaper (480*272)
	DHCP-Time = 0	Settings->Time & Date->DHCP Time
	time_zone = 0	Settings->Time & Date->Time Zone
	daylight-time = 0	Settings->Time & Date->Daylight Saving Time
	location = 0	Settings->Time & Date->Location
[Time&Date]	time_type = 0	Settings->Time & Date->Fixed Type
	daylight_date = 0	Settings->Time & Date->Start Date Settings->Time & Date->End Date
	NTP_priority = 0	Settings->Time & Date->NTP By DHCP Priority
	prim_server = 0	Settings->Time & Date->Primary Server
	sec_server = 0	Settings->Time & Date->Secondary Server
	update_interval = 0	Settings->Time & Date->Synchronism(15~86400s)
	offset = 0	Settings->Time &

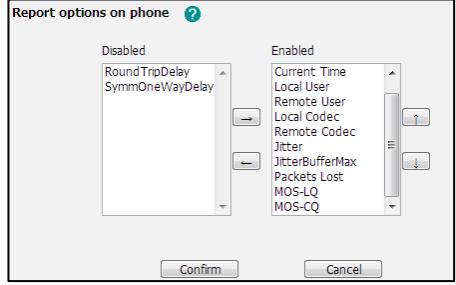
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-Time]		Date->Offset(minutes)
	manual-time = 0	Settings->Time & Date->Manual Time 
	manual-time-settings = 0	Settings->Time & Date->Manual Time 
	time_format_setting = 0	Settings->Time & Date->Time Format
	date_format_setting = 0	Settings->Time & Date->Date Format
[Settings-CallDisplay]	Display-Contact-Photo = 0 (only applicable to SIP-T48G/T46G/T29G IP phones)	Settings->Call Display->Display Contact Photo
	Incoming-Call-Ringer-Animation = 0	Settings->Call Display->Display Called Party Information
	Call-Display-Method = 0	Settings-> Call Display->Call Information Display Method
[Settings-Upgrade]	version_info = 0	Settings->Upgrade->Version 
	reset_to_factory = 1	Settings->Upgrade->Reset to Factory Setting
	reset_local_config = 0	Settings->Upgrade->Reset Local Configuration
	reboot_device = 0	Settings->Upgrade->Reboot
	upgrade_firmware = 1	Settings->Upgrade->Select and Upgrade Firmware
[Settings-AutoProvision]	pnp-active = 2	Settings->Auto Provision->PNP Active
	dhcp-active = 2	Settings->Auto Provision->DHCP Active
	custom-option = 2	Settings->Auto Provision->Custom Option(128~254)

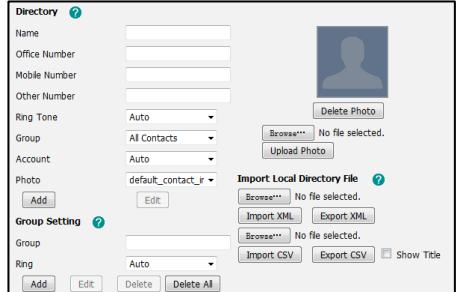
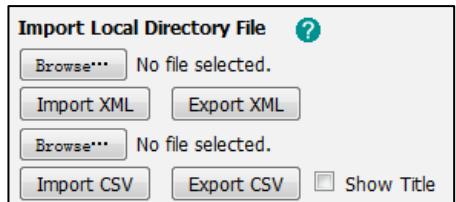
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	DHCP-Option-Value = 2	Settings->Auto Provision->DHCP Option Value
	server-URL = 2	Settings->Auto Provision->Server URL
	account = 2	Settings->Auto Provision->User Name
	password = 2	Settings->Auto Provision->Password
	attempt-expired-time = 2	Settings->Auto Provision->Attempt Expired Time(s)
	common-AES-key = 2	Settings->Auto Provision->Common AES Key
	MAC-Oriented-AES-key = 2	Settings->Auto Provision->MAC-Oriented AES Key
	zero_active = 2	Settings->Auto Provision->Zero Active
	wait_time = 2	Settings->Auto Provision->Wait Time(0~100s)
	poweron-active = 2	Settings->Auto Provision->Power On
	repeatedly-active = 2	Settings->Auto Provision->Repeatedly
	repeat-interval = 2	Settings->Auto Provision->Interval (Minutes)
	weekly-active = 2	Settings->Auto Provision->Weekly
	autop-time = 2	Settings->Auto Provision->Time
	day-of-week = 2	Settings->Auto Provision->Day of Week 
	btn-autop-now = 2	Settings->Auto Provision-> 
[Settings-Config]	opt-configfile = 1	Settings->Configuration->Export or Import Configuration

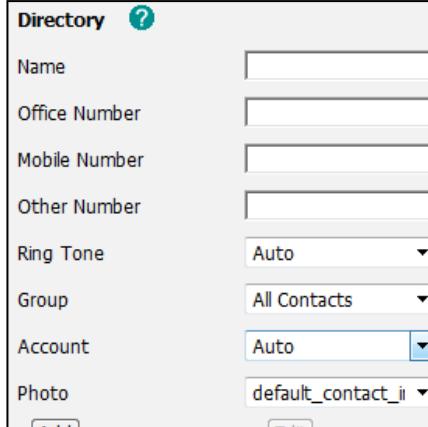
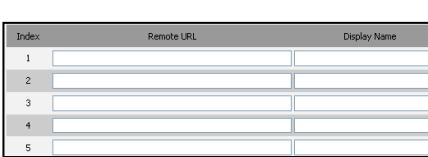
 
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
		
	opt-factory-configfile = 2	Settings->Configuration->Import Factory Configuration
	export-cfg-config-file = 2	Settings->Configuration->Export CFG Configuration File
	import-cfg-config-file = 2	Settings->Configuration->Import CFG Configuration File
	pcap_trace = 1	Settings->Configuration->Pcap Feature
	syslog = 1	Settings->Configuration->Export System Log
	SystemLogLevel = 2	Settings->Configuration->System Log Level
[Settings-DialPlan]	replace-rule = 0	Settings->Dial Plan->Replace Rule (the whole page)
	dial-now = 0	Settings->Dial Plan->Dial-now (the whole page)
	area-code = 0	Settings->Dial Plan->Area Code (the whole page)
	block-out = 0	Settings->Dial Plan->Block Out (the whole page)
	replace-rule-control = 0	Settings->Dial Plan->Replace Rule->Prefix Settings->Dial Plan->Replace Rule->Replace Settings->Dial Plan->Replace Rule->Account (not applicable to SIP-T19(P) E2 IP phones)
	dial-now-control = 0	Settings->Dial Plan->Dial-now->Rule Settings->Dial Plan->Dial-now->Account (not applicable to SIP-T19(P) E2 IP phones)
	area-code-control = 0	Settings->Dial Plan->Area Code->Code Settings->Dial Plan->Area

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-Voice]		Code->Min Length(1-15) Settings->Dial Plan->Area Code->Max Length(1-15) Settings->Dial Plan->Area Code->Account (not applicable to SIP-T19(P) E2 IP phones)
	block-out-control = 0	Settings->Dial Plan->Block Out->BlockOut NumberX(X=1,2,...,10) Settings->Dial Plan->Block Out->Account (not applicable to SIP-T19(P) E2 IP phones)
[Settings-Voice]	echo-cancellation = 0	Settings->Voice->Echo Cancellation
	jitter-buffer = 0	Settings->Voice->JITTER BUFFER
[Settings-Ring]	personal-ring = 0	Settings->Ring->Internal Ringer Text Settings->Ring->Internal Ringer File
[Settings-Tones]	tone-items = 0	Settings->Tones->Select Country Settings->Tones->Dial Settings->Tones->Ring Back Settings->Tones->Busy Settings->Tones->Congestion Settings->Tones->Call Waiting Settings->Tones->Dial Recall Settings->Tones->Info Settings->Tones->Stutter Settings->Tones->Message Settings->Tones->Auto Answer
[Softkey]	Custom_SoftKey = 2	Settings->Softkey Layout->Custom Softkey

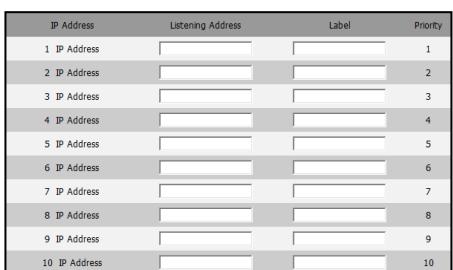
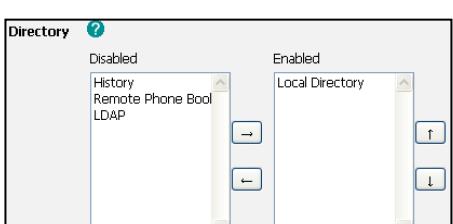
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
	SoftKey_Type = 2	Settings->Softkey Layout->Call States 
	SoftKey_Select = 2	Settings->Softkey Layout 
[TR069]	head = 2	Settings->TR069-> TR069
	EnableTR069 = 2	Settings->TR069->Enable TR069
	ACSUsername = 2	Settings->TR069->ACS Username
	ACSPassword = 2	Settings->TR069->ACS Password
	ACSLURL = 2	Settings->TR069->ACS URL
	EnablePeriodicInform = 2	Settings->TR069->Enable Periodic Inform
	PeriodicInformInterval = 2	Settings->TR069->Periodic Inform Interval (seconds)
	RequestUsername = 2	Settings->TR069->Connection Request Username
[Settings-Voice Monitoring]	RequestPassword = 2	Settings->TR069->Connection Request Password
	RTCP-Session-Report = 2	Settings->Voice Monitoring->VQ RTCP-XR Session Report
	RTCP-Interval-Report = 2	Settings->Voice Monitoring-> VQ RTCP-XR Interval Report
	RTCP-Interval-Period = 2	Settings-> Voice Monitoring->Period for Interval Report

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Settings-Voice]	RTCP-Warning-MosIq = 2	Settings->Voice Monitoring->Warning threshold for MosIq
	RTCP-Critical-MosIq = 2	Settings->Voice Monitoring->Critical threshold for MosIq
	RTCP-Warning-Delay = 2	Settings->Voice Monitoring->Warning threshold for Delay
	RTCP-Critical-Delay = 2	Settings->Voice Monitoring-> Critical threshold for Delay
	Display-VQReport-On-Web = 2	Settings->Voice Monitoring-> Display Report options on Web
	Display-VQReport-On-UI = 2	Settings-> Voice Monitoring-> Display Report options on phone
	RTCP-Report-Options = 2	Settings->Voice Monitoring->Report options on phone 
[Settings-SIP]	sip-session-timer = 2	Settings->SIP->SIP Session Timer T1 (0.5~10s) Settings->SIP->SIP Session Timer T2 (2~40s) Settings->SIP->SIP Session Timer T4 (2.5~60s)
	local-SIP-port = 2	Settings->SIP->Local SIP Port
	TLS-SIP-Port = 2	Settings->SIP->TLS SIP Port
[Contacts]	contacts-basic = 0	Directory->Local Directory (the whole page)
	contacts-remote = 0	Directory->Remote Phone Book (the whole page)
	contacts-callinfo = 0	Directory->Phone Call Info (the whole page)

 
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[LocalPhoneBoo k]	contacts-LDAP = 0 (not applicable to SIP-T19(P) E2 IP phones)	Directory->LDAP (the whole page)
	contacts-multicastIP = 0	Directory->Multicast IP (the whole page)
	contacts-favorite = 0	Directory->Setting (the whole page)
contact-list = 0		Directory->Local Directory
		
all-contacts-control = 0		Directory->Local Directory
		
import-export-contact s = 1		Directory->Local Directory->Import Local Directory File
		
btnImportCSV = 1		Directory->Local Directory-> <input type="button" value="Import CSV"/>
btnExportCSV = 1		Directory->Local Directory-> <input type="button" value="Export CSV"/>
btnImportXML = 1		Directory->Local Directory-> <input type="button" value="Import XML"/>
btnExportXML = 1		Directory->Local Directory-> <input type="button" value="Export XML"/>
opt-contacts = 0		Directory->Local Directory

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
		
[Contacts-Remote]	remote-phonebook-list = 0	Directory->Remote Phone Book 
	SRemoteNameEnabled = 0	Directory->Remote Phone Book->Incoming/Outgoing Call Lookup
	SRemoteNameFlashTime = 0	Directory->Remote Phone Book->Search Flash Time(Seconds)
[PhoneCallInfo]	call-control = 0	Directory->Phone Call Info->Call Panel 
	dialed-list-title = 0	Directory->Phone Call Info-> Call Log ? Directory->Phone Call Info-> Placed List ?
	dialed-list-content = 0	Directory->Phone Call Info->Placed List 
	missed-list-title = 0	Directory->Phone Call Info-> Missed List ?
	missed-list-content =	Directory->Phone Call Info-> Missed

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface																																			
[LDAP] (not applicable to SIP-T19(P) E2 IP phones)	0	<p>List</p> <table border="1"> <thead> <tr> <th>Index</th><th>Date</th><th>Time</th><th>Local Identity</th><th>Name</th><th>Number</th></tr> </thead> <tbody> <tr><td>1</td><td>Fri Apr 26</td><td>17:07</td><td>1006@10.2.1.199</td><td>3606</td><td>3606@10.2.1.199</td></tr> <tr><td>2</td><td>Fri Apr 26</td><td>15:42</td><td>1006@10.2.1.199</td><td>3606</td><td>3606@10.2.1.199</td></tr> <tr><td>3</td><td>Fri Apr 26</td><td>14:29</td><td>1006@10.2.1.199</td><td>Joy</td><td>1000@10.2.1.199</td></tr> <tr><td>4</td><td>Fri Apr 26</td><td>14:06</td><td>1006@10.2.1.199</td><td>Joy</td><td>1000@10.2.1.199</td></tr> </tbody> </table>	Index	Date	Time	Local Identity	Name	Number	1	Fri Apr 26	17:07	1006@10.2.1.199	3606	3606@10.2.1.199	2	Fri Apr 26	15:42	1006@10.2.1.199	3606	3606@10.2.1.199	3	Fri Apr 26	14:29	1006@10.2.1.199	Joy	1000@10.2.1.199	4	Fri Apr 26	14:06	1006@10.2.1.199	Joy	1000@10.2.1.199					
Index	Date	Time	Local Identity	Name	Number																																
1	Fri Apr 26	17:07	1006@10.2.1.199	3606	3606@10.2.1.199																																
2	Fri Apr 26	15:42	1006@10.2.1.199	3606	3606@10.2.1.199																																
3	Fri Apr 26	14:29	1006@10.2.1.199	Joy	1000@10.2.1.199																																
4	Fri Apr 26	14:06	1006@10.2.1.199	Joy	1000@10.2.1.199																																
received-list-title = 0	<p>Directory->Phone Call Info-></p> <p>Received List </p>																																				
received-list-content = 0	<p>Directory->Phone Call Info->Received List</p> <table border="1"> <thead> <tr> <th>Index</th><th>Date</th><th>Time</th><th>Local Identity</th><th>Name</th><th>Number</th></tr> </thead> <tbody> <tr><td>1</td><td>Thu May 02</td><td>09:56</td><td>1006@10.2.1.199</td><td>1007</td><td>1007@10.2.1.199</td></tr> <tr><td>2</td><td>Thu May 02</td><td>09:55</td><td>1006@10.2.1.199</td><td>1007</td><td>1007@10.2.1.199</td></tr> <tr><td>3</td><td>Thu May 02</td><td>09:50</td><td>1006@10.2.1.199</td><td>1007</td><td>1007@10.2.1.199</td></tr> <tr><td>4</td><td>Thu May 02</td><td>09:44</td><td>1006@10.2.1.199</td><td>1007</td><td>1007@10.2.1.199</td></tr> <tr><td>5</td><td>Tue Apr 30</td><td>14:08</td><td>1006@10.2.1.199</td><td>hav</td><td>1000@10.2.1.199</td></tr> </tbody> </table>	Index	Date	Time	Local Identity	Name	Number	1	Thu May 02	09:56	1006@10.2.1.199	1007	1007@10.2.1.199	2	Thu May 02	09:55	1006@10.2.1.199	1007	1007@10.2.1.199	3	Thu May 02	09:50	1006@10.2.1.199	1007	1007@10.2.1.199	4	Thu May 02	09:44	1006@10.2.1.199	1007	1007@10.2.1.199	5	Tue Apr 30	14:08	1006@10.2.1.199	hav	1000@10.2.1.199
Index	Date	Time	Local Identity	Name	Number																																
1	Thu May 02	09:56	1006@10.2.1.199	1007	1007@10.2.1.199																																
2	Thu May 02	09:55	1006@10.2.1.199	1007	1007@10.2.1.199																																
3	Thu May 02	09:50	1006@10.2.1.199	1007	1007@10.2.1.199																																
4	Thu May 02	09:44	1006@10.2.1.199	1007	1007@10.2.1.199																																
5	Tue Apr 30	14:08	1006@10.2.1.199	hav	1000@10.2.1.199																																
forwarded-list-title = 0	<p>Directory->Phone Call Info-></p> <p>Forwarded List </p>																																				
forwarded-list-content = 0	<p>Directory->Phone Call Info->Forwarded List</p> <table border="1"> <thead> <tr> <th>Index</th><th>Date</th><th>Time</th><th>Local Identity</th><th>Name</th><th>Number</th></tr> </thead> <tbody> <tr><td>1</td><td>Thu May 02</td><td>10:41</td><td>1006@10.2.1.199</td><td>Joy</td><td>1000@10.2.1.199</td></tr> <tr><td>2</td><td>Thu May 02</td><td>10:41</td><td>1006@10.2.1.199</td><td>Joy</td><td>1000@10.2.1.199</td></tr> </tbody> </table>	Index	Date	Time	Local Identity	Name	Number	1	Thu May 02	10:41	1006@10.2.1.199	Joy	1000@10.2.1.199	2	Thu May 02	10:41	1006@10.2.1.199	Joy	1000@10.2.1.199																		
Index	Date	Time	Local Identity	Name	Number																																
1	Thu May 02	10:41	1006@10.2.1.199	Joy	1000@10.2.1.199																																
2	Thu May 02	10:41	1006@10.2.1.199	Joy	1000@10.2.1.199																																
enable-LDAP = 0	Directory->LDAP->Enable LDAP																																				
LDAP-name-filter = 0	Directory->LDAP->LDAP Name Filter																																				
LDAP-number-filter = 0	Directory->LDAP->LDAP Number Filter																																				
LDAP-TLS-Mode = 0	Directory->LDAP->LDAP TLS Mode																																				
server-address = 0	Directory->LDAP->Server Address																																				
port = 0	Directory->LDAP->Port																																				
base = 0	Directory->LDAP->Base																																				
user-name = 0	Directory->LDAP->Username																																				
password = 0	Directory->LDAP->Password																																				
maxhits = 0	Directory->LDAP->Max Hits(1~32000)																																				
LDAP-name-attributes = 0	Directory->LDAP->LDAP Name Attributes																																				
LDAP-number-attributes = 0	Directory->LDAP->LDAP Number Attributes																																				
LDAP-display-name = 0	Directory->LDAP->LDAP Display Name																																				

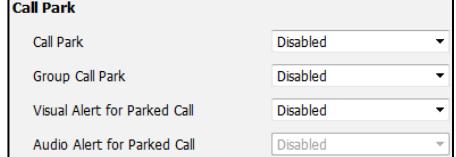
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[MulticastIP]	protocol = 0	Directory->LDAP->Protocol
	LDAP-lookup-for-incoming-call = 0	Directory->LDAP->LDAP Lookup For Incoming Call
	LDAP-lookup-for-callout = 0	Directory->LDAP-> LDAP Lookup For Callout
	LDAP-sorting-results = 0	Directory->LDAP->LDAP Sorting Results
	Receive_Priority = 0	Directory->Multicast IP->Paging Barge
	MulticastIPConfig = 0	Directory->Multicast IP 
	PagePriorityActive = 0	Directory->Multicast IP->Paging Priority Active
	PagingList = 0	Directory->Multicast IP->Paging List 
	contacts-group = 0	Directory->Setting->Directory 
	super-search = 0	Directory->Setting->Search Source List In Dialing

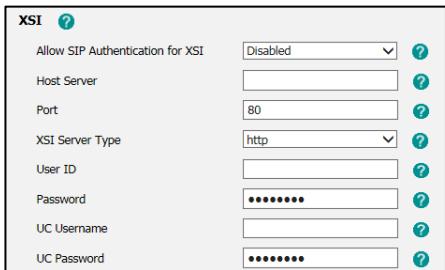
Section Header	Parameters and Default Value	Configuration Items on the Web User Interface																																																							
[Security]	password = 0	Security->Password (the whole page)																																																							
	trusted_cert = 2	Security->Trusted Certificates (the whole page)																																																							
	server_cert = 2	Security->Server Certificates (the whole page)																																																							
[TrustCerts]	trust-certs-records = 2	<p>Security->Trusted Certificates</p> <table border="1"> <thead> <tr> <th>Index</th> <th>Issued To</th> <th>Issued By</th> <th>Expiration</th> <th>Delete</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Thawte Premium Server CA</td> <td>Thawte Consulting cc</td> <td>Jan 1 23:59:59 2021 GMT</td> <td><input type="checkbox"/></td> </tr> <tr> <td>2</td> <td></td> <td>VeriSign, Inc.</td> <td>Aug 2 23:59:59 2028 GMT</td> <td><input type="checkbox"/></td> </tr> <tr> <td>3</td> <td></td> <td></td> <td></td> <td><input type="checkbox"/></td> </tr> <tr> <td>4</td> <td></td> <td></td> <td></td> <td><input type="checkbox"/></td> </tr> <tr> <td>5</td> <td></td> <td></td> <td></td> <td><input type="checkbox"/></td> </tr> <tr> <td>6</td> <td></td> <td></td> <td></td> <td><input type="checkbox"/></td> </tr> <tr> <td>7</td> <td></td> <td></td> <td></td> <td><input type="checkbox"/></td> </tr> <tr> <td>8</td> <td></td> <td></td> <td></td> <td><input type="checkbox"/></td> </tr> <tr> <td>9</td> <td></td> <td></td> <td></td> <td><input type="checkbox"/></td> </tr> <tr> <td>10</td> <td></td> <td></td> <td></td> <td><input type="checkbox"/></td> </tr> </tbody> </table>	Index	Issued To	Issued By	Expiration	Delete	1	Thawte Premium Server CA	Thawte Consulting cc	Jan 1 23:59:59 2021 GMT	<input type="checkbox"/>	2		VeriSign, Inc.	Aug 2 23:59:59 2028 GMT	<input type="checkbox"/>	3				<input type="checkbox"/>	4				<input type="checkbox"/>	5				<input type="checkbox"/>	6				<input type="checkbox"/>	7				<input type="checkbox"/>	8				<input type="checkbox"/>	9				<input type="checkbox"/>	10				<input type="checkbox"/>
Index	Issued To	Issued By	Expiration	Delete																																																					
1	Thawte Premium Server CA	Thawte Consulting cc	Jan 1 23:59:59 2021 GMT	<input type="checkbox"/>																																																					
2		VeriSign, Inc.	Aug 2 23:59:59 2028 GMT	<input type="checkbox"/>																																																					
3				<input type="checkbox"/>																																																					
4				<input type="checkbox"/>																																																					
5				<input type="checkbox"/>																																																					
6				<input type="checkbox"/>																																																					
7				<input type="checkbox"/>																																																					
8				<input type="checkbox"/>																																																					
9				<input type="checkbox"/>																																																					
10				<input type="checkbox"/>																																																					
btn-delete-certs = 2	Security->Trusted Certificates-> <input type="button" value="Delete"/>																																																								
only-accept-trusted-certs = 2	Security->Trusted Certificates->Only Accept Trusted Certificates																																																								
upload-trust-certs = 2	Security->Trusted Certificates-> Import Trusted Certificates																																																								
	<p>Import Trusted Certificates</p> <input type="button" value="Browse..."/> <input type="button" value="Upload"/>																																																								
common-name-validation = 2	Security->Trusted Certificates-> Common Name Validation																																																								
ca-certs = 2	Security->Trusted Certificates-> CA Certificates																																																								
[ServerCerts]	server-certs-records = 2	<p>Security->Server Certificates</p> <table border="1"> <thead> <tr> <th>Issued To</th> <th>Issued By</th> <th>Expiration</th> <th>Delete</th> </tr> </thead> <tbody> <tr> <td>192.168.0.181</td> <td>yealink</td> <td>Apr 21 06:11:41 2019 GMT</td> <td><input type="checkbox"/></td> </tr> </tbody> </table>	Issued To	Issued By	Expiration	Delete	192.168.0.181	yealink	Apr 21 06:11:41 2019 GMT	<input type="checkbox"/>																																															
Issued To	Issued By	Expiration	Delete																																																						
192.168.0.181	yealink	Apr 21 06:11:41 2019 GMT	<input type="checkbox"/>																																																						
server-certs-upload = 2	Security->Server Certificates->Import Server Certificates																																																								

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
		
	server-certs-device-cert = 2	Security->Server Certificates->Device Certificates 
[HiddenSetting]	custom-factory-config = 2	Hidden->Custom Factory Config
	DND-Active = 2	Hidden->DND Active
	Forward-Active = 2	Hidden->Forward Active
	Broadsoft-Active = 1	Hidden->Broadsoft Active
	Redirect-Active = 1	Hidden->Redirect Active
	UC-Active = 1 (only applicable to SIP-T48G/T46G/T29G IP phones)	Hidden->UC Active
	pushxml = 2	Hidden->PushXML Test

Configuration Parameters for BroadSoft UC-One Version

The following table lists configuration items in the WebItemslevel.cfg file for configurations only integrated with BroadSoft UC-One firmware version on the web user interface.

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[General-Information]	EnableAutoFavorite = 0 (only applicable to SIP-T48G/T46G/T29G IP phones)	Features->General Information->Enable Auto Favorite
[Features-Callpickup]	Call-Park = 0	Features->Call Pickup->Call Park 

Section Header	Parameters and Default Value	Configuration Items on the Web User Interface
[Contacts]	contacts-broadsoft = 0	Directory->Network Directory (the whole page)
[Contacts-Broad soft]	Directotries = 0	Directory->Network Directory->Network Directory Directory->Network Directory->Custom Directory Directory->Network Directory->Call Log
	XSI = 0	Directory->Network Directory->XSI 

Configuration Parameters of Phone User Interface

The following table lists configuration items in the WebItemslevel.cfg file with associated configurations on the phone user interface of the SIP-T48G/T46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2 IP phones:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	status_list = 0	Menu->Status
	Status_IP = 11	SIP-T48G: Menu->Status->General->IPv4 SIP-T46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Status->IPv4
	Status_IPv6 = 11	SIP-T48G: Menu->Status->General->IPv6 Address SIP-T46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Status->IPv6
	Status_MAC = 21	SIP-T48G: Menu->Status->General->MAC SIP-T46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Status->MAC
	Status_HW = 01	SIP-T48G: Menu->Status->Phone->Hardware SIP-T46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Status->More->Phone->Hardware
	Status_More = 01 (not applicable to SIP-T48G IP phones)	SIP-T46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Status->More
	network = 0	SIP-T48G: Menu->Status->Network SIP-T46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
		Menu->Status->More->Network
	Status_More_Phone = 0	SIP-T48G: Menu->Status->Phone SIPT46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Status->More->Phone
	Status_More_Account = 0	SIP-T48G: Menu->Status->Accounts SIPT46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Status->More->Accounts
	Status_More_RTP = 02	SIP-T48G/ T46G/T29G: Menu->Status->RTP Status SIPT42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Status->More->RTP
	status_general= 02 (only applicable to SIP-T48G IP phones)	SIP-T48G: Menu->Status->General
	features= 02	Menu->Features
	callcontrol_forward = 11	Menu->Features->Call Forward
	always-forward = 1	Menu->Features->Call Forward->Always Forward
	busy-forward = 1	Menu->Features->Call Forward->Busy Forward
	NoAnswer-forward = 1	Menu->Features->Call Forward->No Answer Forward
	call_waiting = 1	Menu->Features->Call Waiting
	DSSKey = 1 (not applicable to SIP-T19(P) E2 IP phones)	Menu->Features->DSS Keys
	key_as_send= 12	SIP-T48G:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
		<p>Menu->Features->General->Key as Send SIP-T46G/T29G:</p> <p>Menu->Features->Others->General->Key as Send SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu->Features->Key as send</p>
hotline-number = 1		<p>SIP-T48G:</p> <p>Menu->Features->Hot Line->Number SIP-T46G/T29G:</p> <p>Menu->Features->Others->Hot Line->Number SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu->Features->Hot Line->Hot Number</p>
Features_Anonymous = 1		<p>SIP-T48G/T46G/T29G:</p> <p>Menu->Features->Anonymous SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu->Features->Anonymous Call</p>
Features_AutoRD = 1		<p>SIP-T48G/T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu->Features->Auto Redial SIP-T46G/T29G:</p> <p>Menu->Features->Others->Auto Redial</p>
intercom = 1		Menu->Features->Intercom
	call_completion = 1	<p>SIP-T48G/T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu->Features->Call Completion SIP-T46G/T29G:</p> <p>Menu->Features->Others->Call Completion</p>

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
	history_save = 2	<p>SIP-T48G: Menu->Features->General->History Record SIP-T46G/T29G: Menu->Features->Others->General->History Record SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Features->History Setting</p>
	multipaginglist = 10	<p>SIP-T48G/T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Features->Paging List SIP-T46G/T29G: Menu->Features->Others->Paging List</p>
	Main_Settings=0 (not applicable to SIP-T48G/T46G/T29G IP phones)	<p>SIP-T42G/T41P/T27P/T23P/T23G /T21(P) E2/T19(P) E2: Menu->Settings</p>
	time_zone = 0	<p>SIP-T48G: Menu->Basic->Time & Date->General->Time Zone SIP-T46G/T29G: Menu->Basic->Time & Date->SNTP Settings>Time Zone SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Time & Date->SNTP Settings->Time Zone</p>
	Basic_Time_Manual = 0	<p>SIP-T48G: Menu->Basic->Time & Date->General->Type (Manual Settings) SIP-T46G/T29G:</p>

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
		<p>Menu->Basic->Time & Date->General->Manual Settings</p> <p>SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu->Settings->Basic Settings->Time & Date->Manual Settings</p>
	display = 10	<p>SIP-T48G/T46G/T29G:</p> <p>Menu->Basic->Display</p> <p>SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu->Settings->Basic Settings->Display</p>
	sound = 1	<p>SIP-T48G/T46G/T29G:</p> <p>Menu->Basic->Sound</p> <p>SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu->Settings->Basic Settings->Sound</p>
	key_tone = 1	<p>SIP-T48G/T46G/T29G:</p> <p>Menu->Basic->Sound->Key Tone</p> <p>SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu->Settings->Basic Settings->Sound->Key Tone</p>
	ring_type_setting = 1	<p>SIP-T48G/T46G/T29G:</p> <p>Menu->Basic->Sound->Ring Tones</p> <p>SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu->Settings->Basic Settings->Sound-> Ring Tones</p>
	unlock_pin = 2	<p>SIP.T48G/T46G/T29G:</p> <p>Menu->Basic->Change PIN</p> <p>SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Menu->Settings->Basic</p>

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
		Settings->Change PIN
	bluetooth = 1 (only applicable to SIP-T48G/T46G/T29G IP phones)	SIP-T48G/T46G/T29G: Menu->Basic->Bluetooth
	account_label = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Accounts->Account X->Label SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Accounts->Account X->Label
	display_name = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Accounts->Account X->Display Name SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Accounts->Account X->Display Name
	register_name = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Accounts->Account X->Register Name SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Accounts->Account X->Register Name
	user_name = 01	SIP-T48G/T46G/T29G: Menu->Advanced->Accounts->Account X->User Name SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Accounts->Account X->User Name

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
	account_password = 01	SIP-T48G/T46G/T29G: SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Accounts ->Account X->Password
	sip_server = 01	SIP-T48G/T46G/T29G: Menu->Advanced->Accounts->Account X->SIP Server1/2 SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Accounts->Account X->SIP Server1/2
	enabled-outbound-proxy-server = 01	SIP-T48G/T46G/T29G: Menu->Advanced->Accounts->Account X->Outbound Status SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Accounts->Account X->Outbound Status
	outbound-proxy-server = 01	SIP-T48G/T46G/T29G: Menu->Advanced->Accounts->Account X->Outbound Proxy1/2 SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Accounts->Account X->Outbound Proxy1/2
	Adv_Network =0	SIP-T48G/T46G/T29G: Menu->Advanced->Network SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Network

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
	auto-Answer= 1	Menu->Features->Auto Answer
	wan_port_title = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Network->WAN Port SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Network->WAN Port
	VLAN-items = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Network->VLAN SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Network->VLAN
	wanport = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Network->VLAN ->WAN Port SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Network->VLAN->WAN Port
	pcport = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Network->VLAN ->PC Port SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Network->VLAN->PC Port
	dhcpvlan = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Network->VLAN ->DHCP VLAN SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Network->VLAN->DHCP

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
		VLAN
	web-server = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Network->Webserver Type SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Network->Webserver Type
	8021x = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Network->802.1x SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Network->802.1x Settings
	open-VPN = 02 (not applicable to SIP-T19(P) E2 IP phones)	SIP-T48G/T46G/T29G: Menu->Advanced->Network->VPN SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2: Menu->Settings->Advanced Settings->Network->VPN
	open-lldp = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Network->LLDP SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Network->LLDP
	network_cdp = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Network->CDP SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Network->CDP
	network_nat = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Network->NAT SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
		Menu->Settings->Advanced Settings->Network->NAT
	softkey_Label = 02 (not applicable to SIP-T48G/T46G/T29G IP phones)	SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Softkey Label
	keyboard_lock = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Phone Lock SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Phone Lock
	Adv_Reboot = 02	SIP-T48G: Menu->Advanced->Reboot SIP-T46G/T29G: Menu->Advanced->Reset&Reboot-> Reboot SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Reboot
	Adv_ResetToFac = 2	SIP-T48G: Menu->Advanced->Reset to Factory SIP-T46G/T29G: Menu->Advanced->Reset&Reboot-> Reset to Factory SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Reset to Factory
	reset_default = 0	SIP-T48G: Menu->Advanced->Reset Local Configuration SIP-T46G/T29G: Menu->Advanced->Reset&Reboot-> Reset Local Configuration

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
		SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Reset Local Configuration
	password = 0	SIP-T48G/T46G/T29G: Menu->Advanced->Set Password SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Set Password
	Adv_AES = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Set AES Key SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Set AES Key
	autoprovision = 02	SIP-T48G/T46G/T29G: Menu->Advanced->Auto Provision SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Auto Provision
	international-forward = 02	SIP-T48G/T46G/T29G: Menu->Advanced->FWD International SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->FWD International
	SMS= 12	Menu->Message
	MSG_Voice = 1	Menu->Message->Voice Mail
	viewvoicemail = 1	Menu->Message->Voice Mail->View Voice Mail
	setvoicemail = 1	Menu->Message->Voice Mail->Set voice Mail

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
	<p>usermodeentry = 0</p> <p>NAT_traversal = 02 (not applicable to SIP-T19(P) E2 IP phones)</p> <p>contrast_ctrl = 0 (not applicable to SIP-T42G/T41P)</p> <p>local_call_log_list = 01</p> <p>Adv_Account = 2</p> <p>Basic_LANG = 0</p> <p>Basic_Setting_BackLight = 0</p>	<p>Menu->User Mode</p> <p>SIP-T48G/T46G/T29G: Menu->Advanced->Accounts->Account X->NAT Status SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2: Menu->Settings->Advanced Settings->Accounts->Account X->NAT Status</p> <p>SIP-T48G/T46G/T29G: Menu->Basic->Display->Contrast Setting SIP-T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Display->Contrast</p> <p>Menu->Directory->Local Directory</p> <p>SIP-T48G/T46G/T29G: Menu->Advanced->Accounts SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Accounts</p> <p>SIP-T48G/T46G/T29G: Menu->Basic->Language SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Language</p> <p>SIP-T48G/T46G/T29G: Menu->Basic->Display->Backlight SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Display->Backlight</p>

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
	Basic_Time_Format = 0	SIP-T48G/T46G/T29G: Menu->Basic->Time & Date->Time & Date Format SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Time & Date->Time & Date Format
	Basic_Time_SNTP = 0	SIP-T48G: Menu->Basic->Time& Date->General->Type (SNTP Settings) SIP-T46G/T29G: Menu->Basic->Time & Date->General->SNTP Settings SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Time & Date->SNTP Settings
MSG_Text = 0		Menu->Message->Text Message
Main_Contacts = 0		Menu->Directory
SMS_Draftbox = 0		Menu->Message->Text Message ->Draftbox
SMS_Inbox = 0		Menu->Message->Text Message ->Inbox
SMS_NEW = 0		Menu->Message->Text Message ->New Message
SMS_Outbox = 0		Menu->Message->Text Message ->Outbox
SMS_Sentbox = 0		Menu->Message->Text Message-> Sentbox
	Set_Adv = 0	SIP-T48G/T46G/T29G: Menu->Advanced SIP-T42G/T41P/T27P/T23P/T23G/T21(P)

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
		E2/T19(P) E2: Menu->Settings->Advanced Settings
	Set_Basic = 0	SIP-T48G/T46G/T29G: Menu->Basic SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings
	blacklist_list = 0	Menu->Directory->Blacklist
	call_info = 0	Menu->History
	dhcptimezone = 0	SIP-T48G/T46G/T29G: Menu->Basic->Time & Date->DHCP Time SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Basic Settings->Time & Date->DHCP Time
	line_active = 2	SIP-T48G/T46G/T29G: Menu->Advanced->Accounts->Account X->Activation SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Settings->Advanced Settings->Accounts->Account X ->Active Line
	local_contact_list = 0	SIP-T48G: Menu->Directory->All Contacts SIP-T46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Directory->Local Directory
	remote_contact_list = 0	Menu->Directory->Remote Phone book
	status = 0	Menu->Status
	dnd = 0	Menu->Features->DND
	advanced_call_feature_default_account =2	SIP-T48G:

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
	(only applicable to SIP-T48G/T46G/T29G IP phones)	Menu->Features->Default Account SIP-T46G/T29G: Menu->Features->Others->Default Account
	advanced_call_feature_general = 1 (only applicable to SIP-T48G/T46G/T29G IP phones)	SIP-T48G: Menu->Features->General SIP-T46G/T29G: Menu->Features->Others->General
	advanced_call_feature_list = 1 (only applicable to SIP-T48G/T46G/T29G IP phones)	Menu->Features
	date_and_time_general = 0 (only applicable to SIP-T48G/T46G/T29G IP phones)	SIP-T48G/T46G/T29G: Menu->Basic->Time &Date->General
	reset_and_reboot_list = 02 (only applicable to SIP-T46G/T29G IP phones)	SIP-T46G/T29G: Menu->Advanced->Reset&Reboot
	display_wallpaper = 1 (only applicable to SIP-T48G/T46G/T29G IP phones)	SIP-T48G/T46G/T29G: Menu->Basic->Display->Wallpaper

Configuration Parameters for BroadSoft UC-One Version

The following table lists configuration items in the WebItemslevel.cfg file for configurations only integrated with BroadSoft UC-One firmware version on the phone user interface of the SIP-T48G/T46G/T42G/T41P/T29G/T27P/T23P/T23G/T21(P) E2/T19(P) E2 IP phones.

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
[GUI]	broadsoft_contact_list = 0	Menu->Directory->Network Directory
	broadsoft_callog_list = 0	Menu->History->Network CallLog
	CallControl = 0	SIP-T48G/T46G/T29G: Menu->Features->Call Control SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control
	callcontrol_anywhere = 11	SIP-T48G/T46G/T29G: Menu->Features->Call Control->Anywhere SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Anywhere
	callcontrol_remoteoffice = 0	SIP-T48G/T46G/T29G: Menu->Features->Call Control->Remote Office SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Remote Office
	callcontrol_dnd= 11	SIP-T48G/T46G/T29G: Menu->Features->Call Control->Do not Disturb SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Do Not Disturb
	callcontrol_simultaneo usring = 11	SIP-T48G/T46G/T29G: Menu->Features->Call

Section Header	Parameters and Default Value	Configuration Items on the Phone User Interface
		Control->Simultaneous Ring Personal SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Simultaneous Ring Personal
	callcontrol_hidenumber = 11	SIP-T48G/T46G/T29G: Menu->Features->Call Control->Hide Number SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Hide Number
	callcontrol_anonymousrejection = 11	SIP-T48G/T46G/T29G: Menu->Features->Call Control->Anonymous Rejection SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Anonymous Rejection
	callcontrol_initialacdstate = 11	SIP-T48G/T46G/T29G: Menu->Features->Call Control->Initial ACD State SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->Initial ACD State
	callcontrol_setacdstate=11	SIP-T48G/T46G/T29G: Menu->Features->Call Control->ACD State SIP-T42G/T41P/T27P/T23P/T23G/T21(P) E2/T19(P) E2: Menu->Call Control->ACD State

Appendix-B : Sample Configuration Files

Color Screen Phones

The default configuration item settings in factory WebItemsLevel.cfg for T48G/T46G/T29G IP phones with firmware version 80 or later are:

```
[ Status-Menu ]
Status-Basic = 0
Status-RTP = 0

[ Status ]
version = 0
network = 0
IPv4 = 0
IPv6 = 0
NetworkCommon = 0
AccountStatus = 0
Ext = 0

[ Account ]
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 0

[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 2
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
transport-item = 2
backup-outbound-proxy-server = 01
proxy-fallback-interval = 01
NAT_traversal = 2
sip_server = 2
```

```
[ Account-Basic ]
switch-account = 0
proxy_require = 0
send_anonymous = 1
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
anonymous_rejection_enabled = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
misscall-log = 0
auto-answer = 0
ring-type = 0
send_anonymous_rejection_code = 0

[ Account-Codec ]
switch-account = 0
codecs-group = 0

[ Account-Adv ]
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
MWI-items = 2
voice_mail = 0
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
Call-Pull-Feature-Access-Code = 2
dialog-info-call-pickup = 2
BLF-list-URI = 2
BlfListCode = 2
BLFListBargeInCode = 2
```

```
BLF-List-Retrieve-Code = 2
BLA-number = 2
BLA-subscription-period = 2
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
conference-type = 2
conference-uri = 2
ACD-subscript-period = 2
Earlymedia = 2
SIPServerType = 2
Music-ServerURI = 2
Direct-Call-Pickup-Code = 2
Group-Call-Pickup-Code = 2
Distinctive-Ring-Tones = 2
UnregisterOnReboot = 2
Out-Dialog-BLF = 2
RTCP-Collector-Name = 2
RTCP-Collector-Address = 2
RTCP-Collector-Port = 2
Number-Of-Linekey = 1
voice_mail_display = 2
subscribe-register = 2
```

[Network]

```
network-basic = 0
network-pcport = 0
network-advanced = 0
shotlevel = 0
```

[Network-Basic]

```
ipaddress-mode = 2
ipv4config = 2
ipv6config = 2
wan-ppoe = 2
```

[Network-PCPort]

```
pcport-active = 0
```

[Network-Advanced]

```
LLDP-items = 2
CDP-items = 2
VLAN-items = 2
NAT-items = 2
```

```
port-link = 2
voice-QoS = 2
local-RTP-port = 2
web-server = 2
8021x = 2
span-to-pc-port = 2
reg-surge-prev = 2
ICMPv6_Status = 2
open-VPN = 2
```

```
[ DSSKey ]
memorykey = 0
linekey = 0
programmablekey = 0
extkey = 0
```

```
[ MemoryKey ]
memory-key = 0
```

```
[ LineKey ]
line-key = 0
Enable-Page-Tips = 0
Label-Length = 0
```

```
[ ProgramKey ]
programmable-key = 0
```

```
[ ExtKey ]
ext-key = 0
```

```
[ Features ]
features-forward = 0
features-general = 0
features-audio = 0
features-intercom = 0
features-transfer = 0
features-callpickup = 0
features-remote = 0
features-phonelock = 0
features-acd = 0
features-sms = 0
features-actionurl = 0
features-bluetooth = 0
```

```
features-powerled = 0
features-notifypop = 0

[ Forward&DND ]
head-forward = 0
forward-mode = 0
forward-account = 0

always-forward = 0
always-forward-enabled = 0
always-forward-target = 0
always-forward-OnCode = 0
always-forward-OffCode = 0
busy-forward = 0
busy-forward-enabled = 0
busy-forward-target = 0
busy-forward-OnCode = 0
busy-forward-OffCode = 0
NoAnswer-forward = 0
NoAnswer-forward-enabled = 0
NoAnswer-forward-ringtimes = 0
NoAnswer-forward-target = 0
NoAnswer-forward-OnCode = 0
NoAnswer-forward-OffCode = 0
DND = 0
DND-Emergency = 0
DND-Authorized-Numbers = 0
DND-mode = 01
DND-account = 01
DND-Status = 01
DND-OnCode = 01
DND-OffCode = 01

forward-emergency = 0
forward-authorized-numbers = 0

[ General-Information ]
call_waiting = 0
auto-redial = 0
auto_redial_interval = 0
auto_redial_times = 0
key_as_send = 0
reserve-pound = 2
```

```
hotline-number = 0
hotline-delay = 0
busytone_delay = 0
return-code-refuse = 0
return-code-DND = 0
call_completion = 0
feature-key-synchronisation = 0
TimeOut-for-DialNow = 0
RFC-2543-Hold = 2
use-outbound-in-dialog = 2
IsDeal-180 = 2
logon-wizard = 2
PswPrefix = 2
PswLength = 2
PswDial = 2
SaveCallHistory = 2
SuppressDTMFDisplay = 1
SuppressDTMFDisplayDelay = 1
play-local-DTMF-tone = 0
DTMFRepetition = 0
MulticastCodec = 0
PlayHoldTone = 0
PlayHoldToneDelay = 0
AllowMute = 0
DualHeadset = 1
AutoAnswerDelay = 0
HeadsetPrior = 0
DTMFReplaceTran = 0
TranSendDTMF = 1
SendPoundKey = 0
FwdInternational = 0
Diversion-History-Info = 1
allow-trans-exist-call = 0
blf-led-mode = 0
ReLogOffTime = 2
call-number-filter = 0
Use_Logo = 0
upload_logo = 0
allow-IP-call = 0
IP-direct-auto-answer = 0
calllog-show-num = 0
voicemail-tone = 0
DHCP-hostname = 0
EnableAutoFavorite = 0
```

```
reboot-in-talking = 0  
Hide-Feature-Access-Codes = 0  
display-method-on-dialing = 2  
text_logo = 0  
calllog-show-num = 0  
auto-linekeys = 1  
sip-trust-control = 2
```

```
enable-auto-answer-tone = 0
```

```
[ Features-Audio ]
```

```
call-waiting-tone = 0  
button-sound = 0  
redial_tone = 0  
send-sound = 0  
headset-send-volume = 1  
handset-send-volume = 1  
handfree-send-volume = 1  
Ringer_Dev = 0
```

```
[ Features-Intercom ]
```

```
allow-intercom = 0  
intercom-mute = 0  
intercom-tone = 0  
intercom-barge = 0
```

```
[ Features-Transfer ]
```

```
semi-attend-transfer = 0  
Semi-Attend-Trans-OnHook = 0  
blind-tran-onhook = 0  
transfer-on-conference-hang-up = 0  
TransferModeViaDsskey = 0
```

```
[ Features-Callpickup ]
```

```
Call-Pickup = 0  
Call-Park = 0
```

```
[ Features-Remote ]
```

```
pushxml-server-addr = 2  
XMLSIPNotify = 2  
XMLBlockInCalling = 1  
ActionURLimitIP = 2
```

```
[ Features-Lock ]
```

```
Lock_Enable = 2
keyboard_lock = 2
Phone_Unlock_PIN = 2
Phone_lock_time_out = 2
emergency_setting = 2

[ Features-ACD ]
ACD-auto-available = 2
ACD-auto-available-timer = 2

[ Features-ActionURL ]
setup-complete = 2
log-on = 2
log-off = 2
register-fail = 2
off-hook = 2
on-hook = 2
incoming-call = 2
outgoing-call = 2
call-establish = 2
Call-Terminated = 2
DND-On = 2
DND-Off = 2
Forward-On-Code = 2
Forward-Off-Code = 2
Busy-Forward-On = 2
Busy-Forward-Off = 2
No-Answer-Forward-On = 2
No-Answer-Forward-Off = 2
TransferCall = 2
Blind-transfer-call = 2
Attended-transfer-call = 2
Hold = 2
Unhold = 2
Mute = 2
Unmute = 2
Missed-call = 2
IPChange = 2
IdletoBusy = 2
Busytoldle = 2
RejectIncomingCall = 2
AnswerNewInCall = 2
TransferFailed = 2
TransferFinished = 2
```

```
ForwardIncomingCall = 2
UCServer = 2
ReportIP = 2
AutopFinish = 2
OpenCallWait = 2
CloseCallWait = 2
Headset = 2
Handfree = 2
CancelCallOut = 2
RemoteBusy = 2
CallRemoteCanceled = 2
```

[Features-Bluetooth]

```
bluetooth-active = 0
```

[Features-PowerLED]

```
common-power-light-on = 0
ring-power-light-flash = 0
mail-power-light-flash = 0
mute-power-light-flash = 0
hold-power-light-flash = 0
talk-power-light-flash = 0
```

[Features-NotifyPop]

```
Display-Voice-Mail-Popup = 0
Display-Missed-Call-Popup = 0
Display-Forward-Call-Popup = 0
Display-Text-Message-Popup = 0
```

[Settings]

```
settings-preference = 0
settings-datetime = 0
settings-calldisplay = 0
settings-upgrade = 0
settings-autop = 0
settings-config = 0
settings-dialplan = 0
settings-voice = 0
settings-ring = 1
settings-tones = 0
settings-softkey = 2
settings-tr069 = 2
```

```
settings-voicemonitoring = 0  
settings-sip = 1
```

```
[ Settings-Preference ]
```

```
web-language = 0  
live-dialpad = 0  
inter-digit-time = 0  
UnusedBackLight = 0  
backlight = 0  
BacklightTime = 0  
contrast_ctrl = 0  
watchdog = 2  
ring_type_setting = 0  
Wallpaper = 0
```

```
[ Time&Date ]
```

```
DHCP-Time = 0  
time_zone = 0  
NTP_priority = 0  
prim_server = 0  
sec_server = 0  
update_interval = 0  
daylight-time = 0  
time_type = 0  
daylight_date= 0  
offset = 0  
manual-time = 0  
manual-time-settings = 0  
time_format_setting = 0  
date_format_setting = 0  
location = 0
```

```
[ Settings-CallDisplay ]
```

```
Display-Contact-Photo = 0  
Incoming-Call-Ringer-Animation = 0  
Call-Display-Method = 0
```

```
[ Settings-Upgrade ]
```

```
version_info = 0  
reset_to_factory = 1  
reset_local_config = 0  
reboot_device = 0  
upgrade_firmware = 1
```

```
[ Settings-AutoProvision ]
pnp-active = 2
dhcp-active = 2
custom-option = 2
DHCP-Option-Value = 2
server-URL = 2
account = 2
password = 2
common-AES-key = 2
MAC-Oriented-AES-key = 2
zero_active = 2
wait_time = 2
poweron-active = 2
repeatedly-active = 2
repeat-interval = 2
weekly-active = 2
autop-time = 2
day-of-week = 2
btn-autop-now = 2
attempt-expired-time = 2
```

```
[ Settings-Config ]
opt-configfile = 1
opt-factory-configfile = 2
export-cfg-config-file = 2
import-cfg-config-file = 2
pcap_trace = 1
syslog = 1
SystemLogLevel = 2
```

```
[ Settings-DialPlan ]
replace-rule = 0
dial-now = 0
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0
```

```
[ Settings-Voice ]
```

```
echo-cancellation = 0
jitter-buffer = 0

[ Settings-Ring ]
personal-ring = 1

[ Settings-Tones ]
tone-items = 0

[ Softkey ]
Custom_SoftKey = 2
SoftKey_Type = 2
SoftKey_Select = 2

[ TR069 ]
head = 2
EnableTR069 = 2
ACSUsername = 2
ACSPassword = 2
ACSURL = 2
EnablePeriodicInform = 2
PeriodicInformInterval = 2
RequestUsername = 2
RequestPassword = 2

[ Settings-VoiceMonitoring ]
RTCP-Session-Report = 2
RTCP-Interval-Report = 2
RTCP-Interval-Period = 2
RTCP-Warning-MosIq = 2
RTCP-Critical-MosIq = 2
RTCP-Warning-Delay = 2
RTCP-Critical-Delay = 2
Display-VQReport-On-Web = 2
Display-VQReport-On-UI = 2
RTCP-Report-Options = 2

[ Settings-SIP ]
sip-session-timer = 2
local-SIP-port = 2
TLS-SIP-Port = 2

[ Contacts ]
contacts-basic = 0
```

```
contacts-remote = 0
contacts-callinfo = 0
contacts-LDAP = 0
contacts-broadsoft = 0
contacts-multicastIP = 0
contacts-favorite = 0

[ LocalPhoneBook ]
contact-list = 0
all-contacts-control = 0
import-export-contacts = 1
btnImportCSV = 1
btnExportCSV = 1
btnImportXML = 1
btnExportXML = 1
opt-contacts = 0

[ Contacts-Remote ]
remote-phonebook-list = 0
SRemoteNameEnable = 0
SRemoteNameFlashTime = 0

[ PhoneCallInfo ]
call-control = 0
dialed-list-title = 0
dialed-list-content = 0
missed-list-title = 0
missed-list-content = 0
received-list-title = 0
received-list-content = 0
forwarded-list-title = 0
forwarded-list-content = 0

[ LDAP ]
enable-LDAP = 0
LDAP-name-filter = 0
LDAP-number-filter = 0
LDAP-TLS-Mode = 0
server-address = 0
port = 0
base = 0
user-name = 0
password = 0
maxhits = 0
```

```
LDAP-name-attributes = 0  
LDAP-number-attributes = 0  
LDAP-display-name = 0  
protocol = 0  
LDAP-lookup-for-incoming-call = 0  
LDAP-lookup-for-callout = 0  
LDAP-sorting-results = 0
```

```
[ Contacts-Broadsoft ]
```

```
Directotries = 0  
XSI = 0
```

```
[ MulticastIP ]
```

```
Receive_Priority = 0  
MulticastIPConfig = 0  
PagePriorityActive = 0  
PagingList = 0
```

```
[ Contacts-Favorite ]
```

```
contacts-group = 0  
super-search = 0
```

```
[ Security ]
```

```
password = 0  
trusted_cert = 2  
server_cert = 2
```

```
[ TrustCerts ]
```

```
trust-certs-records = 2  
btn-delete-certs = 2  
only-accept-trusted-certs = 2  
upload-trust-certs = 2  
common-name-validation = 2  
ca-certs = 2
```

```
[ ServerCerts ]
```

```
server-certs-records = 2  
server-certs-upload = 2  
server-certs-device-cert = 2
```

```
[ HiddenSetting ]
```

```
custom-factory-config = 2  
DND-Active = 2  
Forward-Active = 2
```

```
Broadsoft-Active = 1
Redirect-Active = 1
UC-Active = 1
pushxml = 2

[ GUI ]
status_list= 0
Status_IP = 11
Status_IPv6 = 11
Status_MAC = 21
Status_HW = 01
Status_More = 01
network = 0
Status_More_Phone = 0
Status_More_Account = 0
Status_More_RTP = 02
status_general = 02

features= 02
CallControl = 0
callcontrol_anywhere = 11
callcontrol_remoteoffice = 11
callcontrol_forward = 11
always-forward = 1
busy-forward = 1
NoAnswer-forward = 1
callcontrol_dnd= 11
callcontrol_hidenumber = 11
callcontrol_anonymousrejection = 11
callcontrol_simultaneousring = 11

call_waiting = 1
DSSKey = 1
key_as_send= 12
hotline-number = 1
Features_Anonymous = 1
Features_AutoRD = 1
intercom = 1
call_completion = 1
history_save= 2

multipaginglist = 10

Main_Settings = 0
```

```
time_zone = 0
Basic_Time_Manual = 0
display = 10
sound = 1
key_tone = 1
ring_type_setting = 1
unlock_pin= 2

account_label = 02
display_name = 02
register_name = 02
user_name = 01
account_password = 01
sip_server = 01
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
STUN_server = 02
auto-Answer= 1
Adv_Network = 0
wan_port_title = 02
VLAN-items = 02
wanport = 02
pcport = 02
dhcpvlan = 02
web-server = 02
8021x = 02
open-VPN = 02
open-lldp = 02
network_cdp = 02
network_nat = 02
softkey Label = 02
keyboard_lock = 02
Adv_Reboot = 02
Adv_ResetToFac = 2
password = 0
Adv_AES = 02
autoprovision = 02
international-forward = 02

SMS= 12
MSG_Voice = 1
viewvoicemail = 1
setvoicemail = 1
```

```
usermodeentry = 0
NAT_traversal = 02
contrast_ctrl = 0

broadsoft_contact_list = 0
callcontrol_initialacdstate = 11
callcontrol_setacdstate = 11

Main_Contacts = 0
local_contact_list = 0
remote_contact_list = 0
blacklist_list = 0

call_info= 0
local_call_log_list = 01

Adv_Account = 2
Basic_LANG = 0
Basic_Setting_BackLight = 0
Basic_Time_Format = 0
Basic_Time_SNTP = 0
MSG_Text = 0
SMS_Draftbox = 0
SMS_Inbox = 0
SMS_NEW = 0
SMS_Outbox = 0
SMS_Sentbox = 0
Set_Adv = 0
Set_Basic = 0
dhcptimezone = 0
line_active = 2
status = 0
dnd= 0
advanced_call_feature_default_account = 2
advanced_call_feature_general = 1
advanced_call_feature_list = 1
broadsoft_callog_list = 0
date_and_time_general = 0
phone_setting_list = 02
reset_and_reboot_list = 02
bluetooth = 1
display_wallpaper = 1
reset_default = 0
bluetooth = 1
```

Black-and-white Screen Phones

The default configuration item settings in factory WebItemsLevel.cfg for T42G/T41P/T27P/T23P/T23G/T21(P) E2 IP/T19(P) E2 phones with firmware version 80 or later are:

```
[ Status-Menu ]
Status-Basic = 0
Status-RTP = 0

[ Status ]
version = 0
network = 0
IPv4 = 0
IPv6 = 0
NetworkCommon = 0
AccountStatus = 0
Ext = 0

[ Account ]
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 0

[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 2
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
transport-item = 2
backup-outbound-proxy-server = 01
proxy-fallback-interval = 01
NAT_traversal = 2
sip_server = 2

[ Account-Basic ]
switch-account = 0
```

```
proxy_require = 0
send_anonymous = 1
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
anonymous_rejection_enabled = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
misscall-log = 0
auto-answer = 0
ring-type = 0
send_anonymous_rejection_code = 0

[ Account-Codec ]
switch-account = 0
codecs-group = 0

[ Account-Adv ]
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
MWI-items = 2
voice_mail = 0
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
Call-Pull-Feature-Access-Code = 2
dialog-info-call-pickup = 2
BLF-list-URI = 2
BlfListCode = 2
BLFListBargeInCode = 2
BLF-List-Retrieve-Code = 2
BLA-number = 2
BLA-subscription-period = 2
```

```
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
conference-type = 2
conference-uri = 2
ACD-subscrip-period = 2
Earlymedia = 2
SIPServeType = 2
Music-ServerURI = 2
Direct-Call-Pickup-Code = 2
Group-Call-Pickup-Code = 2
Distinctive-Ring-Tones = 2
UnregisterOnReboot = 2
Out-Dialog-BLF = 2
RTCP-Collector-Name = 2
RTCP-Collector-Address = 2
RTCP-Collector-Port = 2
Number-Of-Linekey = 1
voice_mail_display = 2
subscribe-register = 2
```

[Network]

```
network-basic = 0
network-pcport = 0
network-advanced = 0
shotlevel = 0
```

[Network-Basic]

```
ipaddress-mode = 2
ipv4config = 2
ipv6config = 2
wan-ppoe = 2
```

[Network-PCPort]

```
pcport-active = 0
```

[Network-Advanced]

```
LLDP-items = 2
CDP-items = 2
VLAN-items = 2
NAT-items = 2
port-link = 2
voice-QoS = 2
local-RTP-port = 2
```

```
web-server = 2
8021x = 2
span-to-pc-port = 2
reg-surge-prev = 2
ICMPv6_Status = 2
open-VPN = 2
```

```
[ DSSKey ]
memorykey = 0
linekey = 0
programmablekey = 0
extkey = 0
```

```
[ MemoryKey ]
memory-key = 0
```

```
[ LineKey ]
line-key = 0
Enable-Page-Tips = 0
Label-Length = 0
```

```
[ ProgramKey ]
programmable-key = 0
```

```
[ ExtKey ]
ext-key = 0
```

```
[ Features ]
features-forward = 0
features-general = 0
features-audio = 0
features-intercom = 0
features-transfer = 0
features-callpickup = 0
features-remote = 0
features-phonelock = 0
features-acd = 0
features-sms = 0
features-actionurl = 0
features-poweredled = 0
features-notifypop = 0
```

```
[ Forward&DND ]
```

```
head-forward = 0
forward-mode = 0
forward-account = 0

always-forward = 0
always-forward-enabled = 0
always-forward-target = 0
always-forward-OnCode = 0
always-forward-OffCode = 0
busy-forward = 0
busy-forward-enabled = 0
busy-forward-target = 0
busy-forward-OnCode = 0
busy-forward-OffCode = 0
NoAnswer-forward = 0
NoAnswer-forward-enabled = 0
NoAnswer-forward-ringtimes = 0
NoAnswer-forward-target = 0
NoAnswer-forward-OnCode = 0
NoAnswer-forward-OffCode = 0
DND = 0
DND-Emergency = 0
DND-Authorized-Numbers = 0
DND-mode = 01
DND-account = 01
DND-Status = 01
DND-OnCode = 01
DND-OffCode = 01

forward-emergency = 0
forward-authorized-numbers = 0
```

```
[ General-Information ]
call_waiting = 0
auto-redial = 0
auto_redial_interval = 0
auto_redial_times = 0
key_as_send = 0
reserve-pound = 2
hotline-number = 0
hotline-delay = 0
busytone_delay = 0
return-code-refuse = 0
```

```
return-code-DND = 0
call_completion = 0
feature-key-synchronisation = 0
TimeOut-for-DialNow = 0
RFC-2543-Hold = 2
use-outbound-in-dialog = 2
IsDeal-180 = 2
logon-wizard = 2
PswPrefix = 2
PswLength = 2
PswDial = 2
SaveCallHistory = 2
SuppressDTMFDisplay = 1
SuppressDTMFDisplayDelay = 1
play-local-DTMF-tone = 0
DTMFRepetition = 0
MulticastCodec = 0
PlayHoldTone = 0
PlayHoldToneDelay = 0
AllowMute = 0
DualHeadset = 1
AutoAnswerDelay = 0
HeadsetPrior = 0
DTMFReplaceTran = 0
TranSendDTMF = 1
SendPoundKey = 0
FwdInternational = 0
Diversion-History-Info = 1
allow-trans-exist-call = 0
blf-led-mode = 0
ReLogOffTime = 2
call-number-filter = 0
Use_Logo = 0
upload_logo = 0
allow-IP-call = 0
IP-direct-auto-answer = 0
callog-show-num = 0
voicemail-tone = 0
DHCP-hostname = 0
EnableAutoFavorite = 0
reboot-in-talking = 0
Hide-Feature-Access-Codes = 0
display-method-on-dialing = 2
text_logo = 0
```

```
calllog-show-num = 0
auto-linekeys = 1
sip-trust-control = 2

enable-auto-answer-tone = 0

[ Features-Audio ]
call-waiting-tone = 0
button-sound = 0
redial_tone = 0
send-sound = 0
headset-send-volume = 1
handset-send-volume = 1
handfree-send-volume = 1
Ringer_Dev = 0

[ Features-Intercom ]
allow-intercom = 0
intercom-mute = 0
intercom-tone = 0
intercom-barge = 0

[ Features-Transfer ]
semi-attend-transfer = 0
Semi-Attend-Trans-OnHook = 0
blind-tran-onhook = 0
transfer-on-conference-hang-up = 0
TransferModeViaDsskey = 0

[ Features-Callpickup ]
Call-Pickup = 0
Call-Park = 0

[ Features-Remote ]
pushxml-server-addr = 2
XMLSIPNotify = 2
XMLBlockInCalling = 1
ActionURLimitIP = 2

[ Features-Lock ]
Lock_Enable = 2
keyboard_lock = 2
Phone_Unlock_PIN = 2
Phone_lock_time_out = 2
```

```
emergency_setting = 2

[ Features-ACD ]
ACD-auto-available = 2
ACD-auto-available-timer = 2

[ Features-ActionURL ]
setup-complete = 2
log-on = 2
log-off = 2
register-fail = 2
off-hook = 2
on-hook = 2
incoming-call = 2
outgoing-call = 2
call-establish = 2
Call-Terminated = 2
DND-On = 2
DND-Off = 2
Forward-On-Code = 2
Forward-Off-Code = 2
Busy-Forward-On = 2
Busy-Forward-Off = 2
No-Answer-Forward-On = 2
No-Answer-Forward-Off = 2
TransferCall = 2
Blind-transfer-call = 2
Attended-transfer-call = 2
Hold = 2
Unhold = 2
Mute = 2
Unmute = 2
Missed-call = 2
IPChange = 2
IdletoBusy = 2
Busytoldle = 2
RejectIncomingCall = 2
AnswerNewInCall = 2
TransferFailed = 2
TransferFinished = 2
ForwardIncomingCall = 2
UCServer = 2
ReportIP = 2
AutopFinish = 2
```

```
OpenCallWait = 2
CloseCallWait = 2
Headset = 2
Handfree = 2
CancelCallOut = 2
RemoteBusy = 2
CallRemoteCanceled = 2
```

```
[ Features-Bluetooth ]
```

```
bluetooth-active = 0
```

```
[ Features-PowerLED ]
```

```
common-power-light-on = 0
ring-power-light-flash = 0
mail-power-light-flash = 0
mute-power-light-flash = 0
hold-power-light-flash = 0
talk-power-light-flash = 0
```

```
[ Features-NotifyPop ]
```

```
Display-Voice-Mail-Popup = 0
Display-Missed-Call-Popup = 0
Display-Forward-Call-Popup = 0
Display-Text-Message-Popup = 0
```

```
[ Settings ]
```

```
settings-preference = 0
settings-datetime = 0
settings-caldisplay = 0
settings-upgrade = 0
settings-autop = 0
settings-config = 0
settings-dialplan = 0
settings-voice = 0
settings-ring = 1
settings-tones = 0
settings-softkey = 2
settings-tr069 = 2
settings-voicemonitoring = 0
settings-sip = 1
```

```
[ Settings-Preference ]
```

```
web-language = 0
live-dialpad = 0
inter-digit-time = 0
UnusedBackLight = 0
backlight = 0
BacklightTime = 0
contrast_ctrl = 0
watchdog = 2
ring_type_setting = 0
Wallpaper = 0

[ Time&Date ]
DHCP-Time = 0
time_zone = 0
NTP_priority = 0
prim_server = 0
sec_server = 0
update_interval = 0
daylight-time = 0
time_type = 0
daylight_date= 0
offset = 0
manual-time = 0
manual-time-settings = 0
time_format_setting = 0
date_format_setting = 0
location = 0

[ Settings-CallDisplay ]
Display-Contact-Photo = 0
Incoming-Call-Ringer-Animation = 0
Call-Display-Method = 0

[ Settings-Upgrade ]
version_info = 0
reset_to_factory = 1
reset_local_config = 0
reboot_device = 0
upgrade_firmware = 1

[ Settings-AutoProvision ]
pnp-active = 2
dhcp-active = 2
custom-option = 2
```

```
DHCP-Option-Value = 2
server-URL = 2
account = 2
password = 2
common-AES-key = 2
MAC-Oriented-AES-key = 2
zero_active = 2
wait_time = 2
poweron-active = 2
repeatedly-active = 2
repeat-interval = 2
weekly-active = 2
autop-time = 2
day-of-week = 2
btn-autop-now = 2
attempt-expired-time = 2
```

[Settings-Config]

```
opt-configfile = 1
opt-factory-configfile = 2
export-cfg-config-file = 2
import-cfg-config-file = 2
pcap_trace = 1
syslog = 1
SystemLogLevel = 2
```

[Settings-DialPlan]

```
replace-rule = 0
dial-now = 0
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0
```

[Settings-Voice]

```
echo-cancellation = 0
jitter-buffer = 0
```

[Settings-Ring]

```
personal-ring = 1

[ Settings-Tones ]
tone-items = 0

[ Softkey ]
Custom_SoftKey = 2
SoftKey_Type = 2
SoftKey_Select = 2

[ TR069 ]
head = 2
EnableTR069 = 2
ACSUUsername = 2
ACSPassword = 2
ACSURL = 2
EnablePeriodicInform = 2
PeriodicInformInterval = 2
RequestUsername = 2
RequestPassword = 2

[ Settings-VoiceMonitoring ]
RTCP-Session-Report = 2
RTCP-Interval-Report = 2
RTCP-Interval-Period = 2
RTCP-Warning-MosIq = 2
RTCP-Critical-MosIq = 2
RTCP-Warning-Delay = 2
RTCP-Critical-Delay = 2
Display-VQReport-On-Web = 2
Display-VQReport-On-UI = 2
RTCP-Report-Options = 2

[ Settings-SIP ]
sip-session-timer = 2
local-SIP-port = 2
TLS-SIP-Port = 2

[ Contacts ]
contacts-basic = 0
contacts-remote = 0
contacts-callinfo = 0
contacts-LDAP = 0
contacts-broadsoft = 0
```

```
contacts-multicastIP = 0
contacts-favorite = 0

[ LocalPhoneBook ]
contact-list = 0
all-contacts-control = 0
import-export-contacts = 1
btnImportCSV = 1
btnExportCSV = 1
btnImportXML = 1
btnExportXML = 1
opt-contacts = 0

[ Contacts-Remote ]
remote-phonebook-list = 0
SRemoteNameEnable = 0
SRemoteNameFlashTime = 0

[ PhoneCallInfo ]
call-control = 0
dialed-list-title = 0
dialed-list-content = 0
missed-list-title = 0
missed-list-content = 0
received-list-title = 0
received-list-content = 0
forwarded-list-title = 0
forwarded-list-content = 0

[ LDAP ]
enable-LDAP = 0
LDAP-name-filter = 0
LDAP-number-filter = 0
LDAP-TLS-Mode = 0
server-address = 0
port = 0
base = 0
user-name = 0
password = 0
maxhits = 0
LDAP-name-attributes = 0
LDAP-number-attributes = 0
LDAP-display-name = 0
protocol = 0
```

```
LDAP-lookup-for-incoming-call = 0  
LDAP-lookup-for-callout = 0  
LDAP-sorting-results = 0
```

```
[ Contacts-Broadsoft ]  
Directotries = 0  
XSI = 0
```

```
[ MulticastIP ]  
Receive_Priority = 0  
MulticastIPConfig = 0  
PagePriorityActive = 0  
PagingList = 0
```

```
[ Contacts-Favorite ]  
contacts-group = 0  
super-search = 0
```

```
[ Security ]  
password = 0  
trusted_cert = 2  
server_cert = 2
```

```
[ TrustCerts ]  
trust-certs-records = 2  
btn-delete-certs = 2  
only-accept-trusted-certs = 2  
upload-trust-certs = 2  
common-name-validation = 2  
ca-certs = 2
```

```
[ ServerCerts ]  
server-certs-records = 2  
server-certs-upload = 2  
server-certs-device-cert = 2
```

```
[ HiddenSetting ]  
custom-factory-config = 2  
DND-Active = 2  
Forward-Active = 2  
Broadsoft-Active = 1  
Redirect-Active = 1  
UC-Active = 1  
pushxml = 2
```

```
[ GUI ]
status_list= 0
Status_IP = 11
Status_IPv6 = 11
Status_MAC = 21
Status_HW = 01
Status_More = 01
network = 0
Status_More_Phone = 0
Status_More_Account = 0
Status_More_RTP = 02
status_general = 02

features= 02
CallControl = 0
callcontrol_anywhere = 11
callcontrol_remoteoffice = 11
callcontrol_forward = 11
always-forward = 1
busy-forward = 1
NoAnswer-forward = 1
callcontrol_dnd= 11
callcontrol_hidenumber = 11
callcontrol_anonymousrejection = 11
callcontrol_simultaneousring = 11

call_waiting = 1
DSSKey = 1
key_as_send= 12
hotline-number = 1
Features_Anonymous = 1
Features_AutoRD = 1
intercom = 1
call_completion = 1
history_save= 2

multipaginglist = 10

Main_Settings = 0

time_zone = 0
Basic_Time_Manual = 0
display = 10
```

```
sound = 1
key_tone = 1
ring_type_setting = 1
unlock_pin= 2

account_label = 02
display_name = 02
register_name = 02
user_name = 01
account_password = 01
sip_server = 01
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
STUN_server = 02
auto-Answer= 1
Adv_Network = 0
wan_port_title = 02
VLAN-items = 02
wanport = 02
pcport = 02
dhcpvlan = 02
web-server = 02
8021x = 02
open-VPN = 02
open-lldp = 02
network_cdp = 02
network_nat = 02
softkey_Label = 02
keyboard_lock = 02
Adv_Reboot = 02
Adv_ResetToFac = 2
password = 0
Adv_AES = 02
autoprovision = 02
international-forward = 02

SMS= 12
MSG_Voice = 1
viewvoicemail = 1
setvoicemail = 1
usermodeentry = 0
NAT_traversal = 02
contrast_ctrl = 0
```

```
broadsoft_contact_list = 0
callcontrol_initialacdstate = 11
callcontrol_setacdstate = 11

Main_Contacts = 0
local_contact_list = 0
remote_contact_list = 0
blacklist_list = 0

call_info= 0
local_call_log_list = 01

Adv_Account = 2
Basic_LANG = 0
Basic_Setting_BackLight = 0
Basic_Time_Format = 0
Basic_Time_SNTP = 0
MSG_Text = 0
SMS_Draftbox = 0
SMS_Inbox = 0
SMS_NEW = 0
SMS_Outbox = 0
SMS_Sentbox = 0
Set_Adv = 0
Set_Basic = 0
dhcptimezone = 0
line_active = 2
status = 0
dnd= 0
reset_default = 0
```

Customer Feedback

We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to DocsFeedback@yealink.com.