

# Yealink Android Based IP Phones Release Notes of Version 85

## Table of Contents

<b>Yealink Android Based IP Phones Release Notes of Version 85 .....</b>	<b>1</b>
<b>Yealink Android Based IP Phones Release Notes of Version x.85.0.5 .....</b>	<b>2</b>
1. Introduction .....	2
2. New Features .....	2
3. Optimization .....	3
4. Bug Fixes .....	3
5. New Features Descriptions .....	4
6. Optimization Descriptions.....	8
7. Configuration Parameters Enhancements .....	10

# Yealink Android Based IP Phones Release Notes of Version x.85.0.5

## 1. Introduction

- Firmware Version:  
T58: 58.84.0.25 upgrades to 58.85.0.5  
CP960: 73.84.0.25 upgrades to 73.85.0.5  
VP59: 91.283.0.40 upgrades to 91.85.0.5
- Applicable Models: T58, CP960, VP59
- Release Date: Apr 16<sup>th</sup>, 2020.

## 2. New Features

1. Added the feature that the phone can work with Yealink CP900/CP700 speakerphone and Yealink UH36 wired headset.
2. Added the feature that the phone can obtain the picture from the URL contained in the Call-Info header of the INVITE message and to display on the phone screen when placing or receiving calls.
3. Added the feature that you can configure how a network conference is set up.
4. Added the feature of Out of Service and the phone will play an alert tone.
5. Added the feature of XML Park.
6. Added the feature that you can create a ten-way conference on the phones.
7. Added the feature that when there are unread voice messages, the dsskey LED indicator flashes or the dsskey icon indicates the number of unread messages.
8. Added the feature of automatically resuming the held multicast paging call.
9. Added the feature that users can view the basic SCA call information on the idle screen.
10. Added the feature of PIN Code Provisioning.
11. Added the feature that CP930W and DD phone can be worked with the phones after attaching the DECT USB Dongle DD10K.
12. Added the feature of Pairing and Connecting two Bluetooth Devices.
13. Added the feature of PC port mode and the phone can share the wireless network with PC via phone's PC port.
14. Added the feature of Smart Noise Filtering.
15. Added three new supported languages Czech, Hebrew and Arabic, that Hebrew is only supported by phone user interface, but Czech and Arabic are supported by both web and phone user interfaces.
16. Added the feature of Registering Android ID on VP59 Phones, so that you can use the GMS service on VP59 phones.
17. Added the feature of Wireless Access Point on T58&VP59.
18. Added the feature of Recording Upload.
19. Added the feature that if CP960 is connected to mobile phone via Bluetooth, during the call, you can tap Home button to return to the idle screen, and tap "Back To Talking" to return to the talking screen.

20. Added the feature that if CP960 is connected to mobile phone via Bluetooth, you can synchronize the mobile contacts to the CP960.
21. Added the feature that you can configure the VP59 to use the HELD protocol to retrieve location information from the Location Information Server when placing an emergency call.
22. Added the feature of intercom video call mute and auto answer video mute for T58/VP59.
23. Added the feature of Using Your Phone with PSTN Account.
24. Added a new returned code 600-Busy Everywhere.
25. Added the Daylight Saving Time for Switzerland.

### 3. Optimization

1. Optimized the feature of Handset/Headset/Speakerphone Mode.
2. Optimized the feature of LDAP.
3. Optimized the feature of Ringer Volume.
4. Optimized the feature that when using XML Browser feature, if the phone is connected to a headset, the voice mail can be played via either the phone's speaker or the headset. You can switch it manually and the voice will not be interrupted.
5. Optimized the feature of Web Server Type.
6. Optimized the feature that the characters supported by Macro Action Strings are . @ \* # + 0-9 and English letters.
7. Optimized the feature of Power LED Indicator.
8. Optimized the feature of Wi-Fi.
9. Optimized the feature of Redialing a Call Automatically.
10. Optimized the feature of SCA.
11. Optimized the feature of Call Transfer that after you transfer the call to another contact successfully, the phone prompts "Transfer operation complete".
12. Optimized the feature of Broadsoft Network Directory.
13. Optimized the feature of VPN.

### 4. Bug Fixes

1. Fixed an issue that the time zone of Samoa may be incorrectly on the phone.
2. Modified the Russian translations.
3. Fixed an issue that when the phone language is switched to Italian, the screen display may be abnormal.
4. Fixed an issue that when the phone enters the dialing screen, and then you press Message hard key, the message code may unable to be edited.
5. Fixed an issue that the notes for LDAP in the web user interface are incorrect.
6. Fixed an issue that you may unable to log into Google contacts via web user interface.
7. Fixed an issue that the phone may unable to reject the anonymous calls.
8. Fixed an issue that you may unable to use VPN feature on VP59 phones, and may fail to upload the VPN config file.
9. Fixed an issue that if the parameter *features.blf\_active\_backlight.enable* is set to 0, when the BLF/BLF list status changes, the phone may turn on the backlight or stop the screen saver.

## 5. New Features Descriptions

1. **Added the feature that the phone can work with Yealink CP900/CP700 speakerphone and Yealink UH36 wired headset.**

**Description:** You can use CP900/CP700/UH36 to enter or exit the dialing screen, answer/reject incoming call, end call, redial, etc.

2. **Added the feature that the phone can obtain the picture from the URL contained in the Call-Info header of the INVITE message and to display on the phone screen when placing or receiving calls.**

**Description:** You can enable the phone to download the picture from the URL contained in the Call-Info

**The parameters in the auto provision template are described as follows:**

*account.x.picture\_info\_enable =*

3. **Added the feature that you can configure how a network conference is set up.**

**Description:** The network conference can be set up in two ways. One is the phone transfers the participant to the server by a REFER method with conference URI in the Refer-To header, the other is the phone transfers the server to the participant by a REFER method with SIP URI in the Refer-To header.

**The parameters in the auto provision template are described as follows:**

*account.X.networkconf\_type =*

4. **Added the feature of Out of Service and the phone will play an alert tone.**

**Description:** When the network of the phone is disconnected and the warning message appears on the screen, the phone will play an alert tone.


**The parameters in the auto provision template are described as follows:**

*features.out\_of\_service\_alert.enable =*

*features.out\_of\_service\_alert\_time =*

5. **Added the feature of XML Park.**

**Description:** You can configure the phone to monitor a parked list or group when the phone is idle, and once a call is parked to the server, the corresponding Dsskey LED indicator will be flashed. You can also search, retrieve or refresh the list by pressing the corresponding Dsskey, or park the call to the one you monitor. This feature is not applicable to CP920 phones.

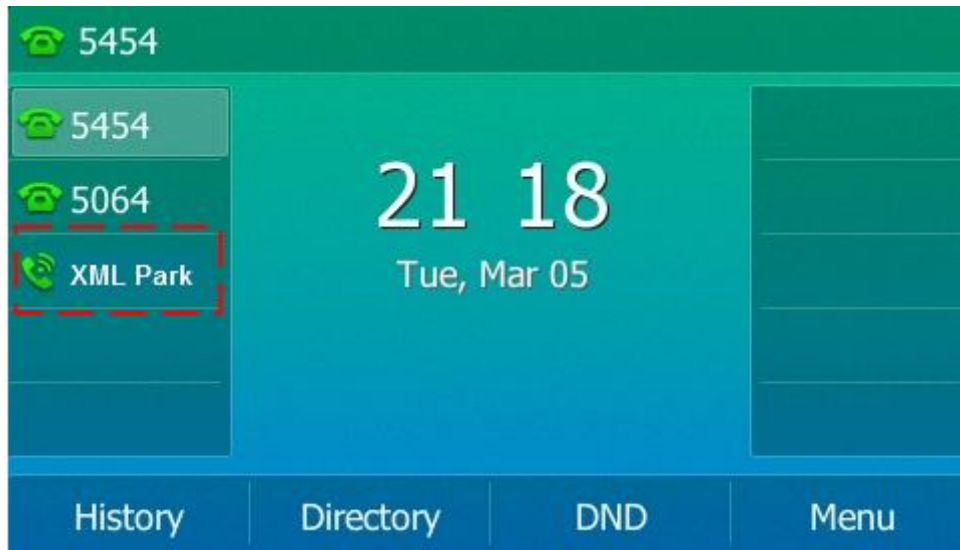

The parameters in the auto provision template are described as follows:

*linekey.X.type =*

6. **Added the feature that when there are unread voice messages, the dsskey LED indicator flashes or the dsskey icon indicates the number of unread messages.**

**Description:** You can configure the phone to subscribe to the message waiting indicator for the voice mail number when configuring a Voice Mail dsskey. This feature is not applicable to CP920 phones.

The parameters in the auto provision template are described as follows:

*features.voice\_mail\_key\_lamp\_field.enable =*

7. **Added the feature of automatically resuming the held multicast paging call.**

**Description:** You can configure the phone to automatically resume the held multicast paging call after the second multicast paging call or a new call ends.

The parameters in the auto provision template are described as follows:

*features.paging\_auto\_resume.enable =*

8. **Added the feature that users can view the basic SCA call information on the idle screen.**

**Description:** You can configure the phone to display the basic SCA call information on the idle screen, and users can also view the call details by long pressing the SCA line key.

The parameters in the auto provision template are described as follows:

*phone\_setting.call\_display\_name.mode =*

9. **Added the feature of PIN Code Provisioning.**

**Description:** Users can trigger phones to perform provisioning by dialing a PIN code, and the phone can save the entered PIN code that users do not need to enter it next time.

**The parameters in the auto provision template are described as follows:**

*phone\_setting.retain\_pin.enable =*

## 10. Added the feature of Pairing and Connecting two Bluetooth Devices.

**Description:** You can connect two Bluetooth devices on the phone at a time, for example, a Bluetooth-enable mobile phone and a Bluetooth headset.

## 11. Added the feature of PC port mode and the phone can share the wireless network with PC via phone's PC port.

**Description:** When the phone is connected to the wireless network, the connected PC can obtain the network through the phone's PC port.

**The parameters in the auto provision template are described as follows:**

*static.network.pc\_port.mode =*

## 12. Added the feature of Smart Noise Filtering.

**Description:** The phones can block out the slight noise from the far party when there is no speech in a call, and at the same time filter out the common transient noise (door closing, table knocking, and so on).

**The parameters in the auto provision template are described as follows:**

*features.noise\_filtering\_rev.enable =*

## 13. Added the feature of Wireless Access Point on T58&VP59.

**Description:** The IP phone can be used to create AP hotspots and share its wired network with other devices.

**The parameters in the auto provision template are described as follows:**

*wifiap.enable =*

*wifiap.ssid =*

*wifiap.security\_mode =*

*wifiap.password =*

*wifiap.generation =*

*wifiap.channel =*

*wifiap.dhcpd.mode =*

*wifiap.dhcpd.segment =*

## 14. Added the feature of Recording Upload.

**Description:** You can configure the phones to upload the local recording files to a third-party server.

**The parameters in the auto provision template are described as follows:**

*features.recording\_upload.enable =*  
*features.recording\_upload.server.address =*  
*features.recording\_upload.server.username =*  
*features.recording\_upload.server.password =*  
*features.recording\_upload\_action =*  
*features.recording\_file.delete\_method =*

## 15. Added the feature that you can configure the VP59 to use the HELD protocol to retrieve location information from the Location Information Server when placing an emergency call.

**Description:** You can first set the value of *dialplan.emergency.asserted\_id\_source* as HELD, then configure the specific parameters for this HELD protocol.

**The parameters in the auto provision template are described as follows:**

*dialplan.emergency.asserted\_id\_source =*  
*dialplan.emergency.held.server\_url =*  
*dialplan.emergency.held.secondary.server\_url =*  
*dialplan.emergency.held.request\_type =*  
*dialplan.emergency.held.request\_element.x.name =*  
*dialplan.emergency.held.request\_element.x.value =*

## 16. Added the feature of intercom video call mute and auto answer video mute for T58/VP59.

**Description:** You can configure the phone to turn off the video when the video intercom call is answered or the auto answer is enabled.

**The parameters in the auto provision template are described as follows:**

*features.intercom.video.mute =*

## 17. Added the feature of Using Your Phone with PSTN Account.

**Description:** You can connect an optional expansion PSTN box CPN10 to extend functions of the conference phone.

You can make PSTN calls. Up to 2 cascaded PSTN Boxes can be installed to a conference phone.

**The parameters in the auto provision template are described as follows:**

*pstn.account.x.enable =*  
*pstn.account.x.label =*  
*pstn.account.x.missed\_calllog =*  
*pstn.account.x.auto\_answer =*

*pstn.account.x.auto\_answer\_mute\_enable =*

*pstn.account.x.ring\_type =*

## 18. Added a new returned code 600-Busy Everywhere.

**Description:** You can define the return code and reason of the SIP response message as 600-Busy Everywhere for the refused call, unanswered call and when an incoming call is rejected by DND.

**The parameters in the auto provision template are described as follows:**

*features.normal\_refuse\_code =*

*features.no\_answer\_code =*

*features.dnd\_refuse\_code =*

## 6. optimization Descriptions

### 1. Optimized the feature of Handset/Headset/Speakerphone Mode.

**Description:** You can configure the phone to enter into the group listening mode by pressing the Speakerphone key when you first answer the call using the headset. The audio is sent only through the headset. So you are able to speak and listen through the headset, but you can only listen through the speaker. It is not applicable to Bluetooth headset. This feature is not applicable to CP920 phones.

**The parameters in the auto provision template are described as follows:**

*features.headset.group\_listen\_in\_talking\_enable =*

### 2. Optimized the feature of LDAP.

**Description:** You can configure the number attributes of each record to be returned by the LDAP server and display them to the phone in the order of the configured attributes.

**The parameters in the auto provision template are described as follows:**

*ldap.numb\_attr =*

### 3. Optimized the feature of Ringer Volume.

**Description:** You can configure the adjustable minimum ringer volume on the phone. It only takes effect on the ringer volume of the speaker on the phone. After the headset is connected, the ringer volume can only be controlled by the headset itself.

**The parameters in the auto provision template are described as follows:**

*phone\_setting.voice.ring\_vol\_min =*

### 4. Optimized the feature of Web Server Type.



**Description:** You can configure the phone to access the web user interface of the phone over a secure tunnel (HTTPS) by default.

**The parameters in the auto provision template are described as follows:**

*wui.default\_https\_enable =*

## 5. Optimized the feature of Power LED Indicator.

**Description:** You can configure whether the power LED indicator to flash or not when the phone performs an auto provisioning.

**The parameters in the auto provision template are described as follows:**

*phone\_setting.autop\_led\_flash\_enable =*

## 6. Optimized the feature of Wi-Fi.

**Description:** You can configure the security mode and EAP authentication mode of a specific wireless network. If you set the security mode of a specific wireless network as 802.1x EAP, you can also configure the anonymous identity (user name) for Wi-Fi 802.1X authentication.

**The parameters in the auto provision template are described as follows:**

*static.wifi.x.security\_mode =*

*static.wifi.x.eap\_type =*

*static.wifi.x.802\_1x.anonymous\_identity =*

## 7. Optimized the feature of Redialing a Call Automatically.

**Description:** When you dial a number but fail to establish a call, the phone prompts the failure reason and then prompts whether to auto redial the contact, select OK to activate auto redial.

## 8. Optimized the feature of SCA.

**Description:** You can configure the phone to play a busy tone when a public hold call on the shared line is retrieved by the remote party.

**The parameters in the auto provision template are described as follows:**

*phone\_setting.call\_remote\_end\_when\_hold\_busy\_tone.enable =*

## 9. Optimized the feature of Broadsoft Network Directory.

**Description:** You can configure the phone to automatically download all contacts in the BroadSoft Directory from the server.

**The parameters in the auto provision template are described as follows:**

*bw.xsi.directory.update.enable =*

## 10. Optimized the feature of VPN.

**Description:** You can configure VPN type as L2TP, and the URL for uploading the OpenVPN configuration file (vpn.cnf).

**The parameters in the auto provision template are described as follows:**

*network.vpn.mode =*

*network.l2tp\_server.address =*

*network.l2tp\_server.username =*

*network.l2tp\_server.password =*

*network.openvpn\_file.url =*

## 7. Configuration Parameters Enhancements

Auto Provision Template Flies Change Log							
Firmware Version: [x.84.0.125]-[ x.85.0.5]							
Function	Provisioning syntax Comparison		Permitted Value	Default Value	Action	Description	File
	x. 84.0.125	x.85.0.5					
VPN		static.network.l2tp_server.username =	String within 512 characters	Blank	Add	It configures the user name of the L2TP server.  Note: It works only if "static.network.vpn.mode" is set to 0 (L2TP).	common.cfg
VPN		static.network.vpn.mode =	0 or 1	1	Add	It configures the VPN type.	common.cfg
VPN		static.network.l2tp_server.address =	String within 512 characters	Blank	Add	It configures the L2TP server address.  Note: It works only if "static.network.vpn.mode" is set to 0 (L2TP).	common.cfg
Smart Noise Filtering		features.noise_filtering_rev.enable =	0 or 1	0	Add	It enables or disables the phone to block out the slight noise from the far end when there is no speech in a call.  Note: After smart noise filtering is enabled, if the far end is playing music or calling a voice service, the background music will also be eliminated	common.cfg

						when there is no speech in a call.	
Wi-Fi		static.wifi.x.802_1x.anonymous_identity =	String within 255 characters	Blank	Add	It configures the anonymous identity (user name) for Wi-Fi 802.1X authentication.  Note: It works only if "static.wifi.enable" is set to 1 (Enabled) and "static.wifi.X.security_mode" is set to 802.1x EAP.	common.cfg
Multicast Paging		features.paging_automatically_resume.enable =	0 or 1	0	Add	It enables or disables the phone to automatically resume the held multicast paging call after the second multicast paging call or a new call ends.	common.cfg
SCA		phone_setting.call_remote_end_when_hold.busy_tone.enable =	0 or 1	1	Add	It enables or disables the phone to play a busy tone when a public hold call on the shared line is retrieved by the remote party.  Note: It works only if "features.busy_tone_delay" is not set to 0.	common.cfg
Out of Service		features.out_of_service_alert_time =	Integer from 0 to 3600	60	Add	It configures the time (in seconds) to wait before the phone plays an alert tone after the network is abnormal.  Note: It works only if "features.out_of_service_alert.enable" is set to 1 (Enabled).	common.cfg
Out of Service		features.out_of_service_alert.enable =	0 or 1	0	Add	It enables or disables the phone to play an alert tone when out of service caused by network abnormality.  Note: You can customize the alert tone by the parameter "voice.tone.congestion".	common.cfg
Broadsoft Network Directory		bw.xsi.directory.server_search_type =	0 or 1	0	Add	It configures the search type used by the server search mechanism for the BroadSoft Directory.  Note: It works only if "bw.xsi.directory.enable" is set to 1 (Enabled).	common.cfg
VPN		static.network.l2tp_server.password =	String within 512 characters	Blank	Add	It configures the password of the L2TP server.	common.cfg

						Note: It works only if "static.network.vpn.mode" is set to 0 (L2TP).	
Call Display		phone_setting.call_display_name.mode =	0 or 1	0	Add	It specifies which display names to be used as the caller ID/callee ID for calls from/to contacts in the phone directory.  Note: This parameter also affects the history records display.	common.cfg
Handset Firmware Upgrade		over_the_air.url.cp930w =	URL within 512 characters	Blank	Add	It configures the access URL of the CP930W phone firmware file.  Note: The priority of parameter "over_the_air.url.cp930w" is higher than "over_the_air.url".	common.cfg
PSTN Account		pstn.account.x.label =	String within 99 characters	Blank	Add	(Optional.) It configures the label to be displayed on the LCD screen for PSTN account X.	MAC.cfg
PSTN Account		pstn.account.x.enable =	0 or 1	1	Add	It enables or disables the PSTN account X.	MAC.cfg
Ringtone		pstn.account.x.ring_type =	Common, Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Ring5.wav, Ring6.wav, Ring7.wav, Ring8.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Customring.wav)	Common	Add	It configures a ring tone for PSTN account X.  Example: pstn.account.1.ring_type = Ring3.wav It means PSTN account 1 will use the Ring3.wav as the ring tone. pstn.account.1.ring_type = Common It means PSTN account 1 will use the ring tone selected for the IP phone configured by the parameter "phone_setting.ring_type".	MAC.cfg
Auto Answer		pstn.account.x.auto_answer_mute_enable =	0 or 1	0	Add	It enables or disables the auto answer mute feature for PSTN account X.  Note: It works only if the values of parameters "pstn.account.X.auto_answer" and "features.allow_mute" are set to 1 (Enabled).	MAC.cfg
Auto Answer		pstn.account.x.auto_answer =	0 or 1	0	Add	It enables or disables the auto answer	MAC.cfg

						feature for PSTN account X. Note: The IP phone cannot automatically answer the incoming call during a call even if the auto answer is enabled.	
Call Transfer		features.transfer_complete.prompt.enable =	0 or 1	1	Add	It enables or disables the phone to pop up a prompt after the transfer operation is completed.	common.cfg
VPN		static.network.openvpn_file.url =	String within 512 characters	Blank	Add	It configures the URL for uploading the OpenVPN configuration file (vpn.cnf). Note: It works only if "static.network.vpn.mode" is set to 1 (OpenVPN).	common.cfg
Ethernet Interface MTU		static.network.set_fragment.enable =	0 or 1	1	Add	It enables or disables the fragmented packet sending.	common.cfg
Dsskey Page Reset		features.dsskey_page_reset.enable =	0 or 1	0	Add	It enables or disables the phone to automatically switch to a specified dsskey page when all calls end.	common.cfg
Unify		unify.enable =	0 or 1	0	Add	It enables or disables the Unify features.	common.cfg
Handset/Headset/Speakerphone Mode		features.headset_group_listen_in_talking_enable =	0 or 1	0	Add	It enables or disables the phone to enter into the group listening mode by pressing the Speakerphone key when you first answer the call using the headset. Note: The audio is sent only through the headset. So you are able to speak and listen through the headset, but you can only listen through the speaker. It is not applicable to Bluetooth headset.	common.cfg
SCA		account.x.shared_line.idle_details =	0 or 1	0	Add	It enables or disables the phone to display the basic SCA call information on the idle screen. Note: It works only if "account.X.shared_line" is set to 1 (Shared Call Appearance).	common.cfg
BroadSoft		bw.features_statuses.display_mode =	0 or 1	0	Add	It configures the icon display mode when the corresponding BSFT feature is enabled on the phone. Note: It works only if "bw.enable" and	common.cfg

						"bw.xsi.enable" are set to 1 (Enabled).	
BroadSoft		bw.features.flash_time =	Integer from 0 to 86400	0	Add	It configures the time (in seconds) when the phone actively requests the BSFT server to enable the feature.  Note: It works only if "bw.enable" and "bw.xsi.enable" are set to 1 (Enabled).	common.cfg
PIN Code Provisioning		phone_setting.retain_pin.enable =	0 or 1	1	Add	It enables or disables the phone to save the entered PIN code.	common.cfg
Encryption and Decryption		static.auto_provision.rsa_private_key.url =	URL within 511 characters	Blank	Add	It configures the URL to import the self-define RSA private key file.  Note: The key file must be in *.key format. It works only if "static.auto_provision.rsa_private_key.enable" is set to 1 (Enabled).	common.cfg
Encryption and Decryption		static.auto_provision.rsa_private_key.enable =	0 or 1	0	Add	It enables or disables the self-define RSA private key.	common.cfg
Encryption and Decryption		static.auto_provision.rsa_private_key.delete =	http://localhost/all	Blank	Add	It deletes the self-define RSA private key file.	common.cfg
Power LED Indicator		phone_setting.auto_led_flash.enable =	0 or 1	1	Add	It enables or disables the power LED indicator to flash when the phone performs an auto provisioning.	common.cfg
MWI for Voice Mail		features.voice_mail_key_lamp_field.enable =	0 or 1	0	Add	It enables or disables the phone to subscribe to the message waiting indicator for the voice mail number when configuring a Voice Mail dskey.	common.cfg
Network Conference		account.x.network_conf_type =	0 or 1	0	Add	It configures how a network conference is set up.  Note: It works only if "account.X.conf_type" is set to 2 (Network Conference).	MAC.cfg
Ringer Volume		phone_setting.voice.ring_volume_min =	Integer from 0 to 15	0	Add	It configures the adjustable minimum ringer volume on the phone.  Note: It only takes effect on the ringer volume of the speaker on the phone. After the headset is connected, the ringer volume can only be controlled by the headset itself.	common.cfg

Call Log		pstn.account.x.missed_calllog=	0 or 1	1	Add	It enables or disables the phone to indicate and record missed calls for PSTN account X.  Note: It works only if "features.save_call_history" is set to 1 (Enabled). The prompt message displays only if "features.missed_call_popup.enable" is set to 1 (Enabled).	MAC.cfg
Idle Clock Display		phone_setting.idle_clock_display.enable=	0 or 1	1	Add	It enables or disables the phone to display the idle clock.	common.cfg
Emergency Dialplan and Enhanced 911		dialplan.emergency.held.secondary.server_url=	String	Blank	Add	It configures the secondary Location Information Server URL for the phone to send HELD location request.  Note: It works only if "dialplan.emergency.enable" is set to 1 (Enabled) and "dialplan.emergency.asserted_id_source" is set to HELD.	common.cfg
Emergency Dialplan and Enhanced 911		dialplan.emergency.held.request_type=	SIMPLE or REDSKY	SIMPLE	Add	It configures the type of location request message.  Note: It works only if "dialplan.emergency.enable" is set to 1 (Enabled) and "dialplan.emergency.asserted_id_source" is set to HELD.	common.cfg
Emergency Dialplan and Enhanced 911		dialplan.emergency.held.request_element.x.value=	String	Blank	Add	It configures the custom element value to be sent in a location request message.  Example: dialplan.emergency.held.request_element.1.value = 001565B38ECB dialplan.emergency.held.request_element.2.value = 6f2f2d50-c385-4b72-b84a-ce0ca3a77cb7 dialplan.emergency.held.request_element.3.value = 8611@pbx.yealink.com  Note: It works only if	common.cfg

						“dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is set to HELD.	
Emergency Dialplan and Enhanced 911		dialplan.emergency.held.request_element.x.name =	String	Blank	Add	It configures the custom element name to be sent in a location request message. Example: dialplan.emergency.held.request_element.1.name = macdialplan.emergency.held.request_element.2.name = companyIDdialplan.emergency.held.request_element.3.name = nai Note: It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is set to HELD.	common.cfg
Emergency Dialplan and Enhanced 911		dialplan.emergency.held.server_url =	String	Blank	Add	It configures the primary Location Information Server URL for the phone to send HELD location request. Note: It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is set to HELD.	common.cfg
Ribbon Hot Desking/Hoteling		hoteling.authorized_call.x.value =	Number/SIP URI, Label	Blank	Add	Configures the authorized outgoing number and label.	MAC.cfg
Ribbon Hot Desking/Hoteling		static.auto_provision.allsettings.sync.path =	String	Blank	Add	Specifies the path for uploading the mac-all.cfg file.	MAC.cfg
Ribbon Hot Desking/Hoteling		static.auto_provision.allsettings.sync =	0 or 1	0	Add	Enables or disables the phone to upload the mac-all.cfg file to the server.	MAC.cfg
Ribbon Hot Desking/Hoteling		hoteling.password =	String	Blank	Add	Configures the password used to log into the guest profile.	MAC.cfg
Ribbon Hot Desking/Hoteling		hoteling.http_request_server =	String	Blank	Add	Specifies a URL for the users to log in/log out of the shared phone.	MAC.cfg



						<p>Yealink phones support wildcard characters in the URL. The wildcard characters are used with angle brackets.</p> <p>Valid wildcard characters:</p> <p><b>\$mac</b>: it will be dynamically replaced with the phone's MAC address.</p> <p><b>\$model</b>: it will be dynamically replaced with the phone's model name.</p> <p><b>\$loginuser</b>: it will be dynamically replaced with the authentication user ID.</p> <p><b>\$loginpassword</b>: it will be dynamically replaced with the authentication password.</p> <p>Note: The values of the <b>\$loginuser</b> and <b>loginpassword</b> are determined by the value "hotelng.authentication_mode".</p>	
Dsskey Hide		phone_setting.hide_dsskey.mode =	0 or 1	1	Add	It enables or disables users to hide the dsskey list on the dialing/talking/directory/history screen.	common.cfg
Recording Upload		features.recording_upload.action =	1 or 2	1	Add	It configures the recording upload method.	common.cfg
Recording Upload		features.recording_file.delete_method =	1 or 2	1	Add	It configures whether to delete the local recording file after it is successfully uploaded to the server.	common.cfg
PC Mode		phone_setting.usb_pc_mode =	0 or 1	1	Add	It specifies the display screen when the phone is connected to the PC via USB.	common.cfg
PC Mode		phone_setting.usb_pc_mode.audio_union =	0 or 1	0	Add	<p>It configures whether the volume is adjusted synchronously on both PC and CP in PC mode.</p> <p>Note: It works only if "phone_setting.usb_pc_mode" is set to 1 (Enabled). It works only for the audio volume on CP, not media volume.</p>	common.cfg
Recording Upload		features.recording_upload.enable =	0 or 1	0	Add	It enables or disables the phone to upload the call recording files to a third-party server.	common.cfg
PC Mode		phone_setting.usb_pc_mode.default_conference =	0 or 1	0	Add	It configures whether to invite a new party to the hybrid UC conference after you tap Dial on the idle screen in PC	common.cfg

						mode. Note: It works only if "phone_setting.usb.pc_mode" is set to 1 (Enabled).	
Incoming Intercom		features.intercom.video.mute =	0 or 1	0	Add	It enables or disables the phone to turn off the video when the video intercom call is answered.	common.cfg
Recording Upload		features.recording_upload.server.password =	String within 32 characters	Blank	Add	It configures the authentication password of the server for uploading the call recording files. Note: It works only if "features.recording_upload.enable" is set to 1 (Enabled).	common.cfg
Recording Upload		features.recording_upload.server.address =	URL within 511 characters	Blank	Add	It configures the server address the call recording files are uploaded to. Note: It works only if "features.recording_upload.enable" is set to 1 (Enabled).	common.cfg
Recording Upload		features.recording_upload.server.username =	URL within 32 characters	Blank	Add	It configures the authentication user name of the server for uploading the call recording files. Note: It works only if "features.recording_upload.enable" is set to 1 (Enabled).	common.cfg
Wireless Access Point		static.wifiap.password =	String with 8 to 64 characters	A random string with 8 characters	Add	It configures the password of the wireless AP. Note: Only when "static.wifiap.security_mode" is set to WPA2-PSK, do you need to configure this parameter.	common.cfg
Wireless Access Point		static.wifiap.dhcpd.segment =	IPv4 address	192.168.144.0	Add	It configures the IP address of the wireless AP. Note: Only when "static.wifiap.dhcpd.mode" is set to 1 (Manual), do you need to configure this parameter.	common.cfg
Wireless Access Point		static.wifiap.dhcpd.mode =	0 or 1	0	Add	It configures the generation type of wireless AP address.	common.cfg
Wireless Access Point		static.wifiap.channel =	2.4G: [0-11] 5G: [0, 36, 40,	0 (Auto)	Add	It configures the channel of the wireless	common.cfg

			44, 48, 149, 153, 157, 161, 165] (depending on the channel opened by the country code)			AP.	
Wireless Access Point		static.wifiap.generation =	<b>2.4</b> -2.4G <b>5</b> -5G	5	Add	It configures the frequency of the wireless AP.	common.cfg
Wireless Access Point		static.wifiap.security_mode =	None, WPA2-PSK	WPA2-PSK	Add	It configures the security mode of the wireless AP.	common.cfg
Wireless Access Point		static.wifiap.enable =	0 or 1	0	Add	It enables or disables the wireless access point.	common.cfg
Wireless Access Point		static.wifiap.ssid =	String within 512 characters	Yealink-XXXXXX (XXXXXX refers to the last six digits of the MAC address, uppercase)	Add	It configures the name of wireless AP.	common.cfg
Internet Port and PC Port		static.network.pc_port.mode =	0 or 1	0	Add	It configures the PC port mode.	common.cfg