



Yealink Meeting Server Installation Guide

Version 10.23.0.55
Apr.2018

Copyright

Copyright © 2018 YEALINK (XIAMEN) NETWORK TECHNOLOGY

Copyright © 2018 Yealink (Xiamen) Network Technology CO., LTD. All rights reserved. No parts of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, photocopying, recording, or otherwise, for any purpose, without the express written permission of Yealink (Xiamen) Network Technology CO., LTD. Under the law, reproducing includes translating into another language or format.

When this publication is made available on media, Yealink (Xiamen) Network Technology CO., LTD. gives its consent to downloading and printing copies of the content provided in this file only for private use but not for redistribution. No parts of this publication may be subject to alteration, modification or commercial use. Yealink (Xiamen) Network Technology CO., LTD. will not be liable for any damages arising from use of an illegally modified or altered publication.

Trademarks

Yealink®, the logo and the name and marks is trademark of Yealink (Xiamen) Network Technology CO., LTD, which are registered legally in China, the United States, EU (European Union) and other countries.

All other trademarks belong to their respective owners. Without Yealink's express written permission, recipient shall not reproduce or transmit any portion hereof in any form or by any means, with any purpose other than personal use.

Warranty

(1) Warranty

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS GUIDE ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS GUIDE ARE BELIEVED TO BE ACCURATE AND PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF PRODUCTS.

(2) Disclaimer

YEALINK (XIAMEN) NETWORK TECHNOLOGY CO., LTD. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS GUIDE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Yealink (Xiamen) Network Technology CO., LTD. shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance, or use of this guide.

(3) Limitation of Liability

Yealink and/or its respective suppliers are not responsible for the suitability of the information contained in this document for any reason. The information is provided "as is", and Yealink does not provide any warranty and is subject to change without notice. All risks other than risks caused by use of the information are borne by the recipient. In no event, even if Yealink has been suggested the occurrence of damages that are direct, consequential, incidental, special, punitive or whatsoever (Including but not limited to loss of business profit, business interruption or loss of business information), shall not be liable

for these damages.

End User License Agreement

This End User License Agreement ("EULA") is a legal agreement between you and Yealink. By installing, copying or otherwise using the Products, you: (1) agree to be bounded by the terms of this EULA, (2) you are the owner or an authorized user of the device, and (3) you represent and warrant that you have the right, authority and capacity to enter into this agreement and to abide by all its terms and conditions, just as if you had signed it. The EULA for this product is available on the Yealink Support page for the product.

Patent Information

China, the United States, EU (European Union) and other countries are protecting one or more patents of accompanying products and/or patents being applied by Yealink.

Customer Feedback

We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to DocsFeedback@yealink.com.

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for the latest firmware, guides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.

About This Guide

This guide provides the steps required to install and deploy the YMS.

In This Guide

Topics provided in this guide include:

- Chapter 1 [Hardware and Software Recommendations](#)
- Chapter 2 [Port Forwarding Requirements](#)
- Chapter 3 [Yealink Meeting Server Installation](#)
- Chapter 4 [Configuring Setup Wizard](#)
- Chapter 5 [Typical Network Deployment Methods](#)

Table of Contents

About This Guide	V
In This Guide	v
Table of Contents	vii
Hardware and Software Recommendations	1
Port Forwarding Requirements	3
Yealink Meeting Server Installation	5
Installing Yealink Meeting Server with the Existing CentOS.....	5
Installing Yealink Meeting Server by Importing OVA/OVF Files	7
Configuring Setup Wizard	11
Typical Network Deployment Methods	13
Scenario 1: A Single Network Adapter Deployment in Internal Network	13
Scenario 2: A Single Network Adapter Deployment in External Network	14
Scenario 3: A Single Network Adapter and Static NAT Deployment	16
Scenario 4: Dual Network Adapters Deployment: Internal Network+ External Network	17
Scenario 5: Dual Network Adapters and Static NAT Deployment	20
Endpoints Registration	23
Scenario 1: A Single Network Adapter Deployment in Internal Network	23
Scenario 2: A Single Network Adapter Deployment in External Network	24
Scenario 3: A Single Network Adapter and Static NAT Deployment	25
Scenario 4: Dual Network Adapters Deployment: Internal Network+ External Network	26
Scenario 5: Dual Network Adapters and Static NAT Deployment	27

Hardware and Software Recommendations

This chapter provides the hardware recommendations of your server.

Feature	Description
CPU	Intel Xeon E5-2600 series (Haswell architecture) or similar Xeon processors from 2012 or later, 2.3 GHz or faster. A CPU should match 4 RAM.
RAM	4GB/DDR3/2133MHz/ECC or higher 8GB/DDR4/2400MHz/ECC or higher
Hard Drive Space	300GB or higher
Network	<ul style="list-style-type: none"> Gigabit Ethernet connectivity is strongly recommended. In general, you can expect 1 Mbps in a one-way 720P video call. And you can expect 2 Mbps in a one-way 1080P video call.
Capacity	<p>Capacity is dependent on server specifications. As a general indication, using our recommended hardware (Intel Haswell, 10 cores, 2.3 GHz), YMS can connect:</p> <ul style="list-style-type: none"> The maximum concurrent calls=total CPU cores*frequency. Up to extra 10 audio-only calls at 64 kbps. <p>Servers that are older, have slower processors, or have fewer CPUs, will have a lower overall capacity.</p>
Linux	CentOS 7.0 and later

For example, if you want to initiate 20-way 1080P concurrent calls or 40-way 720P concurrent calls, the following hardware is recommended.

CPU	2 Intel Xeon Processor E5-2620V4, eight cores and sixteen threads, 2.1GHz 20M 8.0GT/s 85W or higher
Memory	8 8GB/DDR4/2400MHz/ECC or higher

If you want to initiate 40-way 1080P concurrent calls or 80-way 720P concurrent calls, the following hardware is recommended.

CPU	2 Intel Xeon Processor E5-2680V4, fourteen cores and twenty-eight threads, 2.4GHz 35M 9.6GT/s 120W or higher
Memory	8 8GB/DDR4/2400MHz/ECC or higher

Port Forwarding Requirements

If the following ports are restricted in your network environment, please open these ports.

If the YMS is deployed in an Intranet, you should solve the interconnection problem between private and public network by port forwarding. You must forward the following ports to the public network on the router.

Field	Port	UDP/TCP	Effect
System	22	TCP	SSH port
	80	TCP	HTTP port
	443	TCP	HTTPS port
	514	UDP	SYSLOG port
	514	TCP	SYSLOG port
SIP	5060	TCP	SIP port
	5060	UDP	SIP port
	5061	TCP	SIP port
Turn server	3478	UDP	STUN port
	3479	UDP	STUN port
MCU broadcast service	3688	TCP	Broadcasting server listening port
WebRTC	442	TCP	WebRTC listening port
H.323 gateway	1720	TCP	H.225 listening port (TCP)
H.323 gatekeeper	1718	UDP	RAS broadcasting listening port
	1719	UDP	RAS listening port
	1722	TCP	H.225 listening port
	2776	UDP	H.460.19 RTP Multiplex port
	2777	UDP	H.460.19 RTCP Multiplex port
Media/Signaling port	30000-37999	UDP	IVR+BFCP port
	38000-49999	UDP	TURN Relay port Media Proxy port

Field	Port	UDP/TCP	Effect
	50000-60000	UDP	MCU conference port
	30000-39999	TCP	H.245/Q931 port (H.323 gateway)
	20000~24999	TCP	H.245 port (H.323 gatekeeper)
	25000~29999	TCP	Q931 port (H.323 gatekeeper)
	15000~19999	UDP	Media forwarding port (H.323 gatekeeper)

Yealink Meeting Server Installation

You can select one of the following ways to install YMS:

- [Installing Yealink Meeting Server with the Existing CentOS](#)
- [Installing Yealink Meeting Server by Importing OVA/OVF Files](#)

Installing Yealink Meeting Server with the Existing CentOS

Before you begin

You should check the following points:

- If you want to install YMS in virtual machine, the software and hardware recommendation:


Feature	Description
Type	<ul style="list-style-type: none"> • VMware ESXi 6.5 or later • Microsoft Hyper-V Server 2012 or later
CPU	The number of CPUs is one.
Memory	32GB
Hard Drive Space	Not less than 20GB

- If you want to install YMS in physical machine, review the hardware and software recommendations. For more information, refer to [Hardware and Software Recommendations](#) on page 1.
- The operation system is CentOS 7.0 or later.
For more information on how to install CentOS, please refer to [CentOS 7.0](#).
- The disk partition of mcudata folder in CentOS should be 512G and the root folder in CentOS should be 256G.
- You obtain the YMS setup file from the Yealink distributor or Yealink technical support engineer, and the YMS setup file contains the *.tar.gz file.
- The YMS setup file is saved at the path **/usr/local**.

If you install YMS in physical machine, you can skip the steps to power on CentOS, and install YMS directly.

To power on CentOS via VMware ESXi 6.5:

1. Log into the ESXi host.
2. Click **Virtual Machines** under the **Navigator**.
3. Check the checkbox of the desired virtual machine, and then and then click **Power on**.
4. Click the thumbnail to enter the interface of CentOS.

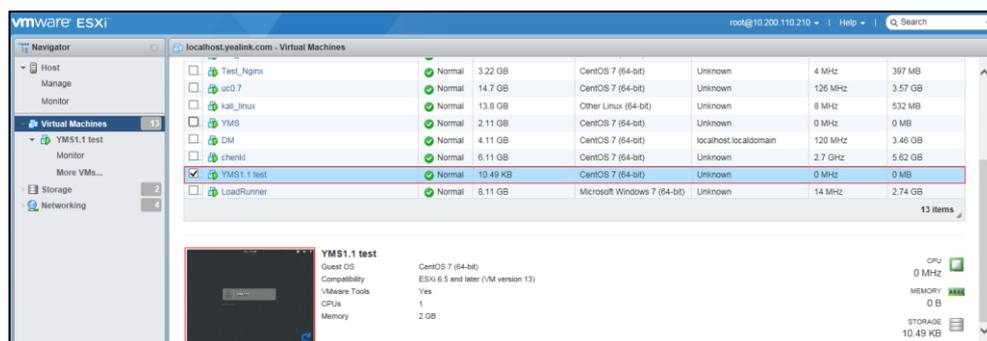


The installation of 10.23.0.55 version is introduced as an example.

To install YMS (log into CentOS as the root user):

1. Enter terminal.
2. Run the command as below:


```
cd /usr/local
tar -xzf Apollo_10.23.0.55.tar.gz
cd /usr/local/apollo_install/
./install.sh
```

After you finish the installation, it will prompt "Install Success!!!". And you will enter the setup wizard.

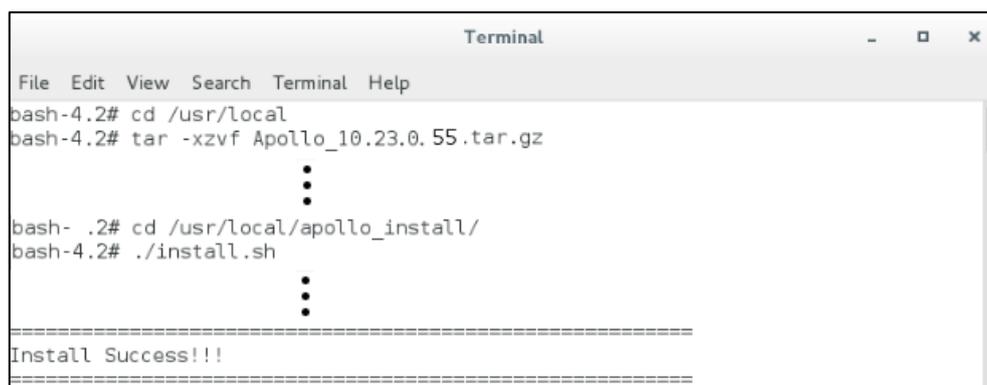

Related topics:

[Configuring Setup Wizard](#)

Installing Yealink Meeting Server by Importing OVA/OVF Files

Before you begin

You should check the following points:


- If you want to install YMS in virtual machine, the following types of virtual machine are recommended:

Feature	Description
Type	<ul style="list-style-type: none"> • VMware ESXi 6.5 or later • Microsoft Hyper-V Server 2012 or later


- You obtain the YMS setup file from the Yealink distributor or Yealink technical support engineer, and the YMS setup file contains the OVF and VMDK file or OVA file.

To install YMS via VMware ESXi 6.5:

1. Log into the ESXi host.
2. Click **Host** in the **Navigator**, and then select **Create/Register VM** to create a virtual machine.

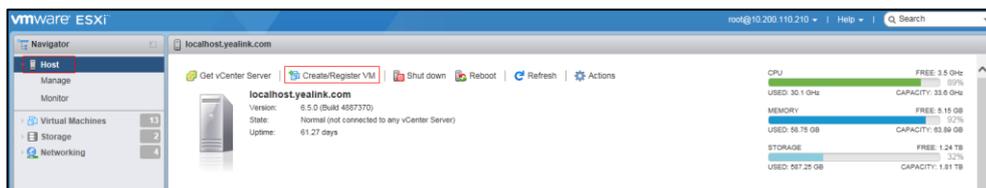


3. Select **Deploy a virtual machine from an OVF or OVA file.**

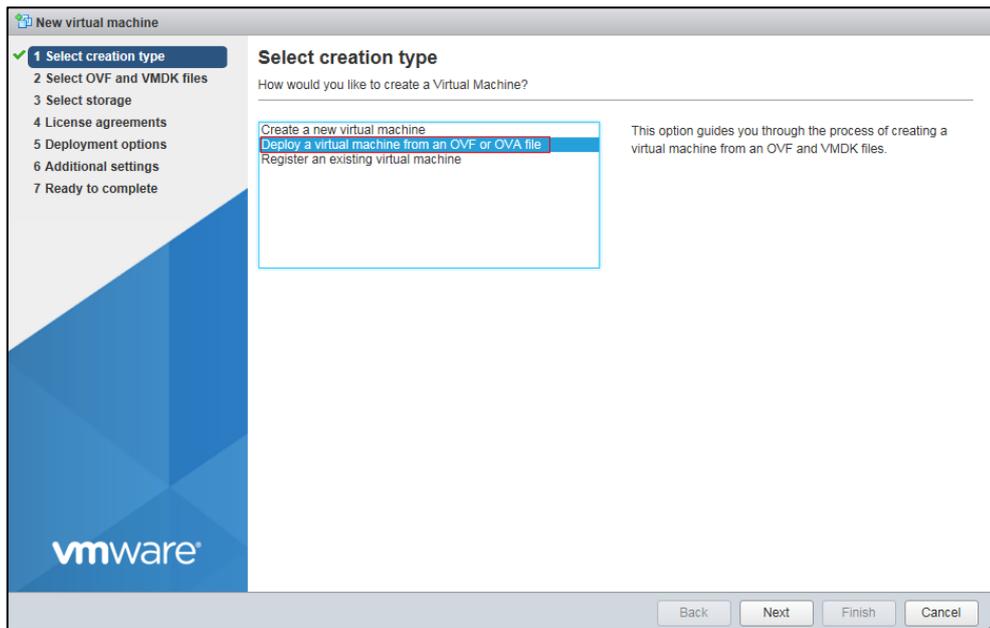


4. Click **Next** to continue.

5. Enter the name for the virtual machine, and then upload the OVF and VMDK file or OVA file.

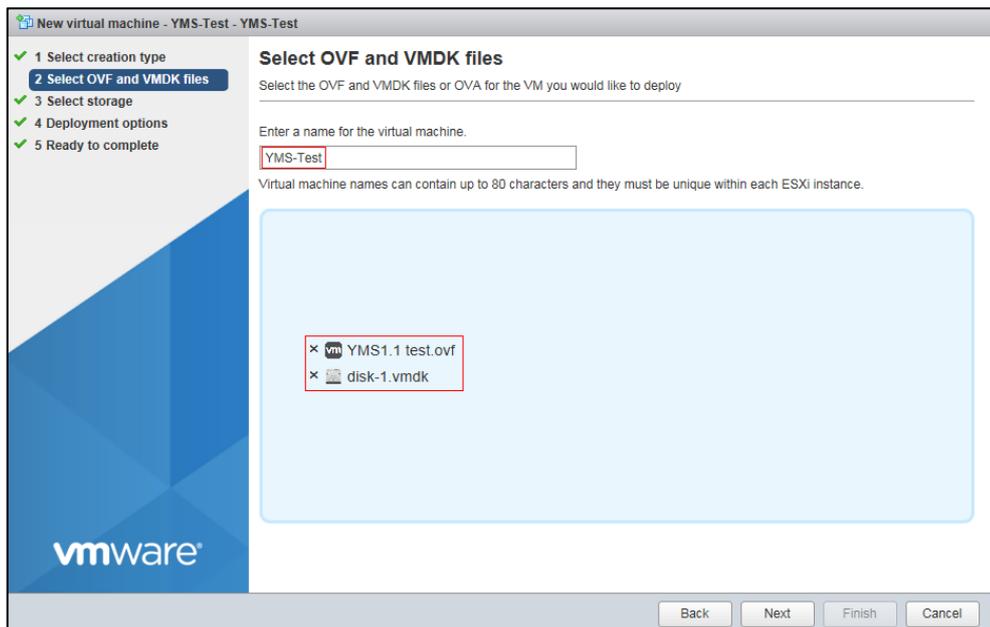


(Take the OVF and VMDK file as an example)

- Click **Next** to continue.

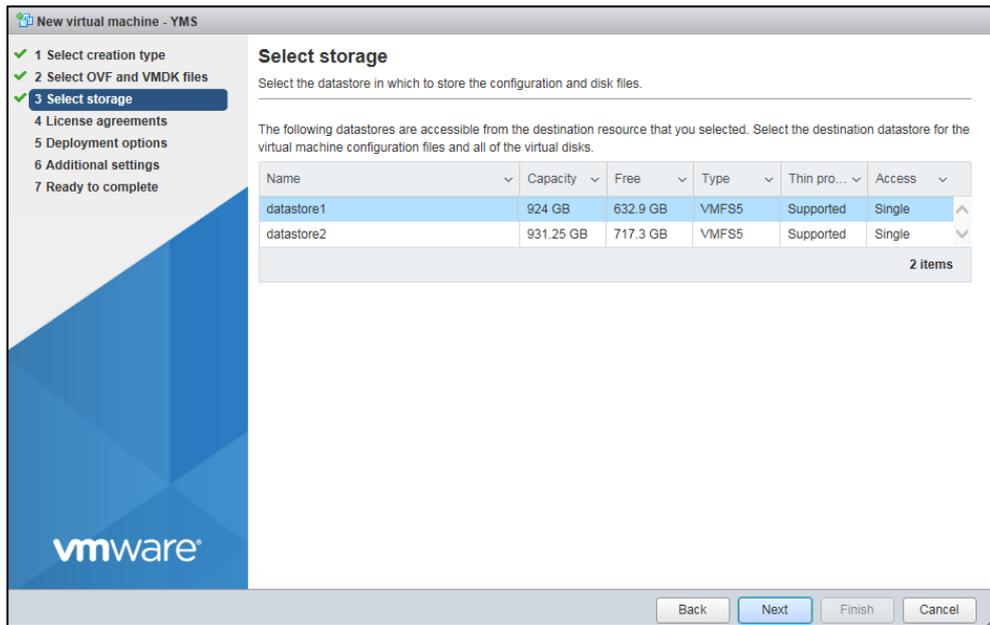


- Select the default destination datastore for the virtual machine configuration files and all of the virtual disks.
- Click **Next** to continue.

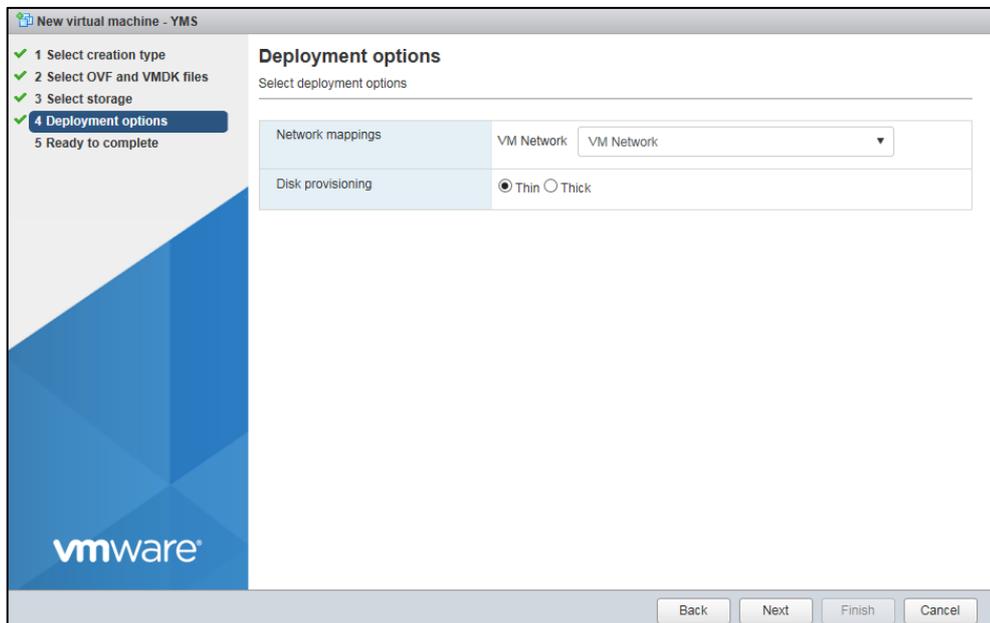


- Select **VM Network** from the pull-down list of **VM Network**, and then mark the radio box of **Thin** in the **Disk provisioning** field.

10. Click **Next** to continue.

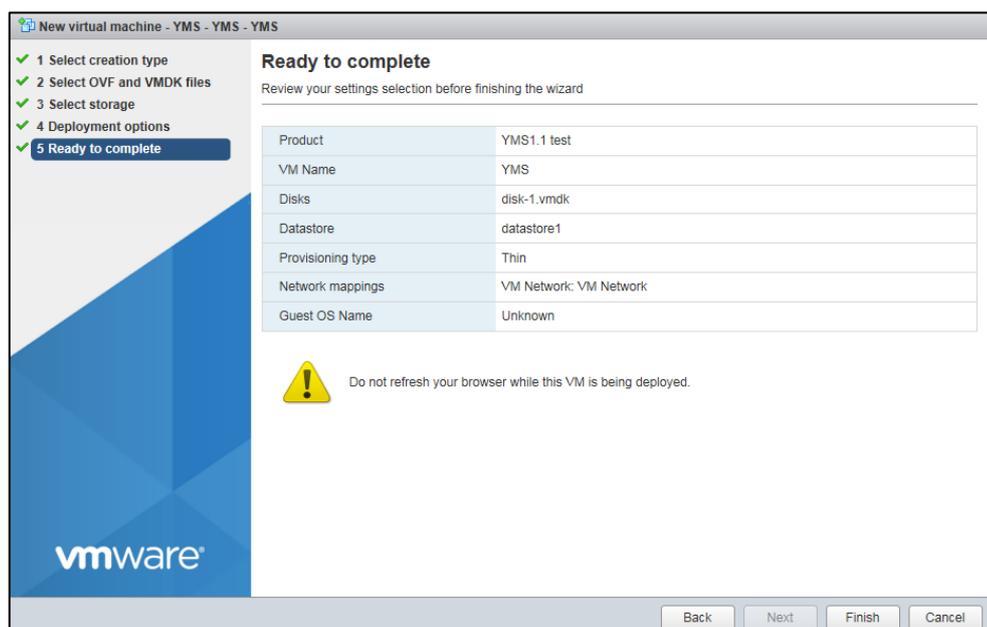

11. Click **Finish**.

You can view the progress of uploading the files in the **Recent tasks** list.

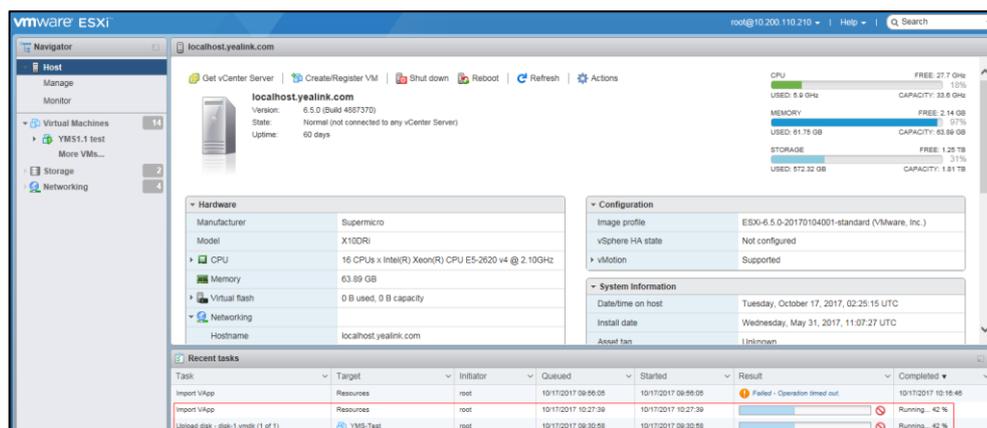

After the files are uploaded successfully, you finish the installation.

12. Click **Virtual Machines** in the **Navigator**.

13. Check the checkbox besides the virtual machine you created, and then click **Power on**.

14. Click the thumbnail to enter the interface of virtual machine.

15. After the virtual machine starts successfully, open a Web browser.

16. Enter "127.0.0.1" in the address bar, and then press the **Enter** key to enter the setup wizard.

Related topics:

[Configuring Setup Wizard](#)

Configuring Setup Wizard

You can configure network settings, time/time zone settings, username/password, license and SMTP settings quickly.

When you finish the configuration of the current page in the setup wizard, click **Next** to enter another page.

Before you begin

1. Review port forwarding requirements.
2. Install the YMS.

To configure setup wizard:

1. In the setup wizard, configure network settings.

For more information, please refer to [Typical Network Deployment Method](#) on page 13.

Native domain name :

→ Enter the native domain name. If you fail to log into YMS by domain name, you should use the IP address of YMS to log in.

Routing Rules Routing rules specify network adapter when access to the destination IP address. When using two network adapters, configure one of them first.

	Destination IP address	Subnet mask	Gateway	Network adapter	Operation
1	0.0.0.0	0.0.0.0	192.168.199.1	ens224	
2	10.0.0.0	255.0.0.0	10.2.61.207	ens192	
3	192.168.0.0	255.255.0.0	10.2.61.207	ens192	
4	172.16.0.0	255.224.0.0	10.2.61.207	ens192	

→ Specify routing rules for external network.

→ Specify routing rules for all network segments in your enterprise.

Add routing rules

2. Set the time and time zone.
3. Edit the login password and email of enterprise administrator.

The email is used to edit login password and receive a warning from the server.

4. Enter the video license number to activate the video license.

You need purchase the video license number from Yealink.

5. Set SMTP mailbox.

The SMTP mailbox is used to send emails to users. For example, you can send account information to users by emails.

6. Click **OK** to complete the setup wizard.

Related topics:

[Port Forwarding Requirements](#)

[Yealink Meeting Server Installation](#)

Typical Network Deployment Methods


The YMS supports two network adapters, you can configure the network in setup wizard based on the actual enterprise network condition.

This chapter provides 5 typical network deployment methods.

Scenario 1: A Single Network Adapter Deployment in Internal Network

If you register YMS accounts, place a point to point single call or join video conferences in the internal network, you can deploy the YMS by this method.

You just need configure the internal network adapter via YMS to finish the deployment.

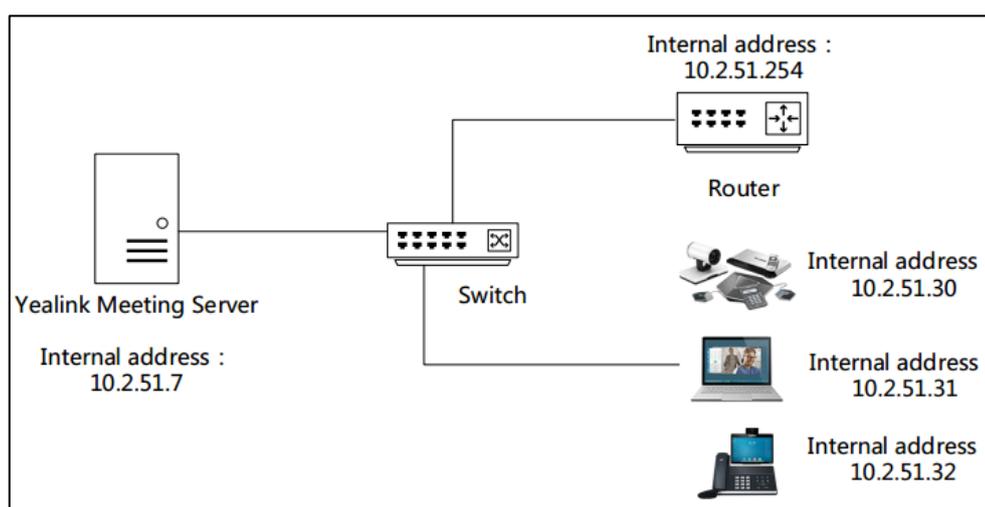

To configure internal network settings via YMS:

1. Log into YMS, and then configure internal network settings.


The screenshot shows a web-based configuration form for network settings. At the top, there is a text input field for 'Native domain name' containing 'test.yealink.com'. Below this is a checked checkbox for 'Internal network settings'. Underneath, there is a text input field for 'Network adapter settings' containing 'enp3s0f0'. The 'Ethernet port type' is set to 'Static IP address' with a radio button. Below this are several text input fields: 'IP address' (10.2.51.7), 'Subnet mask' (255.255.255.0), 'Gateway' (10.2.51.254), 'Preferred DNS' (192.168.1.20), and 'Alternate DNS' (192.168.1.22). At the bottom left, there are two unchecked checkboxes: 'Network settings' and 'Routing Rules'. A note below 'Routing Rules' states: 'Routing rules specify network adapter when access to the destination IP address. When using two network adapters, configure one of them first.' At the bottom right, there are two blue buttons: 'Next' and 'Skip'.

2. Click **Next** to save the network settings.

Scenario 2: A Single Network Adapter Deployment in External Network

If you register YMS accounts, place a point to point single call or join video conferences in the public network, you can deploy the YMS in public network by this method.

You just need configure the external network adapter via YMS to finish the deployment.

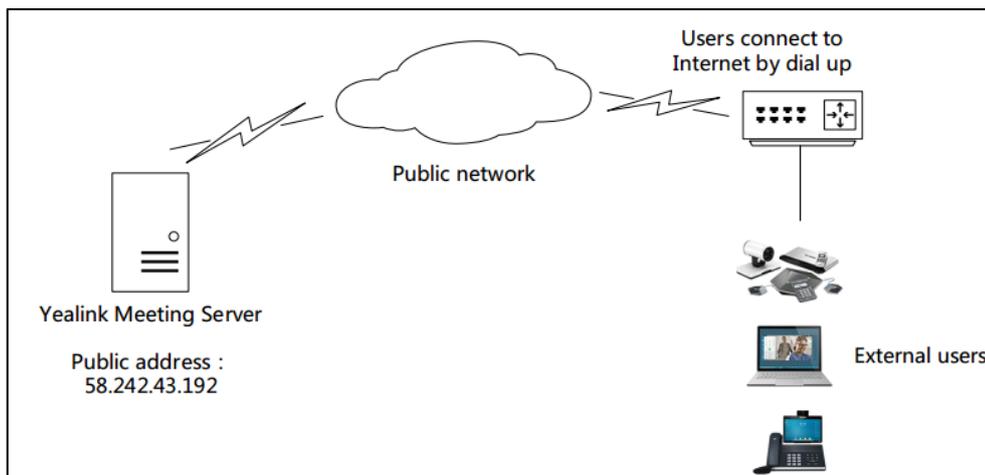

To configure external network settings via YMS:

1. Log into YMS, and then configure external network settings.

Native domain name :

Internal network settings

Network settings

Network adapter settings :

Ethernet port type : Static IP address

IP address :

Subnet mask :

Gateway :

Preferred DNS :

Alternate DNS :

NAT : Enabled

Routing Rules Routing rules specify network adapter when access to the destination IP address. When using two network adapters, configure one of them first.

2. Click **Next** to save the network settings.


Scenario 3: A Single Network Adapter and Static NAT

Deployment

To ensure the YMS security and maintain internal network, you can deploy the YMS in internal network. And you should configure static NAT by address forwarding on the router to accomplish the effect that users in external network can access to the YMS.

Note This deployment does not support the users in internal network sign into the YMS, otherwise when you place a call, a black screen may occur.

You just need configure the external network adapter via YMS to finish the deployment.

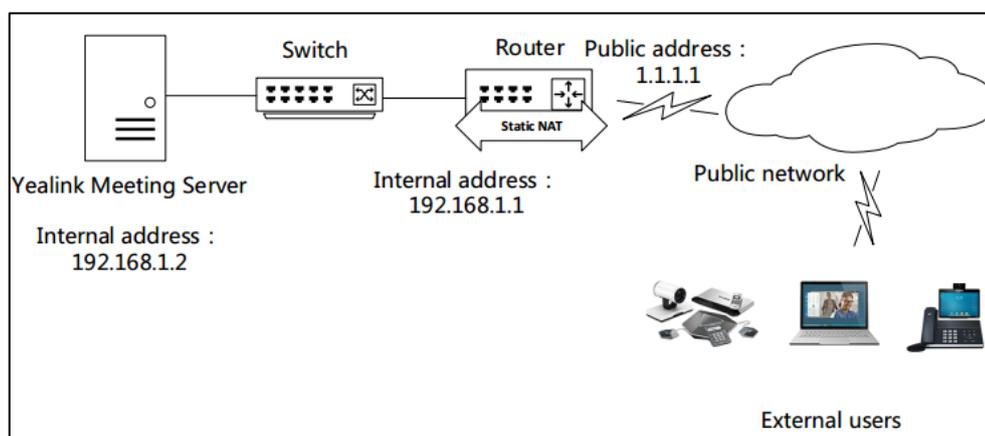

To configure external network settings via YMS:

1. Log into YMS, and then configure external network settings.

The NAT IP address is consistent with the address configured on the router by static NAT.

Native domain name :

Internal network settings

Network settings

Network adapter settings :

Ethernet port type : Static IP address

IP address :

Subnet mask :

Gateway :

Preferred DNS :

Alternate DNS :

NAT : Enabled

IP address


Routing Rules Routing rules specify network adapter when access to the destination IP address. When using two network adapters, configure one of them first.

2. Click **Next** to save the network settings.

Scenario 4: Dual Network Adapters Deployment: Internal Network+ External Network

If you register YMS accounts, place a point to point single call or join video conferences in the internal network and public network, you can deploy the YMS by this method.

You need configure the internal and external network adapter via YMS to finish the deployment.

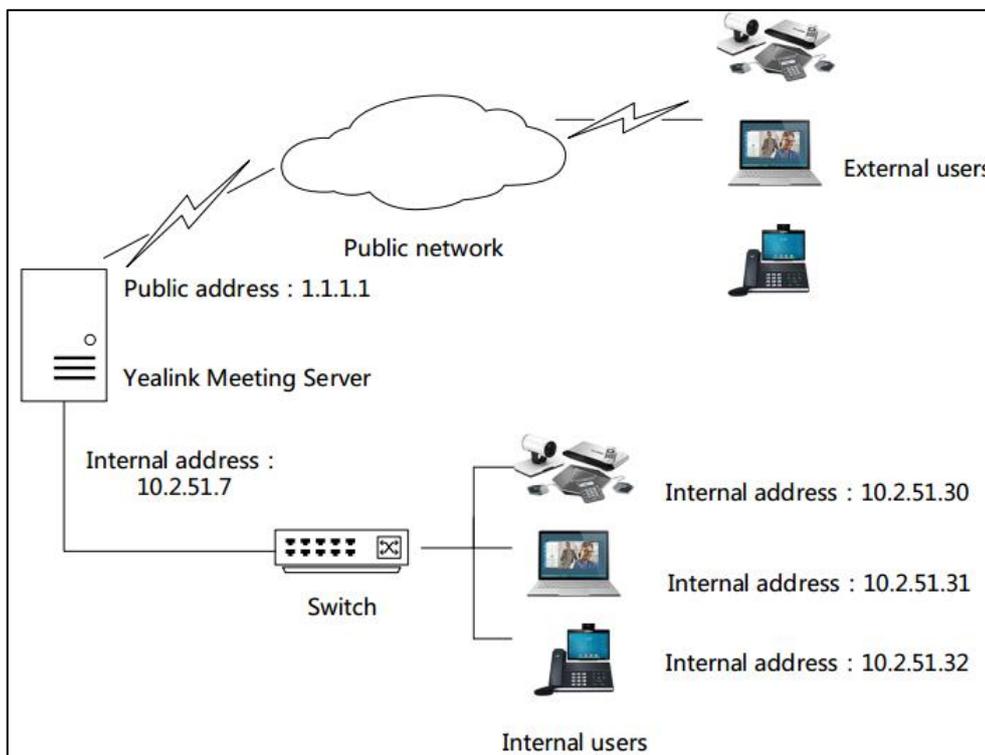

To configure internal and external network settings via YMS:

1. Log into YMS, and then configure internal and external network settings.

Native domain name :

Internal network settings

Network adapter settings :

Ethernet port type : Static IP address

IP address :

Subnet mask :

Gateway :

Preferred DNS :

Alternate DNS :

Network settings

Network adapter settings :

Ethernet port type : Static IP address

IP address :

Subnet mask :

Gateway :

Preferred DNS :

Alternate DNS :

NAT : Enabled

Routing Rules Routing rules specify network adapter when access to the destination IP address. When using two network adapters, configure one of them first.

	Destination IP address	Subnet mask	Gateway	Network adapter	Operation
1	0.0.0.0	0.0.0.0	1.1.1.2	enp3s0f1	
2	10.0.0.0	255.0.0.0	10.2.51.1	enp3s0f0	

Add routing rules


2. Click **Next** to save the network settings.

Scenario 5: Dual Network Adapters and Static NAT

Deployment

To ensure the YMS security and maintain internal network, you can deploy the YMS in internal network. And you should configure static NAT by address forwarding on the router to accomplish the effect that users in external network can access to the YMS.

You need configure the internal and external network adapter via YMS to finish the deployment.

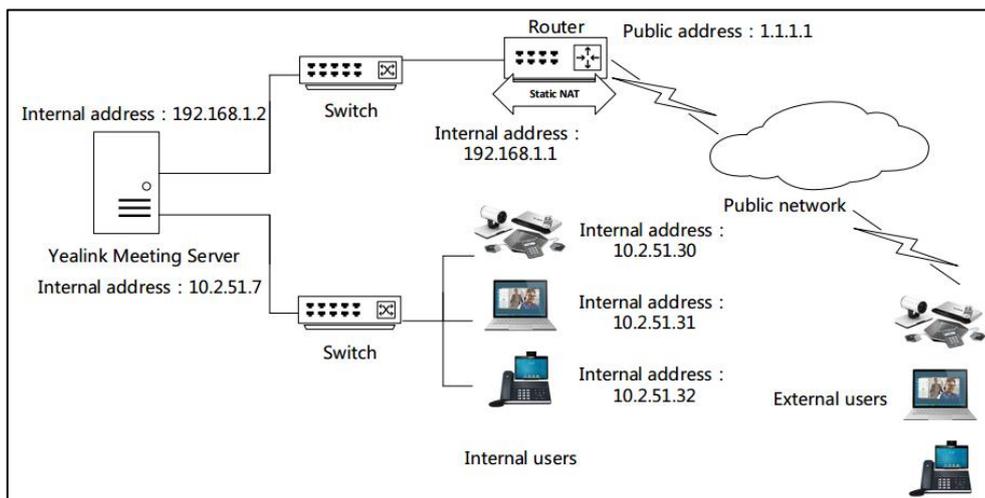

To configure internal and external network settings via YMS:

1. Log into YMS, and then configure internal and external network settings.

The NAT IP address is consistent with the address configured on the router by static NAT.

Native domain name :

Internal network settings

Network adapter settings :

Ethernet port type : Static IP address

IP address :

Subnet mask :

Gateway :

Preferred DNS :

Alternate DNS :

Network settings

Network adapter settings :

Ethernet port type : Static IP address

IP address :

Subnet mask :

Gateway :

Preferred DNS :

Alternate DNS :

NAT : Enabled

IP address :

Routing Rules Routing rules specify network adapter when access to the destination IP address. When using two network adapters, configure one of them first.

	Destination IP address	Subnet mask	Gateway	Network adapter	Operation
1	0.0.0.0	0.0.0.0	192.168.1.1	enp3s0f1	
2	10.0.0.0	255.0.0.0	10.2.51.1	enp3s0f0	

Add routing rules


2. Click **Next** to save the network settings.

Endpoints Registration

When users register YMS accounts by endpoints, the domain name of YMS needs to be resolved by endpoints. If endpoints cannot resolve the domain name of YMS, the IP address which the domain name of YMS is resolved into is needed in the outbound server address field.

Scenario 1: A Single Network Adapter Deployment in Internal Network

Users in internal network register YMS accounts via Yealink VC Desktop.

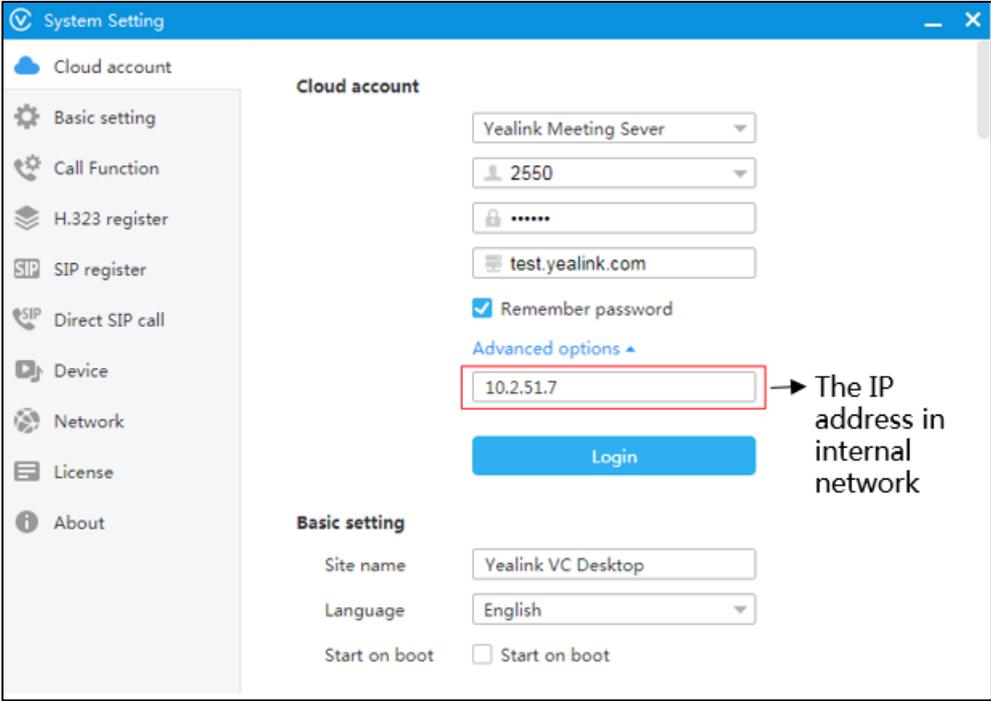

The screenshot shows the 'System Setting' window for Yealink VC Desktop. The 'Cloud account' section is active, displaying the following configuration:


- Cloud account: Yealink Meeting Sever
- Port: 2550
- Password: [Redacted]
- Domain: test.yealink.com
- Remember password:
- Advanced options: 10.2.51.7 (highlighted with a red box and an arrow pointing to it with the text 'The IP address in internal network')
- Login button

The 'Basic setting' section is also visible, showing:

- Site name: Yealink VC Desktop
- Language: English
- Start on boot:


Scenario 2: A Single Network Adapter Deployment in External Network

Users in external network register YMS accounts via Yealink VC Desktop.

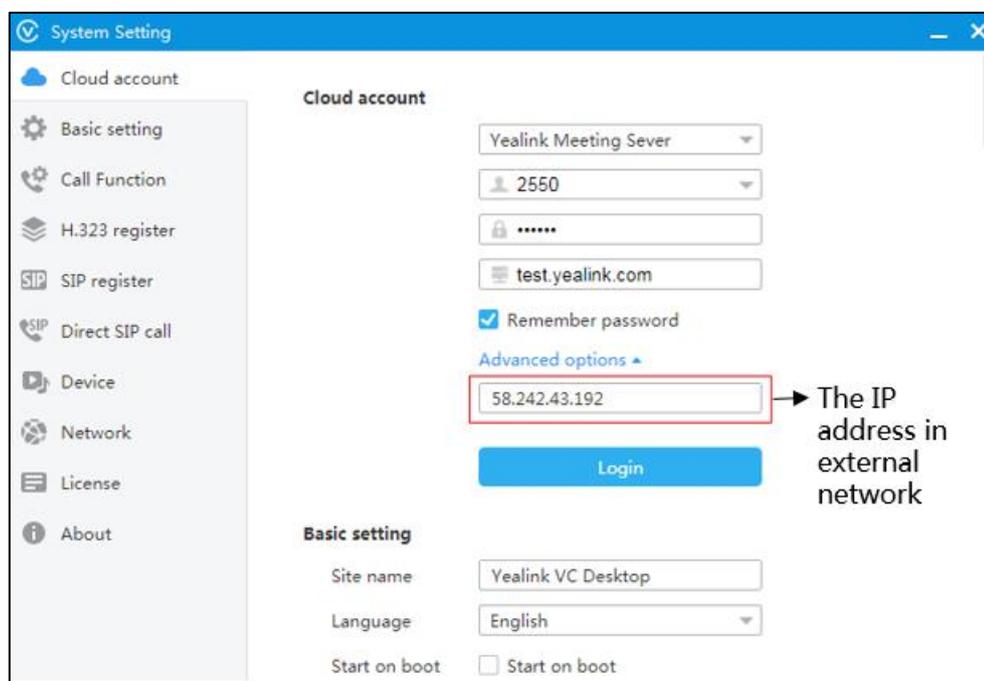


Scenario 3: A Single Network Adapter and Static NAT Deployment

Users in external network register YMS accounts via Yealink VC Desktop.

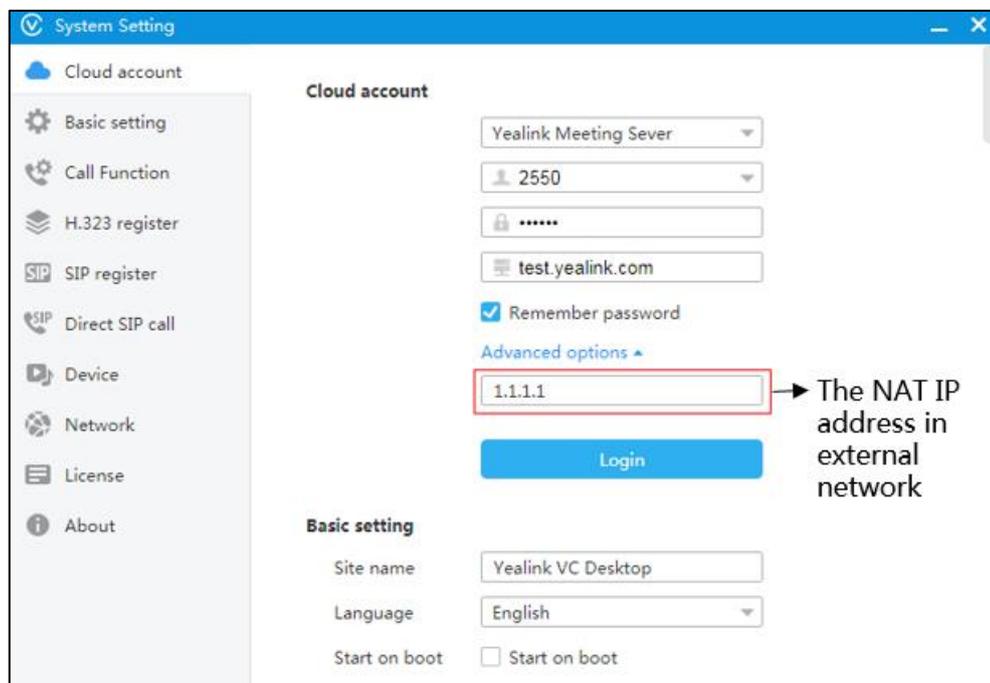


Scenario 4: Dual Network Adapters Deployment: Internal Network+ External Network

Users in internal network register YMS accounts via Yealink VC Desktop.

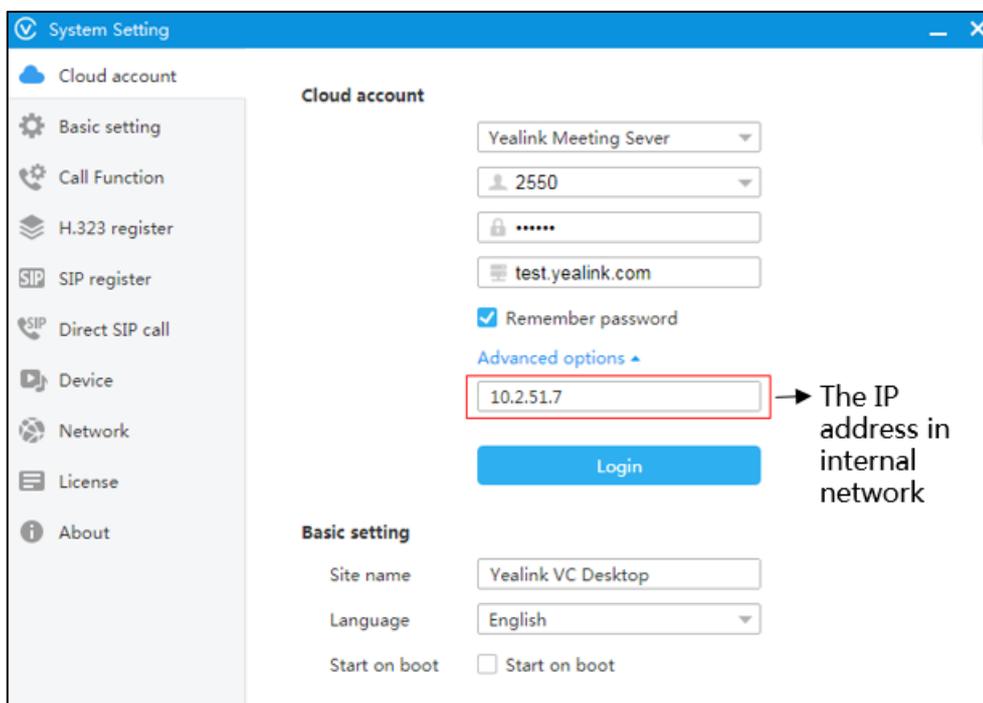


Users in external network register YMS accounts via Yealink VC Desktop.

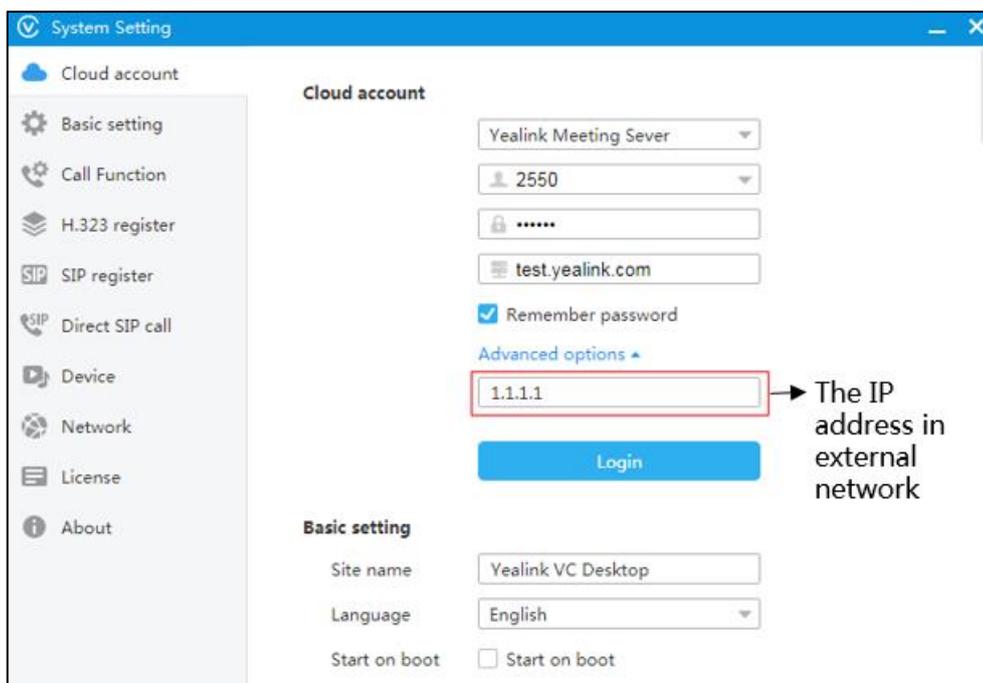

Scenario 5: Dual Network Adapters and Static NAT Deployment

Users in internal network register YMS accounts via Yealink VC Desktop.

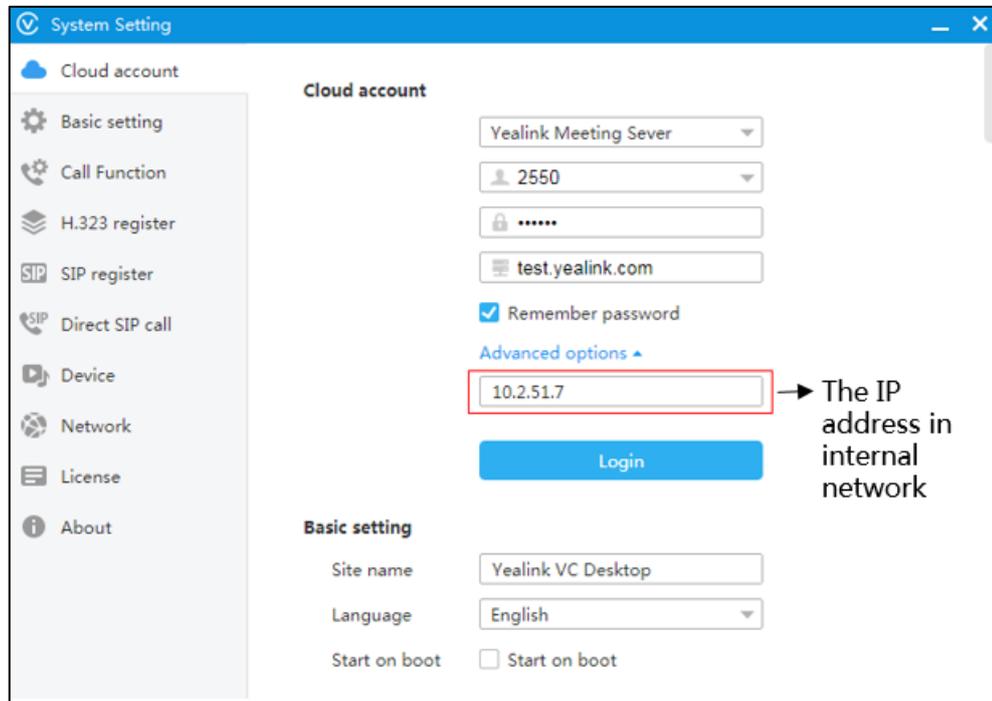

Users in external network register YMS accounts via Yealink VC Desktop.

