

Configuring your Phone

Configuring via web user interface

Accessing the web user interface:

1. Press the **OK** key when the phone is idle to get the IP address of your phone.
2. Open the web browser of your computer, enter the IP address into the address bar (e.g. "http://192.168.0.10" or "192.168.0.10") and click **Enter**.
3. Enter the user name (default: admin) and password (default: admin) in the pop-up dialogue box and click **OK**.

Note: Please locate your computer in the same network segment of the IP phone (192.168.0.X) to access the web user interface. Contact your system administrator for more information.

Network Settings: Click on **Network**

You can configure the network settings in the following ways:

DHCP(Obtain an IP Address Automatically): By default, the phone attempts to contact a DHCP server in your network in order to obtain its valid network settings, e.g. IP address, subnet mask, gateway, DNS server.

Static IP Address(Configure IP Address manually): If your phone can not contact a DHCP server for any reason, you need to configure IP address, subnet mask, gateway, primary DNS and secondary DNS for the phone manually.

PPPoE(Behind xDSL Modem): If you are using an xDSL modem, you can connect your phone to the Internet via PPPoE mode. Contact the ITSP for the account and password.

Note: The wrong network setting may result in inaccessibility of your phone and may have an impact on your network performance. Contact your system administrator for more information.

Account Settings: Click on **Account->Account X** (X=1,2,3,4)

Parameters of the account:

Register Status:	It shows the register status of the current account.
Account Active:	You can select Enable/Disable to active/disable the account.
Label:	It is shown on the LCD to identify the account.
Display Name:	It is shown as Caller ID when placing a call.
Register Name:	It is authenticated ID for authentication provided by ITSP (required).
User Name:	It is provided by ITSP for registration (required).
Password:	It is provided by ITSP for registration (required).
SIP Server:	It is provided by ITSP for registration (required).

Note: Check with your system administrator if any error appears during the registration process or if a specific configuration is required for your registration.

Configuring via phone user interface

Network Settings:

Tap **Menu** when the phone is idle, tap **Advanced ->Network->WAN Port/VLAN/Web Server /802.1x /VPN** to configure the network settings.

Account Settings:

Tap **Menu** when the phone is idle, tap **Advanced ->Account** to configure the account settings.

Note: Contact your system administrator for the password for **Advanced Settings**. Refer to "**Configuring via web user interface**" for the parameter information.


For more information, refer to the User Guide available online:

http://www.yealink.com/SupportDownloadfiles_detail.aspx?CatId=180&flag=142

Copyright ©2014 YEALINK NETWORK TECHNOLOGY CO.,LTD.

Yealink


IP Video Phone VP530

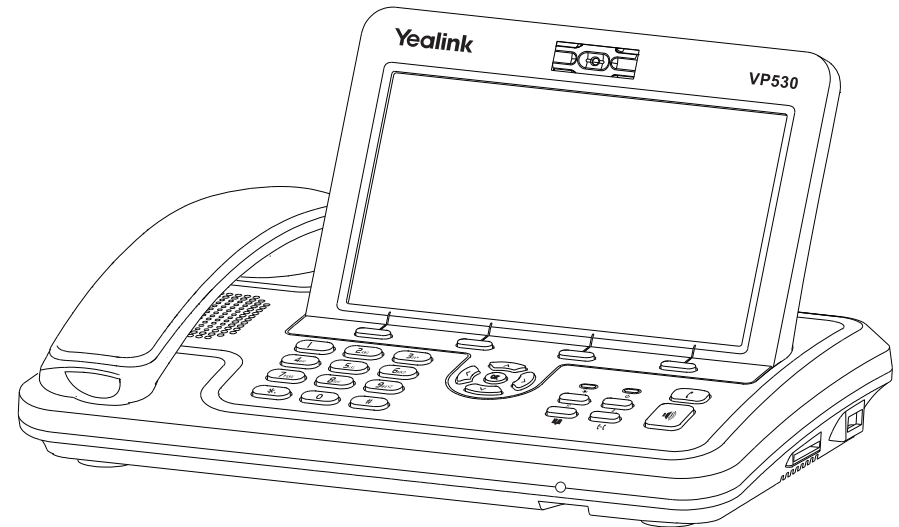

Quick Installation Guide (v70.2)

www.yealink.com


Packing List

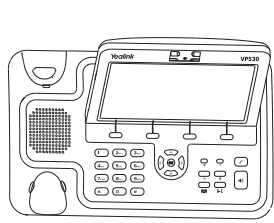


IP Video Phone



Handset

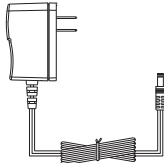

Power Adapter
(Optional)

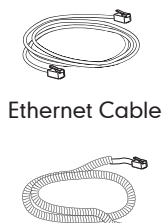

Ethernet Cable




Handset Cord


Quick Installation
Guide & Quick
Reference Guide

Assembling the Phone



1. Assembling the phone, as shown below:

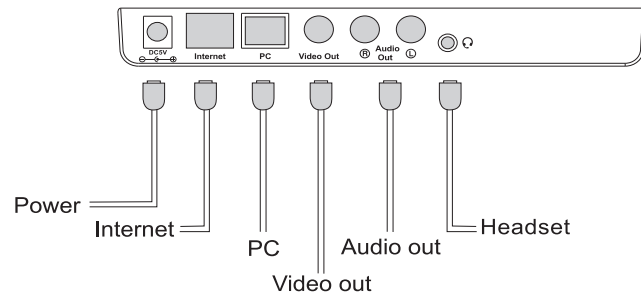

a. Connect the Handset and an optional Headset:

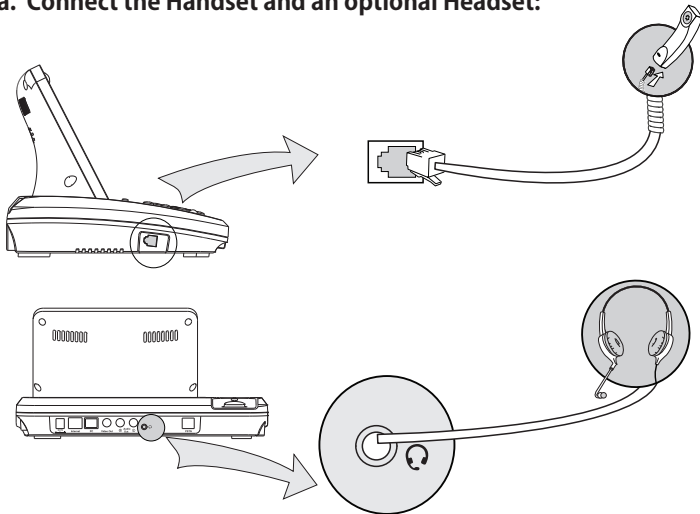

b. Connect the SD Memory card and USB 2.0:

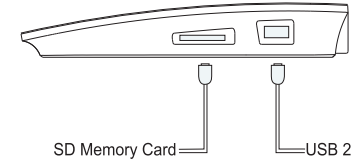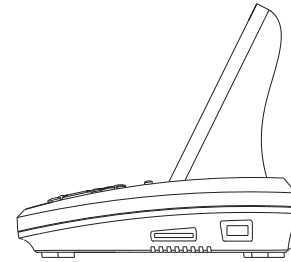


SD Memory Card USB 2.0

Note: A headset is not provided in the packing list. Contact your system administrator for more information.


2. Connect the Network and Power, as shown below:

You have two options for network and power connections. Your system administrator will advise you on which one to use.

a. AC Power Option

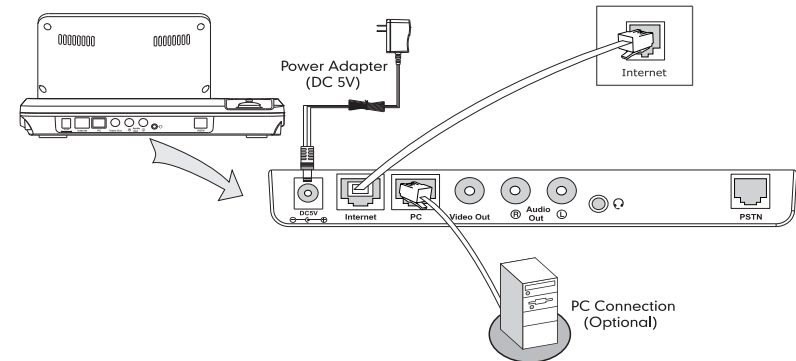

b. PoE (Power over Ethernet) Option

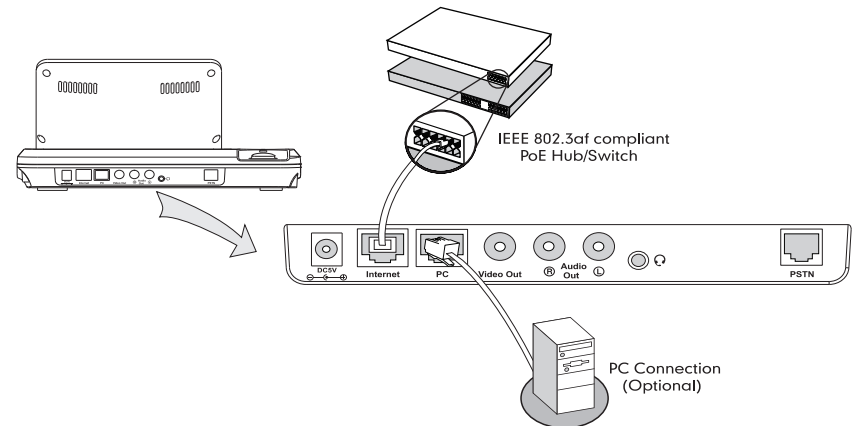

Note: If inline power (PoE) is provided, you don't need to connect the power adapter. Make sure the Ethernet cable and hub/switch are PoE compliant.